

# **Delta Vector Control Drive C2000 Series User Manual**





#### Copyright notice

©Delta Electronics, Inc. All rights reserved.

All information contained in this user manual is the exclusive property of Delta Electronics Inc. (hereinafter referred to as "Delta") and is protected by copyright law and all other laws. Delta retains the exclusive rights of this user manual in accordance with the copyright law and all other laws. No parts in this manual may be reproduced, transmitted, transcribed, translated or used in any other ways without the prior consent of Delta.

#### **Limitation of Liability**

The contents of this user manual are only for the use of the AC motor drives manufactured by Delta. Except as defined in special mandatory laws, Delta provides this user manual "as is" and does not offer any kind of warranty through this user manual for using the product, either express or implied, including but not limited to the following: (i) this product will meet your needs or expectations; (ii) the information contained in the product is current and correct; (iii) the product does not infringe any rights of any other person. You shall bear your own risk to use this product.

In no event shall Delta, its subsidiaries, affiliates, managers, employees, agents, partners and licensors be liable for any direct, incidental, special, derivative or consequential damages (including but not limited to the damages for loss of profits, goodwill, use or other intangible losses) unless the laws contains special mandatory provisions to the contrary.

Delta reserves the right to make changes to the user manual and the products described in the user manual without prior notice and afterwards.

#### PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



- ☑ Disconnect AC input power before connecting any wiring to the AC motor drive.
- ☑ Even if the power has been turned off, a charge may still remain in the DC-link capacitors with hazardous voltages before the POWER LED is OFF. Do NOT touch the internal circuits and components.
- ☑ There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. Take anti-static measure before touching these components or the circuit boards.
- ☑ Never modify the internal components or wiring.
- ☑ Ground the AC motor drive by using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed.
- ☑ Do NOT install the AC motor drive in a location with high temperature, direct sunlight or inflammable materials or gases.



- ☑ Never connect the AC motor drive output terminals U/T1, V/T2 and W/T3 directly to the AC mains circuit power supply.
- ☑ After finishing the wiring of the AC motor drive, check if U/T1, V/T2, and W/T3 are short-circuited to ground with a multimeter. Do NOT power the drive if short circuits occur. Eliminate the short circuits before the drive is powered.
- ☑ The rated voltage of power system to install motor drives is listed below. Ensure that the installation voltage is in the correct range when installing a motor drive.
  - 1. For 230V models, the range is between 170-264V.
  - 2. For 460V models, the range is between 323-528V.
  - 3. For 575V models, the range is between 446-660V.
  - 4. For 690V models, the range is between 446–759V.

☑ Refer to the table below for short circuit rating:

Model (Power)	Short circuit rating
230V / 460V	100 kA
575V (2-20HP)	5 kA
690V (25-50HP)	5 kA
690V (60-175HP)	10 kA
690V (215-335HP)	18 kA
690V (425-600HP)	30 kA
690V (745-850HP)	42 kA

- ☑ Only qualified persons are allowed to install, wire and maintain the AC motor drives.
- ☑ Even if the three-phase AC motor is stopped, a charge with hazardous voltages may still remain in the main circuit terminals of the AC motor drive.
- ☑ The performance of electrolytic capacitor will degrade if it is not charged for a long time. It is recommended to charge the drive which is stored in no charge condition every 2 years for 3~4 hours to restore the performance of electrolytic capacitor in the motor drive. Note: When power up the motor drive, use adjustable AC power source (ex. AC autotransformer) to charge the drive at 70%~80% of rated voltage for 30 minutes (do not run the motor drive). Then charge the drive at 100% of rated voltage for an hour (do not run the motor drive). By doing these, restore the performance of electrolytic capacitor before starting to run the motor drive. Do NOT run the motor drive at 100% rated voltage right away.
- ☑ Pay attention to the following precautions when transporting and installing this package (including wooden crate and wood stave)
  - 1. If you need to deworm the wooden crate, do NOT use fumigation or you will damage the drive. Any damage to the drive caused by using fumigation voids the warranty.

- 2. Use other methods, such as heat treatment or any other non-fumigation treatment, to deworm the wood packaging material.
- 3. If you use heat treatment to deworm, leave the packaging materials in an environment of over 56°C for a minimum of thirty minutes.
- ☑ Connect the drive to a three-phase three-wire or three-phase four-wire Wye system to comply with UL standards.
- ☑ If the motor drive generates leakage current over AC 3.5 mA or over DC 10 mA on a grounding conductor, compliance with local grounding regulations or IEC61800-5-1 standard is the minimum requirement for grounding.



The content of this manual may be revised without prior notice. Please consult our distributors or download the latest version at <a href="http://www.deltaww.com/iadownload">http://www.deltaww.com/iadownload</a> acmotordrive

# **Table of Contents**

<b>CHAPTER 1 INTR</b>	RODUCTION	1-1
1-1 Namepla	ate Information	1-2
1-2 Model N	Name	1-3
1-3 Serial N	Number	1-4
1-4 Apply A	After Service by Mobile Device	1-5
1-5 RFI Jun	nper	1-6
1-6 Dimensi	ions	1-9
CHAPTER 2 INST	TALLATION	2-1
2-1 Mounting	g Clearance	2-2
2-2 Air Flow	and Power Dissipation	2-5
CHAPTER 3 UNP	ACKING	3-1
3-1 Unpackir	ng	3-2
	ing Hook	
CHAPTER 4 WIRI	ING	4-1
4-1 System	Wiring Diagram	4-3
CHAPTER 5 MAIN	N CIRCUIT TERMINALS	5-1
5-1 Main Cir	rcuit Diagram	5-4
5-2 Specifica	ations of Main Circuit Terminals	5-7
CHPATER 6 CON	TROL TERMINALS	6-1
6-1 Remove	e the Cover for Wiring	6-4
6-2 Specifica	ations of Control Terminal	6-7
6-3 Remove	the Terminal Block	6-10
CHAPTER 7 OPT	IONAL ACCESSORIES	7-1
7-1 All Brake	Resistors and Brake Units Used in AC Motor Drives	7-2
7-2 Non-fuse	e Circuit Breaker	7-7
7-3 Fuse Sp	pecification Chart	7-8
7-4 AC / DC	C Reactor	7-10
7-5 Zero Ph	ase Reactor	7-44
7-6 EMC Fil	Iter	7-50

7-7 Digital Keypad	7-70
7-8 Panel Mounting	7-72
7-9 Conduit Box Kit	7-89
7-10 Fan Kit	7-105
7-11 Flange Mounting Kit	7-120
7-12 USB/RS-485 Communication Interface IFD6530	7-122
CHAPTER 8 OPTION CARDS	8-1
8-1 Option Card Installation	8-2
8-2 EMC-D42A Extension card for 4-point digital input / 2-point digital input	8-14
8-3 EMC-D611A Extension card for 6-point digital input (110VAC input voltage)	8-14
8-4 EMC-R6AA Relay output extension card (6-point N.O. output contact)	
8-5 EMC-A22A Extension card for 2-point analog input/ 2-point analog output	
8-6 EMC-BPS01 +24V power card	8-15
8-7 EMC-PG01/02L PG card (Line driver)	
8-8 EMC-PG01/02O PG card (Open collector)	8-19
8-9 EMC-PG01/02U PG card (ABZ Incremental encoder signal/ UVW Hall position	signal input)8-22
8-10 EMC-PG01R PG card (Resolver)	8-24
8-11 CMC-MOD01 Communication card, Modbus TCP	8-26
8-12 CMC-PD01 Communication card, PROFIBUS DP	8-29
8-13 CMC-DN01 Communication card, DeviceNet	8-31
8-14 CMC-EIP01 Communication card, EtherNet/IP	8-34
8-15 CMC-EC01 Communication card, EtherCAT	8-38
8-16 CMC-PN01 Communication card, PROFINET	8-41
8-17 EMC-COP01 Communication card, CANopen	8-45
8-18 Delta Standard Fieldbus Cables	8-46
CHAPTER 9 SPECIFICATION	9-1
9-1 230V Series	9-2
9-2 460V Series	9-3
9-3 575V Series	9-5
9-4 690V Series	9-6
9-5 Environment for Operation, Storage and Transportation	9-10
9-6 Specification for Operation Temperature and Protection Level	9-11
9-7 Derating Curve of Ambient Temperature	9-12
9-8 Efficiency Curve	9-17
CHAPTER 10 DIGITAL KEYPAD	10-1
10-1 Descriptions of Digital Keypad	10-2
10-2 Function of Digital Keypad KPC-CC01	
10-3 TPEditor Installation Instruction	

	11-
00 Drive Parameters	
01 Basic Parameters	
02 Digital Input / Output Parameters	11-14
03 Analog Input / Output Parameters	11-20
04 Multi-stage Speed Parameters	11-24
05 Motor Parameters	11-2
06 Protection Parameters	11-3
07 Special Parameters	11-3
08 High-function PID Parameters	11-4
09 Communication Parameters	11-4:
10 Feedback Control Parameters	11-4
11 Advanced Parameters	11-50
13 Application Parameters by Industry	11-53
14 Extension Card Parameter	11-54
00 Drive Parameters	
12-1 Description of Parameter Settings	
01 Basic Parameters	12.1-01-
02 Digital Input / Output Parameters	12.1-02-
03 Analog Input / Output Parameters	12.1-03-
04 Multi-stage Speed Parameters	12.1-04-
	12 1_05_
05 Motor Parameters	
05 Motor Parameters	
	12.1-06-
06 Protection Parameters	12.1-06-
06 Protection Parameters	12.1-06- 12.1-07- 12.1-08-
06 Protection Parameters	

CHAPTER 15 CANOPEN OVERVIEW	15-1
15-1 CANopen Overview	15-3
15-2 Wiring for CANopen	15-6
15-3 CANopen Communication Interface Description	15-7
15-4 CANopen Supporting Index	15-19
15-5 CANopen Fault Codes	15-26
15-6 CANopen LED Function	15-34
CHAPTER 16 PLC FUNCTION APPLICATIONS	16-1
16-1 PLC Summary	16-2
16-2 Notes Before PLC Use	16-3
16-3 Turn On	16-5
16-4 Basic Principles of PLC Ladder Diagrams	16-15
16-5 Various PLC Device Functions	16-26
16-6 Introduction To The Command Window	16-41
16-7 Error Display And Handling	16-131
16-8 CANopen Master Control Applications	16-132
16-9 Explanation Of Various PLC Mode Controls (speed, torque, homing, and position)	16-145
16-10 Internal Communications Main Node Control	16-151
16-11 Count Function Using MI8	16-155
16-12 Modbus Remote IO Control Applications (use MODRW)	16-156
16-13 Calendar Function	16-163
CHAPTER 17 SAFE TORQUE OFF FUNCTION	17-1
17-1 The Drive Safety Function Failure Rate	17-2
17-2 Safe Torque Off Terminal Function Description	17-2
17-3 Wiring Diagram	17-3
17-4 Parameters	17-5
17-5 Operating Sequence Description	17-6
17-6 New Error Code for STO Function	17-8
APPENDIX A. REVISION HISTORY	A-1

**Issued Edition: 01** 

Firmware Version: V2.05

(Refer to Parameter 00-06 on the product to get the firmware version.)

**Issued Date: 2019/02** 

# Chapter 1 Introduction

- 1-1 Nameplate Information
- 1-2 Model Name
- 1-3 Serial Number
- 1-4 Apply After Service by Mobile Device
- 1-5 RFI Jumper
- 1-6 Dimensions

## **Receiving and Inspection**

After receiving the AC motor drive, please check for the following:

- 1. Please inspect the unit after unpacking to assure it was not damaged during shipment. Make sure that the part number printed on the package corresponds with the part number indicated on the nameplate.
- 2. Make sure that the voltage for the wiring lies within the range as indicated on the nameplate. Please install the AC motor drive according to this manual.
- Before applying the power, please make sure that all the devices, including power, motor, control 3. board and digital keypad, are connected correctly.
- When wiring the AC motor drive, please make sure that the wiring of input terminals "R/L1, S/L2, T/L3" 4. and output terminals "U/T1, V/T2, W/T3" is correct to prevent drive damage.
- 5. When power is applied, select the language and set parameter groups via the digital keypad (KPC-CC01). When executes trial run, please begin with a low speed and then gradually increases the speed until the desired speed is reached.

## 1-1 Nameplate Information

#### 230V/460V Model


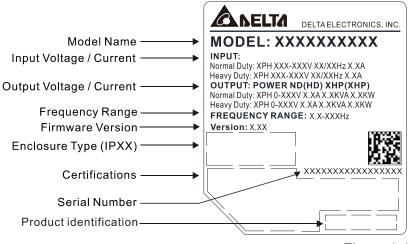



Figure 1-1

#### 575V/690V Model

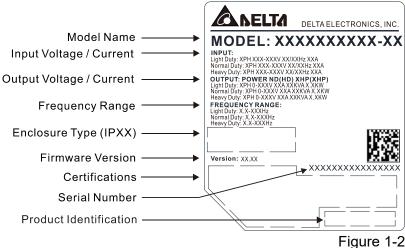


#### 1-2 Model Name

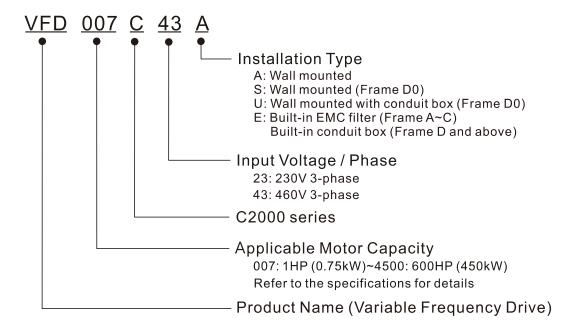
#### 230V/460V Model




#### 575V/690V Model

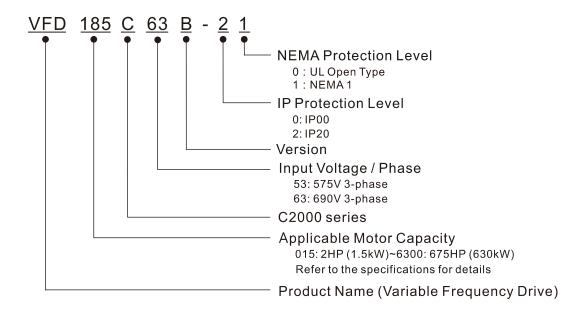

# 1-3 Serial Number 230V/460V Model

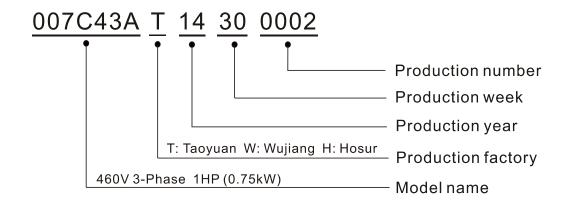

#### 575V/690V Model

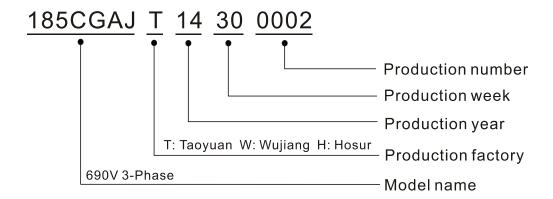

#### 1-4 Apply After Service by Mobile Device

#### 1-4-1 Location of Service Link Label

#### Frame A-H

Service link label (Service Label) will be pasted on the upper-right corner of the side where keypad is installed on the case body, as below drawing shown:

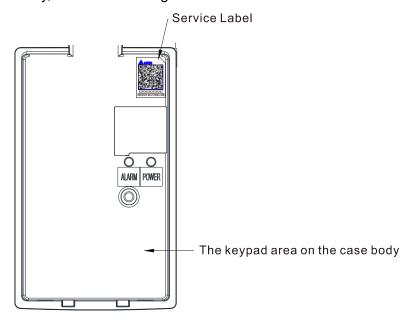


Figure 1-3

#### 1-4-2 Service Link Label



Figure 1-4

#### Scan QR Code to apply

- 1. Find out the QR code sticker (as above shown).
- 2. Using a Smartphone to run a QR Code reader APP.
- 3. Point your camera to the QR Code. Hold your camera steady so that the QR code comes into focus.
- 4. Access the Delta after Service website.
- 5. Fill your information into the column marked with an orange star.
- 6. Enter the CAPTCHA and click "Submit" to complete the application.

#### Cannot find out the QR Code?

- 1. Open a web browser on your computer or smart phone.
- 2. Key in <a href="https://service.deltaww.com/ia/repair">https://service.deltaww.com/ia/repair</a> in address bar and press enter
- 3. Fill your information into the columns marked with an orange star.
- 4. Enter the CAPTCHA and click "Submit" to complete the application.

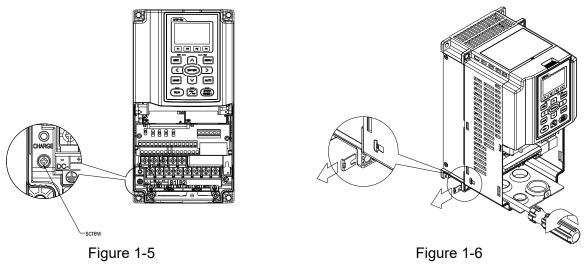
## 1-5 RFI Jumper

- (1) In the drive there are Varistor / MOVs, which are connected from phase to phase and from phase to ground, to protect the drive against mains surges or voltage spikes.
  Because the Varistors / MOVs from phase to ground are connected to ground via the RFI jumper, the
- (2) In the models with built-in EMC filter the RFI jumper connects the filter capacitors to ground from a return path for high frequency noise to isolate the noise from contaminating the mains power. Removing the RFI jumper strongly reduces the effect of the built-in EMC filter. Although a single drive complies with the international standards for leakage current, an installation with several drives with built-in EMC filter can trigger the RCD. Removing the RFI jumper helps, but the EMC performance of each drive would be no longer guaranteed.

Frame A-C Screw Torque: 8-10 kg-cm / [6.9-8.7 lb-in.] / [0.8-1.0 Nm]

protection will be ineffective when the RFI jumper is removed.

Loosen the screws and remove the MOV-PLATE. Fasten the screws back to the original position after MOV-PLATE is removed.



#### Frame D0-H

Remove the MOV-PLATE by hands, no screws need to be loosen.

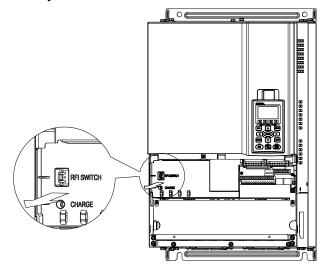



Figure 1-7

#### Isolating main power from ground:

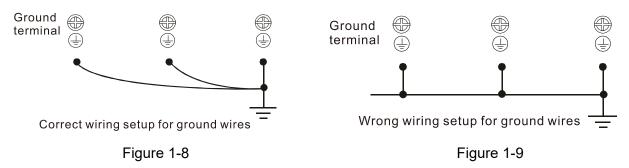When the power distribution system of the drive is a floating ground system (IT Systems) or an asymmetric ground system (Corner Grounded TN Systems), you must remove the RFI jumper. Removing the RFI jumper disconnects the internal capacitors from ground to avoid damaging the internal circuits and to reduce the ground leakage current.

Important points regarding ground connection

- ☑ To ensure the safety of personnel, proper operation, and to reduce electromagnetic radiation, you must properly ground the drive during installation.
- ☑ The diameter of the cables must comply with the local safety regulations.
- ☑ The shield of shielded cables must be connected to the ground of the drive to meet safety regulations.
- ☑ The shield of shielded power cables can only be used as the ground for equipment when the aforementioned points are met.
- ☑ When installing more drives, do not connect the grounds of the drives in series but connect each drive to ground. The following pictures show the correct and wrong ways to connect the grounds.



Pay particular attention to the following points:

- ☑ Do not remove the RFI jumper while the power is on.
- ☑ Removing the RFI jumper also disconnects the built-in EMC filter capacitors. Compliance with the EMC specifications is no longer guaranteed.
- ☑ Do not remove the RFI jumper if the mains power is a symmetrical grounded power system in order to maintain the efficiency for EMC circuit.
- ☑ Do not remove the RFI jumper while conducting high voltage tests. When conducting a high voltage test to the entire facility, you must disconnect the mains power and the motor if the leakage current is too high.

#### Floating Ground System (IT Systems)

A floating ground system is also called IT system, ungrounded system, or high impedance/resistance (greater than  $30\Omega$ ) grounding system.

- ☑ Disconnect the ground cable from the internal EMC filter.
- ☑ In situations where EMC is required, check whether there is excess electromagnetic radiation affecting nearby low-voltage circuits. In some situations, the adapter and cable naturally provide enough suppression. If in doubt, install an extra electrostatic shielded cable on the power supply side between the main circuit and the control terminals to increase security.
- ☑ Do not install an external RFI/EMC filter, the EMC filter will pass through a filter capacitor, thus connecting power input to ground. This is very dangerous and can easily damage the Power Regenerative Unit.


#### Asymmetric Ground System (Corner Grounded TN Systems)

Caution: Do not remove the RFI jumper while the input terminal of the Power Regenerative Unit carries power.

In the following four situations, the RFI jumper must be removed. This is to prevent the system from grounding through the RFI capacitor and damaging the Power Regenerative Unit.


# grounding through the RFI capacitor and damaging the Power Regenerative Unit. RFI jumper must be removed 2. Grounding at a midpoint in a polygonal 1. Grounding at a corner in a triangle configuration configuration - L1 L2 L2 L3 L3 Figure 1-11 Figure 1-10 3. Grounding at one end in a single-phase 4. No stable neutral grounding in a three-phase configuration autotransformer configuration

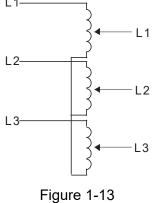Figure 1-12



#### RFI jumper can be used

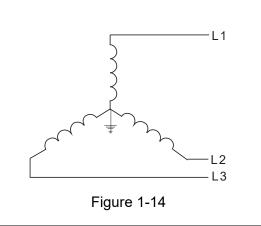Internal grounding through RFI capacitor, which reduces electromagnetic radiation. In a situation with higher requirements for electromagnetic compatibility, and using a symmetrical grounding power system, an EMC filter can be installed. As a reference, the diagram on the right is a symmetrical grounding power system.



## 1-6 Dimensions

#### Frame A

VFD007C23A; VFD007C43A/E; VFD015C23A; VFD015C43A/E; VFD022C23A; VFD022C43A/E; VFD037C23A; VFD037C43A/E; VFD040C43A/E; VFD055C43A/E; VFD015C53A-21; VFD022C53A-21; VFD037C53A-21


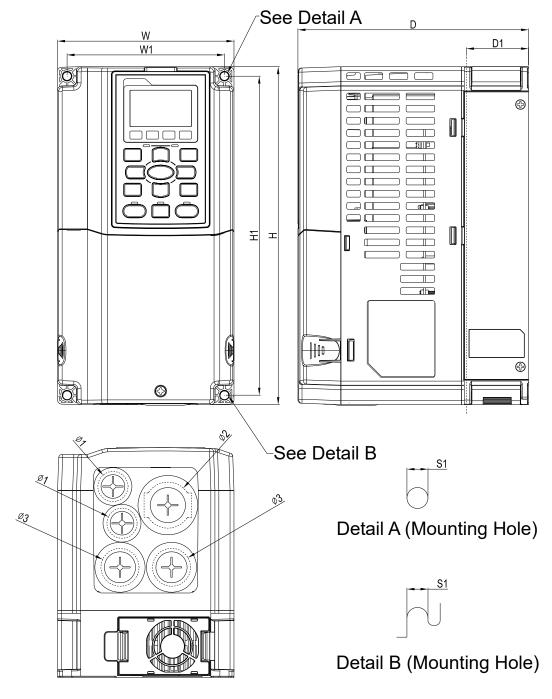



Figure 1-15


									Unit:	mm [inch]
Frame	W	Н	D	W1	H1	D1*	S1	Ф1	Ф2	Ф3
A1	130.0 [5.12]	250.0 [9.84]	170.0 [6.69]	116.0 [4.57]	236.0 [9.29]	45.8 [1.80]	6.2 [0.24]	22.2 [0.87]	34.0 [1.34]	28.0 [1.10]

Frame B

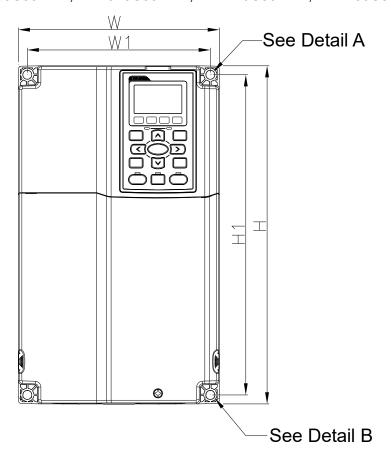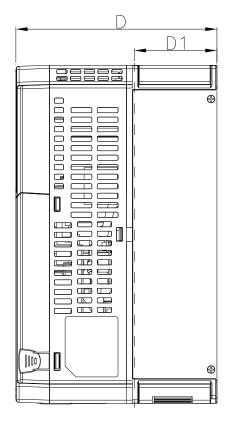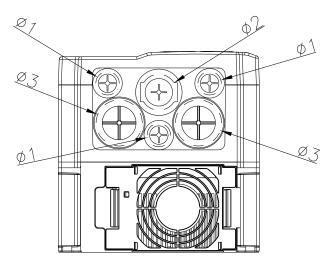VFD055C23A; VFD075C23A; VFD075C43A/E; VFD110C23A; VFD110C43A/E; VFD150C43A/E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21









Detail A (Mounting Hole)




Detail B (Mounting Hole)


Figure 1-16

Unit: mm [inch]


									0111	[
Frame	W	Н	D	W1	H1	D1*	S1	Ф1	Ф2	Ф3
B1	190.0 [7.48]	320.0 [12.60]	190.0 [7.48]	173.0 [6.81]	303.0 [11.93]	77.9 [3.07]	8.5 [0.33]	22.2 [0.87]	34.0 [1.34]	43.8 [1.72]

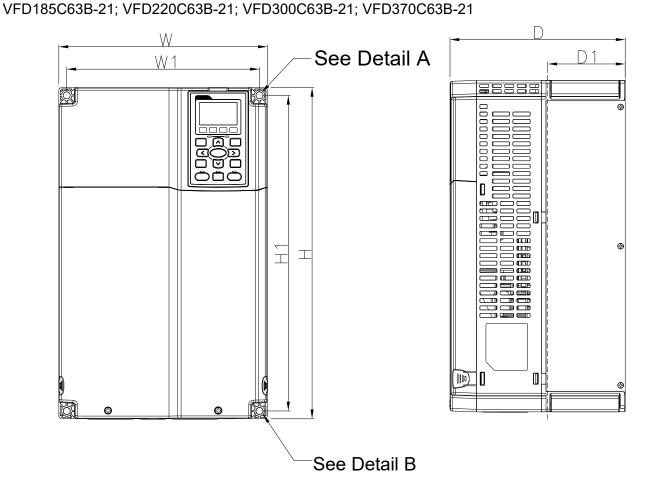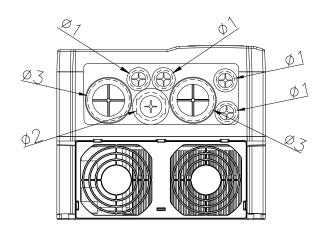Frame C
VFD150C23A; VFD185C23A; VFD185C43A/E; VFD220C23A; VFD220C43A/E; VFD300C43A/E;












Detail B (Mounting Hole)


Figure 1-17

Unit: mm [inch] Frame W Н D W1 H1 D1\* S1 Ф1 Ф2 Ф3 250.0 400.0 210.0 231.0 381.0 92.9 8.5 22.2 34.0 50.0 C1 [9.09][15.00] [9.84][15.75][8.27] [3.66][0.33][0.87][1.34][1.97]

#### Frame D0

D0-1: VFD370C43S; VFD450C43S

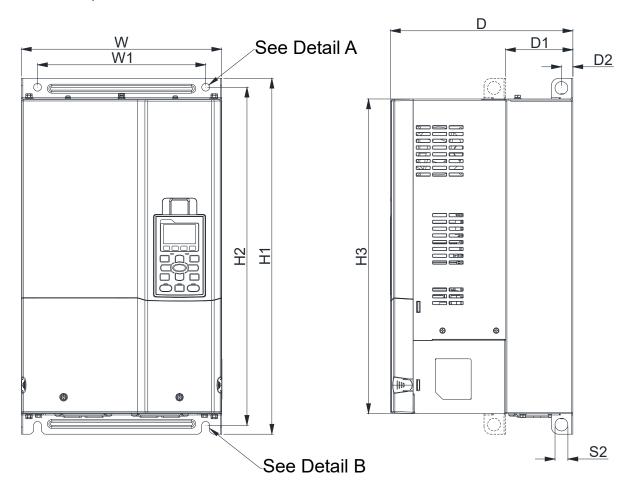

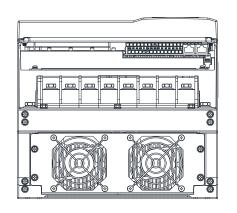

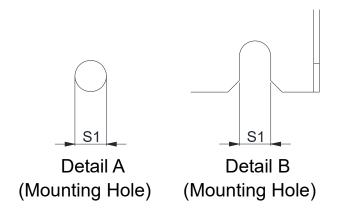


Figure 1-18

Unit: mm [inch] W H1 D W1 H2 Н3 D1\* D2 S1 S2 Frame 475.0 280.0 500.0 255.0 235.0 442.0 16.0 94.2 11.0 18.0 D0-1 [11.02] [19.69] [10.04] [9.25] [18.70] [17.40] [3.71] [0.63][0.43] [0.71]

# Frame D0

# D0-2: VFD370C43U; VFD450C43U


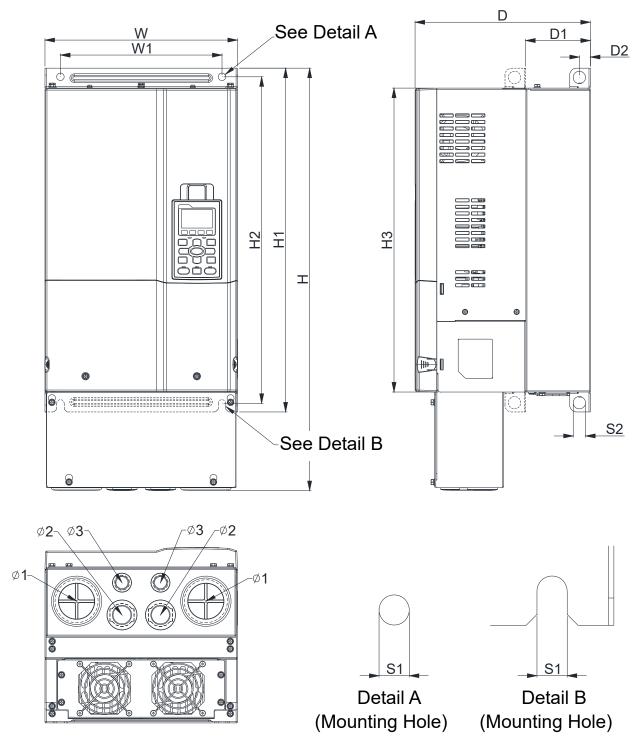



Figure 1-19

													Unit: n	nm [inch	]
Frame	W	Н	D	W1	H1	H2	Н3	D1*	D2	S1	S2	Ф1	Ф2	Ф3	
							442.0			-	18.0		34.0	22.0	
	[[11.02]	24.19	[10.04]	[9.25]	19.69	[18.70]	[17.40]	[3.7]	[0.63]	[0.43]	[[0.7]]	2.47	[1.34]	[0.87]	

#### Frame D

D1: VFD300C23A; VFD370C23A; VFD550C43A; VFD750C43A; VFD450C63B-00; VFD550C63B-00

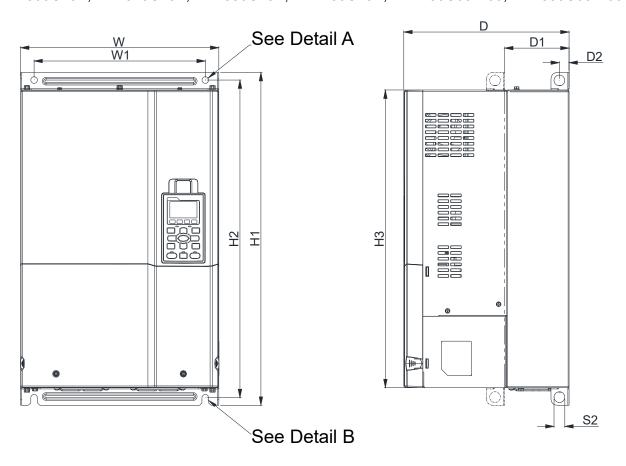

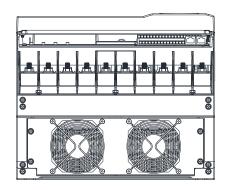

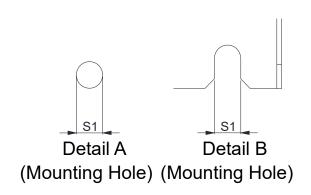


Figure 1-20

Unit: mm [inch]

Frame	W	Н	D	W1	H1	H2	НЗ	D1*	D2	S1	S2	Ф1	Ф2	Ф3
D1	330.0 [12.99]	-	275.0 [10.83]	285.0 [11.22]	550.0 [21.65]	525.0 [20.67]	492.0 [19.37]	107.2 [4.22]	16.0 [0.63]	11.0 [0.43]	18.0 [0.71]	-	-	-

Frame D
D2: VFD300C23E; VFD370C23E; VFD550C43E; VFD750C43E; VFD450C63B-21; VFD550C63B-21

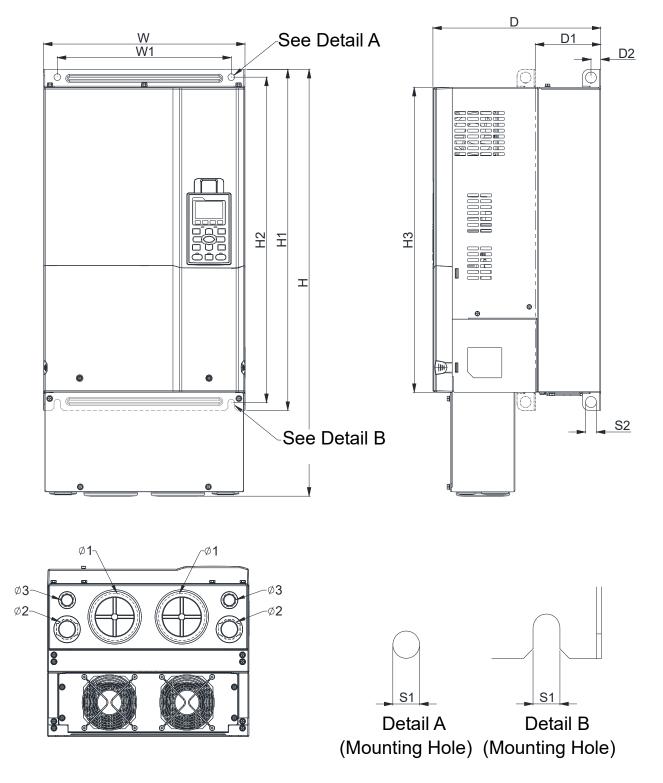



Figure 1-21


Unit: mm [inch]

Frame	W	Н	D	W1	H1	H2	Н3	D1*	D2	S1	S2	Ф1	Ф2	Ф3
D2	330.0	688.3	275.0	285.0	550.0	525.0	492.0	107.2	16.0	11.0	18.0	76.2	34.0	22.0
D2	[12.99]	[27,10]	[10.83]	[11.22]	[21.65]	[20.67]	[19.37]	[4.22]	[0.63]	[0.43]	[0.71]	[3.00]	[1.34]	[0.87]

#### Frame E

E1: VFD450C23A; VFD550C23A; VFD750C23A; VFD900C43A; VFD1100C43A; VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00

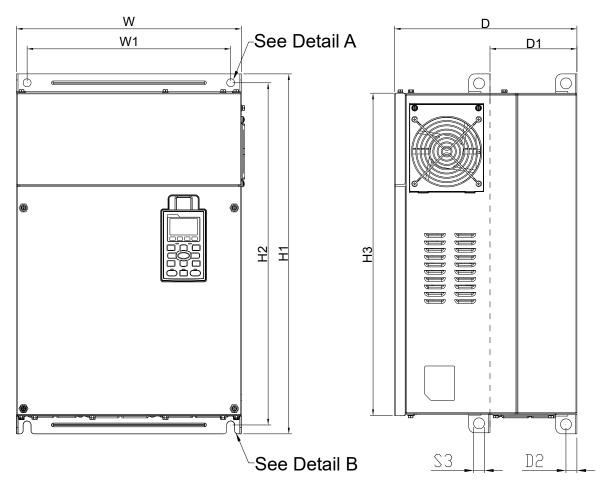

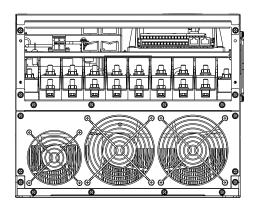

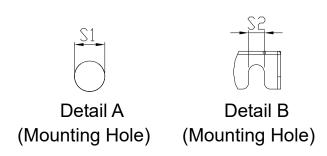


Figure 1-22

Unit: mm [inch]

													7111L. 11111	
Frame	W	Н	D	W1	H1	H2	НЗ	D1*	D2	S1, S2	S3	Ф1	Ф2	Ф3
E1	370.0 [14.57]	-	300.0 [11.81]	335.0 [13.19	589 [23.19]	560.0 [22.05]	528.0 [20.80]	143.0 [5.63]		13.0 [0.51]	18.0 [0.71]	-	-	-

# Frame E

E2: VFD450C23E; VFD550C23E; VFD750C23E; VFD900C43E; VFD1100C43E; VFD750C63B-21; VFD900C63B-21; VFD1100C63B-21; VFD1320C63B-21


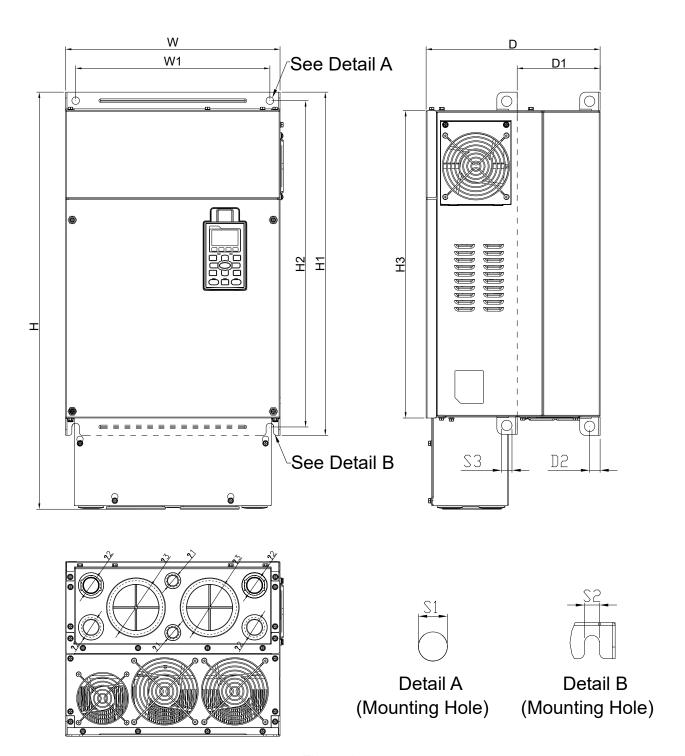



Figure 1-23


												ι	Jnit: mn	n [inch]
Frame	W	Н	D	W1	H1	H2	НЗ	D1*	D2	S1, S2	S3	Ф1	Ф2	Ф3
E2		715.8 [28.18]					528.0 [20.80]			13.0 [0.51]	18.0 [0.71]	22.0 [0.87]	34.0 [1.34]	92.0 [3.62]

#### Frame F

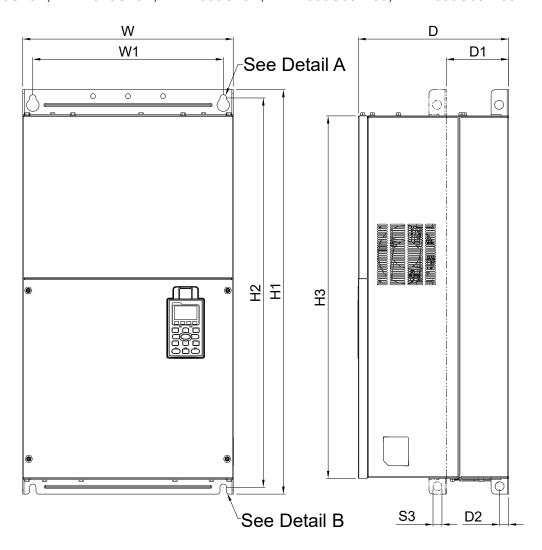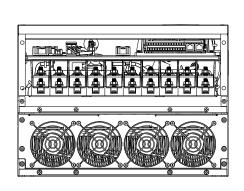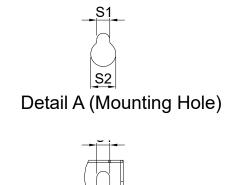F1: VFD900C23A; VFD1320C43A; VFD1600C43A; VFD1600C63B-00; VFD2000C63B-00







Detail B (Mounting Hole)

Figure 1-24

											Unit: m	ım [inch]
Frame	W	Н	D	W1	H1	H2	Н3	D1*	D2	S1	S2	S3
F1	420.0 [16.54]	-	300.0 [11.81]	380.0 [14.96]	800.0 [31.50]	770.0 [30.32]	717.0 [28.23]	124.0 [4.88]	18.0 [0.71]	13.0 [0.51]	25.0 [0.98]	18.0 [0.71]

Frame F
F2: VFD900C23E; VFD1320C43E; VFD1600C43E; VFD1600C63B-21; VFD2000C63B-21

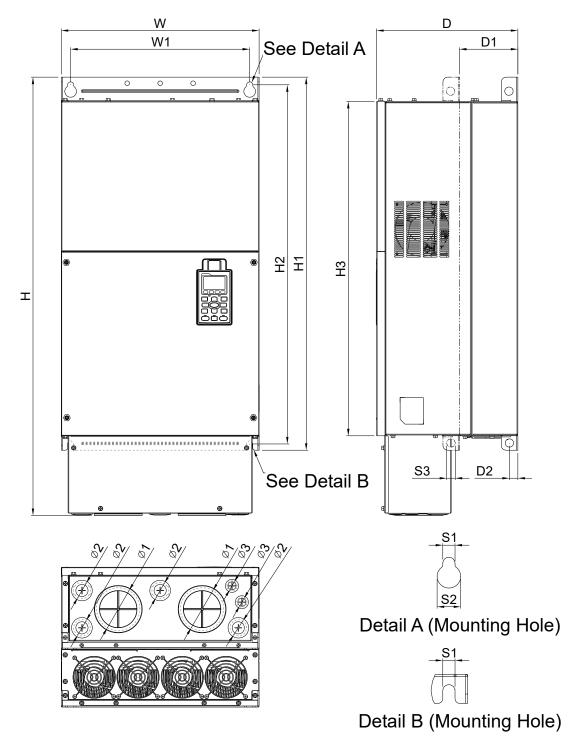


Figure 1-25

											Unit: m	ım [inch]
Frame	W	Н	D	W1	H1	H2	Н3	D1*	D2	S1	S2	S3
F2	420.0 [16.54]	940.0 [37.00]	300.0 [11.81]	380.0 [14.96]	800.0 [31.50]	770.0 [30.32]	717.0 [28.23]	124.0 [4.88]	18.0 [0.71]	13.0 [0.51]	25.0 [0.98]	18.0 [0.71]


 Frame
 Φ1
 Φ2
 Φ3


 F2
 92.0
 35.0
 22.0


 [3.62]
 [1.38]
 [0.87]


# Frame G
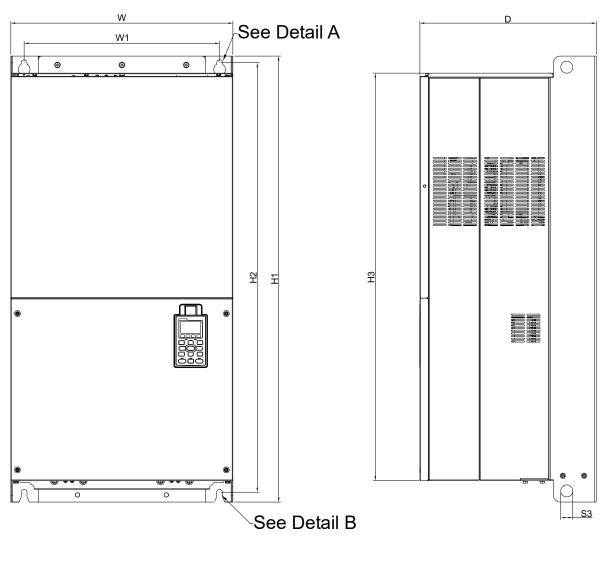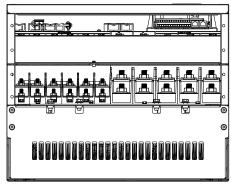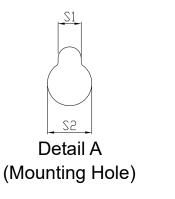
# G1: VFD1850C43A; VFD2200C43A; VFD2500C63B-00; VFD3150C63B-00









Detail B (Mounting Hole)

Figure 1-26

												Unit: m	m [inch]
Frame	W	Н	D	W1	H1	H2	НЗ	S1	S2	S3	Ф1	Ф2	Ф3
G1	500.0 [19.69]	-	397.0 [15.63]	440.0 [217.32]	1000.0 [39.37]	963.0 [37.91]	913.6 [35.97]	13.0 [0.51]	26.5 [1.04]	27.0 [1.06]	-	-	-

Frame G
G2: VFD1850C43E; VFD2200C43E; VFD2500C63B-21; VFD3150C63B-21


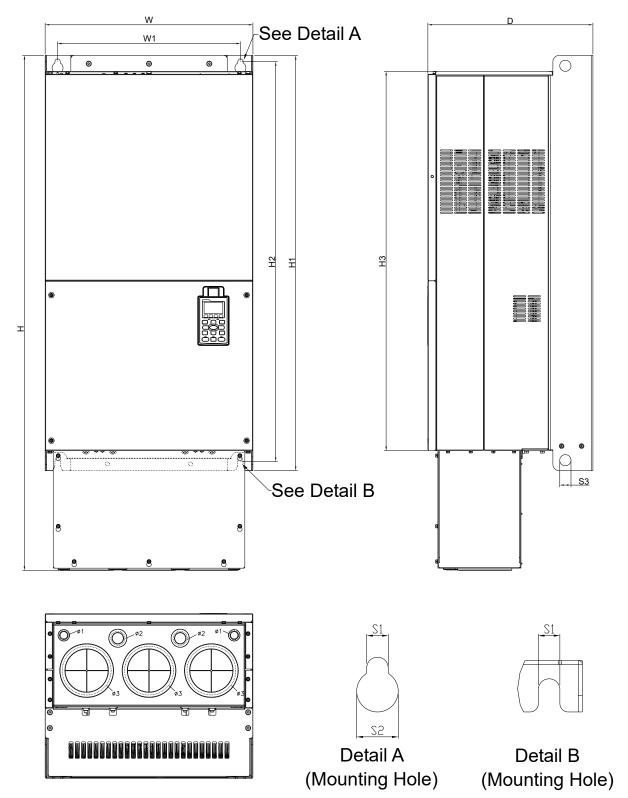



Figure 1-27


												Unit: m	m [inch]
Frame	W	Η	D	W1	H1	H2	Н3	S1	S2	S3	Ф1	Ф2	Ф3
G2		1240.2 [48.83]		440.0 [217.32]				13.0 [0.51]	26.5 [1.04]	27.0 [1.06]	22.0 [0.87]	34.0 [1.34]	117.5 [4.63]

#### Frame H

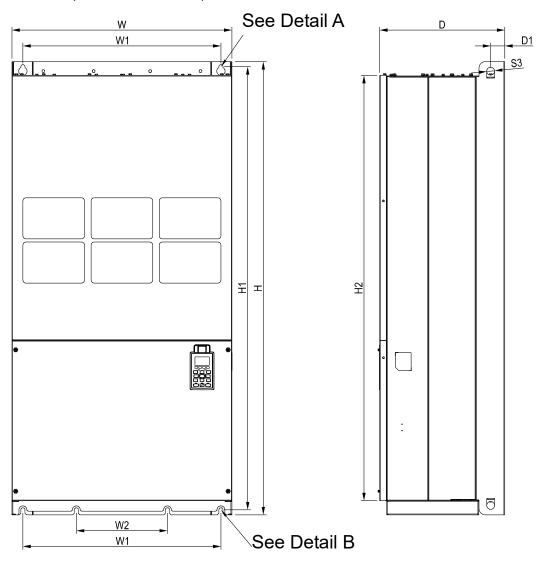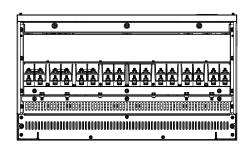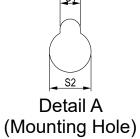H1: VFD2800C43A; VFD3150C43A; VFD3550C43A; VFD4500C43A; VFD4000C63B-00; VFD4500C63B-00; VFD6300C63B-00









Detail B (Mounting Hole)


Figure 1-28

Unit: mm [inch]

Frame	W	Ι	D	W1	W2	W3	W4	W5	W6	H1	H2	Н3	H4
H1	700.0 [27.56]	1435.0 [56.5]	398.0 [15.67]	630.0 [24.8]	290.0 [11.42]	-	ı	-	-		1346.6 [53.02]	-	-
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	Ф1	Ф2	Ф3
H1	-	45.0 [1.77]	-	-	-	-	-	13.0 [0.51]	26.5 [1.04]	25.0 [0.98]	-	-	-

# Frame H

H2: VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1; VFD4500C43E-1

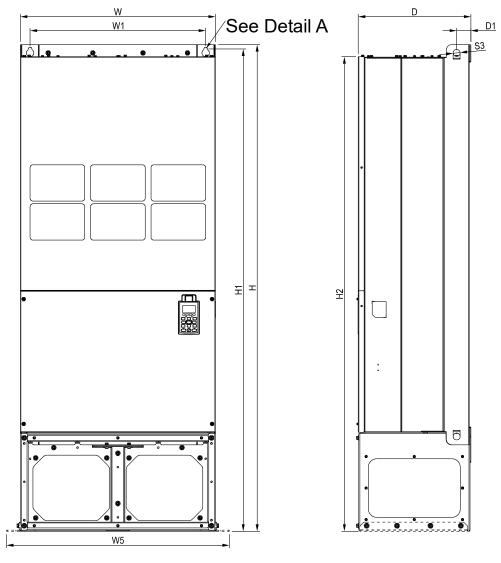


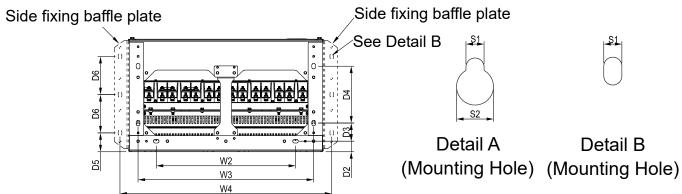


Figure 1-29

												Unit: m	m [inch]
Frame	W	Н	D	W1	W2	W3	W4	W5	W6	H1	H2	H3	H4
H2	700.0	1745.0	404.0	630.0	500.0	630.0	760.0	800.0		1729.0	1701.6		
ПZ	[27.56]	[68.70]	[15.91]	[24.8]	[19.69]	[24.8]	[29.92]	[31.5]	-	[68.07]	[66.99]	-	-
	•												
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	Ф1	Ф2	Ф3
110		51.0	38.0	65.0	204.0	68.0	137.0	13.0	26.5	25.0			
H2	-	[2.01]	[1.50]	[2.56]	[8.03]	[2.68]	[5.39]	[0.51]	[1.04]	[0.98]	-	-	-

#### Frame H
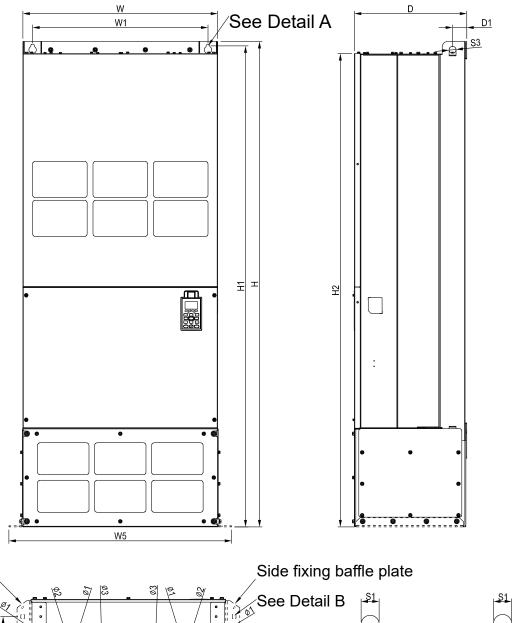
# H3: VFD2800C43E; VFD3150C43E; VFD3550C43E



Side fixing baffle plate

See Detail B

Detail A

Must wis wis wide fixing baffle plate

See Detail B

(Mounting Hole)

(Mounting Hole)

Figure 1-30

												Unit: m	m [inch]
Frame	W	Н	D	W1	W2	W3	W4	W5	W6	H1	H2	Н3	H4
По	700.0	1745.0	404.0	630.0	500.0	630.0	760.0	0.008		1729.0	1701.6		
НЗ	[27.56]	[68.70]	[15.91]	[24.8]	[19.69]	[24.8]	[29.92]	[31.5]	-	[68.07]	[66.99]	-	ı
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	Ф1	Ф2	Ф3
НЗ		51.0	38.0	65.0	204.0	68.0	137.0	13.0	26.5	25.0	22.0	34.0	117.5
113	-	[2.01]	[1.50]	[2.56]	[8.03]	[2.68]	[5.39]	[0.51]	[1.04]	[0.98]	[0.87]	[1.34]	[4.63]

#### 690V Frame H

## H2: VFD4000C63B-21; VFD4500C63B-21; VFD5600C63B-21; VFD6300C63B-21

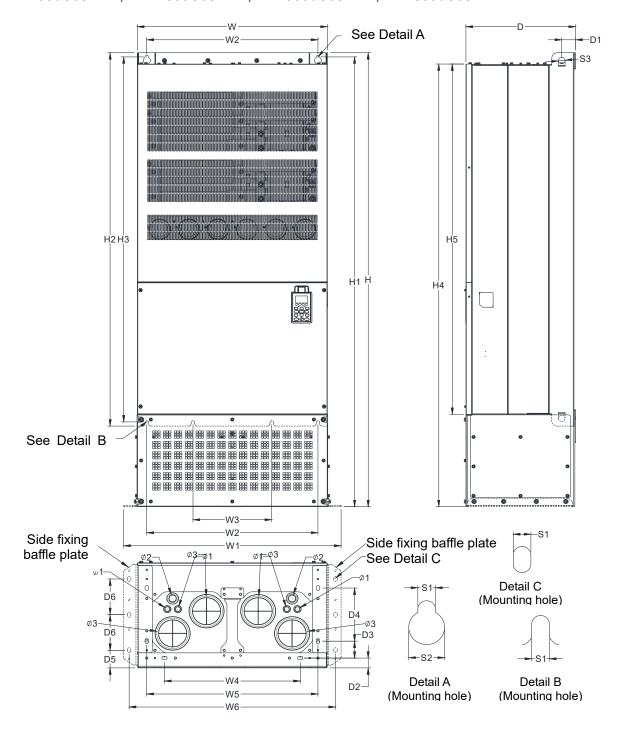


Figure 1-31

												Unit: m	ım [inch]
Frame	W	Η	D	W1	W2	W3	W4	W5	W6	H1	H2	Н3	H4
H2	700.0 [27.56]	1745.0 [68.70]	404.0 [15.91]	630.0 [24.8]	500.0 [19.69]	630.0 [24.8]	760.0 [29.92]	800.0 [31.5]	ı		1701.6 [66.99]	ı	-
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	Ф1	Ф2	Ф3
H2	-	51.0 [2.01]	38.0 [1.50]	65.0 [2.56]	204.0 [8.03]	68.0 [2.68]	137.0 [5.39]	13.0 [0.51]	26.5 [1.04]	25.0 [0.98]	22.0 [0.87]	34.0 [1.34]	117.5 [4.63]

# KPC-CC01

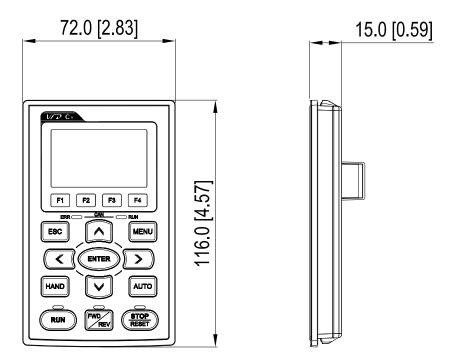


Figure 1-32


# Chapter 2 Installation

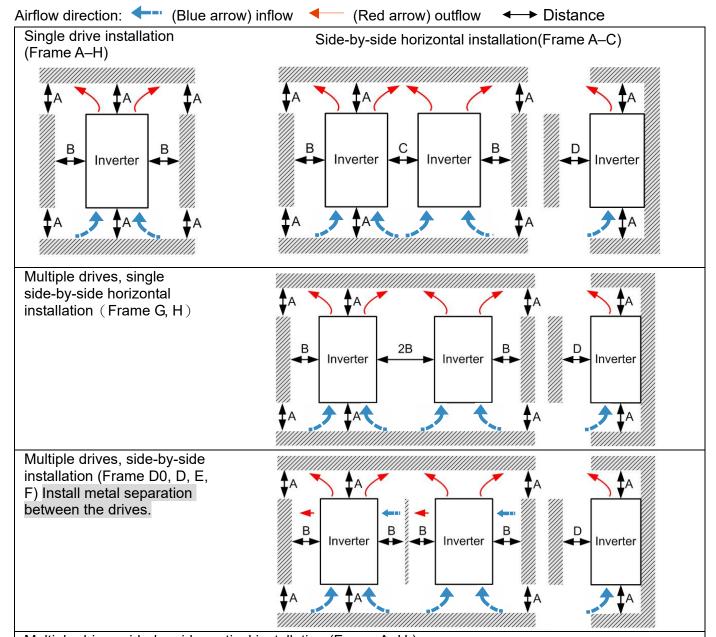- 2-1 Mounting Clearance
- 2-2 Air Flow and Power Dissipation

# 2-1 Mounting Clearance

- ☑ Prevent fiber particles, scraps of paper, shredded wood saw dust, metal particles, etc. from adhering to the heat sink
- Install the AC motor drive in a metal cabinet. When installing one drive below another one, use a metal separation between the AC motor drives to prevent mutual heating and to prevent the risk of fire accident.
- ☑ Install the AC motor drive in Pollution Degree 2 environments only:
  Normally only nonconductive pollution occurs and temporary conductivity caused by condensation is expected.


The appearances shown in the following figures are for reference only.



Multiple drives side-by-side vertical installation (Frame A-H)

Ta: Frame A–G Ta\*: Frame H

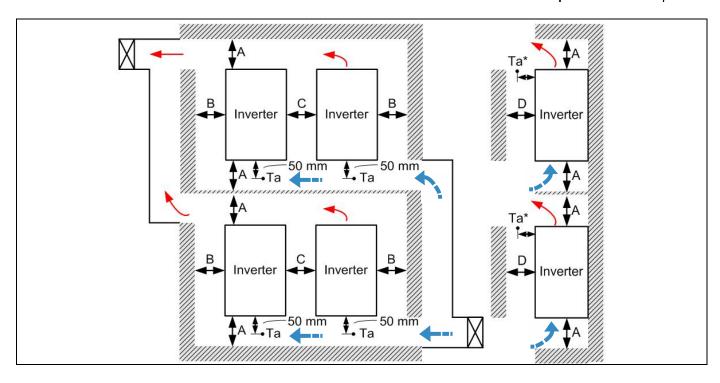When installing one AC motor drive below another one (top-bottom installation), use a metal separation between the drives to prevent mutual heating. The temperature measured at the fan's inflow side must be lower than the temperature measured at the operation side. If the fan's inflow temperature is higher, use a thicker or larger size of metal separation. Operation temperature is the temperature measured at 50mm away from the fan's inflow side. (As shown in the figure below)




Frame	A [mm]	B [mm]	C [mm]	D [mm]
A–C	60	30	10	0
D0-F	100	50	-	0
G	200	100	-	0
Н	350	0	0	200 (100, Ta=Ta*=50°C)

	VFD007C23A; VFD007C43A/E; VFD015C23A; VFD015C43A/E; VFD022C23A;
Frame A	VFD022C43A/E; VFD037C23A; VFD037C43A/E; VFD040C43A/E; VFD055C43A/E; VFD015C53A-21;
	VFD022C53A-21; VFD037C53A-21
Frame B	VFD055C23A; VFD75C23A; VFD075C43A/E; VFD110C23A; VFD110C43A/E;
	VFD150C43A/E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21
Frame C	VFD150C23A; VFD185C23A; VFD185C43A/E; VFD220C23A; VFD220C43A/E;
	VFD300C43A/E; VFD185C63B-21; VFD220C63B-21; VFD300C63B-21; VFD370C63B-21
Frame D0	VFD370C43S; VFD450C43S; VFD370C43U; VFD450C43U
Frame D	VFD300C23A/E; VFD370C23A/E; VFD550C43A/E; VFD750C43A/E; VFD450C63B-00;
Frame D	VFD550C63B-00; VFD450C63B-21; VFD550C63B-21
	VFD450C23A/E; VFD550C23A/E; VFD750C23A/E; VFD900C43A/E; VFD1100C43A/E;
Frame E	VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00; VFD750C63B-21;
	VFD900C63B-21; VFD1100C63B-21; VFD1320C63B-21
Frame F	VFD900C23A/E; VFD1320C43A/E; VFD1600C43A/E; VFD1600C63B-00; VFD2000C63B-00;
Frame F	VFD1600C63B-21; VFD2000C63B-21
Frame G	VFD1850C43A; VFD2200C43A; VFD1850C43E; VFD2200C43E; VFD2500C63B-00;
	VFD3150C63B-00; VFD2500C63B-21; VFD3150C63B-21
Frame H	VFD2800C43A; VFD3150C43A; VFD3550C43A; VFD4500C43A; VFD2800C43E-1; VFD3150C43E-1;
	VFD3550C43E-1; VFD4500C43E-1; VFD2800C43E; VFD3150C43E; VFD3550C43E; VFD4500C43E;
	VFD4000C63B-00; VFD4500C63B-00; VFD5600C63B-00; VFD6300C63B-00; VFD4000C63B-21;
	VFD4500C63B-21; VFD5600C63B-21; VFD6300C63B-21

# NOTE

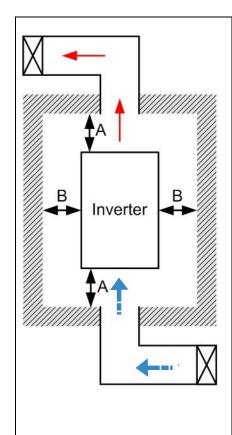1. The minimum mounting clearances stated in the table above applies to AC motor drives frame A to D. A drive fails to follow the minimum mounting clearances may cause the fan to malfunction and heat dissipation problem.



# NOTE

- \*\* The mounting clearances stated in the figure is for installing the drive in an open area. To install the drive in a confined space (such as cabinet or electric box), please follow the following three rules: (1) Keep the minimum mounting clearances. (2) Install a ventilation equipment or an air conditioner to keep surrounding temperature lower than operation temperature. (3) Refer to parameter setting and set up Pr. 00-16, Pr.00-17, and Pr. 06-55.
- The following table shows the heat dissipation and the required air volume when installing a single drive in a confined space. When installing multiple drives, the required air volume shall be multiplied by the number of the drives.
- Refer to the chart (Air flow rate for cooling) for ventilation equipment design and selection.
- Refer to the chart (Power dissipation) for air conditioner design and selection.
- Different control mode will affect the derating. See Pr. 06-55 for more information.
- Ambient temperature derating curve shows the derating status in different temperature in relation to different protection level.
- If UL Type 1 models need side by side installation, please remove top cover of FrameA–C, and please do not install conduit box of Frame D and above.
- Suitable for Installation in a Compartment Handling Conditioned Air (Plenum).

# 2-2 Air Flow and Power Dissipation

	Power dissipation of AC motor drive								
	Flow Rate [cfm]			Flow Rate [m³/hr]			Power Dissipation [W]		
Model No.	External	Internal	Total	External	Internal	Total	Loss External (Heat sink)	Internal	Total
VFD007C23A	-	-	-	-	-	-	33	27	61
VFD015C23A	14	-	14	24	-	24	56	31	88
VFD022C23A	14	-	14	24	-	24	79	36	115
VFD037C23A	10	-	10	17	-	17	113	46	159
VFD055C23A	40	14	54	68	24	92	197	67	264
VFD075C23A	66	14	80	112	24	136	249	86	335
VFD110C23A	58	14	73	99	24	124	409	121	529
VFD150C23A	166	12	178	282	20	302	455	161	616
VFD185C23A	166	12	178	282	20	302	549	184	733
VFD220C23A	166	12	178	282	20	302	649	216	865
VFD300C23A/E	179	30	209	304	51	355	913	186	1099
VFD370C23A/E	179	30	209	304	51	355	1091	220	1311
VFD450C23A/E	228	73	301	387	124	511	1251	267	1518
VFD550C23A/E	228	73	301	387	124	511	1401	308	1709
VFD750C23A/E	246	73	319	418	124	542	1770	369	2139
VFD900C23A/E	224	112	336	381	190	571	2304	484	2788
VFD007C43A/E	-	-	-	_	-	_	33	25	59
VFD015C43A/E	_			_			45	29	74
VFD022C43A/E	14	-	14	24	_	24	71	33	104
VFD037C43A/E	10	-	10	17	-	17	103	38	141
VFD040C43A/E	10	-	10	17	-	17	116	42	158
VFD040C43A/E VFD055C43A/E	10	-	10	17	-	17	134	46	180
VFD033C43A/E VFD075C43A/E	40	14	54	68	24	92	216	76	292
VFD110C43A/E	66	14	80	112	24	136	287	93	380
VFD150C43A/E	58	14	73	99	24	124	396	122	518
VFD185C43A/E	99	21	120	168	36	204	369	138	507
VFD163C43A/E VFD220C43A/E	99	21	120	168	36	204	476	158	635
VFD300C43A/E	126	21	147	214	36	250	655	211	866
VFD300C43A/E VFD370C43S/U	179	30	209	304	51	355	809	184	993
VFD450C43S/U	179	30	209	304	51	355	929	218	1147
VFD550C43A/E	179	30	209	304	51	355	1156	257	1413
VFD750C43A/E		30	216	316	51		1408		
VFD900C43A/E	186 257	73	330	437	124	367 561	1693	334 399	1742 2092
VFD1100C43A/E	223	73	296	379	124	503	2107	491	2599
VFD1100C43A/E VFD1320C43A/E	223	112	336	381	190	571	2502	579	3081
VFD1320C43A/E VFD1600C43A/E	289	112	401	491	190	681	3096	687	3783
VFD1850C43A/E	209	112	454	491	190	771	3090	007	4589
VFD1830C43A/E VFD2200C43A/E			454			771			5772
VFD2800C43A/E			769			1307			6381
VFD3150C43A/E			769			1307			7156
VFD3550C43A/E			769			1307			8007
VFD4500C43A/E			769			1307			11894
VFD015C53A-21	-	-	-	-	-	-	39.5	13.0	53
VFD022C53A-21	-	-	-	-	-	-	55.0	22.0	77
VFD037C53A-21	0.006	-	0.006	13.6	-	13.6	86.8	42.7	130
VFD055C53A-21	0.019	0.007	0.026	40.0	14.5	54.5	124.6	67.9	193
VFD075C53A-21	0.019	0.007	0.026	40.0	14.5	54.5	143.5	119.0	263
VFD110C53A-21	0.019	0.007	0.026	40.0	14.5	54.5	222.2	162.8	385
VFD150C53A-21	0.019	0.007	0.026	40.0	14.5	54.5	308.5	216.5	525
VFD185C63B-21	90.0	21.3	111.4	153.0	36.2	189.2	317.5	145.0	462.5
VFD220C63B-21	90.0	21.3	111.4	153.0	36.2	189.2	408.2	141.8	550.0
VFD300C63B-21	90.0	21.3	111.4	153.0	36.2	189.2	492.7	257.3	750.0

# Chapter 2 Installation | C2000

Air flow rate for cooling							Power dissipation of AC motor drive			
	Flow Rate [cfm]			Flow Rate [m³/hr]			Power Dissipation [W]			
Model No.	External	Internal	Total	External	Internal	Total	Loss External (Heat sink)	Internal	Total	
VFD370C63B-21	89.0	21.3	110.3	151.2	36.2	187.5	641.6	283.4	925.0	
VFD450C63B-00/21	175.9	36.4	212.3	298.8	61.8	360.6	718.2	406.8	1125.0	
VFD550C63B-00/21	175.9	36.4	212.3	298.8	61.8	360.6	890.1	484.9	1375.0	
VFD750C63B-00/21	264.6	90.6	355.2	449.6	153.9	603.5	1356.0	519.0	1875.0	
VFD900C63B-00/21	264.6	90.6	355.2	449.6	153.9	603.5	1652.8	597.2	2250.0	
VFD1100C63B-00/21	264.6	90.6	355.2	449.6	153.9	603.5	1960.3	789.7	2750.0	
VFD1320C63B-00/21	264.6	90.6	355.2	449.6	153.9	603.5	2230.8	1069.2	3300.0	
VFD1600C63B-00/21	248.1	135.3	383.4	421.6	229.9	651.4	2627.3	1372.7	4000.0	
VFD2000C63B-00/21	248.1	135.3	383.4	421.6	229.9	651.4	3415.0	1585.0	5000.0	
VFD2500C63B-00/21			409.7			696.0	4751.7	1498.3	6250.0	
VFD3150C63B-00/21			409.7			696.0	5695.4	2179.6	7875.0	
VFD4000C63B-00/21			563.0			956.4	6796.2	3203.8	10000.0	
VFD4500C63B-00/21	<u></u>		952.9			1618.9	7313.6	3936.4	11250.0	
VFD5600C63B-00/21			952.9			1618.9	9553.4	4446.6	14000.0	
VFD6300C63B-00 VFD6300C63B-21			952.9			1618.9	11042.4	4707.6	15750.0	
The required air	flow show	vn in cha	rt is for	installing :	single driv	∕e in a	The heat di	ssipation s	hown in	
confined space.							the chart is	the chart is for installing single		
When installing the state of the state	be the	drive in a confined space.								
required air volume for single drive X the number of the drives.										
		drives, volume of heat								
	dissipation should be the heat									
	dissipated for single drive X the									
	number of the drives.									
							Heat dissipation for each model			
	is calculate	•	-							
	current and	default ca	rrier.							

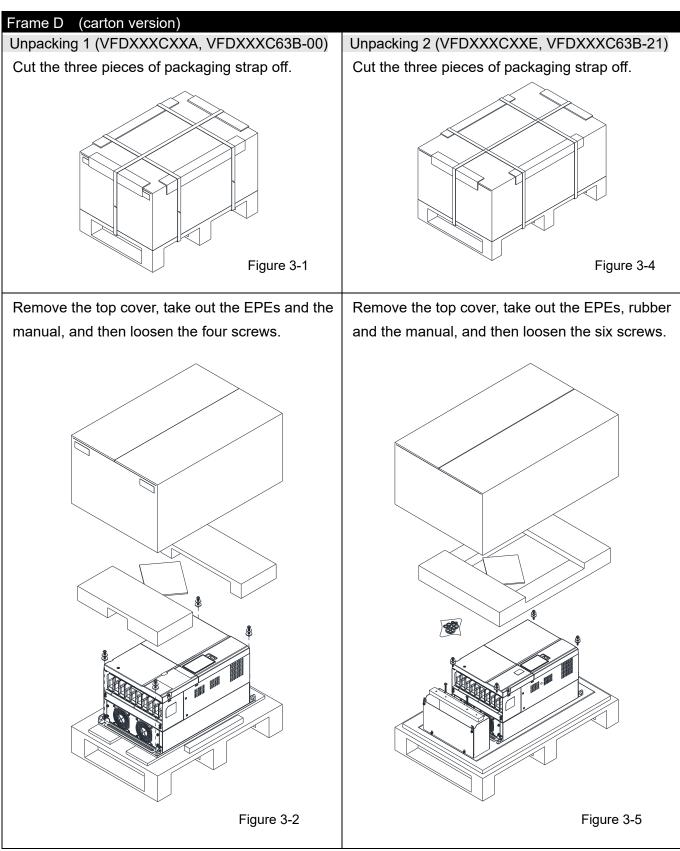
# Chapter 3 Unpacking

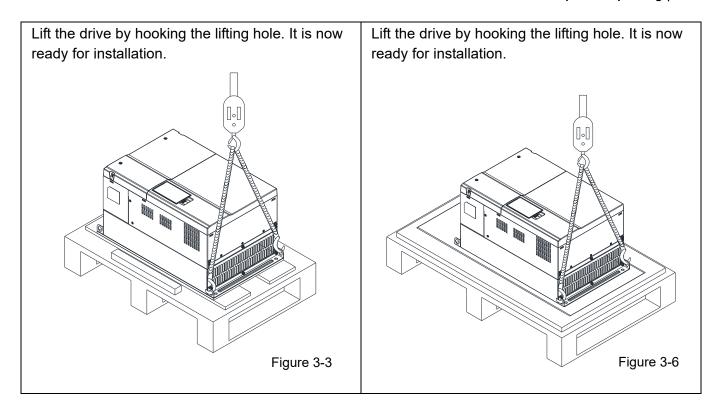
- 3-1 Unpacking
- 3-2 The Lifting Hook

The AC motor drive should be kept in the shipping carton or crate before installation. In order to retain the warranty coverage, the AC motor drive should be stored properly when it is not to be used for an extended period of time.

# 3-1 Unpacking


Follow these steps to unpack the AC motor drive:






# Frame D (crate version)

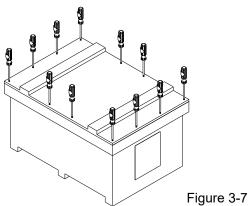Unpacking 1 (VFDXXXCXXA, VFDXXXC63B-00) Loosen the 12 screws to open the top cover of the crate.



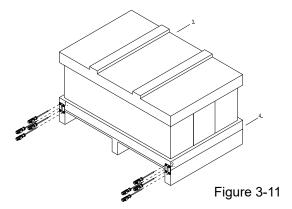Unpacking 2 (VFDXXXCXXE, VFDXXXC63B-21) Loosen the 16 screws at the four corners of the crate, and then remove the iron plates.



Take out the EPEs and the manual.


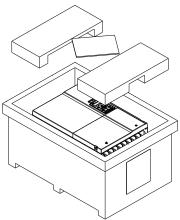


Figure 3-8

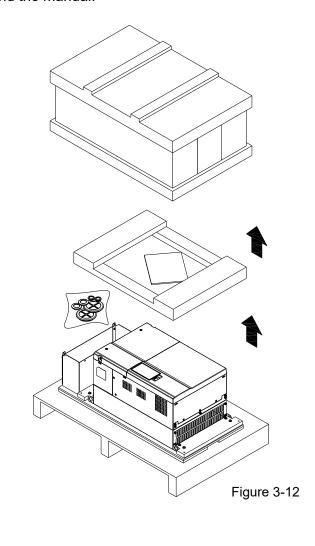Remove the top cover, take out the EPEs, rubber and the manual.



Loosen the eight screws fasten the drive on the pallet, and then remove the wood plate.



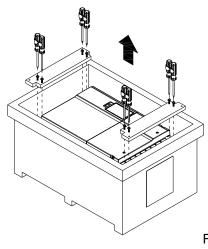



Figure 3-9

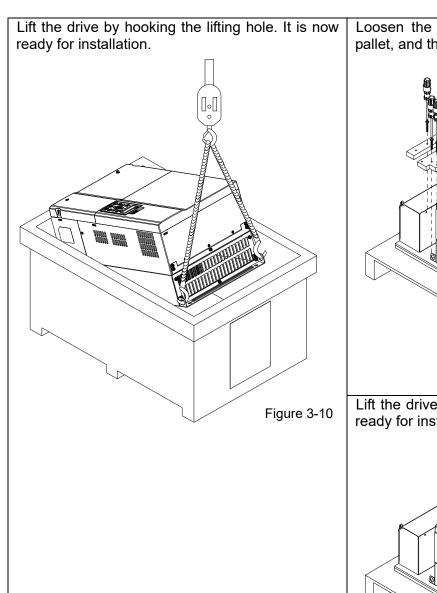

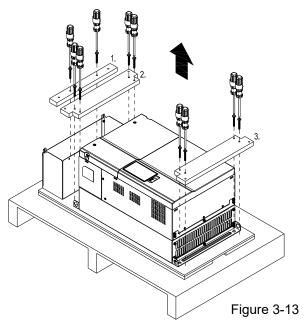Loosen the ten screws fasten the drive on the pallet, and then remove the wood plate.



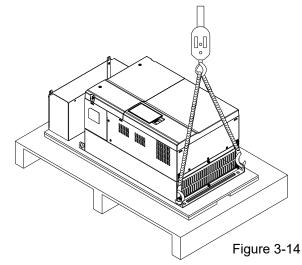
Lift the drive by hooking the lifting hole. It is now ready for installation.



# Frame E


Unpacking 1 (VFDXXXCXXA, VFDXXXC63B-00)

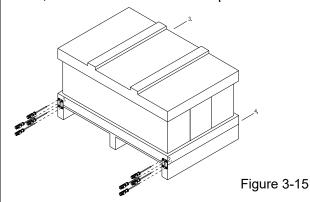Loosen the 16 screws at the four corners of the crate, and then remove the iron plates.




Unpacking 2 (VFDXXXCXXE, VFDXXXC63B-21) Loosen the 16 screws at the four corners of the

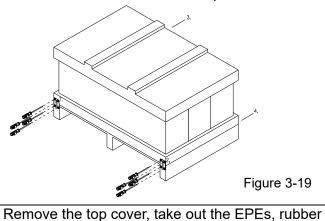
crate, and then remove the iron plates.



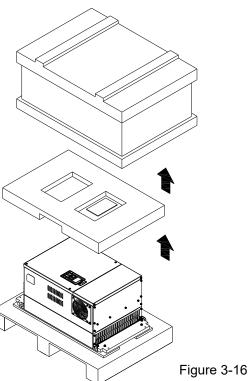
Remove the top cover, take out the EPEs and the manual.




and the manual.

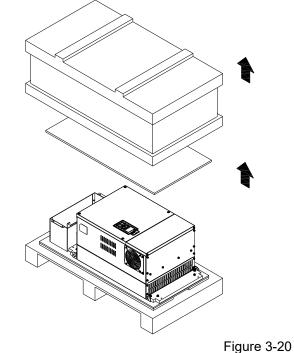


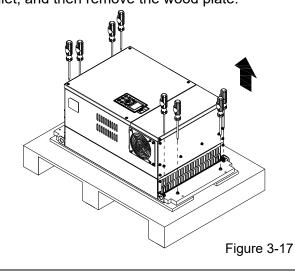Loosen the eight screws fasten the drive on the pallet, and then remove the wood plate.



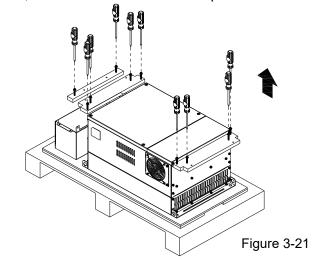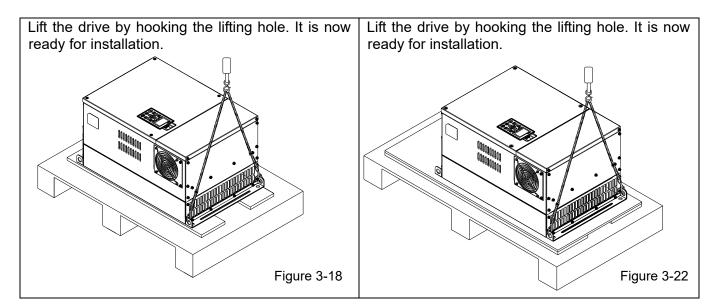Loosen the ten screws fasten the drive on the pallet, and then remove the wood plates.






## Frame F


Unpacking 1 (VFDXXXCXXA, VFDXXXC63B-00)

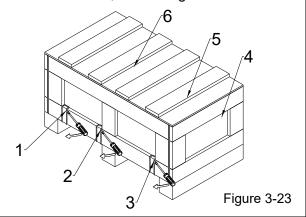Remove the six buckles fixed on the crate with a flat-head screwdriver, see the figure below.




Unpacking 2 (VFDXXXCXXE, VFDXXXC63B-21)

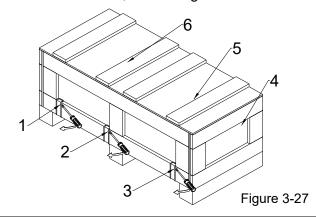
Remove the six buckles fixed on the crate with a flat-head screwdriver, see the figure below.



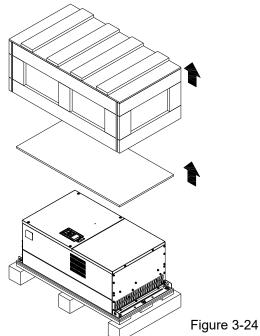
Remove the top cover, take out the EPEs and the manual.



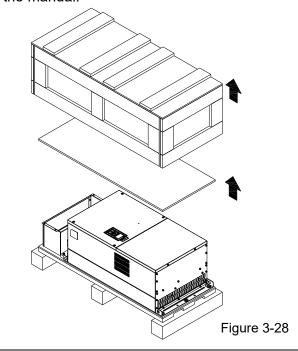
Remove the top cover, take out the EPEs, rubber and the manual.




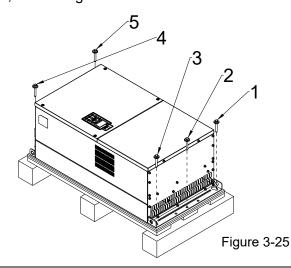Loosen the five screws fasten the drive on the pallet, see the figure below.



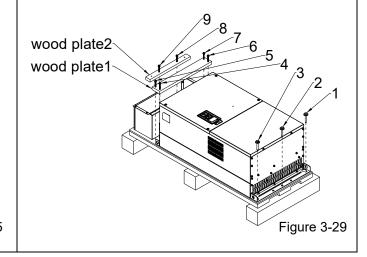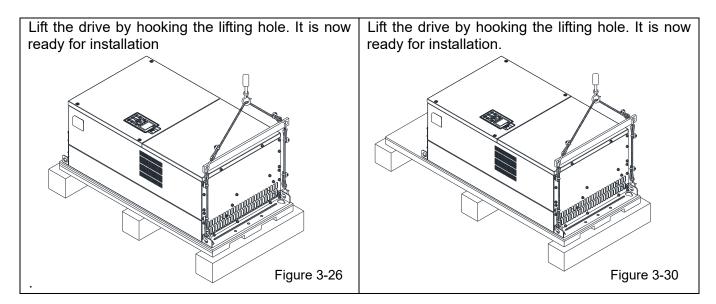Loosen the five screws fasten the drive on the pallet, and then remove the wood plates.





#### Frame G

Unpacking 1 (VFDXXXCXXA, VFDXXXC63B-00)

Remove the six buckles fixed on the crate with a flat-head screwdriver, see the figure below.


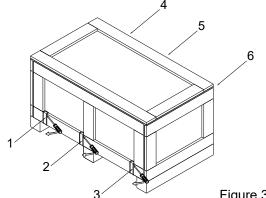


Figure 3-31

flat-head screwdriver, see the figure below.

Remove the six buckles fixed on the crate with a

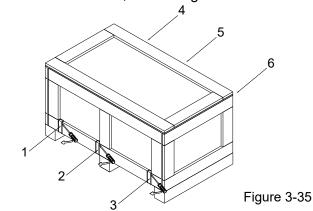Unpacking 2 (VFDXXXCXXE, VFDXXXC63B-21)



Remove the top cover, take out the EPEs and the manual.



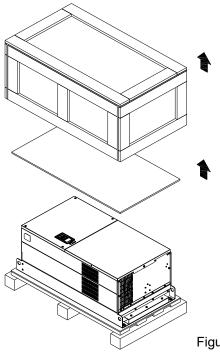


Figure 3-32

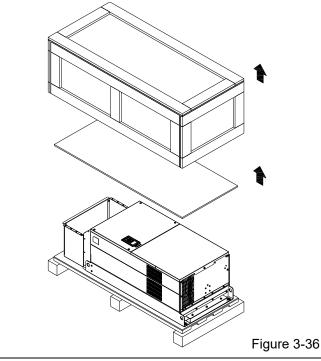
Remove the top cover, take out the EPEs, rubber and the manual.




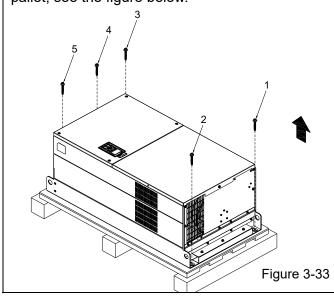Loosen the five screws fasten the drive on the pallet, see the figure below.



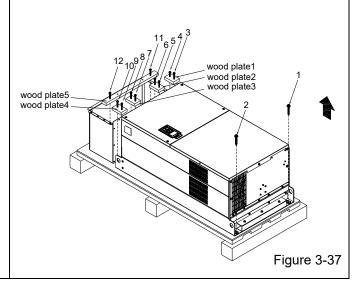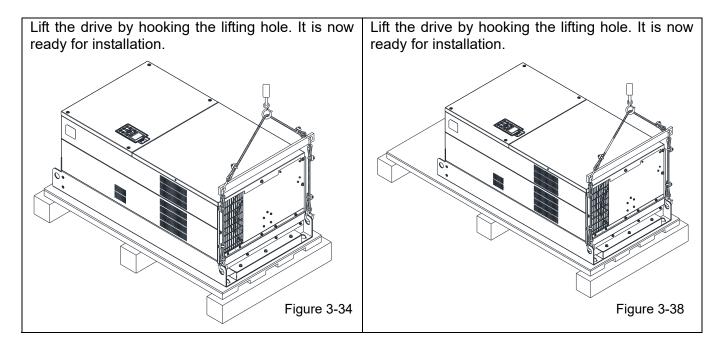Loosen the 12 screws fasten the drive on the pallet, and then remove the wood plates.





#### Frame H

# Unpacking 1 (VFDXXXC43A)

Remove the eight buckles fixed on the crate with a flat-head screwdriver, see the figure below.

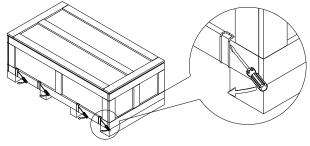


Figure 3-39

# Unpacking 2 (VFDXXXC43E-1)

Remove the eight buckles fixed on the crate with a flat-head screwdriver, see the figure below.


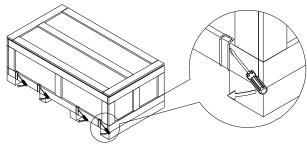


Figure 3-43

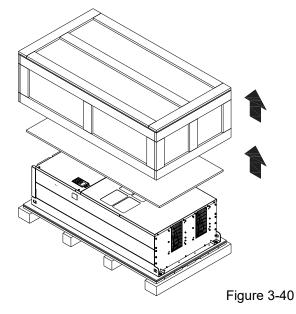Remove the top cover, take out the EPEs and the manual.



Remove the top cover, take out the EPEs, rubber and the manual.



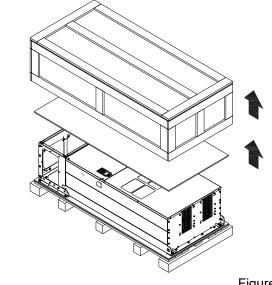


Figure 3-44

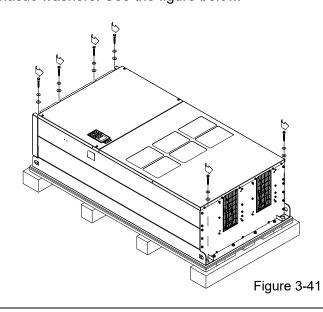
Loosen the six screws fasten the drive on the pallet, and then remove six metal washers and six plastic washers. See the figure below.



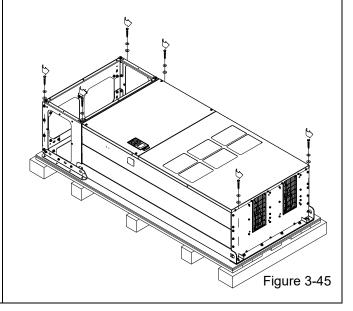
Loosen the six screws fasten the drive on the pallet, and then remove six metal washers and six plastic washers. See the figure below.



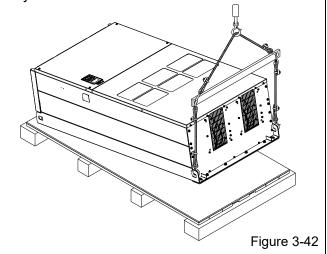Lift the drive by hooking the lifting hole. It is now ready for installation.



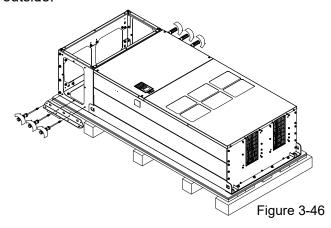
Loosen the six M6 screws and the iron plates (see the figure below). You can use the removed screws and iron plates to fix the drive from outside.




This description is how to fix the drive from the outside. You can skip to the next step if it's not necessary.

Loosen the eight M8 screws, and then use these eight M8 screws to fix the iron plates (removed at the last step) to the drive, see the figure below.

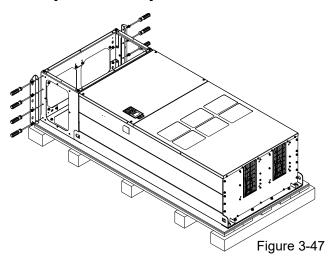Torque: 150–180 kg-cm / [130.20–156.24 lb-in.] / [14.7–17.6 Nm]



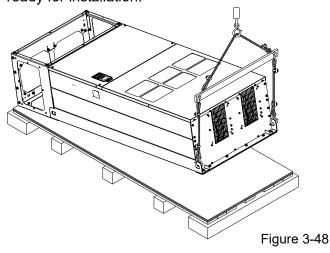
Lift the drive by hooking the lifting hole. It is now ready for installation.




# Frame H

## Unpacking 3 (VFDXXXC43E)

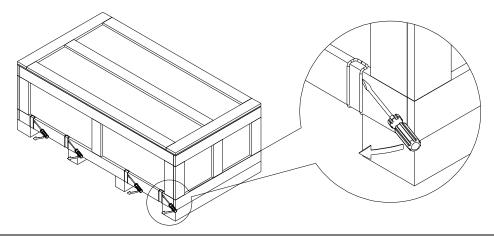Remove the eight buckles fixed on the crate with a flat-head screwdriver, see the figure below.



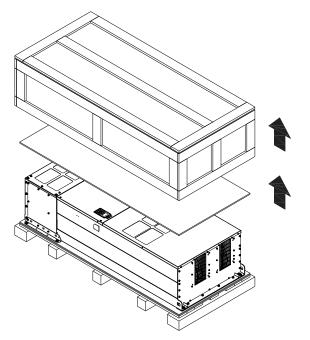Remove the top cover, take out the EPEs, rubber and the manual.



Loosen the six screws fasten the drive on the pallet, and then remove six metal washers and six plastic washers. See the figure below.

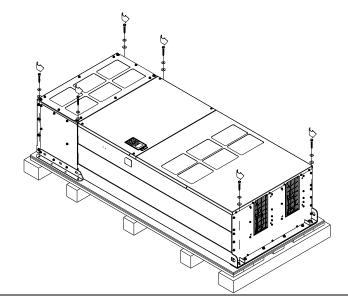


Figure 3-50

Figure 3-49

Loosen the six M6 screws and the iron plates (see the figure below). You can use the removed screws and iron plates to fix the drive from the outside.


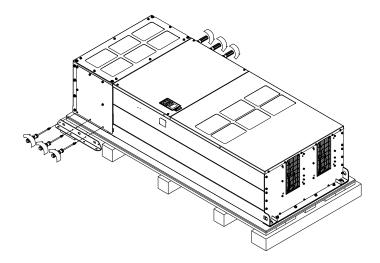


Figure 3-52


#### Fix the drive from the inside

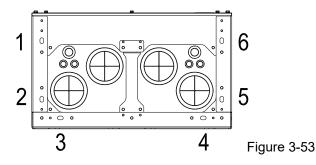Loosen the 18 M6 screws and remove the covers (see the figure 3-54). After fixing the drive and the cover for cables (see the figure 3-53), fasten the other covers back (see the figure 3-54)

Torque: 35–45 kg-cm / [30.38–39.06 lb-in.] / [3.4–4.4 Nm]




Cover for cables (use M12 screws)

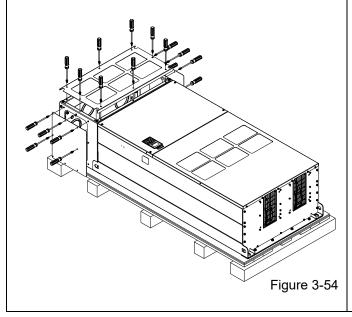


#### Fix the drive from the outside

Loosen the eight M8 screws, and then use these eight M8 screws to fix the iron plates (removed at the last step) to the drive, see the figure below.

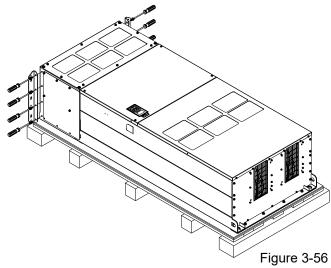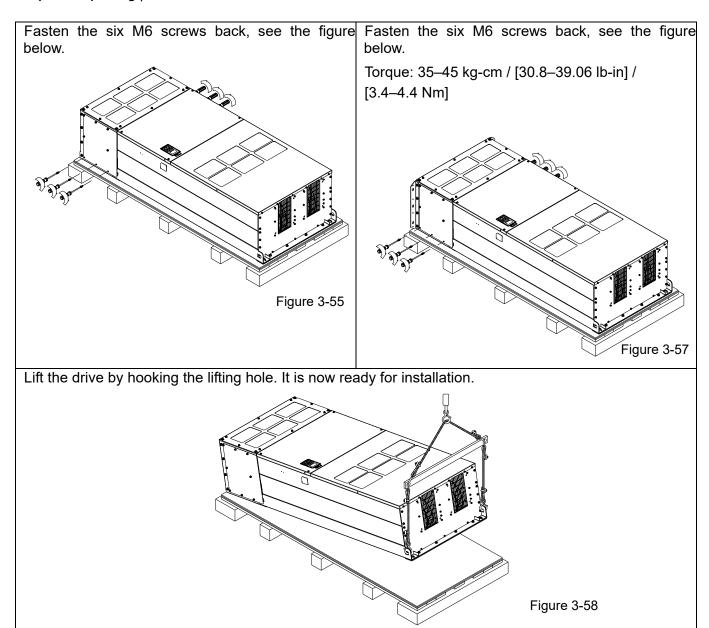Torque: 150–180 kg-cm / [130.20–156.24 lb-in.] / [14.7–17.6 Nm]





# 690V Frame H

# Unpacking 1 (VFDXXXC63B-00)

Remove the eight buckles fixed on the crate with a flat-head screwdriver, see the figure below.


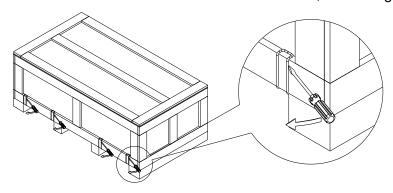


Figure 3-59

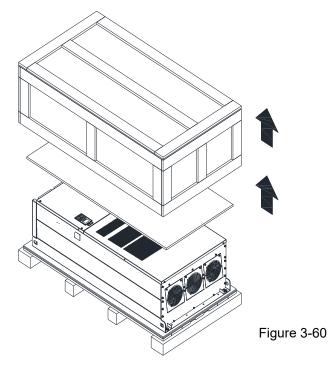Remove the top cover, take out the EPEs and the manual.



Loosen the six screws fasten the drive on the pallet, and then remove six metal washers and six plastic washers. See the figure below.


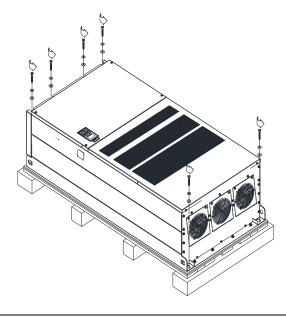


Figure 3-61

# Chapter 3 Unpacking | C2000

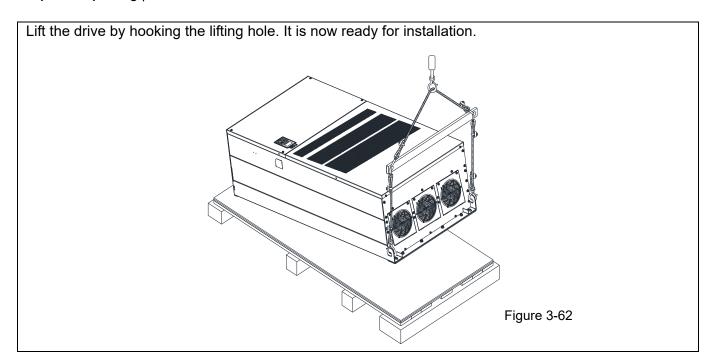

# 690V Frame H

# Unpacking 2 (VFDXXXC63B-21)

Remove the eight buckles fixed on the crate with a flat-head screwdriver, see the figure below.

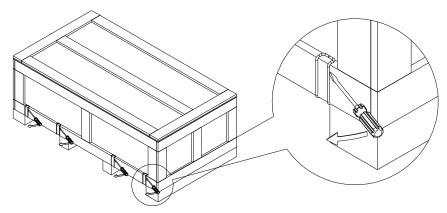


Figure 3-63

Remove the top cover, take out the EPEs, rubber and the manual.

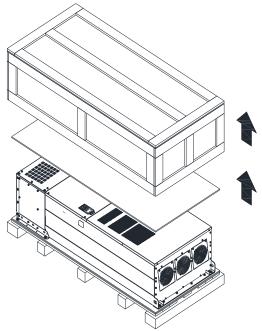


Figure 3-64

Loosen the six screws fasten the drive on the pallet, and then remove six metal washers and six plastic washers. See the figure below.

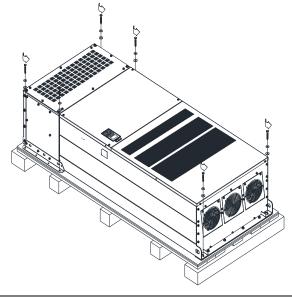


Figure 3-65

Loosen the six M6 screws and the iron plates (see the figure below). You can use the removed screws and iron plates to fix the drive from the outside.


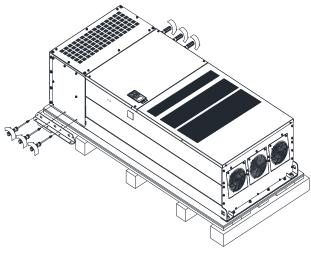


Figure 3-66


#### Fix the drive from the inside.

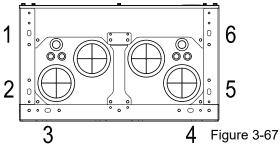Loosen the 18 M6 screws and remove the covers (see the figure 3-68). After fixing the drive and the cover for cables (see the figure 3-67), fasten the other covers back (see the figure 3-68)

Torque: 35–45 kg-cm / [30.38–39.06 lb-in.] / [3.4–4.4 Nm]



Cover for cables (use M12 screws)

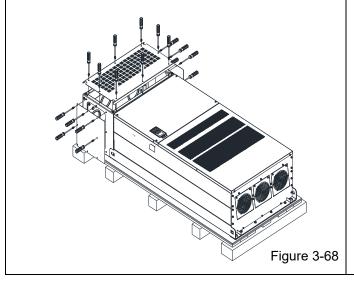

## Fix the drive from the outside.

Loosen the eight M8 screws, and then use these eight M8 screws to fix the iron plates (removed at the last step) to the drive, see the figure below.

Torque: 150–180 kg-cm / [130.20–156.24 lb-in.] / [14.7–17.6 Nm]


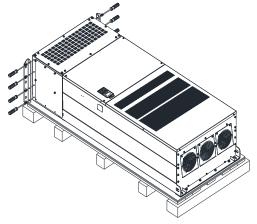


Figure 3-70

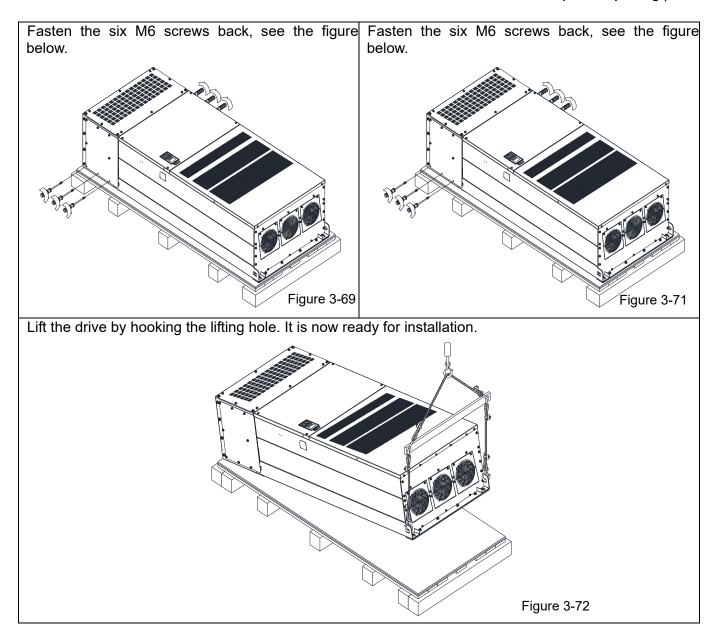

# Frame H: Fix the drive

VFDXXXC43A Screw: M12\*6

Torque: 340-420 kg-cm / [295.1-364.6 lb-in.] / [33.3-41.2 Nm]

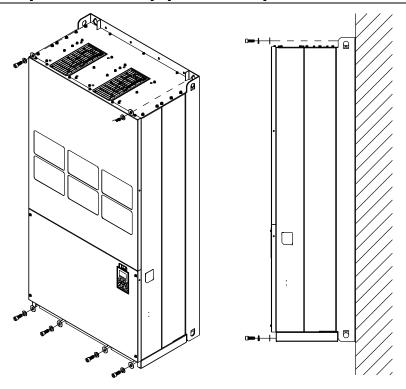


Figure 3-73

# VFDXXXC43E & VFDXXXC43E-1

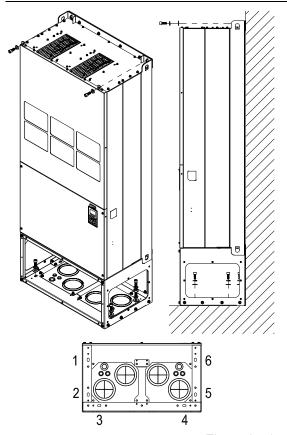



Figure 3-74

Fix the drive from the inside.

Screw: M12\*8

Torque: 340-420 kg-cm / [295.1-364.6 lb-in.] /

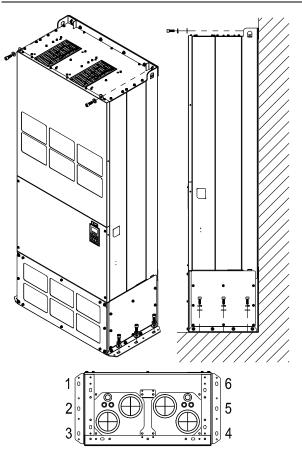[33.3-41.2 Nm]



Fix the drive from the outside.

Screw: M12\*8

Torque: 340-420 kg-cm / [295.1-364.6 lb-in.] /


[33.3-41.2 Nm]

Figure 3-75

VFDXXXC63B

Screw M 12\*6

Torque: 340-420 kg-cm / [295.1-364.6 lb-in.] / [33.32-41.16 Nm]

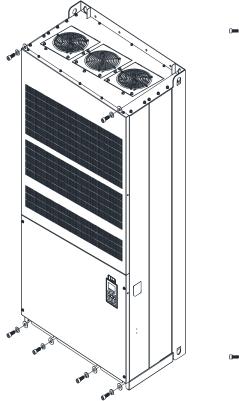


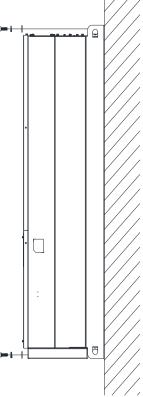


Figure 3-76

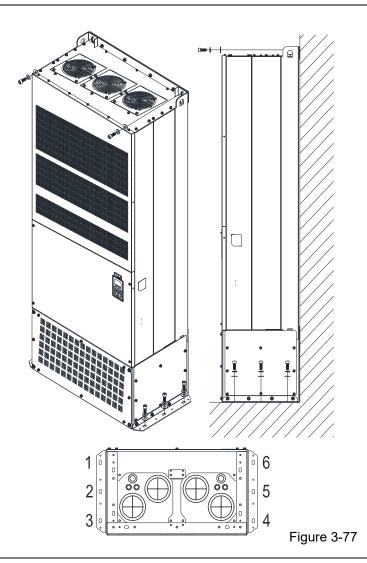


Fix the drive from the outside.

Screw: M12\*8

Torque: 340–420 kg-cm / [295.1–364.6 lb-in.] / [33.32–41.16 Nm]

# 3-2 The Lifting Hook

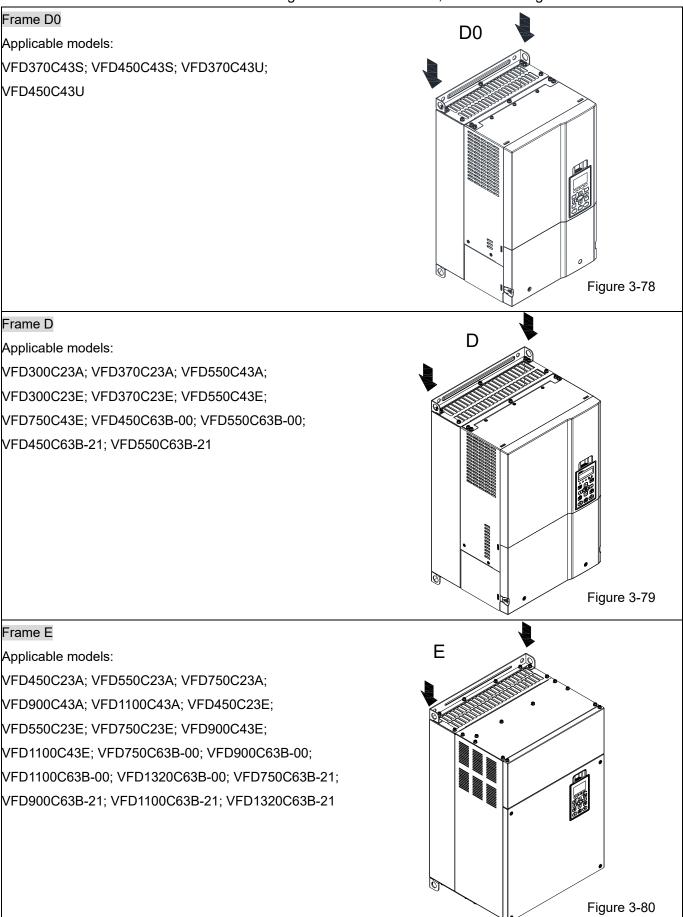The arrows indicate the location of the lifting holes of frame D to H, as shown in figure below:



#### Frame F

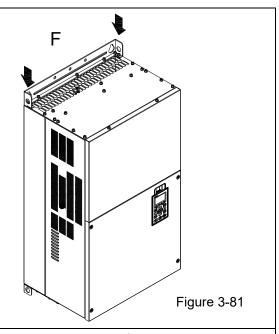
Applicable models:

VFD900C23A; VFD1320C43A; VFD1600C43A;

VFD900C23E; VFD1320C43E; VFD1600C43E;

VFD1600C63B-00; VFD2000C63B-00;

VFD1600C63B-21; VFD2000C63B-21




#### Frame G

Applicable models:

VFD1850C43A; VFD2200C43A; VFD1850C43E;

VFD2200C43E; VFD2500C63B-00; VFD3150C63B-00;

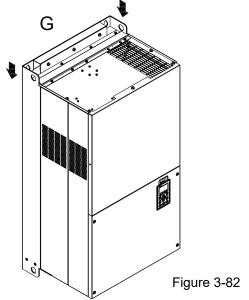VFD2500C63B-21; VFD3150C63B-21



## Frame H

Applicable models:

VFD2800C43A; VFD3150C43A; VFD3550C43A;

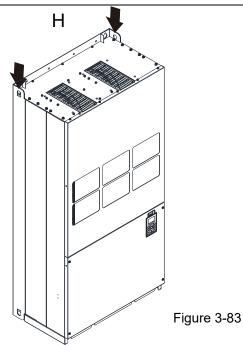
VFD4500C43A; VFD2800C43E-1; VFD3150C43E-1;

VFD3550C43E-1; VFD4500C43E-1; VFD2800C43E;

VFD3150C43E; VFD3550C43E; VFD4500C43E;

VFD4000C63B-00; VFD4500C63B-00;

VFD5600C63B-00; VFD6300C63B-00



# 690V Frame H3 Applicable models: VFD4000C63B-21; VFD4500C63B-21; VFD5600C63B-21; VFD6300C63B-21 Figure 3-84

Ensure the lifting hook properly goes through the lifting hole, as shown in the following diagram.

## Applicable to Frame D0-E

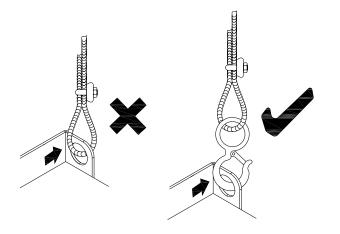


Figure 3-85

# Applicable to Frame F-H

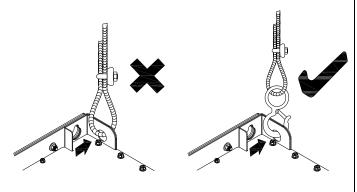


Figure 3-86

Ensure the angle between the lifting holes and the lifting device is within the specification, as shown in the following figure.

# Applicable to Frame D0-E



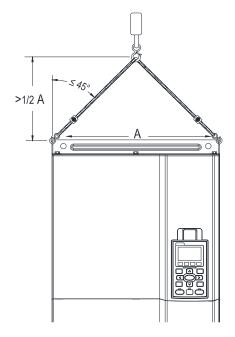



Figure 3-87

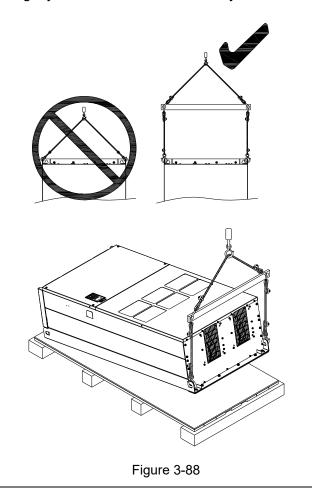Applicable to Frame F–H, 690V Frame H3 Following drawing is only for demonstration, it may be slightly different with the machine you have.



# Weight

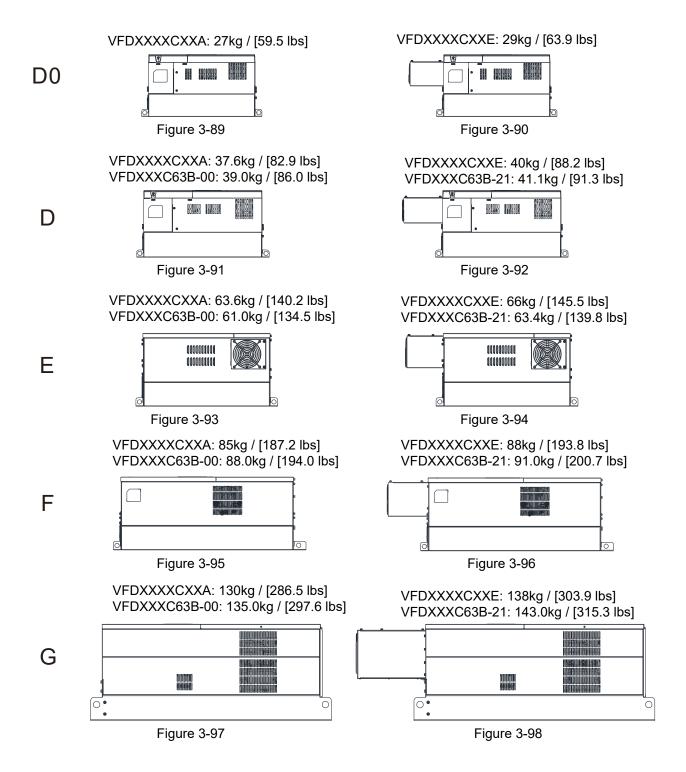

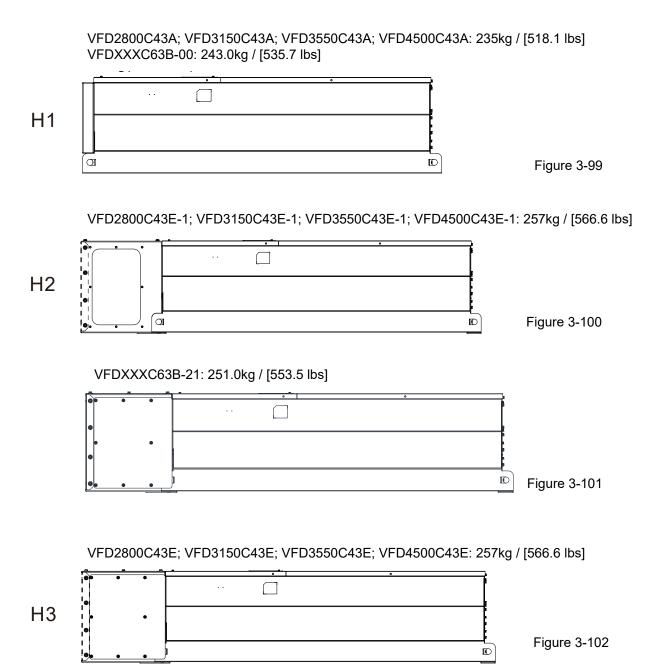

# Chapter 4 Wiring

- 4-1 System Wiring Diagram
- 4-2 Wiring

After removing the front cover, examine if the power and control terminals are clearly noted. Please read following precautions before wiring.




- ☑ It is crucial to cut off the AC motor drive power before any wiring installation are made. A charge may still remain in the DCBUS capacitors with hazardous voltages even if the power has been turned off. Therefore, it is suggested for users to measure the remaining voltage by DC voltage meter before wiring. For your personnel safety, please do not perform any wiring before the voltage drops to a safe level < 25 V<sub>DC</sub>. Wiring installation with remaining voltage condition may cause sparks and short circuit.
- Only qualified personnel familiar with AC motor drives is allowed to perform installation, wiring and commissioning. Make sure the power is turned off before wiring to prevent electric shock.
- ☑ Make sure that power is only applied to the R/L1, S/L2, T/L3 terminals. Failure to comply may result in damage to the equipment. The voltage and current should lie within the range as indicated on the nameplate (Chapter 1-1 Nameplate Information).
- All the units must be grounded directly to a common ground terminal to prevent lightning strike or electric shock.
- ☑ Please make sure to fasten the screw of the main circuit terminals to prevent sparks which is made by the loose screws due to vibration.



- ☑ When wiring, please choose the wires with specification that complies with local regulation for your personnel safety.
- ☑ Check following items after finishing the wiring:
  - 1. Are all connections correct?
  - 2. Any loosen wires?
  - 3. Any short-circuits between the terminals or to ground?

## 4-1 System Wiring Diagram

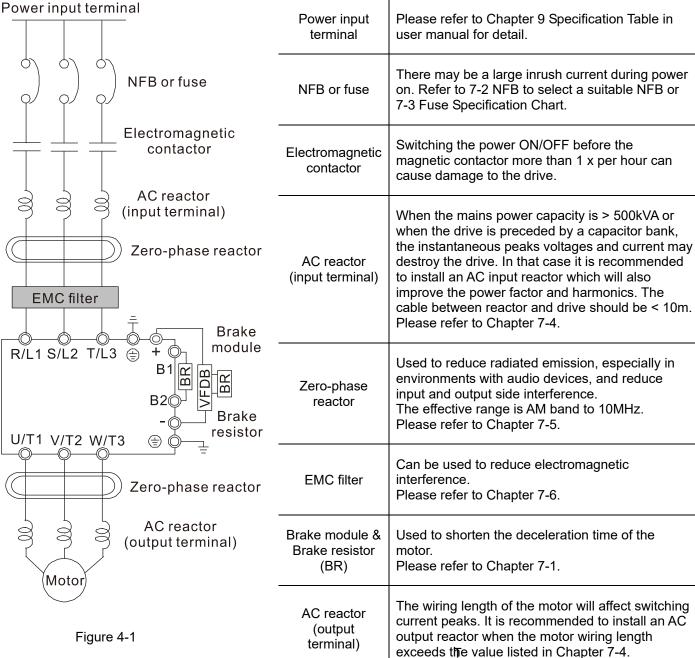Diagram for detailed wiring information.



Note: Please refer to Chapter 4-2 Wiring

Table 4-1

## 4-2 Wiring


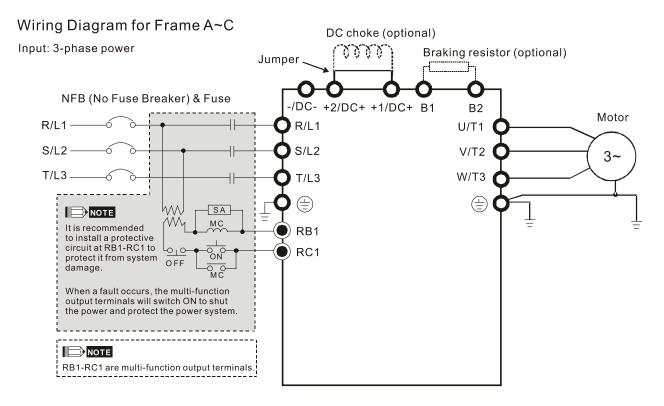


Figure 4-2

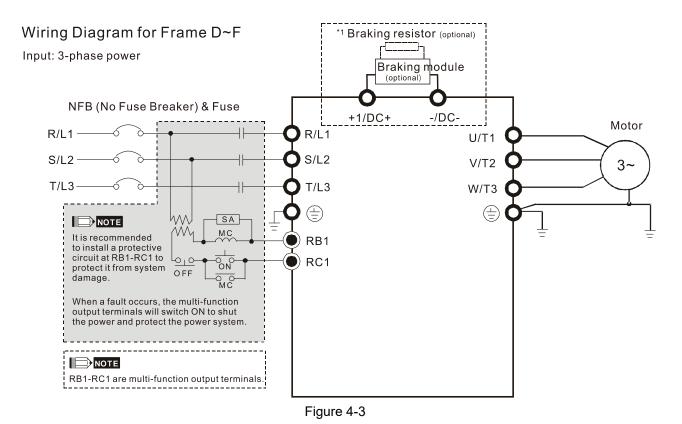

<sup>\*1</sup> Please refer to Chapter 7-1 for brake units and resistors selection

## Wiring Diagram for Frame G~H Input: 3-phase power \*1 Braking resistor (optional) Braking module +1/DC U/T1 Motor R/L11 V/T2 3~ DC reactor S/L21 W/T3 T/L31 R/L12 DC-T/L32

Figure 4-4

▶ Inverter

→ Transformer

Note: When wiring for 12 Pulse Input, please strictly follow above wiring diagram, or it may cause the fan stop unexpectedly. Any questions, please contact Delta Electronics, Inc.

<sup>\*1</sup> Please refer to Chapter 7-1 for brake units and resistors selection.

#### Wiring Diagram for Frame A~H

Input: 3-phase power


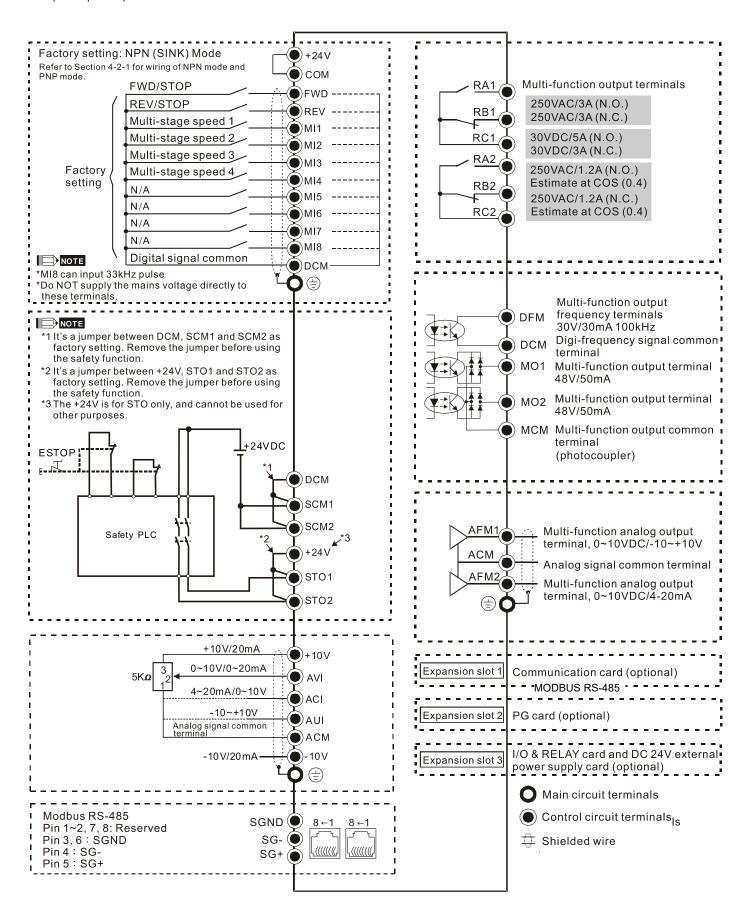


Figure 4-5

## 4-2-1 SINK (NPN) / SOURCE (PNP) Mode

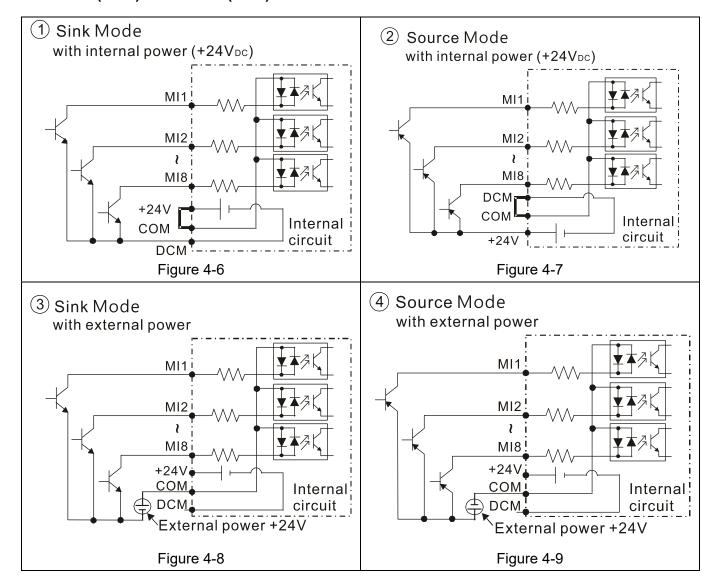

[The page intentionally left blank]

# Chapter 5 Main Circuit Terminals

- 5-1 Main Circuit Diagram
- 5-2 Specifications of Main Circuit Terminals



- Fasten the screws in the main circuit terminal to prevent sparks condition made by the loose screws due to vibration.
- $\overline{\mathbf{M}}$ When it needs to install the filter at the output side of terminals U/T1, V/T2, W/T3 on the AC motor drive. Please use inductance filter. Do not use phase-compensation capacitors or L-C (Inductance-Capacitance) or R-C (Resistance-Capacitance), unless approved by Delta.
- DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- DO NOT connect [+1, -], [+2, -], [+1/DC+, -/DC-] or brake resistor directly to prevent  $\overline{\mathbf{Q}}$ drive damage.
- ☑ Ensure the insulation of the main circuit wiring in accordance with the relevant safety regulations.



#### Main power terminals

- Do not connect 3-phase model to one-phase power. R/L1, S/L2 and T/L3 has no phase-sequence requirement, it can be used upon random selection.
- $\overline{\mathbf{V}}$ It is recommended to add a magnetic contactor (MC) to the power input wiring to cut off power quickly and reduce malfunction when activating the protection function of the AC motor drive. Both ends of the MC should have an R-C surge absorber.
- Please use voltage and current within the specification.
- When using a general GFCI (Ground Fault Circuit Interrupter), select a current sensor  $\overline{\mathsf{V}}$ with sensitivity of 200mA or above and not less than 0.1-second operation time to avoid nuisance tripping.
- Please use the shielded wire or tube for the power wiring and ground the two ends of the shield wire or tube.
- ☑ Do NOT run/stop AC motor drives by turning the power ON/OFF. Run/stop AC motor drives by RUN/STOP command via control terminals or keypad. If you still need to run/stop AC motor drives by turning power ON/OFF, it is recommended to do so only ONCE per hour.
- ☑ Connect the drive to a 3-phase three-wire or 3-phase four-wire Wye system to comply with UL standards.

#### Output terminals for main circuit

- Use well-insulated motor, suitable for inverter operation.
- When the AC drive output terminals U/T1, V/T2, and W/T3 are connected to the motor  $\overline{\mathbf{A}}$ terminals U/T1, V/T2, and W/T3 respectively, the motor will rotate counterclockwise (as viewed on the shaft end of the motor, see the figure below) upon a forward operation command is received. To permanently reverse the direction of motor rotation, switch over any of the two motor leads.




Figure 5-1

Terminals for connecting DC reactor, external brake resistor, external brake resistor and DC circuit

☑ This is the terminals used to connect the DC reactor to improve the power factor. For the factory setting, it connects the short-circuit object. Please remove this short-circuit object before connecting to the DC reactor.




Figure 5-2

☑ Connect a brake resistor or brake unit in applications with frequent deceleration ramps, short deceleration time, too low brake torque or requiring increased brake torque.

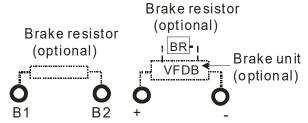



Figure 5-3

- ☑ The external brake resistor of Frame A, B and C should connect to the terminals (B1, B2) of AC motor drives.
- For those models without built-in brake resistor, please connect external brake unit and brake resistor (both of them are optional) to increase brake torque.
- ☑ When the terminals +1, +2 and are not used, please leave the terminals open.
- ☑ DC+ and DC- are connected by common DCBUS, please refer to Chapter 5-1 (Main Circuit Terminal) for the wiring terminal specification and the wire gauge information.
- ☑ Please refer to the VFDB manual for more information on wire gauge when installing the brake unit.


## 5-1 Main Circuit Diagram
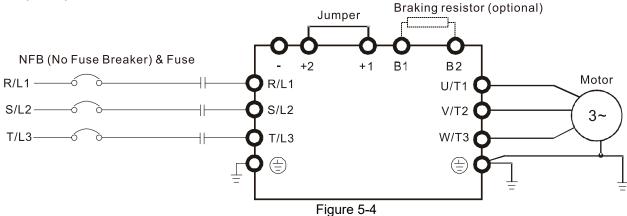
#### Wiring Diagram for Frame A~C

Input: 3-phase power




#### Wiring Diagram for Frame A~C

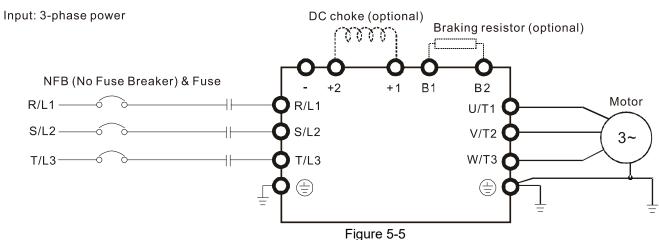

#### Wiring Diagram for Frame D~F

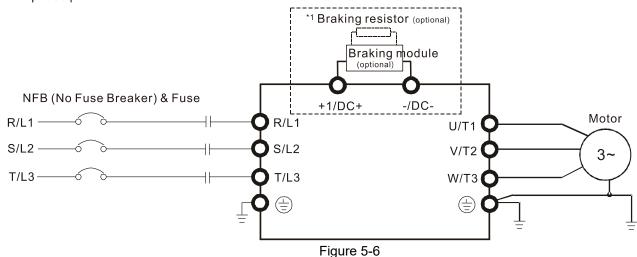Input: 3-phase power



<sup>\*1</sup> Please refer to Section 7-1 for more details of brake units.

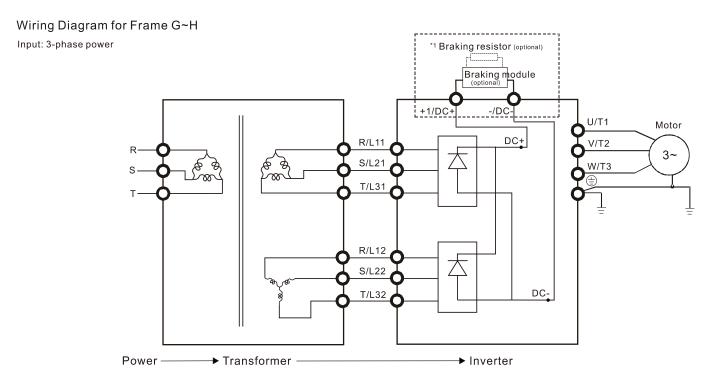


Figure 5-7

\*1 Please refer to Section 7-1 for brake units and resistors selection.

Note: When wiring for 12 Pulse Input, please strictly follow above wiring diagram, or it may cause the fan stop unexpectedly. Any questions, please contact Delta Electronics, Inc.



- If the wiring between motor drive and motor is over 75 meters, please refer to Chapter 7-4 Specifications of limits for motor cable length.
- Please remove short circuit plate of Frame G and H if 12 pulse is implemented

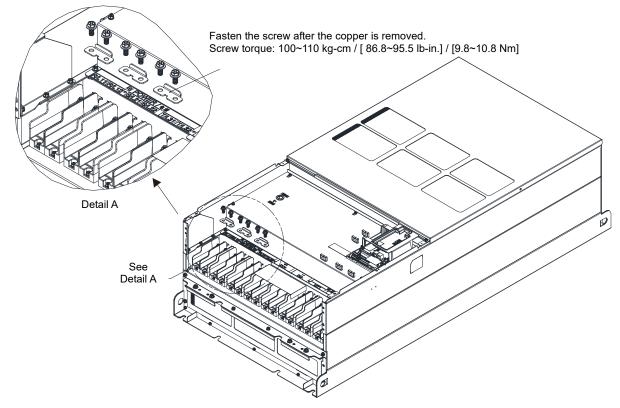


Figure 5-8

#### Chapter 5 Main Circuit Terminals | C2000

Terminals	Descriptions					
R/L1, S/L2, T/L3	AC line input terminals 3-phase					
U/T1, V/T2, W/T3	AC drive output terminals for connecting 3-phase induction motor					
	Applicable to frame A–C					
+1/DC+, +2/DC+	onnections for DC reactor to improve the power factor. It needs to remove the					
	jumper for installation.					
	Connections for brake module (VFDB series)					
±1/DC± /DC	(for 230V models: ≤ 22kW, built-in brake module)					
+1/DC+, -/DC-	(for 460V models: ≤ 30kW, built-in brake module)					
	Common DC BUS					
B1, B2	Connections for brake resistor (optional)					
	Earth connection, please comply with local regulations.					

Table 5-1

## 5-2 Specifications of Main Circuit Terminals

- Use the specified ring lug for main circuit terminal wiring. See figure 5-9 and figure 5-10 for ring lug specifications. For other types of wiring use the wires that comply with the local regulations.
- After crimping the wire to the ring lug (must be UL approved), UL and CSA approved recognized component (YDPU2), install heat shrink tube rated at a minimum of 600V<sub>AC</sub> insulation over the live part. Refer to figure 5-10 below.

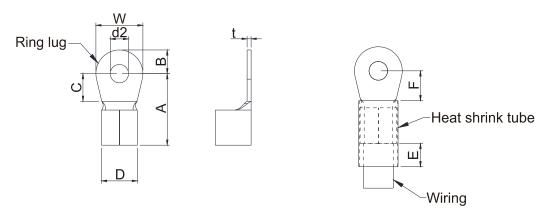


Figure 5-9

Figure 5-10

## Terminal specification

The part number of the ring lugs (produced by K.S. Terminals Inc.) in the table below are for reference only. You can buy the ring lugs of your choice to match with different frame sizes.

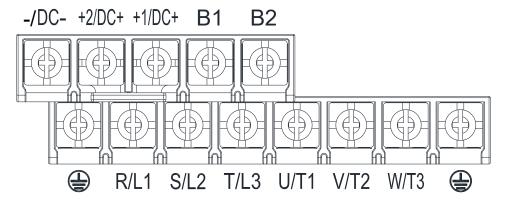
Frame	AWG	Kit P/N	A (MAX)	B (MAX)	C (MIN)	D (MAX)	d2 (MIN)	E (MIN)	F (MIN)	W (MAX)	t (MAX)
	16	RNBL2-4									
	14	RNBL2-4									1.5
Α	12	RNBL5-4	20.0	5.0	5.5	9.0	4.3	8.0	5.5	10.0	
	10	RNBL5-4									
	8	RNBS8-4									
	8	RNBM8-5								14.0	
В	6	RNB14-5	28.0	7.0	7.5	14.0	5.2	13.0	12.0		1.5
	4	RNBS22-5									
	6	RNB14-8			12.5		8.3	13.0	12.5	24.0	
С	4	RNB22-8	40.0	12.0		22.0					2.5
	2	RNBS38-8	40.0		12.5	22.0	0.3				2.5
	1/0	RNB60-8									
	4	RNB22-8	44.0	13.0	10.0	15.0	8.3	13.0	17.0	26.0	3.0
D0	2	RNBS38-8	44.0			13.0	0.5	13.0			
D0	1/0	SQNBS60-8	40.0	11.0	10.0	22.0	0 2	13.0	14.0 <sup>*1</sup>	24.0	4.5
	2/0	SQNBS80-8	40.0	11.0	10.0	23.0	8.3	13.0	14.0	24.0	4.5
	4	RNB22-8									
	2	RNBS38-8									
	1/0	RNB60-8									
D	2/0	RNB70-8	50.0	16.0	10.0	27.0	8.3	13.0	14.0	28.0	
٥	3/0	RNB80-8	30.0	10.0	10.0	21.0	6.3	13.0	14.0	20.0	6.0
	4/0	SQNBS100-8									
	250MCM	SQNBS150-8									
	300MCM	SQNBS150-8									

#### Chapter 5 Main Circuit Terminals | C2000

Frame	AWG	Kit P/N	A (MAX)	B (MAX)	C (MIN)	D (MAX)	d2 (MIN)	E (MIN)	F (MIN)	W (MAX)	t (MAX)
	1/0	RNB60-8									
E	2/0	RNB70-8	E2.0	16.0	17.0	26.5	8.4	13.0	17.0	24.0	5.0
	3/0	RNB80-8	53.0	16.0	17.0	20.5	0.4	13.0	17.0	31.0	5.0
	4/0	RNB100-8									
	3/0	RNB80-8									
F	4/0	SQNBS100-8	55.0	15.0	10.0	27.0	8.3	13.0	17.5	31.0	6.0
	300MCM	SQNBS150-8									
	1/0	SQNBS60-8							18.0	31.0	3.5
	2/0	SQNBS80-8		15.5							
	3/0	SQNBS80-8	54.0		18.0	26.5	8.2	13.0			
G	4/0	SQNBS100-8									
G	250MCM	SQNBS150-8									
	300MCM	SQNBS180-12									
	400MCM	SQNBS200-12	70.0	21.0	27.0	32.7	12.2	13.0	27.0	42.0	4.0
	500MCM	SQNBS200-12									
	3/0	SQNBS80-8									
	4/0	SQNBS100-8									
Н	250	SQNBS150-8	54.0	15.5	18.0	26.5	8.2	13.0	18.0	31.0	3.5
	300	SQNBS150-8									
	350	SQNBS150-8									

\*1: F(MAX)=16.5

#### Frame A




- If you install at Ta 50°C environment, please select copper wire with voltage rating 600V and temperature resistant 75°C or 90°C.
- If you install at Ta 50°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wire.

		Main Circuit Termina	le .			
	R/I 1 S/I 2	, T/L3, U/T1, V/T2, W/			Terminal	
		B1, B2	. 0, 50 . , 50,		rerminai 🗢	
Model Name			Screw Spec.			Screw Spec.
	Max. Wire	Min. Wire Gauge	and Torque	Max. Wire Gauge	Min. Wire Gauge	and Torque
	Gauge	3	(±10%)			(±10%)
VFD007C23A		2.5 mm <sup>2</sup> [14 AWG]		2.5 mm <sup>2</sup> [14 AWG]	2.5 mm <sup>2</sup> [14 AWG]	
VFD015C23A	ı	4.0 mm <sup>2</sup> [12 AWG]		4.0 mm <sup>2</sup> [12 AWG]	4.0 mm <sup>2</sup> [12 AWG]	
VFD022C23A		6.0 mm <sup>2</sup> [10 AWG]		6.0 mm <sup>2</sup> [10 AWG]	6.0 mm <sup>2</sup> [10 AWG]	]
VFD037C23A		10.0 mm <sup>2</sup> [8 AWG]		10.0 mm <sup>2</sup> [8 AWG]	10.0 mm <sup>2</sup> [8 AWG]	]
VFD007C43A		4.5 mm <sup>2</sup> [4.0 AVA/O]				]
VFD015C43A		1.5 mm <sup>2</sup> [16 AWG]	2.5 mm <sup>2</sup> [14 AWG]	2.5 mm <sup>2</sup> [14 AWG]		
VFD022C43A		2.5 mm <sup>2</sup> [14 AWG]				
VFD037C43A			1			]
VFD040C43A		6.0 mm <sup>2</sup> [10 AWG]	M4	6.0 mm <sup>2</sup> [10 AWG]	6.0 mm <sup>2</sup> [10 AWG]	M4
VFD055C43A	10 mm <sup>2</sup>		20kg-cm			20kg-cm
VFD007C43E	[8 AWG]	4.5 mm <sup>2</sup> [4.0 AVA/O]	[17.4 lb-in.]			[17.4 lb-in.]
VFD015C43E		1.5 mm <sup>2</sup> [16 AWG]	[1.96Nm]	2.5 mm <sup>2</sup> [14 AWG]	2.5 mm <sup>2</sup> [14 AWG]	[1.96Nm]
VFD022C43E		2.5 mm <sup>2</sup> [14 AWG]				
VFD037C43E						]
VFD040C43E		6.0 mm <sup>2</sup> [10 AWG]		6.0 mm <sup>2</sup> [10 AWG]	6.0 mm <sup>2</sup> [10 AWG]	
VFD055C43E						
VFD015C53A-21						]
VFD022C53A-21		2.5 mm <sup>2</sup> [14.4\40]		2.5 mm <sup>2</sup> [1.4. AMC]	2.5 mm <sup>2</sup> [1.4 AVA/C]	
VFD037C53A-21		2.5 mm <sup>2</sup> [14 AWG]	6]	[2.5       - [  4 AWG]	2.5 mm <sup>2</sup> [14 AWG]	

#### Chapter 5 Main Circuit Terminals | C2000

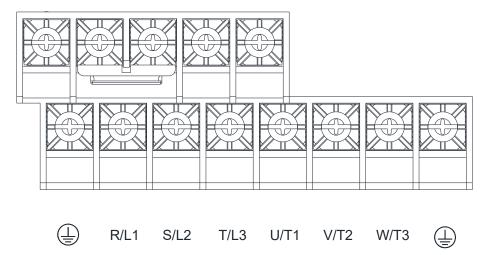
#### Frame B



- If you install at Ta 50°C environment, please select copper wire with voltage rating 600V and temperature resistant 75°C or 90°C.
- If you install at Ta 50°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For VFD110C23A, if you install at Ta 45°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wrie.
- Wire fix to pole +2/DC+ and +1/DC+ with 45 kg-cm / [39.0 lb-in] / [4.42 Nm] (±10%)

Model Name	R/L1, S/L2,	lain Circuit Terminals T/L3, U/T1, V/T2, W /DC+, +2/DC+, B1, B	/T3, -/DC-,	Terminal			
	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	
VFD055C23A		10 mm <sup>2</sup> [8 AWG]		10 mm <sup>2</sup> [8 AWG]	10 mm <sup>2</sup> [8 AWG]		
VFD075C23A		16 mm <sup>2</sup> [6 AWG]		16 mm <sup>2</sup> [6 AWG]	16 mm <sup>2</sup> [6 AWG]		
VFD110C23A		25 mm <sup>2</sup> [4 AWG]		25 mm <sup>2</sup> [4 AWG]	16 mm <sup>2</sup> [6 AWG]		
VFD075C43A VFD075C43E VFD110C43A VFD110C43E	25 mm <sup>2</sup>	10 mm <sup>2</sup> [8 AWG]	M5 35kg-cm [30.4 lb-in.]	10 mm² [8 AWG]	10 mm² [8 AWG]	M5 35kg-cm [30.4 lb-in.]	
VFD150C43A	[4 AWG]	16 mm² [6 AWG]	[3.43Nm]	16 mm <sup>2</sup> [6 AWG]	16 mm <sup>2</sup> [6 AWG]	[3.43Nm]	
VFD150C43E VFD055C53A-21 VFD075C53A-21		6 mm <sup>2</sup> [10 AWG]		6 mm <sup>2</sup> [10 AWG]	6 mm <sup>2</sup> [10 AWG]		
VFD150C53A-21 VFD150C53A-21		10 mm² [8 AWG]		10 mm² [8 AWG]	10 mm² [8 AWG]		


#### Frame C

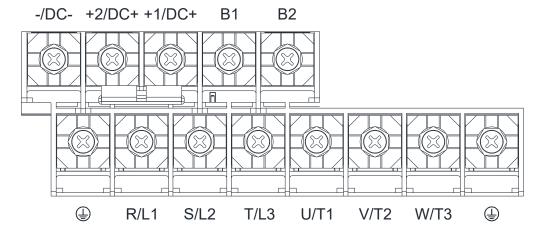

- If you install at Ta 50°C environment, please select copper wire with voltage rating 600V and temperature resistant 75°C or 90°C.
- If you install at Ta 50°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For VFD220C23A, if you insall at Ta 40°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wrie.
- Wire fix to pole +2/DC+ and +1/DC+ with 90 kg-cm / [78.2 lb-in] / [8.83 Nm] (±10%)

		Main Circuit Termina					
		, T/L3, U/T1, V/T2, \		Terminal ( <u></u>			
Model Name	+	1/DC+, +2/DC+, B1,	B2				
Wioder Name	Max. Wire		Screw Spec.			Screw Spec.	
	Gauge	Min. Wire Gauge	and Torque	Max. Wire Gauge	Min. Wire Gauge	and Torque	
	Gauge		(±10%)			(±10%)	
VFD150C23A							
VFD185C23A		50 mm <sup>2</sup> [1/0 AWG]		50 mm <sup>2</sup> [1/0 AWG]	25 mm <sup>2</sup> [4 AWG]		
VFD220C23A							
VFD185C43A		25 mm <sup>2</sup> [4 A\A\C]		25 mm <sup>2</sup> [4 AWG]	46 2 [6 AVA/6]	M8	
VFD220C43A		25 mm <sup>2</sup> [4 AWG]		25 IIIII [4 AVVG]			
VFD300C43A	E0mm²	35 mm <sup>2</sup> [2 AWG]	M8	35 mm <sup>2</sup> [2 AWG]			
VFD185C43E	50mm <sup>2</sup> [1/0 AWG]	25 mm <sup>2</sup> [4 AWG]	80kg-cm [69.4 lb-in.]	25 mm <sup>2</sup> [4 AWG]	16 mm <sup>2</sup> [6 AWG]	80kg-cm [69.4 lb-in.]	
VFD220C43E	[1/0 AVVO]	25 mm [4 AVVG]	[7.84Nm]	25 IIIII [4 AVVG]		[7.84Nm]	
VFD300C43E		35 mm <sup>2</sup> [2 AWG]	[]	35 mm <sup>2</sup> [2 AWG]		[1.0.1.41.1]	
VFD185C63B-21		10 mm <sup>2</sup> [8 AWG]		10 mm <sup>2</sup> [8 AWG]	10 mm <sup>2</sup> [8 AWG]		
VFD220C63B-21		16 mm <sup>2</sup> [6 AWG]		16 mm <sup>2</sup> [6 AWG]	-		
VFD300C63B-21		25 mm <sup>2</sup> [4 AWG]	1	25 mm <sup>2</sup> [4 AWG]			
VFD370C63B-21		35 mm <sup>2</sup> [2 AWG]		35 mm <sup>2</sup> [2 AWG]			


#### Frame D0

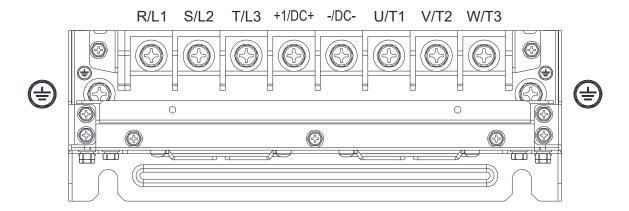

- If you install at Ta 40°C (for model names with last digit U) / 50°C (for model names with last digit S) environment, please select copper wire with voltage rating 600V and temperature resistant at 75°C or 90°C.
- If you install at Ta 40°C (for model names with last digit U) / 50°C (for model names with last digit S) above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wire.

		lain Circuit Terminals /L3, U/T1, V/T2, W/T		Terminal			
Model Name	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	
VFD370C43U		50 mm <sup>2</sup> [1/0 AWG]	M8 80kg-cm [69.4 lb-in.] [7.84Nm]	35 mm² [2 AWG]	25 mm² [4 AWG]		
VFD450C43U	70mm <sup>2</sup>					M8 80kg-cm	
VFD370C43S	[2/0 AWG]					[69.4 lb-in.] [7.84Nm]	
VFD450C43S		70 mm <sup>2</sup> [2/0 AWG]					

#### Frame D

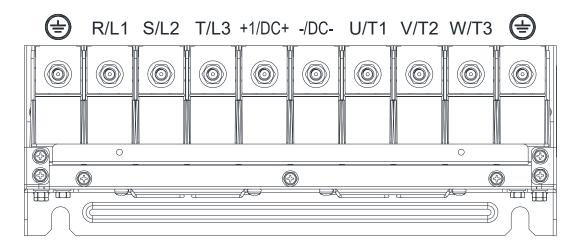


- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) environment, please select copper wire with voltage rating 600V and temperature resistant at 75°C or 90°C.
- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) above environment, please select copper wire with voltage rating 600V and temperatrue resistant at 90°C or above.

For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistnat at 75°C, which is requested and recommended from UL. Do not reduce the

wire gauge when using higher temperature wire.

wire gaug	wire gauge when using higher temperature wire.								
		Main Circuit Terminal							
	R/L1, S/L2	2, T/L3, U/T1, V/T2, V	V/T3, DC+,	Terminal (≟)					
Model Name	DC-								
Woderrame	Max. Wire Gauge		Screw Spec.			Screw Spec.			
		Min. Wire Gauge	and Torque	Max. Wire Gauge	Min. Wire Gauge	and Torque			
	Caago		(±10%)			(±10%)			
VFD300C23A		120 mm <sup>2</sup> [4/0 AWG]		120 mm <sup>2</sup> [4/0 AWG] 120 mm <sup>2</sup> [250MCM]	70 mm² [2/0 A\A/G]				
VFD370C23A	150mm <sup>2</sup>	120 mm <sup>2</sup> [250MCM]		120 mm <sup>2</sup> [250MCM]	TO HILL [2/O AVVG]				
VFD370C43A		50 mm <sup>2</sup> [1/0 AWG]		50 mm <sup>2</sup> [1/0 AWG]	25 mm <sup>2</sup> [4 AWG]				
VFD450C43A	[300MCM]	70 mm <sup>2</sup> [2/0 AWG]		70 mm <sup>2</sup> [2/0 AWG]	35 mm <sup>2</sup> [2 AWG]				
VFD550C43A		95 mm <sup>2</sup> [3/0 AWG]		95 mm <sup>2</sup> [3/0 AWG]	50 mm <sup>2</sup> [1/0 AWG]				
VFD750C43A		150 mm <sup>2</sup> [300MCM]		150 mm <sup>2</sup> [300MCM]	95 mm <sup>2</sup> [3/0 AWG]				
VFD300C23E		95 mm <sup>2</sup> [3/0 AWG]	M8	95 mm <sup>2</sup> [3/0 AWG]	50 mm <sup>2</sup> [1/0 AWG]	M8			
VFD370C23E		120 mm <sup>2</sup> [4/0 AWG]	180kg-cm	120 mm <sup>2</sup> [4/0 AWG]	70 mm <sup>2</sup> [2/0 AWG]	180kg-cm			
VFD370C43E	120mm <sup>2</sup>	50 mm <sup>2</sup> [1/0 AWG]	[156.2 lb-in.]	50 mm <sup>2</sup> [1/0 AWG]	25 mm <sup>2</sup> [4 AWG]	[156.2 lb-in.]			
VFD450C43E	[4/0 AWG]	John [1/0 AVVG]	[17.65Nm]	JO IIIII [1/0 AVVO]	ZJ IIIII [4 AWG]	[17.65Nm]			
VFD550C43E		70 mm <sup>2</sup> [2/0 AWG]		70 mm <sup>2</sup> [2/0 AWG]	35 mm <sup>2</sup> [2 AWG]				
VFD750C43E		120 mm <sup>2</sup> [4/0 AWG]		120 mm <sup>2</sup> [4/0 AWG]	70 mm <sup>2</sup> [2/0 AWG]				
VFD450C63B-00									
VFD550C63B-00	150mm <sup>2</sup>	35 mm <sup>2</sup> [2 AWG]		25 mm <sup>2</sup> [2 A\A/C]	16 mm² [6 A\A/C]				
VFD450C63B-21	[300MCM]	30 IIIII [2 AVVG]		35 mm <sup>2</sup> [2 AWG]	16 mm <sup>2</sup> [6 AWG]				
VFD550C63B-21									

#### Chapter 5 Main Circuit Terminals | C2000

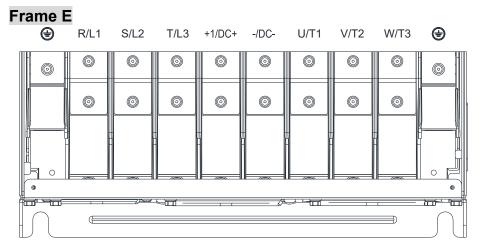


- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) environment, please select copper wire with voltage rating 600V and temperature resistant at 75°C or 90°C.
- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.

• For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wire.

		Main Circuit Terminals			$\bigcirc$	
	R/L1, S/L2, T	<sup>-</sup> /L3, U/T1, V/T2, W/T3, -/			Terminal	
Model Name	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)
VFD450C23A		50 mm <sup>2</sup> *2 [1/0 AWG*2]		50mm <sup>2</sup> *2 [1/0 AWG*2]	50 mm <sup>2</sup> *1 [1/0 AWG*1]	
VFD550C23A		95 mm <sup>2</sup> *2 [3/0 AWG*2]		95mm <sup>2</sup> *2 [3/0 AWG*2]	95 mm <sup>2</sup> *1 [3/0 AWG*1]	
VFD750C23A		120 mm <sup>2</sup> *2 [4/0 AWG*2]		120mm <sup>2</sup> *2 [4/0 AWG*2]	120 mm <sup>2</sup> *1 [4/0 AWG*1]	
VFD900C43A		50 mm <sup>2</sup> *2 [1/0 AWG*2]		50mm <sup>2</sup> *2 [1/0 AWG*2]	50 mm <sup>2</sup> *1[1/0 AWG*1]	
VFD1100C43A	95 mm <sup>2</sup> *2 [3/0 A\	95 mm <sup>2</sup> *2 [3/0 AWG*2]		95mm <sup>2</sup> *2 [3/0 AWG*2]	95 mm <sup>2</sup> *1 [3/0 AWG*1]	
VFD450C23E		50 mm <sup>2</sup> *2 [1/0 AWG*2]		50mm <sup>2</sup> *2 [1/0 AWG*2]	50 mm <sup>2</sup> *1 [1/0 AWG*1]	
VFD550C23E		70 mm <sup>2</sup> *2 [2/0 AWG*2]		70mm <sup>2</sup> *2 [2/0 AWG*2]	70 mm <sup>2</sup> *1 [2/0 AWG*1]	
VFD750C23E		95 mm <sup>2</sup> *2 [3/0 AWG*2]	M8	95mm <sup>2</sup> *2 [3/0 AWG*2]	95 mm <sup>2</sup> *1 [3/0 AWG*1]	M8
VFD900C43E	120mm <sup>2</sup> *2 [4/0 AWG*2]	50 mm <sup>2</sup> *2 [1/0 AWG*2]	180kg-cm [156.2 lb-in.]	50mm <sup>2</sup> *2 [1/0 AWG*2]	50 mm <sup>2</sup> *1 [1/0 AWG*1]	180kg-cm [156.2 lb-in.]
VFD1100C43E		70 mm <sup>2</sup> *2 [2/0 AWG*2]	[17.65 Nm]	70mm <sup>2</sup> *2 [2/0 AWG*2]	70 mm <sup>2</sup> *1 [2/0 AWG*1]	[17.65Nm]
VFD750C63B-00		25 mm <sup>2</sup> *2 [4 AWG*2]		25 mm <sup>2</sup> *2 [4 AWG*2]	25 mm <sup>2</sup> *1 [4 AWG*1]	
VFD900C63B-00 VFD1100C63B-00		35 mm <sup>2</sup> *2 [2 AWG*2]		35 mm <sup>2</sup> *2 [2 AWG*2]	35 mm <sup>2</sup> *1 [2 AWG*1]	
VFD1320C63B-00		50 mm <sup>2</sup> *2 [1/0 AWG*2]		50 mm <sup>2</sup> *2 [1/0 AWG*2]	50 mm <sup>2</sup> *1 [1/0 AWG*1]	
VFD750C63B-21		25 mm <sup>2</sup> *2 [4 AWG*2]		25 mm <sup>2</sup> *2 [4 AWG*2]	25 mm <sup>2</sup> *1 [4 AWG*1]	
VFD900C63B-21 VFD1100C63B-21		35 mm <sup>2</sup> *2 [2 AWG*2]		35 mm <sup>2</sup> *2 [2 AWG*2]	35 mm <sup>2</sup> *1 [2 AWG*1]	
VFD1320C63B-21		50 mm <sup>2</sup> *2 [1/0 AWG*2]		50 mm <sup>2</sup> *2 [1/0 AWG*2]	50 mm <sup>2</sup> *1 [1/0 AWG*1]	


#### Frame F

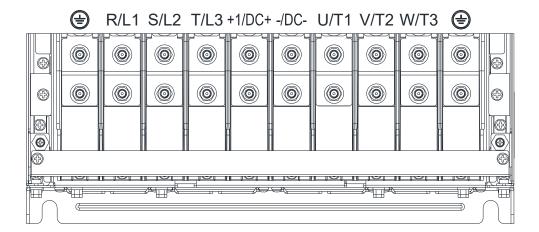

- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) environment, please selet copper wire with voltage rating 600V and temperature resistant at 75°C or 90°C.
- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For VFD900C23A, if you install at Ta 45°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For VFD900C23E, if you install at Ta 35°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wire.

	R/I 1 S/I 2	Main Circuit Terminals 2, T/L3, U/T1, V/T2, W/T3	DC+ DC-	Terminal ⊕			
Model Name	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	
VFD900C23A		150 mm <sup>2</sup> *2 [300MCM*2]	-	150 mm <sup>2</sup> *2 [300MCM*2]	150 mm <sup>2</sup> [300MCM]		
VFD1320C43A	150mm <sup>2</sup> *2 [300MCM*2]	120 mm <sup>2</sup> *2 [4/0AWG*2]		120 mm <sup>2</sup> *2 [4/0AWG*2]	120 mm <sup>2</sup> [4/0AWG]		
VFD1600C43A	-	150 mm <sup>2</sup> *2 [300MCM*2]		150 mm <sup>2</sup> *2 [300MCM*2]	150 mm <sup>2</sup> [300MCM]		
VFD900C23E		120 mm <sup>2</sup> *2 [4/0AWG*2]		120 mm <sup>2</sup> *2 [4/0AWG*2]	120 mm <sup>2</sup> [4/0AWG]		
VFD1320C43E	120 mm <sup>2</sup> *2 [4/0AWG*2]	95 mm <sup>2</sup> *2 [3/0 AWG*2]	M8 180kg-cm	95 mm <sup>2</sup> *2 [3/0 AWG*2]	95 mm² [3/0 AWG]	M8 180kg-cm	
VFD1600C43E	-	120 mm <sup>2</sup> *2 [4/0AWG*2]	[156.2 lb-in.] [17.65Nm]	120 mm <sup>2</sup> *2 [4/0AWG*2]	120 mm <sup>2</sup> [4/0AWG]	[156.2 lb-in.] [17.65Nm]	
VFD1600C63B-00		70 mm <sup>2</sup> *2 [2/0 AWG*2]		70 mm <sup>2</sup> *2 [2/0 AWG*2]	70 mm <sup>2</sup> *1 [2/0 AWG*1]		
VFD2000C63B-00	150mm <sup>2*</sup> 2 [300MCM*2]	95 mm <sup>2</sup> *2 [3/0 AWG*2]		95 mm <sup>2</sup> *2 [3/0 AWG*2]	95 mm <sup>2</sup> *1 [3/0 AWG*1]		
VFD1600C63B-21		70 mm <sup>2</sup> *2 [2/0 AWG*2]		70 mm <sup>2</sup> *2 [2/0 AWG*2]	70 mm <sup>2</sup> *1 [2/0 AWG*1]		
VFD2000C63B-21		95 mm <sup>2</sup> *2 [3/0 AWG*2]		95 mm <sup>2</sup> *2 [3/0 AWG*2]	95 mm <sup>2</sup> *1 [3/0 AWG*1]		

#### Frame G

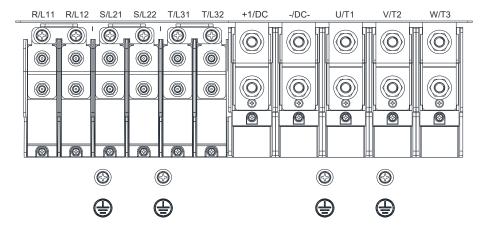


- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) environment, please select copper wire with voltage rating 600V and temperature resistant at 75°C or 90°C.
- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For VFD2200C43A, if you install at Ta 45°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wire.

	<u>g</u> e. tep	cratare wire.		1			
		Main Circuit Terminals		Terminal			
	R/L11,	R/L12, S/L21, S/L22, T/L3	1, T/L32				
Model Name	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	
VFD1850C43A	120mm <sup>2</sup> *4	70 mm <sup>2</sup> *4 [2/0AWG*4]	M8	70 mm <sup>2</sup> *4 [2/0AWG*4]	70 mm <sup>2</sup> *2 [2/0AWG*2]		
VFD2200C43A		95 mm <sup>2</sup> *4 [3/0AWG*4]		95 mm <sup>2</sup> *4 [3/0AWG*4]	95 mm <sup>2</sup> *2 [3/0AWG*2]		
VFD1850C43E	[250MCM*4]	50 mm <sup>2</sup> *4 [1/0AWG*4]		50 mm <sup>2</sup> *4 [1/0AWG*4]	50 mm <sup>2</sup> *2 [1/0AWG*2]	M8	
VFD2200C43E		70 mm <sup>2</sup> *4 [2/0AWG*4]	180kg-cm [156.2 lb-in.]	70 mm <sup>2</sup> *4 [2/0AWG*4]	70 mm <sup>2</sup> *2 [2/0AWG*2]	180kg-cm [156.2 lb-in.]	
VFD2500C63B-00			[17.65Nm]			[17.65Nm]	
VFD3150C63B-00	150mm <sup>2</sup> *4	EO2*4 [4/0 A\A/O*4]		50 mm <sup>2*</sup> 4	FO mamo <sup>2*</sup> O [4/O ANA/O*O]		
VFD2500C63B-21	[300MCM*4]	50 mm <sup>2</sup> *4 [1/0 AWG*4]		[1/0 AWG*4]	50 mm <sup>2*</sup> 2 [1/0 AWG*2]		
VFD3150C63B-21							

		Main Circuit Terminals		Terminal⊕			
Model Name	U/	T1, V/T2, W/T3, +1/DC+, -/					
Model Name	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	
VFD1850C43A		240 mm <sup>2</sup> *2 [400MCM*2]		240 mm <sup>2</sup> *2 [400MCM*2]	240 mm <sup>2</sup> *1 [400MCM*1]		
VFD2200C43A		240 mm <sup>2</sup> *2 [500MCM*2]	M12 408kg-cm	240 mm <sup>2</sup> *2 [500MCM*2]	240 mm <sup>2</sup> *1[500MCM*1]		
VFD1850C43E		150 mm <sup>2</sup> *2 [300MCM*2]		150 mm <sup>2</sup> *2 [300MCM*2]	150 mm <sup>2</sup> *1 [300MCM*2]		
VFD2200C43E	240mm <sup>2</sup> *2	240 mm <sup>2</sup> *2 [400MCM*2]		240 mm <sup>2</sup> *2 [400MCM*2]	240 mm <sup>2</sup> *1 [400MCM*1]	M8 180kg-cm	
VFD2500C63B-00	[500MCM*2]	120 mm <sup>2</sup> *2 [250MCM*2]	[354.1 lb-in.] [39.98 Nm]	120 mm <sup>2</sup> *2 [250MCM*2]	120 mm <sup>2*</sup> 1 [250MCM*1]	[156.2 lb-in.] [17.65Nm]	
VFD3150C63B-00		150 mm <sup>2</sup> *2 [350MCM*2]		150 mm <sup>2</sup> *2 [350MCM*2]	150 mm <sup>2</sup> *1 [350MCM*1]	[17.001411]	
VFD2500C63B-21		120 mm <sup>2</sup> *2 [250MCM*2]		120 mm <sup>2</sup> *2 [250MCM*2]	120 mm <sup>2</sup> *1 [250MCM*1]		
VFD3150C63B-21		150 mm <sup>2</sup> *2 [350MCM*2]		150 mm <sup>2</sup> *2 [350MCM*2]	150 mm <sup>2</sup> *1 [350MCM*1]		

#### Frame H

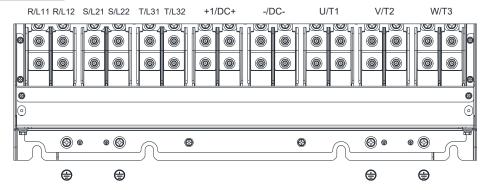

- If you install at Ta 50°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) environment, please select copper wire with voltage rating 600V and temperature resistant at 75°C or 90°C.
- If you install at Ta 50°C(for 230V / 460V model names with last digit A; for 690V model names end with 63B-00) / 40°C (for 230V / 460V model names with last digit A; for 690V model names end with 63B-21) above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For VFD4500C43A, VFD4500C43E-1, if you install at Ta 40°C above environment, please select copper wire with voltage rating 600V and temperature resistant at 90°C or above.
- For UL installation compliant, please use copper wires for installation, the wire gauge is based on temperature resistant at 75°C which is requested and recommended from UL. Do not reduce the wire gauge when using higher temperature wire.

when using higher temperature wire.						
Madal Nama	Main Circuit Terminals R/L11, R/L12, S/L21, S/L22, T/L31, T/L32, U/T1, V/T2, W/T3, +1/DC+, -/DC-			Terminal		
Model Name	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)	Max. Wire Gauge	Min. Wire Gauge	Screw Spec. and Torque (±10%)
VFD2800C43A		120 mm <sup>2</sup> *4 [4/0AWG*4]		120 mm <sup>2</sup> *4 [4/0AWG*4]	120 mm <sup>2</sup> *2 [4/0AWG*2]	
VFD3150C43A VFD3550C43A		150 mm <sup>2</sup> *4 [300MCM*4]		150 mm <sup>2</sup> *4 [300MCM*4]	150 mm <sup>2</sup> *2 [300MCM*2]	
VFD4500C43A		185 mm <sup>2</sup> *4 [350MCM*4]		185 mm <sup>2</sup> *4 [350MCM*4]	185 mm <sup>2</sup> *2 [350MCM*2]	
VFD2800C43E-1		120 mm <sup>2</sup> *4 [4/0AGW*4]		120 mm <sup>2</sup> *4 [4/0AGW*4]	120 mm <sup>2</sup> *2 [4/0AGW*2]	
VFD3150C43E-1 VFD3550C43E-1	185mm <sup>2*</sup> 4 [350MCM*4]	150 mm <sup>2</sup> *4 [300MCM*4]		150 mm <sup>2</sup> *4 [300MCM*4]	150 mm <sup>2</sup> *2 [300MCM*2]	
VFD4500C43E-1		185 mm <sup>2</sup> *4 [350MCM*4]		185 mm <sup>2</sup> *4 [350MCM*4]	185 mm <sup>2</sup> *2 [350MCM*2]	
VFD2800C43E		95 mm <sup>2</sup> *4 [3/0AWG*4]		95 mm <sup>2</sup> *4 [3/0AWG*4]	95 mm <sup>2</sup> *2 [3/0AWG*2]	
VFD3150C43E		120 mm <sup>2</sup> *4 [4/0AGW*4]	M8 180kg-cm	120 mm <sup>2</sup> *4 [4/0AGW*4]	120 mm <sup>2</sup> *2 [4/0AGW*2]	M8 180kg-cm
VFD3550C43E		120 mm <sup>2</sup> *4 [250MCM*4]	[156.2 lb-in.] [17.65Nm]	120 mm <sup>2</sup> *4 [250MCM*4]	120 mm <sup>2</sup> *2 [250MCM*2]	[156.2 lb-in.] [17.65Nm]
VFD4500C43E		185 mm <sup>2</sup> *4 [350MCM*4]		185 mm <sup>2</sup> *4 [350MCM*4]	185 mm <sup>2</sup> *2 [350MCM*2]	
VFD4000C63B-00 VFD4500C63B-00		95 mm <sup>2</sup> *4 [3/0AWG*4]		95 mm <sup>2</sup> *4 [3/0AWG*4]	95 mm <sup>2</sup> *2 [3/0AWG*2]	
VFD5600C63B-00		120 mm <sup>2</sup> *4 [250MCM*4]		120 mm <sup>2</sup> *4 [250MCM*4]	120 mm <sup>2</sup> *2 [250MCM*2]	
VFD6300C63B-00		150 mm <sup>2</sup> *4 [300MCM*4]		150 mm <sup>2</sup> *4 [300MCM*4]	150 mm <sup>2</sup> *2 [300MCM*2]	
VFD4000C63B-21 VFD4500C63B-21		95 mm <sup>2</sup> *4 [3/0AWG*4]		95 mm <sup>2</sup> *4 [3/0AWG*4]	95 mm <sup>2</sup> *2 [3/0AWG*2]	
VFD5600C63B-21		120 mm <sup>2</sup> *4 [250MCM*4]		120 mm <sup>2</sup> *4 [250MCM*4]	120 mm <sup>2</sup> *2 [250MCM*2]	
VFD6300C63B-21		150 mm <sup>2</sup> *4 [300MCM*4]		150 mm <sup>2</sup> *4 [300MCM*4]	150 mm <sup>2</sup> *2 [300MCM*2]	

[The page intentionally left blank]

# Chapter 6 Control Terminals

- 6-1 Remove the Cover for Wiring
- 6-2 Specifications of Control Terminal
- 6-3 Remove the Terminal Block



#### Analog input terminals (AVI, ACI, AUI, ACM)

- Analog input signals are easily affected by external noise. Use shielded wiring and keep it as short as possible (<20m) with proper grounding. If the noise is inductive, connecting the shield to terminal ACM can bring improvement.
- ☑ When using analog input signal in the circuit, twisted pair is suggested to use for dealing with weak signal.
- If the analog input signals are affected by noise from the AC motor drive, please connect a capacitor and ferrite core as indicated in the following diagram.

Wind each wires 3 times or more around the core


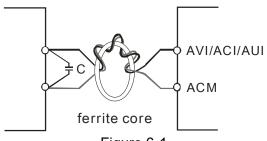


Figure 6-1

#### Digital inputs (FWD, REV, MI1-MI8, COM)

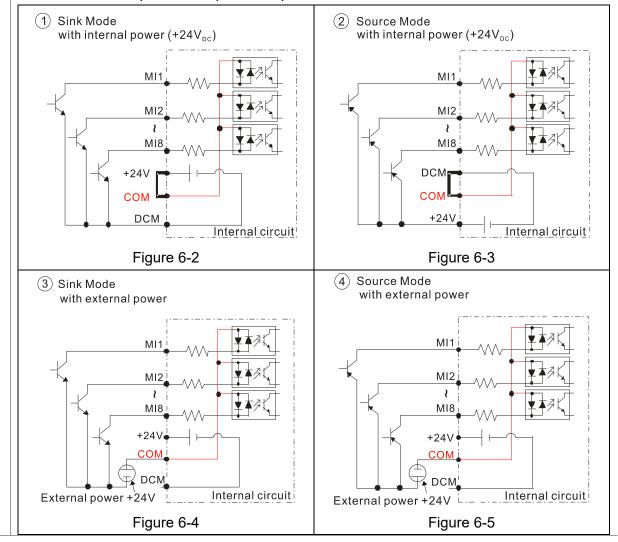☑ The "COM" terminal is the common side of the photo-coupler. Any of wiring method, the "common point" of all photo-coupler must be the "COM".



☑ When the photo-coupler is using internal power supply, the switch connection for Sink and Source as below:

MI-DCM: Sink mode

MI-+24V: Source mode

☑ When the photo-coupler is using external power supply, please remove the short circuit cable between the +24V and COM terminals. The connection mode is Sink mode or Source mode according to the below:

The "+" of 24V connecting to "COM: Sink mode The "-" of 24V connecting to COM: Source mode

### **Transistor outputs (MO1, MO2, MCM)**

- ☑ Make sure to connect the digital outputs to the right polarity.
- ☑ When connecting a relay to the digital outputs connect a surge absorber across the coil and check the polarity.

## 6-1 Remove the Cover for Wiring

Please remove the top cover before wiring the multi-function input and output terminals.

The drive appearances shown in the figures are for reference only, a real drive may look different.

#### Frame A & B

Applicable models: VFD007C23A; VFD007C43A/E; VFD015C23A; VFD015C43A/E; VFD022C23A; VFD022C43A/E; VFD037C23A; VFD037C43A/E; VFD040C43A/E; VFD055C43A/E; VFD015C53A-21; VFD022C53A-21; VFD037C53A-21; VFD055C23A; VFD075C23A; VFD075C43A/E; VFD110C23A; VFD110C43A/E; VFD150C43A/E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21; VFD150C5A-21; VFD150

Screw torque: 12–15 kg-cm / [10.4–13 lb-in.] / [1.2–1.5 Nm]

Loosen the screws and press the tabs on both sides to remove the cover.

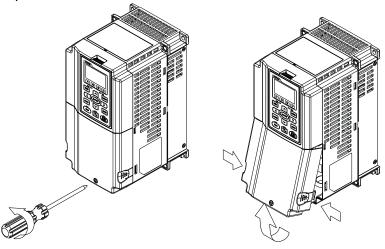


Figure 6-6

#### Frame C

Applicable models: VFD150C23A; VFD185C23A; VFD185C43A/E; VFD220C23A; VFD220C43A/E;

VFD300C43A/E; VFD185C63B-21; VFD220C63B-21; VFD300C63B-21; VFD370C63B-21

Screw torque: 12–15 kg-cm / [10.4–13 lb-in.] / [1.2–1.5 Nm]

Loosen the screws and press the tabs on both sides to remove the cover.

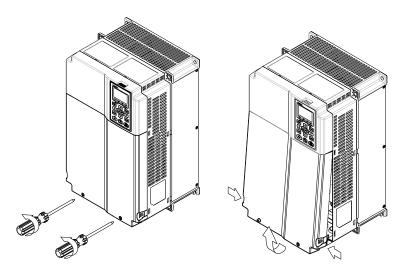


Figure 6-7

Frame D0 & D

Applicable models: VFD370C43S; VFD450C43S; VFD370C43U; VFD450C43U; VFD300C23A; VFD370C23A; VFD550C43A; VFD750C43A; VFD300C23E; VFD370C23E; VFD550C43E; VFD750C43E; VFD450C63B-00;

VFD550C63B-00; VFD450C63B-21; VFD550C63B-21

Screw torque: 12–15 kg-cm / [10.4–13 lb-in.] / [1.2–1.5 Nm]

To remove the cover, lift it slightly and pull outward.

Loosen the screws and press the tabs on both sides to remove the cover.

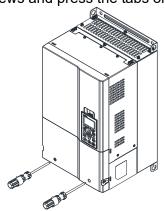


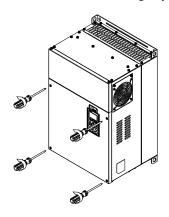



Figure 6-8

Frame E

Applicable models: VFD450C23A; VFD550C23A; VFD750C23A; VFD900C43A; VFD1100C43A; VFD450C23E; VFD550C23E; VFD750C23E; VFD900C43E; VFD1100C43E; VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00; VFD750C63B-21; VFD900C63B-21; VFD1320C63B-21

Screw torque: 12–15 kg-cm / [10.4–13 lb-in.] / [1.2–1.5 Nm] To remove the cover, lift it slightly and pull outward.



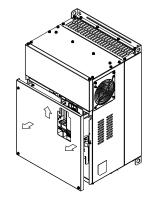

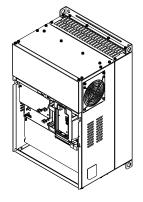


Figure 6-9

#### Frame F

$$\label{lem:policy} \begin{split} & \text{Applicable models: VFD900C23A; VFD1320C43A; VFD1600C43A; VFD900C23E; VFD1320C43E; VFD1600C43E; VFD1600C63B-00; VFD2000C63B-00; VFD1600C63B-21; VFD2000C63B-21 \end{split}$$

Screw torque: 12–15 kg-cm / [10.4–13 lb-in.] / [1.2–1.5 Nm]

To remove the cover, lift it slightly and pull outward.

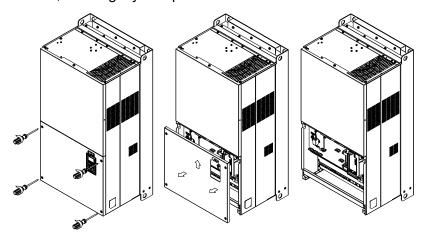


Figure 6-10

#### Frame G

Applicable models: VFD1850C43A; VFD2200C43A; VFD1850C43E; VFD2200C43E; VFD2500C63B-00;

VFD3150C63B-00; VFD2500C63B-21; VFD3150C63B-21 Screw torque: 12–15 kg-cm / [10.4–13 lb-in.] / [1.2–1.5 Nm]

To remove the cover, lift it slightly and pull outward.

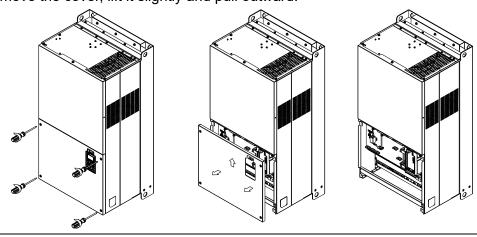


Figure 6-11


Frame H

Applicable models: VFD2800C43A; VFD3150C43A; VFD3550C43A; VFD4500C43A; VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1; VFD3550C43E-1; VFD3550C43E; VFD3150C43E; VFD3550C43E; VFD3550C45E; VFD3550C4E; VFD3

VFD4500C43E; VFD4000C63B-00; VFD4500C63B-00; VFD5600C63B-00; VFD6300C63B-00

Screw torque: 14–16 kg-cm / [12.15–13.89 lb-in.] / [1.4–1.6 Nm]

To remove the cover, lift it slightly and pull outward.

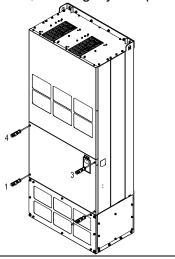

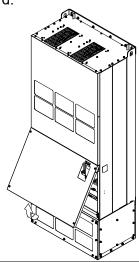



Figure 6-12

#### 690V Frame H3

Applicable models: VFD4000C63B-21; VFD4500C63B-21; VFD5600C63B-21; VFD6300C63B-21

Screw torque: 14–16 kg-cm [12.15–13.89 lb-in.] [1.37–1.57 Nm]

To remove the cover, lift it slightly and pull outward.

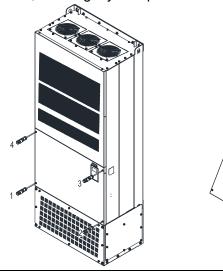

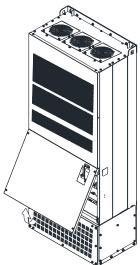


Figure 6-13

## **6-2 Specifications of Control Terminal**

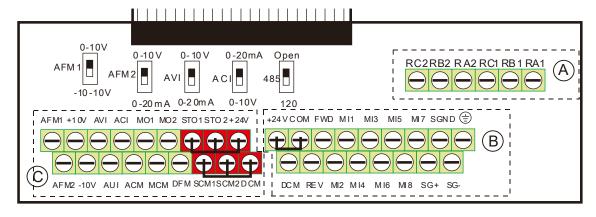


Figure 6-14. Removable Terminal Block

Function name	Area	Conductor	Stripping length (mm)	Maximum Wire Gauge	Minimum Wire Gauge	Tightening torque (±10)
RELAY Terminals	A	Conductor cross section solid wire Conductor cross section stranded wire	4–5	1.5 mm² [16 AWG]	0.2 mm <sup>2</sup> [26 AWG]	5 kg-cm [4.3 lb-in.] [0.49 Nm]
Control Terminals	B	Conductor cross section solid wire Conductor cross section stranded wire	6–7			8 kg-cm [6.9 lb-in.] [0.78 Nm]
Control Terminals	©	Conductor cross section solid wire Conductor cross section stranded wire				2 kg-cm [1.7 lb-in.] [0.20 Nm]

#### Wiring precautions:

- In the figure above, the factory setting for STO1, STO2, +24V and SCM1, SCM2, DCM are short circuit. The +24V from section ⓒ of above figure is for STO only, and cannot be used for other purposes. The factory setting for +24V-COM is short circuit and SINK mode (NPN); please refer to Chapter 4 Wiring for more detail.
- Tighten the wiring with slotted screwdriver:
  - (A) (B) is 3.5 mm (wide) x 0.6 mm (thick); (C) is 2.5 mm (wide) x 0.4 mm (thick)
- When wiring bare wires, make sure they are perfectly arranged to go through the wiring holes.

Terminals	Terminal Function	Factory Setting (NPN mode)	
+24V	Digital control signal common	124V   50/ 200 mA	
	(Source)	+24V ± 5% 200 mA	
COM	Digital control signal common (Sink)	Common for multi-function input terminals	
FWD		FWD-DCM:	
	Forward-Stop command	ON→ forward running	
		OFF→ deceleration to stop	
REV		REV-DCM:	
	Reverse-Stop command	ON→ reverse running	
		OFF→ deceleration to stop	

Terminals	Terminal Function	Factory Setting (NPN mode)		
MI1 - MI8	Multi-function input 1–8	Refer to parameters 02-01–02-08 to program the multi-function inputs MI1–MI8. Source mode ON: the activation current is 3.3 mA $\geq$ 11 V <sub>DC</sub> OFF: cut-off voltage $\leq$ 5 V <sub>DC</sub> Sink Mode ON: the activation current is 3.3 mA $\leq$ 13 V <sub>DC</sub> OFF: cut-off voltage $\geq$ 19 V <sub>DC</sub>		
DFM	Digital frequency meter  OFM  OCM  Figure 6-15	Regard the pulse voltage as the output monitor signal; Duty-cycle: 50 %  Min. load impedance: 1 kΩ / 100 pf  Max. current: 30 mA		
DCM	Digital frequency signal common	Max. voltage: 30 V <sub>DC</sub>		
MO1	Multi-function output 1 (photocoupler)	The AC motor drive releases various monitor signals, such as drive in operation, frequency attained and overload indication, via transistor (open collector).		
MO2	Multi-function output 2 (photocoupler)	MCM Figure 6-16		
MCM	Multi-function output common	Max 48 V <sub>DC</sub> 50 mA		
RA1	Multi-function relay output 1 (N.O.) a	Resistive Load  3A (N.O.) / 3A (N.C.) 250 V <sub>AC</sub> 5A (N.O.) / 3A (N.C.) 30 V <sub>DC</sub> Inductive Load (COS 0.4)		
RB1	Multi-function relay output 1 (N.C.) b			
RC1	Multi-function relay common			
RA2	Multi-function relay output 2 (N.O.) a	1.2A (N.O.) / 1.2A (N.C.) 250 V <sub>AC</sub> 2.0A (N.O.) / 1.2A (N.C.) 30 V <sub>DC</sub>		
RB2	Multi-function relay output 2 (N.C.) b	It is used to output each monitor signal, such as drive is in operation, frequency attained or overload indication.		
RC2	Multi-function relay common			
+10V	Potentiometer power supply	Analog frequency setting: +10V <sub>DC</sub> 20 mA		
-10V	Potentiometer power supply	Analog frequency setting: -10V <sub>DC</sub> 20 mA		
AVI	Analog voltage input  AVI circuit  AVI  ACM  internal circuit  Figure 6-17	Impedance: 20 kΩ Range: 0–20 mA / 4–20 mA / 0–10 V = 0–Max.  Output Frequency (Pr.01-00)  AVI switch, factory setting is 0–10 V		

Terminals	Terminal Function	Factory Setting (NPN mode)		
ACI	Analog current input  ACI ACI circuit  ACI ACI circuit  ACI ACI circuit  Figure 6-18	Impedance: 250Ω Range: 0–20mA / 4–20mA / 0–10V = 0–Max. Output Frequency (Pr. 01-00) ACI Switch, factory setting is 4–20mA		
AUI	Auxiliary analog voltage input  +10V AUI (-10V~+10V) ACM -10V internal circuit Figure 6-19	Impedance: 20kΩ Range: -10–+10V <sub>DC</sub> =0–Max. Output Frequency (Pr. 01-00)		
AFM1	Multi-function analog voltage output  AFM1  ACM	0–10V Max. output current 2mA, Max. load 5kΩ -10–10V maximum output current 2mA, maximum load 5kΩ Output current: 2mA max Resolution: 0–10V corresponds to Max. operation frequency Range: 0–10V → -10–+10V AFM1 Switch, factory setting is 0–10V		
AFM2	Figure 6-20	0–10V Max. output current 2mA, Max. load 5kΩ 0–20mA Max. load 500Ω Output current: 20mA max Resolution: 0–10V corresponds to Max. operation frequency Range: 0–10V → 4–20mA AFM2 Switch, factory setting is 0–10V		
ACM	Analog signal common	Common for analog terminals		
STO1	Default setting is shorted			
SCM1	Power removal safety function for EN954-1 and IEC/EN61508			
STO2	When STO1–SCM1; STO2–SCM2 is activated, the activation current is 3.3mA ≥ 11V <sub>DC</sub>			
SCM2	Note: Please refer to CH 17 Safe Torque off Function.			
SG+	MODBUS RS-485			
SG-	Note: Please refer to CH12 DESCRIPTION OF PARAMETER SETTINGS group 09			
SGND	Communication Parameters for more information.			
RJ-45	PIN 1, 2, 7, 8: Reserved PIN 3, 6: SGND PIN 4: SG- PIN 5: SG+			

Table 6-1

## 6-3 Remove the Terminal Block

1. Loosen the screws by screwdriver. (As shown in figure below).

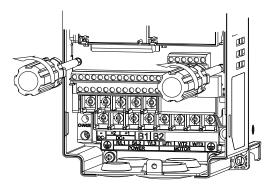


Figure 6-21

2. Remove the control board by pulling it out for a distance 6–8 cm (as 1 in the figure) then lift the control board upward (as 2 in the figure).

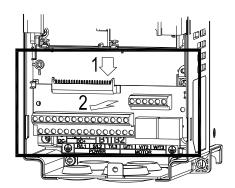


Figure 6-22

## Chapter 7 Optional Accessories

- 7-1 All Brake Resistors and Brake Units Used in AC Motor Drives
- 7-2 Non-fuse Circuit Breaker
- 7-3 Fuse Specification Chart
- 7-4 AC / DC Reactor
- 7-5 Zero Phase Reactors
- 7-6 EMC Filter
- 7-7 Panel Mounting (MKC-KPPK)
- 7-8 Conduit Box Kit
- 7-9 Fan Kit
- 7-10 Flange Mounting Kit
- 7-11 Power Terminal Kit
- 7-12 USB / RS-485 Communication Interface IFD6530

The optional accessories listed in this chapter are available upon request. Installing additional accessories to your drive would substantially improve the drive's performance. Please select an applicable accessory according to your need or contact the local distributor for suggestion.

# 7-1 All Brake Resistors and Brake Units Used in AC Motor Drives

#### 230V

Applio Mo	cable tor			*1 125% Brakin	g Torque	10% ED		*2 Max. Braking Torque			
HP	kW	Braking Torque [kg-m]	Brake Unit *4VFDB	* <sup>3</sup> Braking Resisto Brake Ui		Resistor value spec. for each AC motor Drive	Total Braking Current [A]	Min. Resistor Value [Ω]	Max. Total Braking Current [A]	Peak Power [kW]	
1	0.7	0.5	-	BR080W20	00*1	80W 200Ω	1.9	63.3	6	2.3	
2	1.5	1.0	-	BR200W09	91*1	200W 91Ω	4.2	47.5	8	3.0	
3	2.2	1.5	-	BR300W07	70*1	300W 70Ω	5.4	38.0	10	3.8	
5	3.7	2.5	-	BR400W04	40*1	400W 40Ω	9.5	19.0	20	7.6	
7.5	5.5	3.7	-	BR1K0W0	20*1	1000W 20Ω	19	14.6	26	9.9	
10	7.5	5.1	-	BR1K0W0	20*1	1000W 20Ω	19	14.6	26	9.9	
15	11	7.5	-	BR1K5W0	13*1	1500W 13Ω	29	12.6	29	10.6	
20	15	10.2	-	BR1K0W4P3*2	2 series	2000W 8.6Ω	44	8.3	46	17.5	
25	18	12.2	-	BR1K0W4P3*2	2 series	2000W 8.6Ω	44	8.3	46	17.5	
30	22	14.9	-	BR1K5W3P3*2	2 series	3000W 6.6Ω	58	5.8	66	25.1	
40	30	20.3	2015*2	BR1K0W5P1*2	2 series	4000W 5.1Ω	75	4.8	80	30.4	
50	37	25.1	2022*2	BR1K2W3P9*2	2 series	4800W 3.9Ω	97	3.2	120	45.6	
60	45	30.5	2022*2	BR1K5W3P3*2	BR1K5W3P3*2 2 series		118	3.2	120	45.6	
75	55	37.2	2022*3	BR1K2W3P9*2	2 series	7200W 2.6Ω	145	2.1	180	68.4	
100	75	50.8	2022*4	BR1K2W3P9*2	2 series	9600W 2Ω	190	1.6	240	91.2	
125	90	60.9	2022*4	BR1K5W3P3*2	2 series	12000W 1.65Ω	230	1.6	240	91.2	

Table 7-1

#### 460V

7001											
	cable otor			*1 125% Brakin		*² Ma	x. Braking To	que			
HP	kW	Braking Torque [kg-m]	Brake Unit *4VFDB	* <sup>3</sup> Braking Resist Brake U		Resistor value spec. for each AC motor Drive	Total Braking Current [A]	Min. Resistor Value [Ω]	Max. Total Braking Current [A]	Peak Power [kW]	
1	0.7	0.5	-	BR080W7	50*1	80W 750Ω	1	190.0	4	3.0	
2	1.5	1.0	-	BR200W3	60*1	200W 360Ω	2.1	126.7	6	4.6	
3	2.2	1.5	-	BR300W2	50*1	300W 250Ω	3	108.6	7	5.3	
5	3.7	2.5	-	BR400W1	50*1	400W 150Ω	5.1	84.4	9	6.8	
5.5 7.5	4.0 5.5	2.7 3.7	-	BR1K0W0	75*1	1000W 75Ω	10.2	54.3	14	10.6	
10	7.5	5.1	-	BR1K0W0	75*1	1000W 75Ω	10.2	47.5	16	12.2	
15	11	7.5	-	BR1K5W0		1500W 43Ω	17.6	42.2	18	13.7	
20	15	10.2	-	BR1K0W016*2	2 series	2000W 32Ω	24	26.2	29	22.0	
25	18	12.2	-	BR1K0W016*2	2 series	2000W 32Ω	24	23.0	33	25.1	
30	22	14.9	-	BR1K5W013*2	2 series	3000W 26Ω	29	23.0	33	25.1	
40	30	20.3	-	BR1K0W016*4	2 parallel, 2 series	4000W 16Ω	47.5	14.1	54	41.0	
50	37	25.1	4045*1	BR1K2W015*4	2 parallel, 2 series	4800W 15Ω	50	12.7	60	45.6	
60	45	30.5	4045*1	BR1K5W013*4	2 parallel, 2 series	6000W 13Ω	59	12.7	60	45.6	
75	55	37.2	4030*2	BR1K0W5P1*4	4 series	8000W 10.2Ω	76	9.5	80	60.8	
100	75	50.8	4045*2	BR1K2W015*4	2 parallel, 2 series	9600W 7.5Ω	100	6.3	120	91.2	
125	90	60.9	4045*2	BR1K5W013*4	2 parallel, 2 series	12000W 6.5Ω	117	6.3	120	91.2	
150	110	74.5	4110*1	BR1K2W015*10	5 parallel, 2 series	12000W 6Ω	126	6.0	126	95.8	
175	132	89.4	4160*1	BR1K5W012*12	6 parallel, 2 series	18000W 4Ω	190	4.0	190	144.4	
215	160	108.3	4160*1	BR1K5W012*12	6 parallel, 2 series	18000W 4Ω	190	4.0	190	144.4	
250	185	125.3	4185*1	BR1K5W012*14	7 parallel, 2 series	21000W 3.4Ω	225	3.4	225	172.1	

	cable otor			*1 125% Brakin	* <sup>2</sup> Ma	*2 Max. Braking Torque				
HP	kW	Braking Torque [kg-m]	Brake Unit *4VFDB	* <sup>3</sup> Braking Resistor for each Brake Unit		Resistor value spec. for each AC motor Drive	Total Braking Current [A]	Min. Resistor Value [Ω]	Max. Total Braking Current [A]	Peak Power [kW]
300	220	148.9	4110*2	BR1K2W015*10	5 parallel, 2 series	24000W 3Ω	252	3.0	252	190.5
375	280	189.6	4160*2	BR1K5W012*12	6 parallel, 2 series	36000W 2Ω	380	2.0	380	288.8
425	315	213.3	4160*2	BR1K5W012*12	6 parallel, 2 series	36000W 2Ω	380	2.0	380	288.8
475	355	240.3	4185*2	BR1K5W012*14 7 parallel, 2 series		42000W 1.7Ω	450	1.7	450	344.2
600	450	304.7	4185*3	BR1K5W012*12	6 parallel, 2 series	54000W 1.3Ω	600	1.1	675	513.0

## 575V

	plicat otor (k			* 1	125% Braking Tor		* <sup>2</sup> Max. Braking Torque			
LD	ND	HD	Braking Torque [kg-m]	Brake Unit VFDB	* <sup>3</sup> Braking Resistor for each Brake Unit	Resistor value spec. for each AC motor drive	Total Braking Current [A]	Min. Resistor Value [Ω]	Max. Total Braking Current [A]	Peak Power [kW]
1.5	0.75	0.75	0.5	-	BR080W750*1	80W 750Ω	1.2	280.0	4	4.5
2.2	1.5	1.5	1	-	BR200W360*1	200W 360Ω	2.6	186.7	6	6.7
3.7	2.2	2.2	1.5	-	BR300W400*1	300W 400Ω	2.3	160.0	7	7.8
5.5	3.7	3.7	2.5	-	BR500W100*1	500W 100Ω	9.2	93.3	12	13.4
7.5	5.5	3.7	3.7	-	BR750W140*1	750W 140Ω	6.6	80.0	14	15.7
11	7.5	7.5	5.1	-	BR1K0W075*1	1000W 75Ω	12.3	70.0	16	17.9
15	11	7.5	7.4	-	BR1K1W091*1	1100W 91Ω	10.1	62.2	18	20.2

Table 7-3

#### 690V

	plicat tor (k				* <sup>1</sup> 125% Brakin	g Torque / 10%E	ED .		* <sup>2</sup> Max	k. Braking	Torque
LD	ND	HD	Braking Torque [kg-m]	Brake Unit VFDB	* <sup>3</sup> Braking Resis each Brak		Resistor value spec. for each AC motor drive	Total Braking Current [A]	Min. Resistor Value [Ω]	Max. Total Braking Current [A]	Peak Power [kW]
18.5	15	11	10.2	-	BR1K0W039*2	2 series	2000W 78Ω	14.4	58.9	19	21.3
22	18.5	15	12.5	-	BR1K2W033*2	2 series	2400W 66Ω	17.0	58.9	19	21.3
30	22	18.5	14.9	-	BR1K5W027*2	2 series	3000W 54Ω	20.7	43.1	26	29.1
37	30	22	20.3	-	BR1K2W015*3	3 series	3600W 45Ω	24.9	43.1	26	29.1
45	37	30	25	6055*1	BR1K2W033*4	2 series, 2 parallel	4800W 33Ω	33.9	24.3	46	51.5
55	45	37	30.5	6055*1	BR1K5W027*4	2 series, 2 parallel	6000W 27Ω	41.5	24.3	46	51.5
75	55	45	37.2	6110*1	BR1K2W033*6	2 series, 3 parallel	7200W 22Ω	50.9	12.2	92	103.0
90	75	55	50.8	6110*1	BR1K5W027*6	2 series, 3 parallel	9000W 18Ω	62.2	12.2	92	103.0
110	90	75	60.9	6110*1	BR1K5W027*8	2 series, 4 parallel	12000W 13.5Ω	83.0	12.2	92	103.0
132	110	90	74.5	6160*1	BR1K2W015*12	3 series, 4 parallel	14400W 11.3Ω	99.6	8.2	136	152.3
160	132	110	89.4	6160*1	BR1K5W027*10	2 series, 5 parallel	15000W 10.8Ω	103.7	8.2	136	152.3
200	160	132	108.3	6200*1	BR1K5W027*12	2 series, 6 parallel	18000W 9.0Ω	124.4	6.9	162	181.4
250	200	160	135.4	6110*2	BR1K5W027*8	2 series, 4 parallel	24000W 6.8Ω	165.9	6.1	184	206.1
315	250	200	169.3	6160*2	BR1K5W027*10	2 series, 5 parallel	30000W 5.4Ω	207.4	4.1	272	304.6
400	315	250	213.3	6200*2	BR1K5W027*12	2 series, 6 parallel	36000W 4.5Ω	248.9	3.5	324	362.9

	plicat tor (k'			* <sup>1</sup> 125% Braking Torque / 10%ED							* <sup>2</sup> Max. Braking Torque		
LD	ND	HD	Braking Torque [kg-m]	Brake Unit VFDB	* <sup>3</sup> Braking Resistor <del>series</del> for each Brake Unit		Resistor value spec. for each AC motor drive	Total Braking Current [A]	Min. Resistor Value [Ω]	Max. Total Braking Current [A]	Peak Power [kW]		
450	355	315	240.3	6200*2	BR1K5W027*14	2 series, 7 parallel	42000W 3.9Ω	290.4	3.5	324	362.9		
560	450	355	304.7	6200*3	BR1K5W027*12	2 series, 6 parallel	54000W 3.0Ω	373.3	2.3	486	544.3		
630	630	630	426.5	6200*4	BR1K5W027*12	2 series, 6 parallel	72000W 2.3Ω	497.8	1.7	648	725.8		

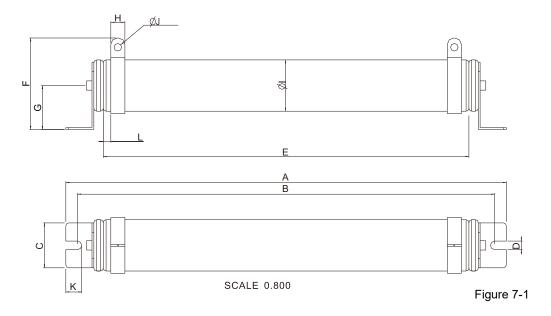
- \*1. Calculation for 125% brake toque: (kW) \* 125% \* 0.8; where 0.8 is motor efficiency.
- Because of the limited resistor power, the longest operation time for 10% ED is 10 seconds (on: 10 seconds / off: 90 seconds).

  Refer to Chapter 7 "Brake Module and Brake Resistors" in application manual for "Operation Duration & ED" vs. "Braking"
- \*3. For heat dissipation, a resistor of 400W or lower should be fixed to the frame and maintain the surface temperature below 250°C; a resistor of 1000W and above should maintain the surface temperature below 350°C.
- \*4. Please refer to VFDB series Braking Module Instruction for more detail on braking resistor.

## NOTE

Current".


- 1. Specification and appearance of brake resistors
  - 1-1 Wirewound resistor: for 1000W and above. Refer to the following appearance of wirewound resistor (Figure 7-1) and its model and specification comparison table (Table 7-5) for details.




-11	N	IT٠	M	NΛ

MODEL	Α	В	С	D	E	F	G	Н	ØΙ	ØJ	K	L
BR1K0W4P3												
BR1K0W5P1												
BR1K0W016												
BR1K0W020												
BR1K0W075												
BR1K2W3P9	470±10	445±5	48±0.2	9.1±0.1	390±3	98±5	47±5	15±1	55±5	$8.1\!\pm\!0.1$	$21\!\pm\!0.2$	8±1
BR1K2W015												
BR1K5W3P3												
BR1K5W012												
BR1K5W013												
BR1K5W043												

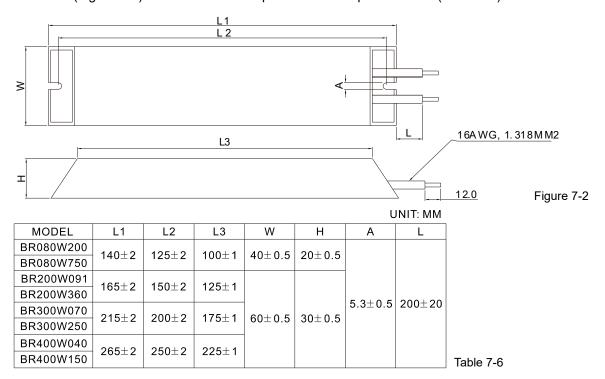
1-2 Aluminum housed resistor: for below 1000W. Refer to the following appearance of aluminum-housed resistor (Figure 7-2) and its model and specification comparison table (Table 7-6) for details.



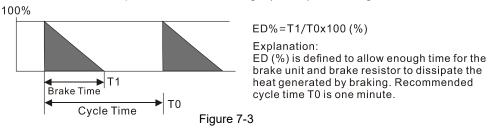2. Select the resistance value, power and brake usage (ED %) according to Delta rules.




For safety, install a thermal overload relay (O.L) between the brake unit and the brake resistor in conjunction with the magnetic contactor (MC) before the drive for additional protection. The thermal overload relay protects the brake resistor from damage due to frequent or continuous braking. Under such circumstances, turn off the power to prevent damage to the brake resistor, brake unit and drive.

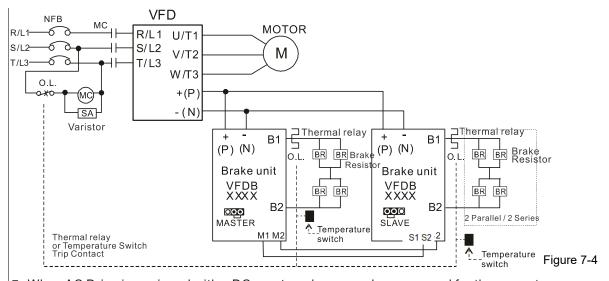

- When AC Drive is equipped with a DC reactor, please read user manual for the correct wiring for the brake unit input circuit +(P).
- DO NOT connect input circuit -(N) to the neutral point of the power system.

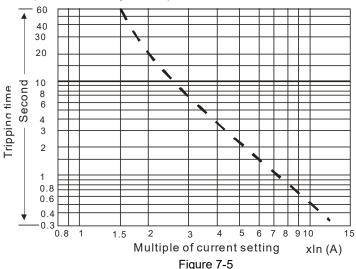- 3. Any damage to the drive or other equipment caused by using brake resistors and brake modules that are not provided by Delta voids the warranty.
- 4. Consider environmental safety factors when installing the brake resistors. If you use the minimum resistance value, consult local dealers for the power calculation.
- 5. When using more than two brake units, the equivalent resistor value of the parallel brake unit cannot be less than the value in the column "Minimum Resistor Value ( $\Omega$ )". Read the wiring information in the brake unit user manual thoroughly prior to operation.
- 6. This chart is for normal usage; if the AC motor drive is applied for frequent braking, it is suggested to enlarge 2~3 times of the Watts.
- 7. Thermal Overload Relay (TOR), for 230V / 460V / 690V models: Choosing a thermal overload relay is based on whether its overload capacity is appropriate for the C2000. The standard braking capacity of the C2000 is 10% ED (Tripping time=10 s). As shown in the figure below, the thermal overload relay continuously operates for 10 seconds and it can withstand a 260% overload (Host starting). For example, a 460V, 110 kW C2000 has a braking current of 126 A (refer to the tables in this section), so it can use the thermal overload relay with a rated current of 50 A. The property of each thermal relay may vary among different manufacturer, please carefully read specification.



# 7-2 Non-fuse Circuit Breaker

Comply with UL standard: Per UL 508, paragraph 45.8.4, part a.

The rated current of the breaker shall be  $1.6\sim2.6$  times (575V / 690V models:  $2\sim4$  times) of the maximum rated input current of AC motor drive.

3-ph	ase 230V
Model	Recommended non-fuse breaker [A]
VFD007C23A	15
VFD015C23A	20
VFD022C23A	30
VFD037C23A	40
VFD055C23A	50
VFD075C23A	60
VFD110C23A	100
VFD150C23A	125
VFD185C23A	150
VFD220C23A	200
VFD300C23A/E	225
VFD370C23A/E	250
VFD450C23A/E	300
VFD550C23A/E	400
VFD750C23A/E	450
VFD900C23A/E	600

Tak	ole	7-	7

3-pha	ase 460V
Model	Recommended non-fuse breaker [A]
VFD007C43A/E	5
VFD015C43A/E	10
VFD022C43A/E	15
VFD040C43A/E	20
VFD037C43A/E	20
VFD055C43A/E	30
VFD075C43A/E	40
VFD110C43A/E	50
VFD150C43A/E	60
VFD185C43A/E	75
VFD220C43A/E	100
VFD300C43A/E	125
VFD370C43S/U	150
VFD450C43S/U	175
VFD550C43A/E	250
VFD750C43A/E	300
VFD900C43A/E	300
VFD1100C43A/E	400
VFD1320C43A/E	500
VFD1600C43A/E	600
VFD1850C43A/E	600
VFD2200C43A/E	800
VFD2800C43A/E	1000
VFD3150C43A/E	1200
VFD3550C43A/E	1350
VFD4500C43A/E	1467

Table 7-8

3-ph	3-phase 575V						
Model	Recommended non-fuse breaker [A]						
VFD015C53A-21	5						
VFD022C53A-21	10						
VFD037C53A-21	15						
VFD055C53A-21	20						
VFD075C53A-21	25						
VFD110C53A-21	40						
VFD150C53A-21	50						

Table 7-9

3-pha	se 690V
Model	Recommended non-fuse breaker [A]
VFD185C63B-21	50
VFD220C63B-21	60
VFD300C63B-21	60
VFD370C63B-21	80
VFD450C63B-00 / 63B-21	100
VFD550C63B-00 / 63B-21	125
VFD750C63B-00 / 63B-21	150
VFD900C63B-00 / 63B-21	200
VFD1100C63B-00 / 63B-21	225
VFD1320C63B-00 / 63B-21	300
VFD1600C63B-00 / 63B-21	350
VFD2000C63B-00 / 63B-21	400
VFD2500C63B-00 / 63B-21	500
VFD3150C63B-00 / 63B-21	650
VFD4000C63B-00 / 63B-21	800
VFD4500C63B-00 / 63B-21	850
VFD5600C63B-00 / 63B-21	1200
VFD6300C63B-00 / 63B-21	1400
	Table 7-10

Table 7-10

# 7-3 Fuse Specification Chart

- ☑ Fuse specifications lower than the table below are allowed.
- ☑ For installation in the United States, branch circuit protection must be provided in accordance with the National Electrical Code (NEC) and any applicable local codes. Use UL classified fuses to fulfill this requirement.
- ☑ For installation in Canada, branch circuit protection must be provided in accordance with Canadian Electrical Code and any applicable provincial codes. Use UL classified fuses to fulfill this requirement.

220\/ Madal	Input Curi	rent I[A]	Li	ne Fuse
230V Model	Heavy Duty	Normal Duty	I [A]	Bussmann P/N
VFD007C23A	6.1	6.4	15	JJN-15 / JJS-15
VFD015C23A	11	12	25	JJN-25 / JJS-25
VFD022C23A	15	16	35	JJN-35 / JJS-35
VFD037C23A	18.5	20	45	JJN-45 / JJS-45
VFD055C23A	26	28	60	JJN-60 / JJS-60
VFD075C23A	34	36	80	JJN-80 / JJS-80
VFD110C23A	50	52	110	JJN-110 / JJS-110
VFD150C23A	68	72	150	JJN-150 / JJS-150
VFD185C23A	78	83	175	JJN-175 / JJS-175
VFD220C23A	95	99	225	JJN-225 / JJS-225
VFD300C23A/E	118	124	250	JJN-250 / JJS-250
VFD370C23A/E	136	143	300	JJN-300 / JJS-300
VFD450C23A/E	162	171	400	JJN-400 / JJS-400
VFD550C23A/E	196	206	450	JJN-450 / JJS-450
VFD750C23A/E	233	245	500	JJN-500 / JJS-500
VFD900C23A/E	315	331	700	JJN-700 / JJS-700

Table 7-11

460VModel	Input Curi	rent I [A]	Lir	ne Fuse
400 v iviouei	Heavy Duty	Normal Duty	I [A]	Bussmann P/N
VFD007C43A/E	4.1	4.3	10	JJS-10
VFD015C43A/E	5.6	5.9	15	JJS-15
VFD022C43A/E	8.3	8.7	20	JJS-20
VFD037C43A/E	13	14	30	JJS-30
VFD040C43A/E	14.5	15.5	35	JJS-35
VFD055C43A/E	16	17	40	JJS-40
VFD075C43A/E	19	20	45	JJS-45
VFD110C43A/E	25	26	60	JJS-60
VFD150C43A/E	33	35	80	JJS-80
VFD185C43A/E	38	40	90	JJS-90
VFD220C43A/E	45	47	110	JJS-110
VFD300C43A/E	60	63	150	JJS-150
VFD370C43/S/U	70	74	175	JJS-175
VFD450C43/S/U	96	101	225	JJS-225
VFD550C43A/E	108	114	250	JJS-250
VFD750C43A/E	149	157	350	JJS-350
VFD900C43A/E	159	167	350	JJN-350
VFD1100C43A/E	197	207	450	JJS-450
VFD1320C43A/E	228	240	500	JJS-500
VFD1600C43A/E	285	300	700	KTU-700
VFD1850C43A/E	361	380	800	KTU-800
VFD2200C43A/E	380	400	800	KTU-800
VFD2800C43A/E	469	494	1000	KTU-1000
VFD3150C43A/E	527	555	1200	KTU-1200
VFD3550C43A/E	594	625	1400	KTU-1400
VFD4500C43A/E	815	866	1600	170M6019

Table 7-12

	Inpu	t Current I	[A]		Line Fuse	
575V Model	Light Duty	Normal Duty	Heavy Duty	I [A]	Model No.	Supplier
VFD015C53A-21	3.8	3.1	2.6	7	KLKD007.T	Littelfuse
VFD022C53A-21	5.4	4.5	3.8	10	KLKD010.T	Littelfuse
VFD037C53A-21	10.4	7.2	5.8	15	KLKD015.T	Littelfuse
VFD055C53A-21	14.9	12.3	10.7	25	25ET	Bussmann
VFD075C53A-21	16.9	15	12.5	32	32ET	Bussmann
VFD110C53A-21	21.3	18	16.9	50	50FE	Bussmann
VFD150C53A-21	26.3	22.8	19.7	63	63FE	Bussmann

Table 7-13

	Inp	out Current I	[A]	Line	Fuse
690V Model	Light Duty	Normal Duty	Heavy Duty	I [A]	Bussmann P/N
VFD185C63B-21	29	24	20	60	JJS-60
VFD220C63B-21	36	29	24	70	JJS-70
VFD300C63B-21	43	36	29	80	JJS-80
VFD370C63B-21	54	43	36	100	JJS-100
VFD450C63B-00 / 63B-21	54	45	36	100	JJS-100
VFD550C63B-00 / 63B-21	67	54	45	125	JJS-125
VFD750C63B-00 / 63B-21	84	66	53	175	JJS-175
VFD900C63B-00 / 63B-21	102	84	66	200	JJS-200
VFD1100C63B-00 / 63B-21	122	102	84	250	JJS-250
VFD1320C63B-00 / 63B-21	147	122	102	300	JJS-300
VFD1600C63B-00 / 63B-21	178	148	123	350	JJS-350
VFD2000C63B-00 / 63B-21	217	178	148	400	JJS-400
VFD2500C63B-00 / 63B-21	292	222	181	450	170M4063
VFD3150C63B-00 / 63B-21	353	292	222	500	170M6058
VFD4000C63B-00 / 63B-21	454	353	292	700	170M6061
VFD4500C63B-00 / 63B-21	469	388	313	800	170M6062
VFD5600C63B-00 / 63B-21	595	504	423	1250	170M6066
VFD6300C63B-00 / 63B-21	681	681	681	1400	170M6067

Table 7-14

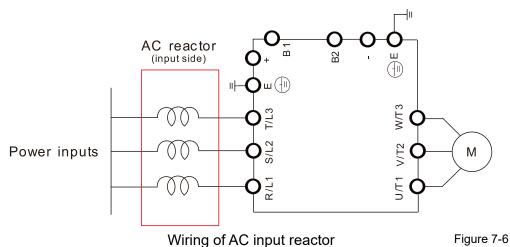
#### 7-4 AC / DC Reactor

## **AC Input Reactor**

Installing an AC reactor on the input side of an AC motor drive can increase line impedance, improve the power factor, reduce input current, and reduce interference generated from the motor drive. It also reduces momentary voltage surges or abnormal current spikes. For example, when the main power capacity is higher than 500 kVA, or when using a switching capacitor bank, momentary voltage and current spikes may damage the AC motor drive's internal circuit. An AC reactor on the input side of the AC motor drive protects it by suppressing surges.

#### Installation

Install an AC input reactor in series with the main power to the three input phases R S T as shown below:



Following table shows the standard AC reactors specification of Delta C2000 200V~230V/ 50~60Hz

Model	HP	Rated Current (Arms)	Saturation current (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC reactor	Input AC reactor Delta part #
VFD007C23A	1	5	8.64	2.536	4.227	No	DR005A0254
VFD015C23A	2	8	12.78	1.585	2.642	No	DR008A0159
VFD022C23A	3	11	18	1.152	1.922	No	DR011A0115
VFD037C23A	5	17	28.8	0.746	1.243	No	DR017AP746
VFD055C23A	7.5	25	43.2	0.507	0.845	No	DR025AP507
VFD075C23A	10	33	55.8	0.32	0.534	No	DR033AP320
VFD110C23A	15	49	84.6	0.216	0.359	No	DR049AP215
VFD150C23A	20	65	111.6	0.163	0.271	No	DR065AP163
VFD185C23A	25	75	127.8	0.169	0.282	No	DR075AP170
VFD220C23A	30	90	154.8	0.141	0.235	No	DR090AP141
VFD300C23A	40	120	205.2	0.106	0.176	Yes	DR146AP087
VFD370C23A	50	146	250.2	0.087	0.145	Yes	DR146AP087
VFD450C23A	60	180	307.8	0.070	0.117	Yes	DR180AP070
VFD550C23A	75	215	367.2	0.059	0.098	Yes	DR215AP059
VFD750C23A	100	255	435.6	0.049	0.083	Yes	DR276AP049
VFD900C23A	125	346	592.2	0.037	0.061	Yes	DR349AP037

## 380V~460V/ 50~60Hz

Model	HP	Rated Current (Arms)	Saturation current (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC reactor	Input AC reactor Delta part #
VFD007C43A	1	3	5.22	8.102	13.502	No	DR003A0810
VFD015C43A	2	4	6.84	6.077	10.127	No	DR004A0607
VFD022C43A	3	6	10.26	4.050	6.752	No	DR006A0405
VFD037C43A	5	9	14.58	2.700	4.501	No	DR009A0270
VFD040C43A	5	10.5	17.1	2.315	3.858	No	DR010A0231
VFD055C43A	7.5	12	19.8	2.025	3.375	No	DR012A0202
VFD075C43A	10	18	30.6	1.174	1.957	No	DR018A0117
VFD110C43A	15	24	41.4	0.881	1.468	No	DR024AP881
VFD150C43A	20	32	54	0.66	1.101	No	DR032AP660
VFD185C43A	25	38	64.8	0.639	1.066	No	DR038AP639
VFD220C43A	30	45	77.4	0.541	0.900	No	DR045AP541
VFD300C43A	40	60	102.6	0.405	0.675	Yes	DR060AP405
VFD370C43S/U	50	73	124.2	0.334	0.555	Yes	DR073AP334
VFD450C43S/U	60	91	154.8	0.267	0.445	Yes	DR091AP267
VFD550C43A	75	110	189	0.221	0.368	Yes	DR110AP221
VFD750C43A	100	150	257.4	0.162	0.270	Yes	DR150AP162
VFD900C43A	125	180	307.8	0.135	0.225	Yes	DR180AP135
VFD1100C43A	150	220	376.2	0.110	0.184	Yes	DR220AP110
VFD1320C43A	175	260	444.6	0.098	0.162	Yes	DR260AP098
VFD1600C43A	215	310	531	0.078	0.131	Yes	DR310AP078
VFD1850C43A	250	370	633.6	0.066	0.109	Yes	DR370AP066
VFD2200C43A	300	460	786.6	0.054	0.090	Yes	DR460AP054
VFD2800C43A	375	550	941.4	0.044	0.074	Yes	DR550AP044
VFD3150C43A	420	616	1053	0.039	0.066	Yes	DR616AP039
VFD3550C43A	475	683	1168.2	0.036	0.060	Yes	DR683AP036
VFD4500C43A	600	866	1468.8	0.028	0.047	Yes	DR866AP028

Table 7-16

575V, 50/60 Hz, 3-phase

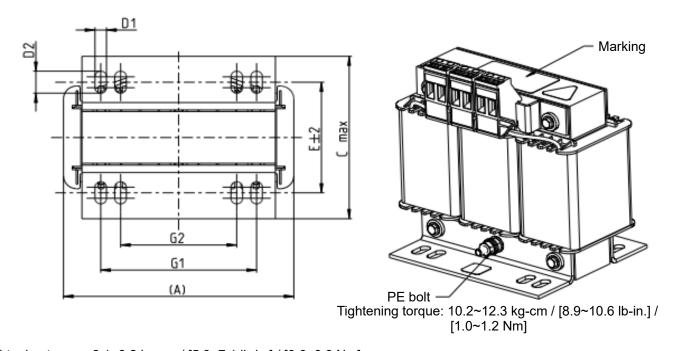
		Rated	current	(Arms)	Saturation	8.806 10.567 12.5			5% impedance (mH)			
kW	HP	Light Duty	Normal Duty		Current (Arms)	Light		Heavy Duty	Light Duty	Normal Duty	Heavy Duty	
VFD015C53A-21	2	3	2.5	2.1	4.2	8.806	10.567	12.580	14.677	17.612	20.967	
VFD022C531-21	3	4.3	3.6	3	5.9	6.144	7.338	8.806	10.239	12.230	14.677	
VFD037C53A-21	5	6.7	5.5	4.6	9.1	3.943	4.803	5.743	6.572	8.005	9.572	
VFD055C53A-21	7.5	9.9	8.2	6.9	13.7	2.668	3.222	3.829	4.447	5.369	6.381	
VFD075C53A-21	10	12.1	10	8.3	16.5	2.183	2.642	3.183	3.639	4.403	5.305	
VFD110C53A-21	15	18.7	15.5	13	25.7	1.413	1.704	2.032	2.355	2.841	3.387	
VFD150C53A-21	20	24.2	20	16.8	33.3	1.092	1.321	1.572	1.819	2.201	2.621	

## Chapter 7 Optional Accessories | C2000


690V, 50/60 Hz, 3-phase

000 V, 00/00 T12, 0 pH		Ra	ated curr	ent	Satu	ration Cu	urrent	3%	Impedar	nce	5%	Impedar	nce
			(Arms)			(Arms)			(mH)			(mH)	
kW	HP	Light Duty	Normal Duty	Heavy Duty									
VFD185C63B-21	25	24	20	14	28.8	30.0	25.2	1.585	1.902	2.717	2.642	3.170	4.529
VFD220C63B-21	30	30	24	20	36.0	36.0	36.0	1.268	1.585	1.902	2.113	2.642	3.170
VFD300C63B-21	40	36	30	24	43.2	45.0	43.2	1.057	1.268	1.585	1.761	2.113	2.642
VFD370C63B-21	50	45	36	30	54.0	54.0	54.0	0.845	1.057	1.268	1.409	1.761	2.113
VFD450C63B-00/21	60	54	45	36	64.8	67.5	64.8	0.704	0.845	1.057	1.174	1.409	1.761
VFD550C63B-00/21	75	67	54	45	80.4	81.0	81.0	0.568	0.704	0.845	0.946	1.174	1.409
VFD750C63B-00/21	100	86	67	54	103.2	100.5	97.2	0.442	0.568	0.704	0.737	0.946	1.174
VFD900C63B-00/21	125	104	86	67	124.8	129.0	120.6	0.366	0.442	0.568	0.610	0.737	0.946
VFD1100C63B-00/21	150	125	104	86	150.0	156.0	154.8	0.304	0.366	0.442	0.507	0.610	0.737
VFD1320C63B-00/21	175	150	125	104	180.0	187.5	187.2	0.254	0.304	0.366	0.423	0.507	0.610
VFD1600C63B-00/21	215	180	150	125	216.0	225.0	225.0	0.211	0.254	0.304	0.352	0.423	0.507
VFD2000C63B-00/21	270	220	180	150	264.0	270.0	270.0	0.173	0.211	0.254	0.288	0.352	0.423
VFD2500C63B-00/21	335	290	220	180	348.0	330.0	324.0	0.131	0.173	0.211	0.219	0.288	0.352
VFD3150C63B-00/21	425	350	290	220	420.0	435.0	396.0	0.109	0.131	0.173	0.181	0.219	0.288
VFD4000C63B-00/21	530	430	350	290	516.0	525.0	522.0	0.088	0.109	0.131	0.147	0.181	0.219
VFD4500C63B-00/21	600	465	385	310	558.0	577.5	558.0	0.082	0.099	0.123	0.136	0.165	0.205
VFD5600C63B-00/21	745	590	465	420	708.0	697.5	756.0	0.064	0.082	0.091	0.107	0.136	0.151
VFD6300C63B-00/21	850	675	675	675	810.0	1012.5	1215.0	0.056	0.056	0.056	0.094	0.094	0.094

# AC input reactor dimension and specifications:



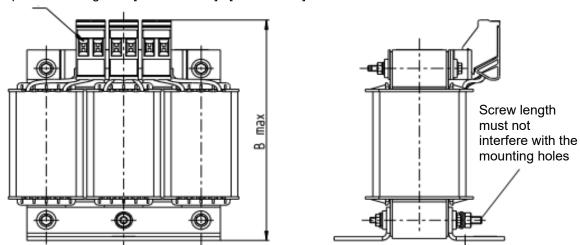
Tightening torque: 6.1~8.2 kg-cm / [5.3~7.1 lb-in.] / [0.6~0.8 Nm]



Unit: mm

									<u> </u>
Model	Input AC reactor Delta part #	А	В	С	D1*D2	E	G1	G2	PE D
VFD007C23A	DR005A0254	96	100	60	6*9	42	60	40	M4
VFD015C23A	DR008A0159	120	120	88	6*12	60	80.5	60	M4
VFD022C23A	DR011A0115	120	120	88	6*12	60	80.5	60	M4
VFD037C23A	DR017AP746	120	120	93	6*12	65	80.5	60	M4
VFD055C23A	DR025AP507	150	150	112	6*12	88	107	75	M4
VFD075C23A	DR033AP320	150	150	112	6*12	88	107	75	M4

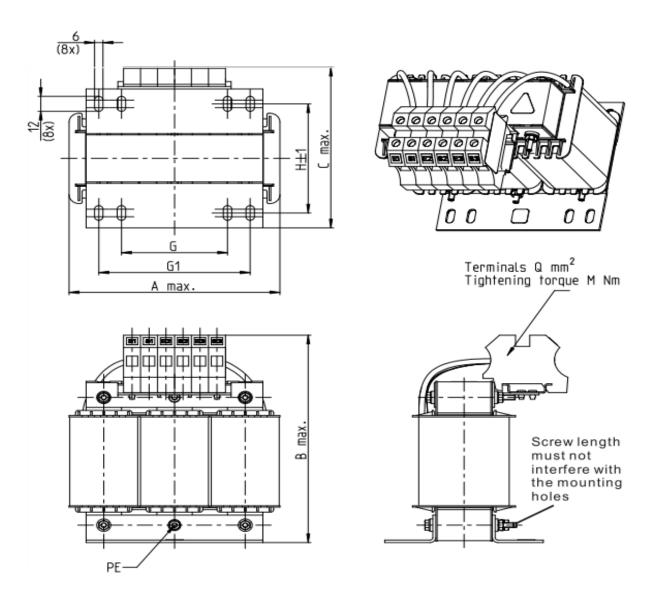
Table 7-19



Unit: mm

											Offic. IIII
Model	Input AC reactor Delta part #	Α	В	С	D1*D2	Н	G	G1	Q	M	PE D
VFD110C23A	DR049AP215	180	195	160	6*12	115	85	122	16	1.2~1.4	M4
VFD150C23A	DR065AP163	180	205	160	6*12	115	85	122	35	2.5~3.0	M4

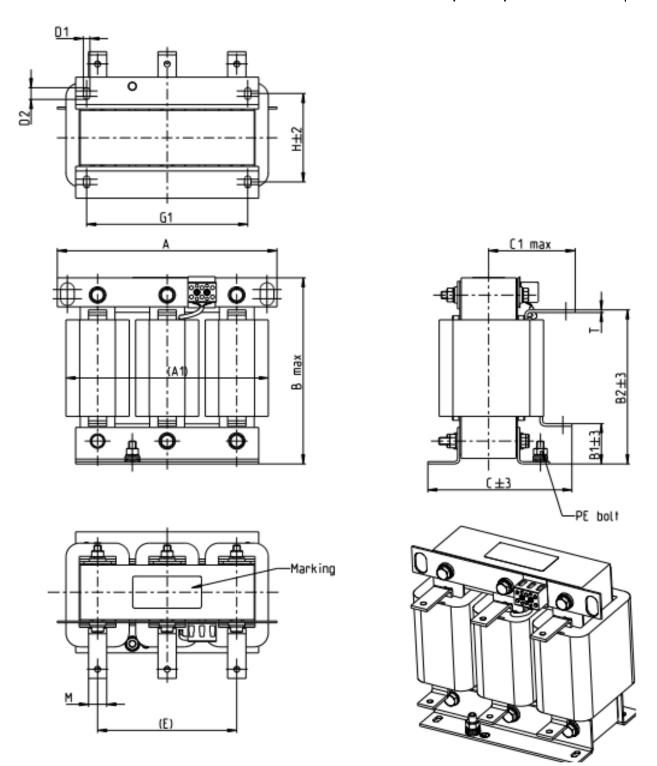
Table 7-20




Unit: mm

													U	nit: mm
Model	Input AC reactor Delta part #	Α	A1	В	B1	B2	С	C1	D1*D2	Е	G1	Н	M*T	PE
VFD185C23A	DR075AP170	240	220	205	42	165	151	95	7*13	152	176	85	20*3	M8
VFD220C23A	DR090AP141	240	225	210	44	170	151	95	7*13	152	176	85	20*3	M8
VFD300C23A VFD370C23A	DR146AP087	240	225	240	44	200	163	100	7*13	152	176	97	20*3	M8
VFD450C23A	DR180AP070	250	235	250	49	206	175	105	11*18	160	190	124	30*3	M8
VFD550C23A	DR215AP059	250	235	275	51	226	180	110	11*18	160	190	124	30*5	M8

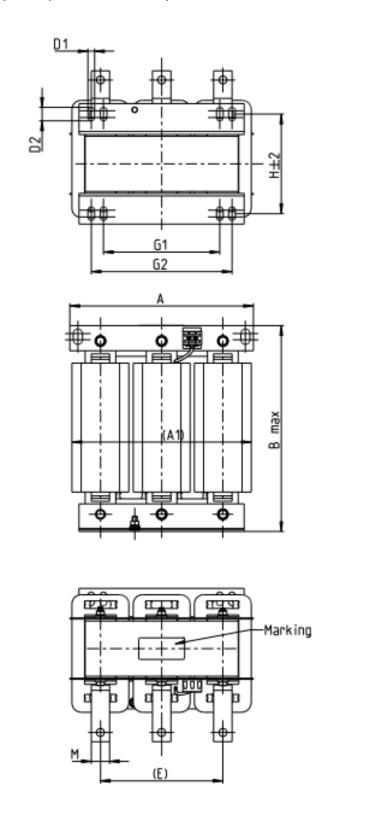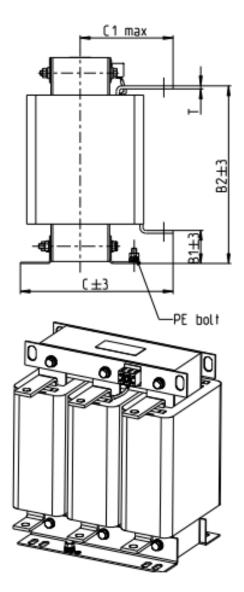Table 7-21






Unit: mm


Model	Input AC reactor Delta part #	A	A1	В	B1	B2	С	C1	D1*D2	E	G1	H	M*T	PE
VFD750C23A	DR276AP049	270	255	310	50	265	200	130	10*18	176	200	106	30*5	M8
VFD900C23A	DR349AP037	270	260	333	50	285	200	130	10*18	176	200	106	30*5	M8

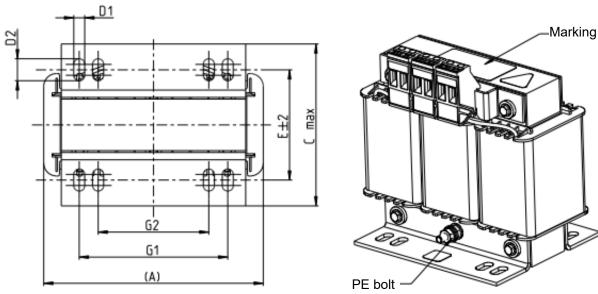
Table 7-22



Tightening torque: 10.2~12.3 kg-cm / [8.9~10.6 lb-in.] / [1.0~1.2 Nm]

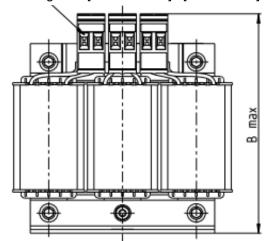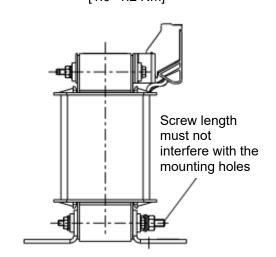Tightening torque: 6.1~8.2 kg-cm / [5.3~7.1 lb-in.] / [0.6~0.8 Nm]






Unit: mm

Model	Input AC reactor Delta part #	А	В	С	D1*D2	Е	G1	G2	PE D
VFD007C43A	DR003A0810	96	100	60	6*9	42	60	40	M4
VFD015C43A	DR004A0607	120	120	88	6*12	60	80.5	60	M4
VFD022C43A	DR006A0405	120	120	88	6*12	60	805	60	M4
VFD037C43A	DR009A0270	150	150	88	6*12	74	107	75	M4
VFD040C43A	DR010A0231	150	150	112	6*12	88	107	75	M4
VFD055C43A	DR012A0202	150	150	112	6*12	88	107	75	M4
VFD075C43A	DR018A0117	150	155	112	6*12	88	107	75	M4
VFD110C43A	DR024AP881	150	155	112	6*12	88	107	75	M4
VFD150C43A	DR032AP660	180	175	138	6*12	114	122	85	M6

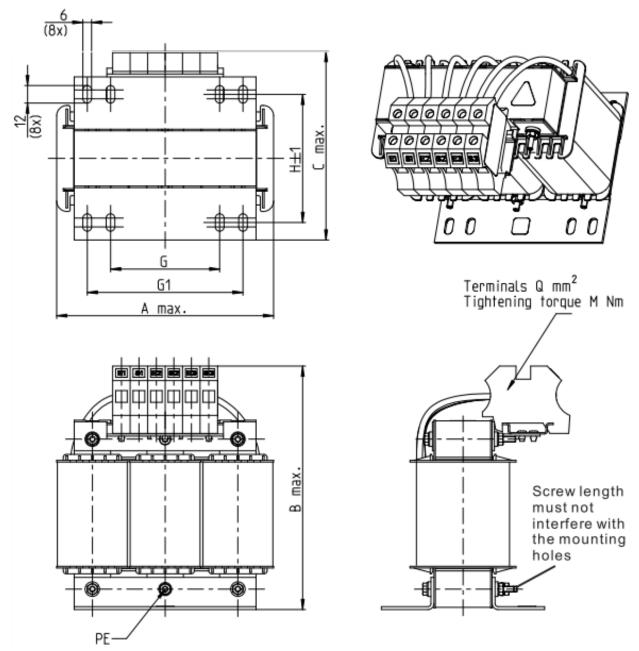
Table 7-23



Unit: mm


											•
Model	Input AC reactor Delta part #	Α	В	С	D1*D2	Н	G	G1	Q	М	PE D
VFD185C43A	DR038AP639	180	195	160	6*12	115	85	122	16	1.2~1.4	M4
VFD220C43A	DR045AP541	235	235	145	7*13	85	/	176	16	1.2~1.4	M6

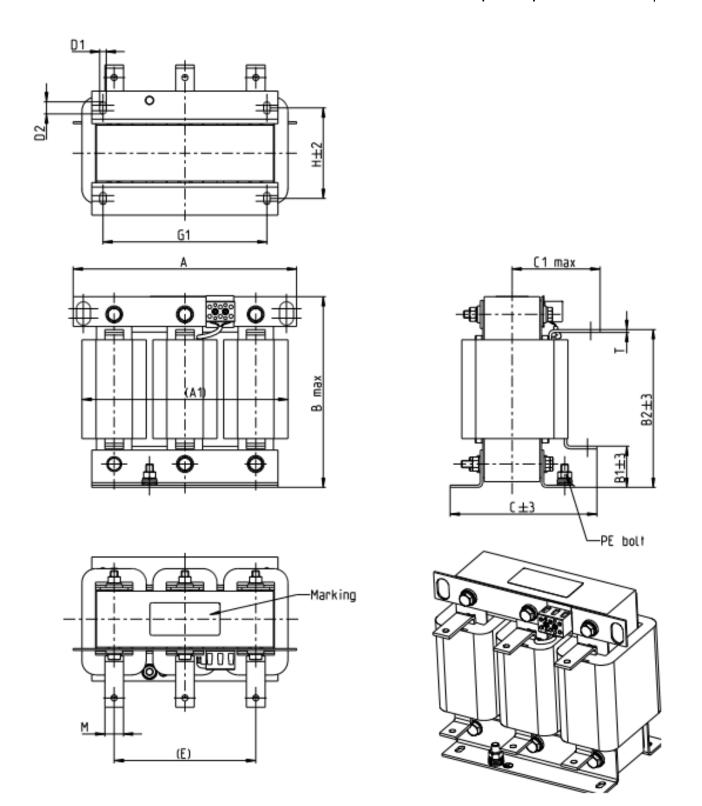
Table 7-24



- 1	In	it:	m	m
·	<i>)</i>	н.		


														<i>/</i> 11111. 1111111
Model	Input AC reactor Delta part #	А	A1	В	B1	B2	С	C1	D1*D2	E	G1	н	M*T	PE
VFD300C43A	DR060AP405	240	225	210	44	170	163	100	7*13	152	176	97	20*3	M8
VFD370C43S/U	DR073AP334	250	230	225	44	186	174	105	11*18	160	190	124	20*3	M8
VFD450C43S/U	DR091AP267	250	235	225	44	186	174	105	11*18	160	190	124	20*3	M8
VFD550C43A	DR110AP221	270	255	235	50	192	175	105	10*18	176	200	106	20*3	M8

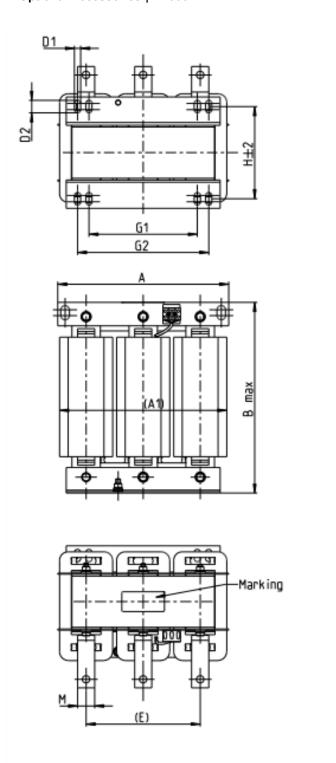

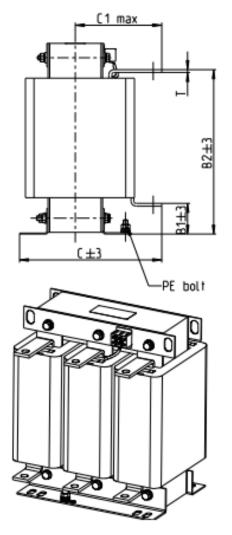

														OTTIC. TITE
Model	Input AC reactor Delta part #	А	A1	В	B1	B2	С	C1	D1*D2	E	G1	G2	Н	M*T
VFD750C43A	DR150AP162	270	260	260	51	208	195	120	10*18	176	200	1	118	30*3
VFD900C43A	DR180AP135	300	290	300	55	246	195	115	11*22	200	230	190	142	30*3
VFD1100C43A	DR220AP110	300	295	300	57	248	210	130	11*22	200	230	190	142	30*5
VFD1320C43A	DR260AP098	300	290	330	56	270	227	140	11*22	200	230	190	160	30*5
VFD1600C43A	DR310AP078	300	295	340	54	288	233	145	11*22	200	230	190	160	30*5
VFD1850C43A	DR370AP066	300	295	340	54	289	268	168	11*22	200	230	190	185	40*3

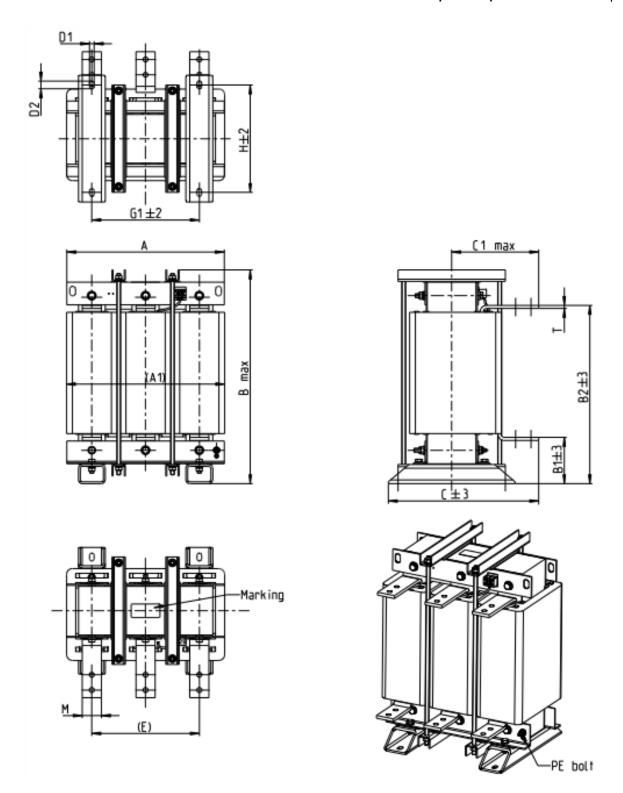Table 7-26



Unit: mm

														11110
Model	Input AC reactor Delta part #	А	A1	В	B1	B2	С	C1	D1*D2	Е	G1	Н	M*T	PE
VFD2200C43A	DR460AP054	360	350	490	106	401	346	205	12*20	240	240	240	50*5	M8
VFD2800C43A	DR550AP044	360	350	490	106	401	358	210	12*20	240	240	250	50*5	M8
VFD3150C43A	DR616AP039	360	350	490	110	401	376	225	12*20	240	240	270	50*8	M8
VFD3550C43A	DR683AP036	360	350	490	110	404	396	232	12*20	240	240	290	50*8	M8
VFD4500C43A	DR866AP028	410	415	562	120	464	402	232	12*20	280	280	290	50*8	M8


Table 7-27

## DC reactor

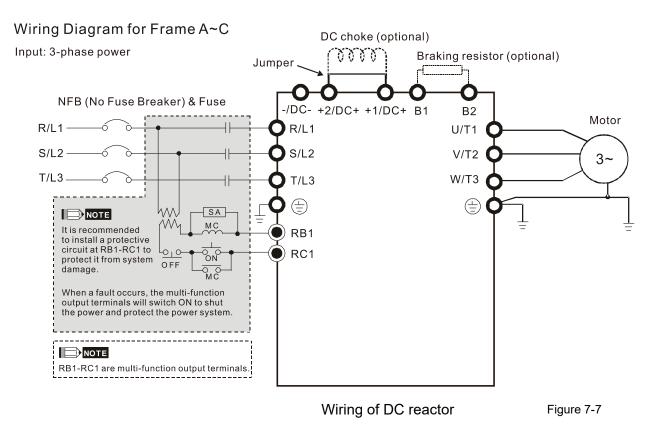
A DC reactor can also improve the power factor, reduce input current, and reduce interference generated from the motor drive. A DC reactor stabilizes the DC BUS voltage. Compared to an AC input reactor, the advantages are smaller size, lower price, and lower voltage drop (lower power dissipation).

#### Installation

Install the DC reactor between terminals +2/DC+ and +1/DC+. Remove the jumper (shown below) before installing the DC reactor.



# DC reactor dimension and specifications:

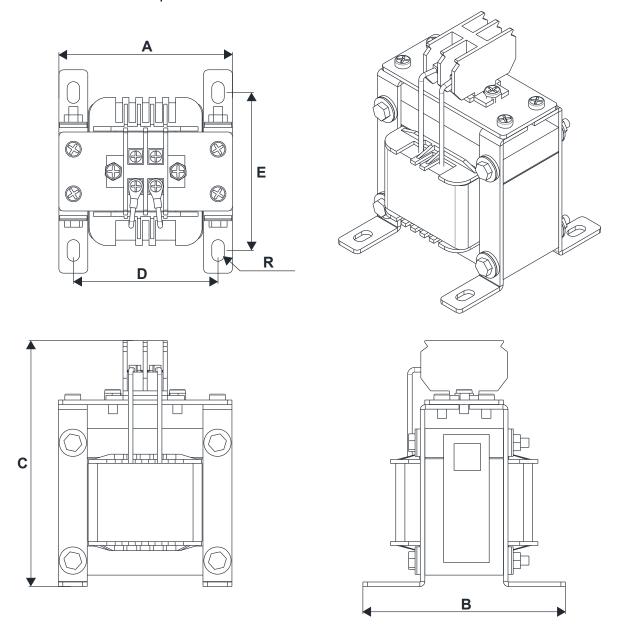

200V~230V/ 50~60Hz

2007 2007 3											
Model	HP	Rated Current (Arms)	Saturation current (Arms)	DC reactor (mH)	DC reactor Delta Part#	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	R [mm]
VFD007C23A	1	5	8.64	5.857	DR005D0585	79	78	112	64±2	56±2	9.5*5.5
VFD015C23A	2	8	12.78	3.660	DR008D0366	79	78	112	64±2	56±2	9.5*5.5
VFD022C23A	3	11	18	2.662	DR011D0266	79	92	112	64±2	69.5±2	9.5*5.5
VFD037C23A	5	17	28.8	1.722	DR017D0172	79	112	112	64±2	89.5±2	9.5*5.5
VFD055C23A	7.5	25	43.2	1.172	DR025D0117	99	105	128	79±2	82.5±2	9.5*5.5
VFD075C23A	10	33	55.8	0.851	DR033DP851	117	110	156	95±2	87±2	10*6.5
VFD110C23A	15	49	84.6	0.574	DR049DP574	117	120	157	95±2	97±2	10*6.5
VFD150C23A	20	65	111.6	0.432	DR065DP432	117	140	157	95±2	116.5±2	10*6.5
VFD185C23A	25	75	127.8	0.391	DR075DP391	136	135	178	111±2	112±2	10*6.5
VFD220C23A	30	90	154.8	0.325	DR090DP325	136	135	179	111±2	112±2	10*6.5

## 380V~460V/ 50~60Hz

Model	HP	Rated Current (Arms)	Saturation current (Arms)	DC reactor (mH)	DC reactor Delta Part #	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	R [mm]
VFD007C43A	1	3	5.22	18.709	DR003D1870	79	78	112	64±2	56±2	9.5*5.5
VFD015C43A	2	4	6.84	14.031	DR004D1403	79	92	112	64±2	69.5±2	9.5*5.5
VFD022C43A	3	6	10.26	9.355	DR006D0935	79	92	112	64±2	69.5±2	9.5*5.5
VFD037C43A	5	9	14.58	6.236	DR009D0623	79	112	112	64±2	89.5±2	9.5*5.5
VFD040C43A	5	10.5	17.1	5.345	DR010D0534	99	93	128	79±2	70±2	9.5*5.5
VFD055C43A	7.5	12	19.8	4.677	DR012D0467	99	105	128	79±2	82.5±2	9.5*5.5
VFD075C43A	10	18	30.6	3.119	DR018D0311	117	110	144	95±2	87±2	10*6.5
VFD110C43A	15	24	41.4	2.338	DR024D0233	117	120	144	95±2	97±2	10*6.5
VFD150C43A	20	32	54	1.754	DR032D0175	117	140	157	95±2	116.5±2	10*6.5
VFD185C43A	25	38	64.8	1.477	DR038D0147	136	135	172	111±2	112±2	10*6.5
VFD220C43A	30	45	77.4	1.247	DR045D0124	136	135	173	111±2	112±2	10*6.5
VFD300C43A	40	60	102.6	0.935	DR060DP935	136	150	173	111±2	127±2	10*6.5

Table 7-29

#### 575V DC Choke

		Ra	ated Curre	ent	Saturation	4%DC Impedance				
kW	HP		(Arms)		Current		(mH)			
		Light Dutv	Normal Duty	Heavy Duty	(Arms)	Light Dutv	Normal Duty	Heavy Duty		
VFD015C53A-21	2	3	2.5	2.1	4.2	20.336	24.404	29.052		
VFD022C531-21	3	4.3	3.6	3	5.9	14.188	16.947	20.336		
VFD037C53A-21	5	6.7	5.5	4.6	9.1	9.106	11.093	13.263		
VFD055C53A-21	7.5	9.9	8.2	6.9	13.7	6.163	7.440	8.842		
VFD075C53A-21	10	12.1	10	8.3	16.5	5.042	6.101	7.351		
VFD110C53A-21	15	18.7	15.5	13	25.7	3.263	3.936	4.693		
VFD150C53A-21	20	24.2	20	16.8	33.3	2.521	3.050	3.632		

Table 7-30

### 690V DC Choke

		Ra	ated Curre	ent	Satu	ıration Cu	rrent	4%DC Impedance			
kW	HP		(Arms)			(Arms)			(mH)		
		Light	Normal	Heavy	Light	Normal	Heavy	Light	Normal	Heavy	
		Duty	Duty	Duty	Duty	Duty	Duty	Duty	Duty	Duty	
VFD185C63B-21	25	24	20	14	28.8	30.0	25.2	3.661	4.393	6.275	
VFD220C63B-21	30	30	24	20	36.0	36.0	36.0	2.928	3.661	4.393	
VFD300C63B-21	40	36	30	24	43.2	45.0	43.2	2.440	2.928	3.661	
VFD370C63B-21	50	45	36	30	54.0	54.0	54.0	1.952	2.440	2.928	

Table 7-31

# Following models are built-in DC impedance:

Frame D	VFD450C63B-00; VFD550C63B-00; VFD450C63B-21; VFD550C63B-21
Frame E	VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00 VFD750C63B-21; VFD900C63B-21; VFD1100C63B-21; VFD1320C63B-21
Frame F	VFD1600C63B-00; VFD2000C63B-00; VFD1600C63B-21; VFD2000C63B-21
Frame G	VFD2500C63B-00; VFD3150C63B-00; VFD2500C63B-21; VFD3150C63B-21
Frame H	VFD4000C63B-00; VFD4500C63B-00; VFD5600C63B-00; VFD6300C63B-00 VFD4000C63B-21; VFD4500C63B-21; VFD5600C63B-21; VFD6300C63B-21

Following table is the THDi value of Delta motor drive matching AC/DC reactor:

Drive Spec.		Models without I	ouilt-in DC reactor		Models	with built-in DC	reactor				
Reactor Spec.	No AC/DC reactor	3% input AC reactor	5% input AC reactor	· I4% DU reacion		3% input AC reactor	5% input AC reactor				
5th	73.3%	38.5%	30.8%	25.5%	31.16%	27.01%	25.5%				
7th	52.74%	15.3%	9.4%	18.6%	23.18%	9.54%	8.75%				
11th	7.28%	7.1%	6.13%	7.14%	8.6%	4.5%	4.2%				
13th	0.4%	3.75%	3.15%	0.48%	7.9%	0.22%	0.17%				
THDi	91%	43.6%	34.33%	38.2%	42.28%	30.5%	28.4%				
Note:	THDi may have some difference due to different installation conditions (like wires or motors) and environment.										


**Table 7-33** 

## AC Output reactor

Installing an AC reactor on the input side of an AC motor drive can increase line impedance, improve the power factor, reduce input current, and reduce interference generated from the motor drive. It also reduces momentary voltage surges or abnormal current spikes. For example, when the main power capacity is higher than 500 kVA, or when using a switching capacitor bank, momentary voltage and current spikes may damage the AC motor drive's internal circuit. An AC reactor on the input side of the AC motor drive protects it by suppressing surges.

#### Installation

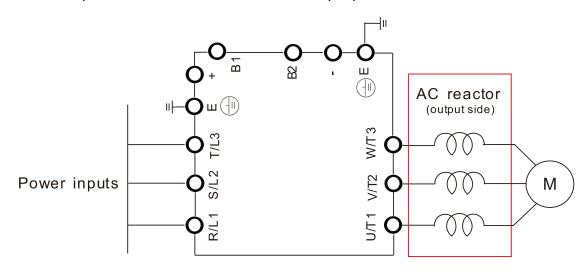Install an AC input reactor in series with the three output phases U V W to Motor as shown below:



Wiring of AC output reactor

Figure 7-8

Following table shows the standard AC output reactors specification of Delta C2000 200V~230V/ 50~60Hz

Model	HP	Rated Current (Arms)	Saturation current (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC reactor	Input AC reactor Delta part #
VFD007C23A	1	5	8.64	2.536	4.227	No	DR005L0254
VFD015C23A	2	8	12.78	1.585	2.642	No	DR008L0159
VFD022C23A	3	11	18	1.152	1.922	No	DR011L0115
VFD037C23A	5	17	28.8	0.746	1.243	No	DR017LP746
VFD055C23A	7.5	25	43.2	0.507	0.845	No	DR025LP507
VFD075C23A	10	33	55.8	0.32	0.534	No	DR033LP320
VFD110C23A	15	49	84.6	0.216	0.359	No	DR049LP215
VFD150C23A	20	65	111.6	0.163	0.271	No	DR065LP162
VFD185C23A	25	75	127.8	0.169	0.282	No	DR075LP170
VFD220C23A	30	90	154.8	0.141	0.235	No	DR090LP141
VFD300C23A	40	120	205.2	0.106	0.176	Yes	DR146LP087
VFD370C23A	50	146	250.2	0.087	0.145	Yes	DR146LP087
VFD450C23A	60	180	307.8	0.070	0.117	Yes	DR180LP070
VFD550C23A	75	215	367.2	0.059	0.098	Yes	DR215LP059
VFD750C23A	100	255	435.6	0.049	0.083	Yes	DR276LP049
VFD900C23A	125	346	592.2	0.037	0.061	Yes	DR346LP037

Table 7-34


## 380V~460V/ 50~60Hz

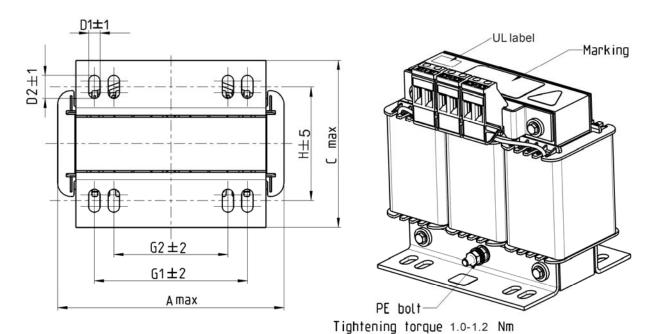300 -4007 30 -00112											
Model	HP	Rated Current (Arms)	Saturation current (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC reactor	Delta part #				
VFD007C43A	1	3	5.22	8.102	13.502	No	DR003L0810				
VFD015C43A	2	4	6.84	6.077	10.127	No	DR004L0607				
VFD022C43A	3	6	10.26	4.050	6.752	No	DR006L0405				
VFD037C43A	5	9	14.58	2.700	4.501	No	DR009L0270				
VFD040C43A	5	10.5	17.1	2.315	3.858	No	DR010L0231				
VFD055C43A	7.5	12	19.8	2.025	3.375	No	DR012L0202				
VFD075C43A	10	18	30.6	1.174	1.957	No	DR018L0117				
VFD110C43A	15	24	41.4	0.881	1.468	No	DR024LP881				
VFD150C43A	20	32	54	0.66	1.101	No	DR032LP660				
VFD185C43A	25	38	64.8	0.639	1.066	No	DR038LP639				
VFD220C43A	30	45	77.4	0.541	0.900	No	DR045LP541				
VFD300C43A	40	60	102.6	0.405	0.675	No	DR060LP405				
VFD370C43S/U	50	73	124.2	0.334	0.555	Yes	DR073LP334				
VFD450C43S/U	60	91	154.8	0.267	0.445	Yes	DR091LP267				
VFD550C43A	75	110	189	0.221	0.368	Yes	DR110LP221				
VFD750C43A	100	150	257.4	0.162	0.270	Yes	DR150LP162				
VFD900C43A	125	180	307.8	0.135	0.225	Yes	DR180LP135				


# Chapter 7 Optional Accessories | C2000


Model	HP	Rated Current (Arms)	Saturation current (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC reactor	Delta part #
VFD1100C43A	150	220	376.2	0.110	0.184	Yes	DR220LP110
VFD1320C43A	175	260	444.6	0.098	0.162	Yes	DR260LP098
VFD1600C43A	215	310	531	0.078	0.131	Yes	DR310LP078
VFD1850C43A	250	370	633.6	0.066	0.109	Yes	DR370LP066
VFD2200C43A	300	460	786.6	0.054	0.090	Yes	DR460LP054
VFD2800C43A	375	550	941.4	0.044	0.074	Yes	DR550LP044
VFD3150C43A	420	616	1053	0.039	0.066	Yes	DR616LP039
VFD3550C43A	475	683	1168.2	0.036	0.060	Yes	DR683LP036
VFD4500C43A	600	866	1468.8	0.028	0.047	Yes	DR866LP028

## AC output reactor dimensions and specification:




Tightening torque 0.6-0.8Nm

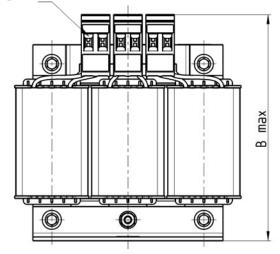

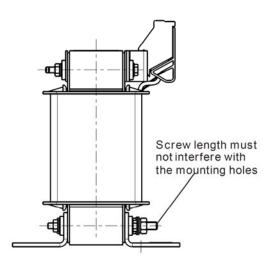


Model	Output AC reactor Delta part #	Α	В	С	D1*D2	Н	H1	H2	PE
VFD007C23A	DR005A0254	96	110	70	6*9	42	60	40	M4
VFD015C23A	DR008A0159	120	135	96	6*12	60	80.5	60	M4
VFD022C23A	DR011A0115	120	135	96	6*12	60	80.5	60	M4
VFD037C23A	DR017AP746	120	135	105	6*12	65	80.5	60	M4
VFD055C23A	DR025AP507	150	160	120	6*12	88	107	75	M4
VFD075C23A	DR033AP320	150	160	120	6*12	88	107	75	M4

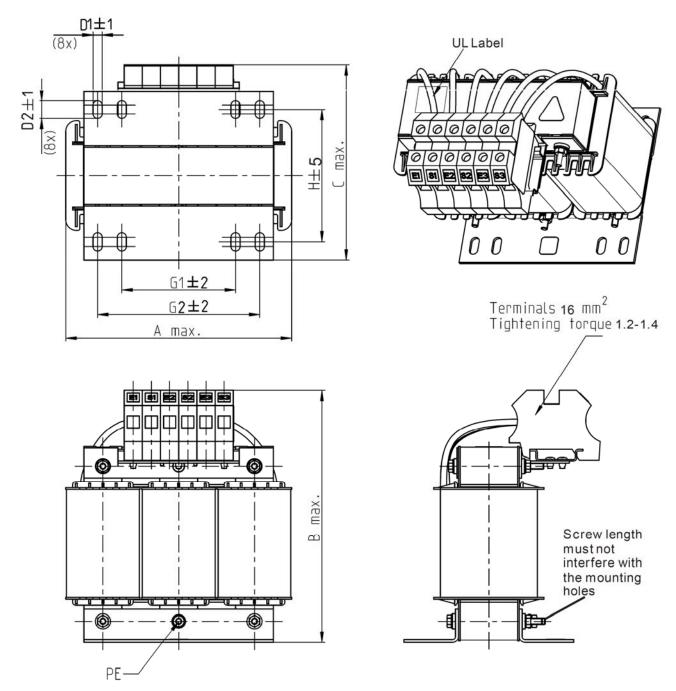Table 7-36





Model	Output AC reactor Delta part #	А	В	С	D1*D2	Н	G	G1	Q	М	PE
VFD110C23A	DR049AP215	180	205	175	6*12	115	85	122	16	1.2-1.4	M4
VFD150C23A	DR065AP162	180	215	185	6*12	115	85	122	35	2.5-3.0	M4

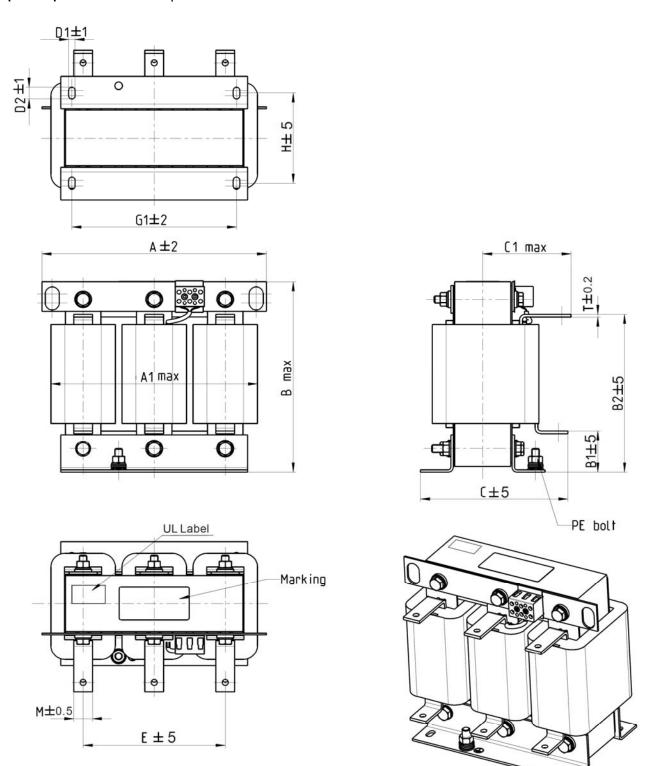
Table 7-37




Model	Output AC reactor Delta part #	Α	A1	В	В1	B2	С	C1	D1*D2	E	G1	Н	M*T
VFD185C23A	DR075AP170	240	228	210	44	170	151	95	7*13	152	176	85	20*3
VFD220C23A	DR090AP141	240	228	220	44	170	151	100	7*13	152	176	85	20*3
VFD300C23A	DR146AP087	240	228	250	45	202	162	110	7*13	152	176	97	30*3
VFD370C23A	DR 140AP007	240	220	250	45	202	102	110	7 13	152	176	97	30 3
VFD450C23A	DR180AP070	250	240	260	46	203	175	115	11*18	160	190	124	30*5
VFD550C23A	DR215AP059	250	240	285	51	226	180	120	11*18	160	190	124	30*5

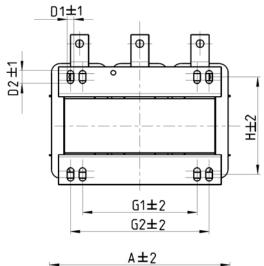

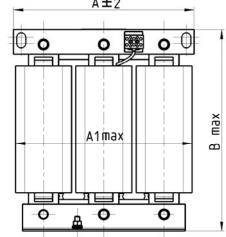


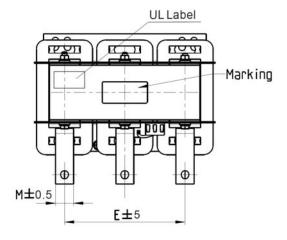

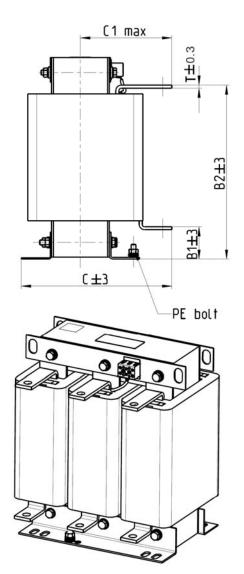



Model	Output AC reactor Delta part #	Α	A1	В	B1	B2	С	C1	D1*D2	Е	Н	M*T
VFD750C23A	DR276AP049	270	260	320	50	265	200	140	10*18	176	106	30*5
VFD900C23A	DR276AP050	270	264	350	50	285	200	140	10*18	176	106	30*5

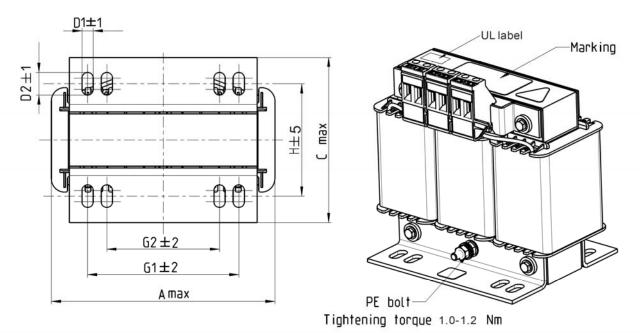Table 7-39




Tightening torque 0.6-0.8Nm

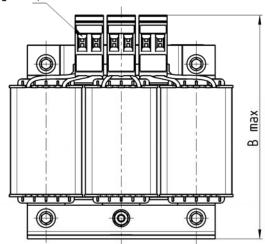

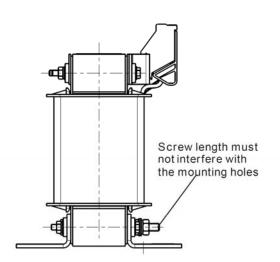


Model	Output AC reactor Delta part #	Α	В	С	D1*D2	н	G1	G2	PE
VFD007C43A	DR003A0810	96	115	60	6*9	42	60	40	M4
VFD015C43A	DR004A0607	120	135	88	6*12	60	81	60	M4
VFD022C43A	DR006A0405	120	135	88	6*12	60	81	60	M4
VFD037C43A	DR009A0270	150	160	98	6*12	74	107	75	M4
VFD040C43A	DR010A0231	150	160	112	6*12	88	107	75	M4
VFD055C43A	DR012A0202	150	160	112	6*12	88	107	75	M4
VFD075C43A	DR018A0117	150	160	112	6*12	88	107	75	M4
VFD110C43A	DR024AP881	150	160	112	6*12	88	107	75	M4
VFD150C43A	DR032AP660	180	190	138	6*12	114	122	85	M6

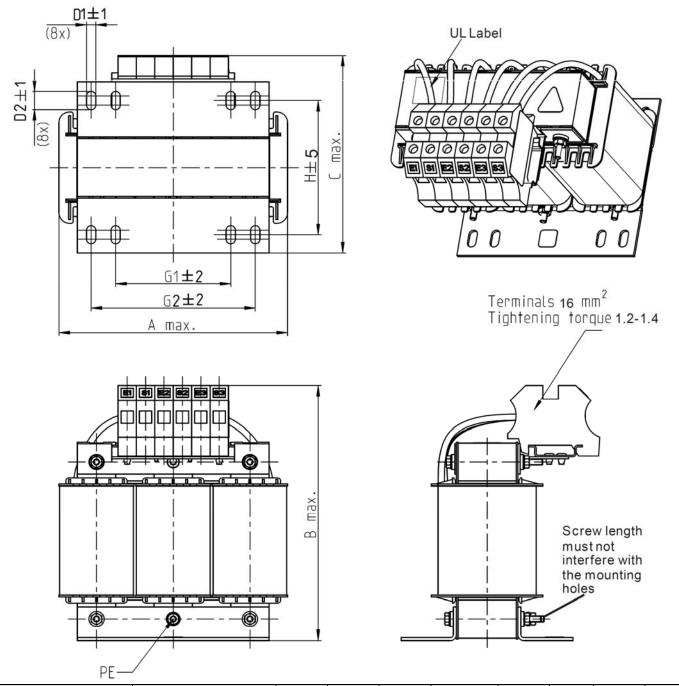Table 7-40




Model	Output AC reactor Delta part #	А	В	С	D1*D2	Н	G1	G2	PE
VFD185C43A	DR038AP639	180	205	165	6*12	115	85	122	M4
VFD220C43A	DR045AP541	235	245	150	7*13	85	/	176	M6

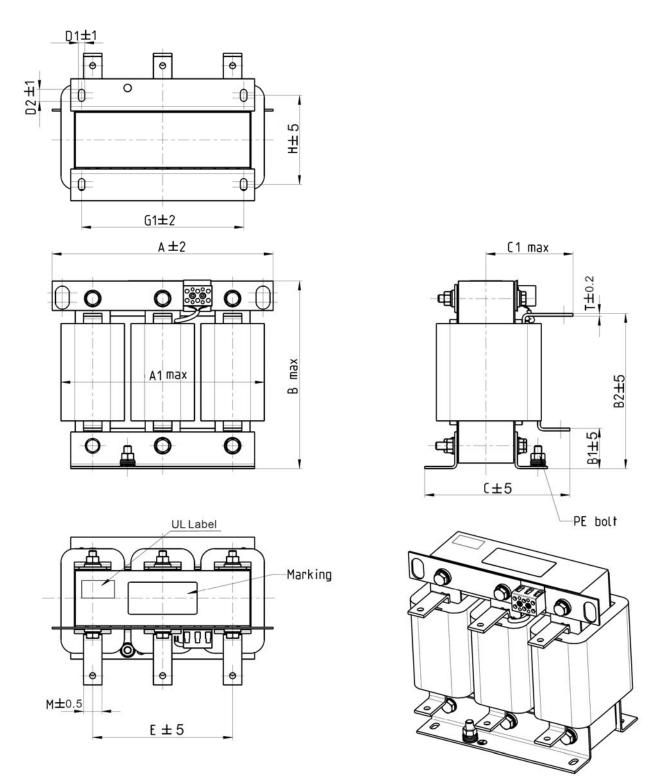
Table 7-41





Model	Output AC reactor Delta part #	Α	A1	В	B1	B2	С	C1	D1*D2	E	G1	Н	M*T
VFD300C43A	DR060AP405	240	228	215	44	170	163	110	7*13	152	176	97	20*3
VFD370C43S/U	DR073AP334	250	235	235	44	186	174	115	11*18	160	190	124	20*3
VFD450C43S/U	DR091AP267	250	240	235	44	186	174	115	11*18	160	190	124	20*3
VFD550C43A	DR110AP221	270	260	245	50	192	175	115	10*18	176	200	106	20*3

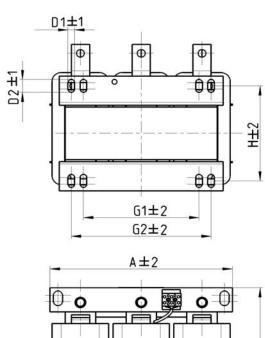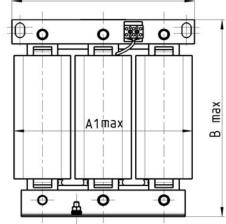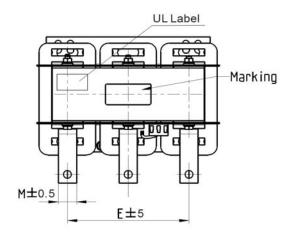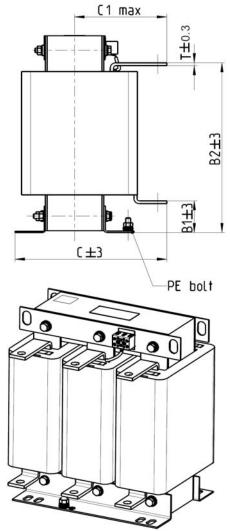Table 7-42













Model	Output AC reactor  Delta part #	А	A1	В	B1	B2	С	C1	D1*D2	Е	G1	G2	Н	M*T
VFD750C43A	DR150LP162	270	264	265	51	208	192	125	10*18	176	200	/	118	30*3
VFD900C43A	DR180LP135	300	295	310	55	246	195	125	11*22	200	230	190	142	30*3
VFD1100C43A	DR220LP110	300	298	310	57	248	210	140	11*22	200	230	190	142	30*5
VFD1320C43A	DR260LP098	300	295	330	56	270	227	140	11*22	200	230	190	160	30*5
VFD1600C43A	DR310LP078	300	298	350	54	288	233	145	11*22	200	230	190	160	30*5
VFD1850C43A	DR370LP066	300	298	350	54	289	268	170	11*22	200	230	190	185	40*5

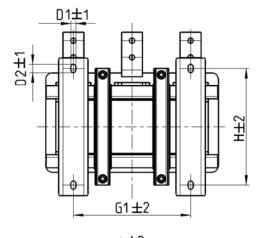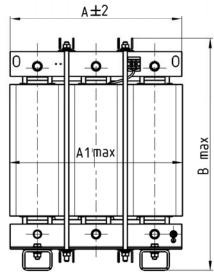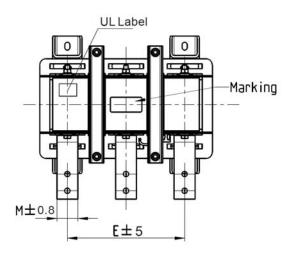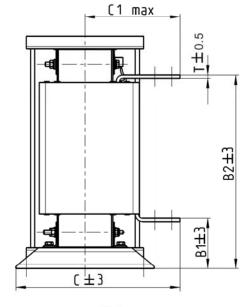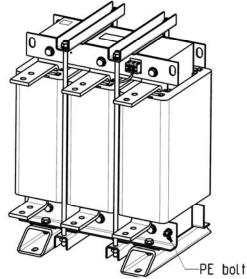
Table 7-43











Model	Output AC reactor Delta part #	А	A1	В	B1	B2	С	C1	D1*D2	Е	G1	Н	M*T
VFD2200C43A	DR460AP054	360	355	510	106	401	346	215	12*20	240	240	240	50*5
VFD2800C43A	DR550AP044	360	355	510	106	401	358	220	12*20	240	240	250	50*5
VFD3150C43A	DR616AP039	360	355	510	110	401	376	230	12*20	240	240	270	50*8
VFD3550C43A	DR683AP036	360	355	510	110	401	396	240	12*20	240	240	290	50*8
VFD4500C43A	DR866AP028	410	418	570	120	464	402	245	12*20	280	280	290	50*8

#### **Motor Cable Length**

#### 1. Leakage current to affect the motor and counter measurement

If the cable length is too long, the parasitic capacitance between cables will enlarge and may increase leakage current. It will activate the protection of over current, and increased leakage current will not ensure the correction of current value in display. The worst case is that AC motor drive may damage.

If more than one motor is connected to the AC motor drive, the total wiring length is the sum of the wiring length from AC motor drive to each motor.

For the 460V series AC motor drive, when an overload relay is installed between the drive and the motor to protect motor from overheating, the connecting cable must be shorter than 50m. However, an overload relay malfunction may still occur. To prevent the malfunction, install an output reactor (optional) to the drive or lower the carrier frequency setting (Pr. 00-17).

## 2. Surge voltage to affect the motor and counter measurement

When motor is driven by a PWM signal of AC motor drive, the motor terminals will experience surge voltages (dv/dt) easily due to power transistors conversion of AC motor drive and cable capacitance. When the motor cable is very long (especially for the 460V series), surge voltages (dv/dt) may reduce insulation quality. To prevent this situation, please follow the rules below:

- a. Use a motor with enhanced insulation
- b. Connect an output reactor (optional) to the output terminals of the AC motor drive
- c. Reduce the motor cable length to suggested value

The suggested motor shielded cable length in the following table complies with IEC 60034-17, which is suitable for the motor with rated voltage under 500 VAC, and the insulation level of peak-to-peak over (including) 1.35kV

		Without A	C reactor	With AC reactor			
230V Model	Rated current (ND) (Arms)	Shielded Cable [meter]	Non-shielded cable [meter]	Shielded Cable [meter]	Non-shielded cable [meter]		
VFD007C23A	5	50	75	75	115		
VFD015C23A	8	50	75	75	115		
VFD022C23A	11	50	75	75	115		
VFD037C23A	17	50	75	75	115		
VFD055C23A	25	50	75	75	115		
VFD075C23A	33	100	150	150	225		
VFD110C23A	49	100	150	150	225		
VFD150C23A	65	100	150	150	225		
VFD185C23A	75	100	150	150	225		
VFD220C23A	90	100	150	150	225		
VFD300C23A/E	120	100	150	150	225		
VFD370C23A/E	146	100	150	150	225		
VFD450C23A/E	180	150	225	225	325		
VFD550C23A/E	215	150	225	225	325		
VFD750C23A/E	255	150	225	225	325		
VFD900C23A/E	346	150	225	225	325		

		Without A	.C reactor	With AC	reactor
460V Model	Rated current (ND) (Arms)	Shielded Cable [meter]	Non-shielded cable [meter]	Shielded Cable [meter]	Non-shielded cable [meter]
VFD007C43A	3	50	75	75	115
VFD015C43A	4	50	75	75	115
VFD022C43A	6	50	75	75	115
VFD037C43A	9	50	75	75	115
VFD040C43A	10.5	50	75	75	115
VFD055C43A	12	50	75	75	115
VFD075C43A	18	100	150	150	225
VFD110C43A	24	100	150	150	225
VFD150C43A	32	100	150	150	225
VFD185C43A	38	100	150	150	225
VFD220C43A	45	100	150	150	225
VFD300C43A	60	100	150	150	225
VFD370C43S/U	73	100	150	150	225
VFD450C43S/U	91	150	225	225	325
VFD550C43A/E	110	150	225	225	325
VFD750C43A/E	150	150	225	225	325
VFD900C43A/E	180	150	225	225	325
VFD1100C43A/E	220	150	225	225	325
VFD1320C43A/E	260	150	225	225	325
VFD1600C43A/E	310	150	225	225	325
VFD1850C43A/E	370	150	225	225	325
VFD2200C43A/E	460	150	225	225	325
VFD2800C43A	550	150	225	225	325
VFD3150C43A	616	150	225	225	325
VFD3550C43A	683	150	225	225	325
VFD4500C43A	866	150	225	225	325

Table 7-46

460V		Without A	C reactor	With AC reactor		
EMC Filter built-in model	Rated current (ND) (Arms)	Shielded Cable [meter]	Non-shielded cable [meter]	Shielded Cable [meter]	Non-shielded cable [meter]	
VFD007C43E	3	30	75	30	115	
VFD015C43E	4	30	75	30	115	
VFD022C43E	6	30	75	30	115	
VFD037C43E	9	30	75	30	115	
VFD040C43E	10.5	30	75	30	115	
VFD055C43E	12	30	75	30	115	
VFD075C43E	18	50	150	50	225	
VFD110C43E	24	50	150	50	225	
VFD150C43E	32	50	150	50	225	
VFD185C43E	38	50	150	50	225	
VFD220C43E	45	50	150	50	225	
VFD300C43E	60	50	150	50	225	


575V			Rated Current	Without .	AC reactor	With AC reactor		
Model	kW	HP	Normal Duty (Arms)	Shielded Cable [meter]	Non-shielded Cable [meter]	Shielded Cable [meter]	Non-shielded Cable [meter]	
VFD015C53A-21	0.75	1	2.5	35	30	45	20	
VFD022C531-21	1.5	2	3.6	35	30	45	20	
VFD037C53A-21	2.2	3	5.5	35	30	45	20	
VFD055C53A-21	3.7	5	8.2	35	30	45	20	
VFD075C53A-21	5.5	7.5	10	35	30	45	20	
VFD110C53A-21	7.5	10	15.5	35	30	45	20	
VFD150C53A-21	11	15	20	35	30	45	20	

Table 7-48

690V			Rated Current	Without A	C reactor	With AC	With AC reactor		
Model	kW	HP	Normal Duty (Arms)	Shielded Cable [meter]	Non-shield ed Cable [meter]	Shielded Cable [meter]	Non-shield ed Cable [meter]		
VFD185C63B-21	18.5	25	20	20	35	30	45		
VFD220C63B-21	22	30	24	20	35	30	45		
VFD300C63B-21	30	40	30	20	35	45	60		
VFD370C63B-21	37	50	36	20	45	60	75		
VFD450C63B-00/21	45	60	45	20	45	60	75		
VFD550C63B-00/21	55	75	54	20	45	60	100		
VFD750C63B-00/21	75	100	67	20	45	60	100		
VFD900C63B-00/21	90	125	86	20	45	75	100		
VFD1100C63B-00/21	110	150	104	20	45	75	100		
VFD1320C63B-00/21	132	175	125	20	45	75	100		
VFD1600C63B-00/21	160	215	150	20	45	90	100		
VFD2000C63B-00/21	200	270	180	20	45	90	100		
VFD2500C63B-00/21	250	335	220	20	45	90	100		
VFD3150C63B-00/21	315	425	290	20	45	90	100		
VFD4000C63B-00/21	400	530	350	20	45	90	100		
VFD4500C63B-00/21	450	600	385	20	45	90	100		
VFD5600C63B-00/21	560	745	465	20	45	75	90		
VFD6300C63B-00/21	630	850	675	20	45	75	90		

<sup>\*</sup> The table above is the suggested cable length of EMC built-in models operating under surge voltage influencing. To pass the noise emission and Electromagnetic interference certification, the cable length should follow chapter 7-7 instruction.

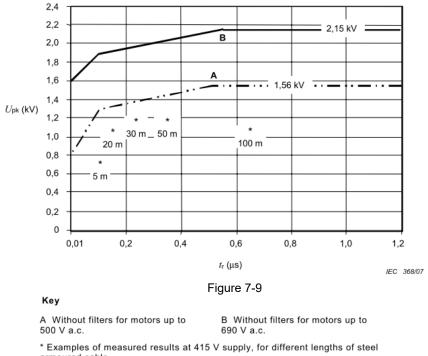
<sup>\* 690</sup>V output motor cable length needs to comply with IEC 60034-25 Requirements on insulation level of Curve B motor



armoured cable Figure 14 – Limiting curves of impulse voltage  $U_{
m pk}$ , measured between two motor phase

terminals, as a function of the peak rise time  $t_r$ 

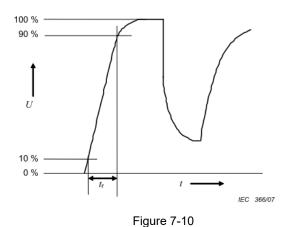The t<sub>r</sub> is defined as:




# Sine-wave filter

When there is longer cable length connected between motor drive and motor, the damping will lead to high frequency resonator, and make impedance matching poor to enlarge the voltage reflection. This phenomenon will generate twice-input voltage in motor side, which will easily make motor voltage overshoot to damage insulation.


To prevent this phenomenon, installing sine-wave filter can transform PWM output voltage to smooth and low-ripple sin wave, and motor cable length can longer than 1000 meters.

#### Installation

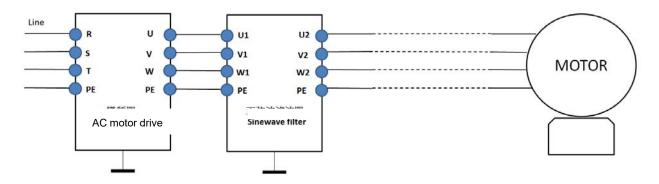Sine-wave filter is serially connected between motor drive UVW output side and motor, which is shown as below:



Wiring of non-shielded cable

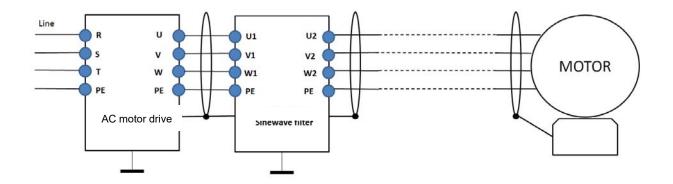

Following table shows the sin-wave filter specification of Delta C2000

200V~230V/ 50~60Hz

kW	HP	Rated current (Arms)	Suggested sine-wave filter part #	Output cable length [m] (Shielded or non-shielded)
0.75	1	5	B84143V0006R227	
1.5	2	8	B84143V0011R227	
2.2	3	11	B04143V0011R221	
3.7	5	17	B84143V0025R227	
5.5	7.5	25	B04 143 V 0 0 2 3 R 2 2 7	
7.5	10	33	B84143V0033R227	
11	15	49	B84143V0050R227	
15	20	65	B84143V0066R227	1000
18.5	25	75 B84143V0075R227 90 B84143V0095R227		1000
22	30			
30	40	120	B84143V0132R227	
37	50	146	B84143V0180R227	
45	60	180	B04 143 VU 10URZZ1	
55	75	215	B84143V0250R227	
75	100	255	B84143V0320R227	
90	125	346	Please contact supplier EPCOS	

# 380V~460V/ 50~60Hz

kW	HP	Rated current (Arms)	Suggested sine-wave filter part #	Output cable length [m] (Shielded or non-shielded)
0.75	1	3	D0.44.40\/000.4D007	
1.5	2	4	B84143V0004R227	
2.2	3	6	B84143V0006R227	
3.7	5	9	D0.44.42\/0044D227	]
4	5	10.5	B84143V0011R227	
5.5	7.5	12	B84143V0016R227	]
7.5	10	18	D04442\/0025D227	
11	15	24	B84143V0025R227	1000
15	20	32	B84143V0033R227	
18.5	25	38	D94442\/0050D227	
22	30	45	B84143V0050R227	
30	40	60	B84143V0066R227	
37	50	73	B84143V0075R227	
45	60	91	B84143V0095R227	
55	75	110	B84143V0132R227	
75	100	150	B84143V0180R227	
90	125	180	B84143V0180R227	
110	150	220	B84143V0250R227	
132	175	260	B84143V0320R227	
160	215	310	B04 143 V U 32 U N 22 I	
185	250	370		1000
220	300	460		1000
280	375	550	Please contact supplier EPCOS	
315	420	616	r lease contact supplier EFCOS	
355	475	683		
450	600	866		

Table 7-51

Sine wave filter part #	Please refer to website: <a href="http://en.tdk.eu/inf/30/db/emc_2014/B84143V_R227.pdf">http://en.tdk.eu/inf/30/db/emc_2014/B84143V_R227.pdf</a>
B84143V0004R227	I <sub>R</sub> :4A, Sine-wave output filters for 3-phase systems
B84143V0006R227	I <sub>R</sub> :6A, Sine-wave output filters for 3-phase systems
B84143V0011R227	I <sub>R</sub> :11A, Sine-wave output filters for 3-phase systems
B84143V0016R227	I <sub>R</sub> :16A, Sine-wave output filters for 3-phase systems
B84143V0025R227	I <sub>R</sub> :25A, Sine-wave output filters for 3-phase systems
B84143V0033R227	I <sub>R</sub> :33A, Sine-wave output filters for 3-phase systems
B84143V0050R227	I <sub>R</sub> :50A, Sine-wave output filters for 3-phase systems
B84143V0066R227	I <sub>R</sub> :66A, Sine-wave output filters for 3-phase systems

Sine wave filter part #	Please refer to website: <a href="http://en.tdk.eu/inf/30/db/emc">http://en.tdk.eu/inf/30/db/emc</a> 2014/B84143V R227.pdf
B84143V0075R227	I <sub>R</sub> :75A, Sine-wave output filters for 3-phase systems
B84143V0095R227	I <sub>R</sub> :95A, Sine-wave output filters for 3-phase systems
B84143V0132R227	I <sub>R</sub> :132A, Sine-wave output filters for 3-phase systems
B84143V0180R227	I <sub>R</sub> :180A, Sine-wave output filters for 3-phase systems
B84143V0250R227	I <sub>R</sub> :250A, Sine-wave output filters for 3-phase systems
B84143V0320R227	I <sub>R</sub> :320A, Sine-wave output filters for 3-phase systems

# 7-5 Zero Phase Reactors

Reactor model (Note)	Recommended Wire Size		Wiring Method	Qty	Corresponding motor drives
					VFD007C23A; VFD015C23A; VFD022C23A;
RF008X00A	≤ 8 AWG	≤ 8.37 mm <sup>2</sup>	Diagram A		VFD037C23A; VFD007C43A; VFD015C43A;
				1C*3	VFD022C43A; VFD037C43A; VFD040C43A;
				or 4C*4	VFD055C43A; VFD015C53A-21;
		2.2.7		4C*1	VFD022C53A-21; VFD037C53A-21;
T60006L2040W453	≤ 8 AWG	≤ 8.37 mm <sup>2</sup>	Diagram B		VFD055C53A-21; VFD075C53A-21,
					VFD110C53A-21; VFD150C53A-21
RF004X00A	≤ 1 AWG	≤ 42.41 mm <sup>2</sup>	Diagram A	1C*3	VFD055C23A; VFD075C23A; VFD110C23A;
			_	or	VFD110C43A; VFD150C43A; VFD075C43A;
T60006L2050W565	≤ 1 AWG	≤ 42.41mm <sup>2</sup>	Diagram B	4C*1	VFD110C43A; VFD150C43A
					VFD150C23A; VFD185C23A;
					VFD220C23A; VFD300C23A;
	≤ 600MCM	≤ 304 mm²	Diagram A		VFD370C23A; VFD450C23A;
RF002X00A				1C*3	VFD550C23A; VFD750C23A;
					VFD900C23A; VFD185C43A;
					VFD220C43A; VFD300C43A;
				or	VFD550C43A; VFD750C43A;
				4C*1	VFD900C43A; VFD1100C43A;
					VFD1320C43A; VFD1600C43A;
T60006L2050W565	≤ 600MCM	≤ 304 mm <sup>2</sup>	Diagram B		VFD185C63B-21; VFD220C63B-21;
			J		VFD300C63B-21; VFD370C63B-21;
					VFD450C63B-XX; VFD550C63B-XX
					VFD1850C43A; VFD2200C43A;
					VFD2800C43A; VFD3150C43A;
					VFD3550C43A; VFD4500C43A;
				1C*12	VFD750C63B-XX; VFD900C63B-XX;
RF300X00A	≤ 300 MCM	≤ 152 mm <sup>2</sup>	Diagram A	or	VFD1100C63B-XX; VFD1320C63B-XX;
				4C*3	VFD1600C63B-XX; VFD2000C63B-XX;
					VFD2500C63B-XX; VFD3150C63B-XX;
					VFD4000C63B-XX; VFD4500C63B-XX;
					VFD5600C63B-XX; VFD6300C63B-XX;

Note 1: \*600V insulated cable wire


Note 2: Above table only considers the motor wire size

Note 3: For max. wiring quantity, please refer to Chapter 5 Main


Circuit Terminal.

# Diagram A

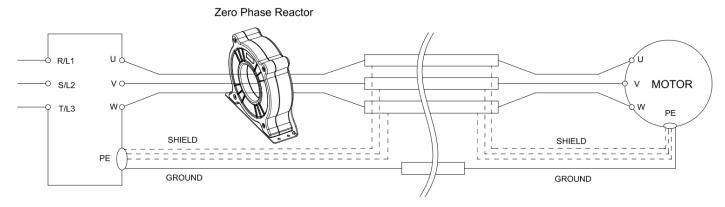Please put all wires through at least one core without winding.



# Diagram B



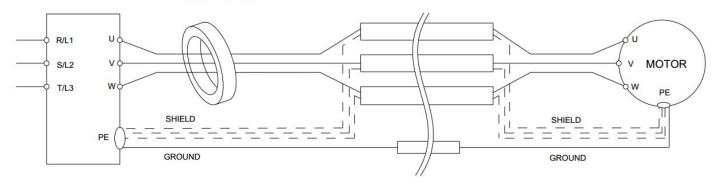


Diagram C

Zero Phase Reactor



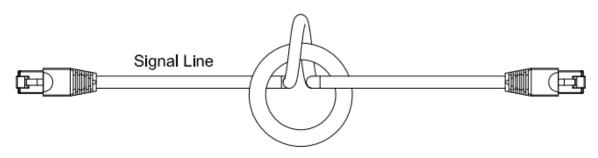


Diagram D

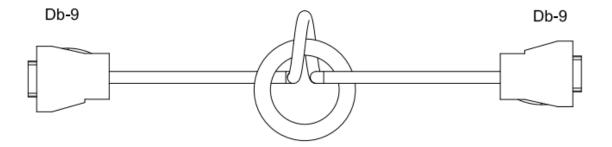Zero Phase Reactor



## Diagram E

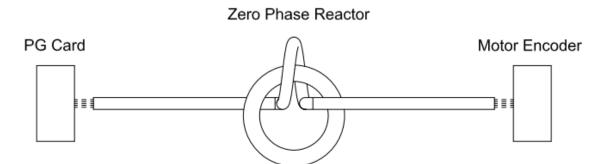

- **Note 1:** The table above gives approximate wire size for the zero phase reactors but the selection is ultimately governed by the type and diameter of cable fitted, i.e. the cable must fit through the center hole of zero phase reactors.
- Note 2: Only the phase conductors should pass through, not the earth core or screen.
- **Note 3:** For the zero phase reactor used for signal cables, it is recommended to install near to the driver and well fixed, as to prevent vibration and pulling of the cable.


Model*	Recommended wire size	Wiring method	Q'ty	Applicable cables
T60006L2050W565	≦1 AWG	Diagram D	Diagram D 1 D-sub	
				Category 5e shielding · Shielded twisted pair
T60006L2040W453	≦8 AWG	Diagram C	1	cable · CAN standard cable
				(TAP-CB05, TAP-CB10)
T60004L2025W622	≦10AWG	Diagram E	1	PG card signal cable
T60004L2016W620	≦12AWG	Diagram E	1	PG card signal cable


Table 7-54


- Note 1: \*The table above is for reference only, please choose the zero phase reactor based on the actual wire size that you are using.
- Note 2: Some of the cables are recommended to choose bigger zero phase reactor due to its corresponded mechanical size.

Recommended max. motor wire size of zero phase reactor (included LUG width and temp. tolerance of motor cable)

Zoro phono reactor	Available max. wire	Available max	AGW (1C*3)	Available max. AWG (4C*1)		
Zero phase reactor	size/ LUG width	75C	90C	75C	90C	
RF008X00A	13MM	3AWG	1AWG	3AWG	1AWG	
RF004X00A	16MM	1AWG	2/0AWG	1AWG	1/0AWG	
RF002X00A	36MM	600MCM	600MCM	1AWG	1/0AWG	
RF300X00A	73MM	650MCM	650MCM	300MCM	300MCM	
T60006L2040W453	11MM	9AWG	4AWG	6AWG	6AWG	
T60006L2050W565	16MM	1AWG	2/0AWG	1AWG	1/0AWG	
T60006L2160V066	57MM	600MCM	600MCM	300MCM	300MCM	

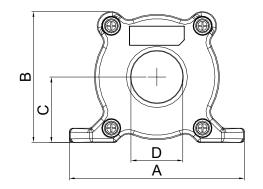

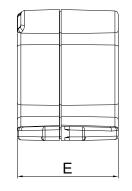


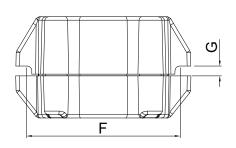



Unit: mm [inch]

Model	Α	В	С	D	E	F	G(Ø)	Torque
RF008X00A	98 [3.858]	73 [2.874]	36.5 [1.437]	29 [1.142]	56.5 [2.224]	86 [3.386]	5.5 [0.217]	< 10kgf/cm <sup>2</sup>
RF004X00A	110 [4.331]	87.5 [3.445]	43.5 [1.713]	36 [1.417]	53 [2.087]	96 [3.780]	5.5 [0.217]	< 10kgf/cm <sup>2</sup>

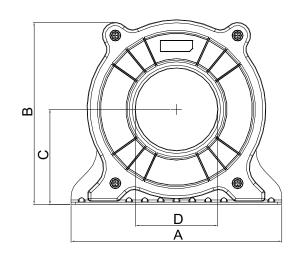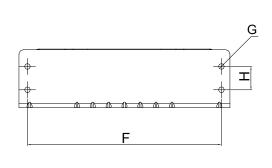Table 7-56









Unit: mm [inch]

Model	Α	В	С	D	E	F	G(Ø)	Н	Torque
DEUUSYOOA	200	172.5	90	78	55.5	184	5.5	22	<45kgf/cm <sup>2</sup>
RF002X00A	[7.874]	[6.791]	[3.543]	[3.071]	[2.185]	[7.244]	[0.217]	[0.866]	<45kgi/cm²

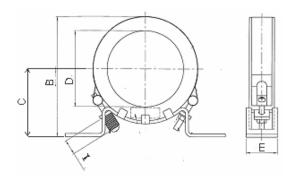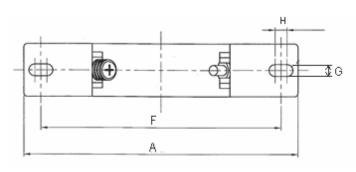Table 7-57






Unit: mm [inch]

Model	Α	В	С	D	E	F	G(Ø)	Н	I
RF300X00A	241	217	114	155	42	220	6.5	7.0	20
	[9.488]	[8.543]	[4.488]	[6.102]	[1.654]	[8.661]	[0.256]	[0.276]	[0.787]


Table 7-58

# **Magnetic Ring**

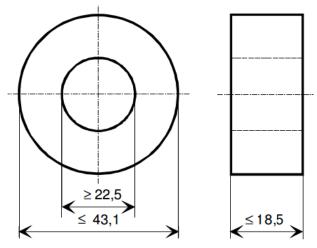
Model number: T60006-L2040-W453




Model number: T60006-L2050-W565

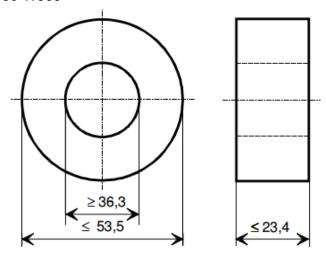


Model number: T60006-L2160-V066

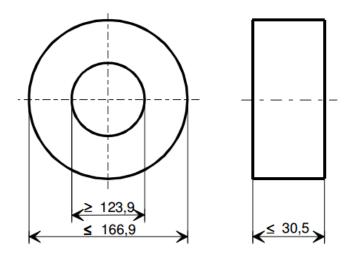

Model number: T60004-L2016-W620

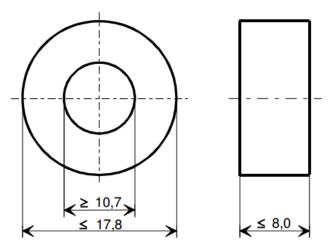

Model number: T60004-L2025-W622

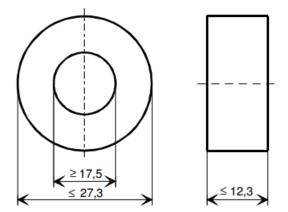

# 7-6 EMC Filter

Following table is the external EMC filter of C2000 series, user can choose corresponding zero phase reactor and suitable shielded cable length in accord to required noise emission and electromagnetic interference level to have the best configuration to suppress the electromagnetic interference. When the application does not consider RE and only needs CE to comply with C2 or C1, there is no need to install zero phase reactor in input side.

#### 230V model

	C2000			Zero phas	se reactor		Cond		Radiation
							Emis	ssion	Emission
	Rated input		Filter model name			Fc		put	
Frame				Input side	Output side		shie		EN61800-3
		current [A]		(R/S/T)	(U/V/W)			length	
							C2	C1	
	VFD007C23A	6.4							
Α	VFD015C23A	12	EMF021A23A	RF008X00A	RF008X00A				
	VFD022C23A	16	EIVIFUZ IAZJA	or T60006L2040W453	or T60006L2040W453				
	VFD037C23A	20				≤ 8kHz			
	VFD055C23A	28		RF004X00A	RF004X00A				
В	VFD075C23A	36	EMF056A23A	or	or				
	VFD110C23A	52		T60006L2050W565	T60006L2050W565				
	VFD150C23A	72		RF002X00A			100	F0:	00
С	VFD185C23A	83	KMF3100A	or	RF002X00A		100m	50m	C2
	VFD220C23A	99		T60006L2160V066	or	≤ 6kHz			
D	VFD300C23A	124	B84143D0150R127	N/A	T60006L2160V066				
	VFD370C23A	143	D04 143D0 130K 121	IN/A					
	VFD450C23A	171							
Е	VFD550C23A	206	B84143B0250S020	NI/A	RF300X00A	✓ 41/U=			
	VFD750C23A	245		N/A	or T60006L2160V066	≤ 4kHz			
F	VFD900C23A	331	B84143B0400S020						

# 460V model

	C2000			Zero phas	se reactor		Cond Emis		Radiation Emission
Frame	Model	Rated input current [A]	Filter model name (U/V/W)	Input side (R/S/T)	Output side (U/V/W)	Fc	Output shielded cable length		EN61800-3
	VFD007C43A	4.3							
	VFD015C43A	5.9	EMF014A43A						
	VFD022C43A	8.7		RF008X00A	RF008X00A				
Α	VFD037C43A	14		or T60006L2040W453	or T60006L2040W453				
	VFD040C43A	15.5	EMF018A43A			≤ 8kHz			
	VFD055C43A	17							
	VFD075C43A	20		RF004X00A RF004X00A					
В	VFD110C43A	26	EMF039A43A	or	or				
	VFD150C43A	35		T60006L2050W565	T60006L2050W565				
	VFD185C43A	40		RF002X00A					
С	VFD220C43A	47	KMF370A	or					
	VFD300C43A	63		T60006L2160V066   RF002X00A   ≤ 6kHz   or	or				
D0	VFD370C43S/U	74				or	400	50m	C2
DU	VFD450C43S/U	101	B84143D0150R127	N/A	T60006L2160V066		100m		
D	VFD550C43A	114	D04 143D0 130K 121	IN/A					
	VFD750C43A	157							
Е	VFD900C43A	167	B84143D0200R127						
-	VFD1100C43A	207	D04143D0200K121						
F	VFD1320C43A	240							
-	VFD1600C43A	300	MIF3400B						
G	VFD1850C43A	380	WIIF3400B	N/A	RF300X00A	≤ 4kHz			
G	VFD2200C43A	400		N/A	or T60006L2160V066				
	VFD2800C43A	494							
Ц	VFD3150C43A	555	MIF3800						
Н	VFD3550C43A	625							
	VFD4500C43A	866	B84143B1000S020						

Table 7-60

	C2000			Zero	o phase reactor		Conducted Emission	Radiation Emission
Frame	Model	Rated Input Current [A]	Filter model name (U/V/W)	Input side (R/S/T)	Output side (U/V/W)	Carrier Frequency	Output shielded cable length EN618000-3 C2	EN61800-3
D0	VFD370C43S/U	74	B84143B0120R110		N/A	≤6kHz	25m	*C2
DU	VFD450C43S/U	101	D04 143D0 120R 1 10		IN/A	≥OK⊓Z	25111	C2
D	VFD550C43A	114	B84143B0180S020					*C3
D	VFD750C43A	157	B04 143B0 1603020					
Е	VFD900C43A	167	B84143B0250S020			≤4kHz		
	VFD1100C43A	207	B04 143B02303020			<u> </u>		
F	VFD1320C43A	240	B84143B0400S020	N/A				C2
Г	VFD1600C43A	300	B04 143B04003020	IN/A	RF300X00A or		13m	02
G	VFD1850C43A	380	B84143B0600S020		T60006L2160V066		13111	
G	VFD2200C43A	400	D04143D00003020					
	VFD2800C43A	494				≤2kHz		
Н	VFD3150C43A	555	B84143B1000S020			≥∠K∏∠		*C3
П	VFD3550C43A	625	D04143D10005020	0003020				C3
	VFD4500C43A	866						

<sup>\*</sup>For Radiated Emission, the drive needs to be placed inside a cabinet.

# Chapter 7 Optional Accessories | C2000


	C2000			Zero phas	se reactor		Conducted Emission	Radiation Emission
Frame	Rated Input Model Current		Filter model name (U/V/W)	Input side	Output side	Carrier Frequency	Output shielded cable length	EN61800-3
Tramo	inicue:	[A]		(R/S/T)	(U/V/W)		EN618000-3 C2	214010000
D0	VFD370C43S/U	74	B84143A0120R105					C3
DU	VFD450C43S/U	101	B04143A0120K103			≤6kHz		U3
D	VFD550C43A	114	B84143B0180S080			≤UK⊓Z		*C3
	VFD750C43A	157	B04143B01003000					C3
Е	VFD900C43A	167	B84143B0250S080				150m	
	VFD1100C43A	207	B04143B02303060				150111	
F	VFD1320C43A	240	B84143B0400S080	N/A	N/A			
F	VFD1600C43A	300	B04143B04003060	IN/A	IN/A			
G	VFD1850C43A	380	B84143B0600S080			≤4kHz		C3
G	VFD2200C43A	400	B64143B00003080			34KI IZ		0.5
	VFD2800C43A	494						
н	VFD3150C43A	555	B84143B1000S080				100m	
П	VFD3550C43A	625	D04143D10003000				100m	
	VFD4500C43A	866						

<sup>\*</sup>For Radiated Emission, the drive needs to be placed inside a cabinet.

# 690V models


					nducte				
					motor c			motor c	
Frame	Model	Filter model name	Zero phase reactor		ngth-50			ngth-10	
Tame	IVIOUGI	i illoi model mame	Zoro priase reactor	Location of zero phase reactor (Refer					efer to
							ire shown)		
				1*	2*	3*	1*	2*	3*
	VFD015C53A-21					1			1
Α	VFD022C53A-21	EMF014A63A				1			1
	VFD037C53A-21		_			1			1
	VFD055C53A-21		T60006L2040W453		1	1		1	1
В	VFD075C53A-21	EMF027A63A			1	1		1	1
	VFD110C53A-21	LIVII UZI AUJA			1	1		1	1
	VFD150C53A-21				1	1		1	1
	VFD185C63B-21								
С	VFD220C63B-21	B84143A0050R021							
	VFD300C63B-21								
	VFD370C63B-21		T60006L2050W565						
	VFD450C63B-00	B84143A0080R021						1	2
D	VFD550C63B-00							1	2
	VFD450C63B-21							1	2
	VFD550C63B-21							1	2
	VFD750C63B-00								
	VFD900C63B-00								
	VFD1100C63B-00								
E	VFD1320C63B-00	B84143B0150S021							
	VFD750C63B-21								
	VFD900C63B-21								
	VFD1100C63B-21								
	VFD1320C63B-21		-						
	VFD1600C63B-00								
F	VFD2000C63B-00	B84143B0250S021							
	VFD1600C63B-21								$\vdash$
	VFD2000C63B-21 VFD2500C63B-00		T60006L2160V066						$\vdash$
	VFD2500C63B-00 VFD3150C63B-00								$\vdash$
G	VFD3130C63B-00 VFD2500C63B-21	B84143B0400S021							
	VFD2500C63B-21								
	VFD3130C03B-21 VFD4000C63B-00		-					1	1
	VFD4500C63B-00							1	1
	VFD5600C63B-00	-						1	1
	VFD6300C63B-00							1	1
Н	VFD4000C63B-21	B84143B1000S021						1	1
	VFD4500C63B-21							1	1
	VFD5600C63B-21							1	1
	VFD6300C63B-21							1	1
<u> </u>	1 D0000000B-21		1				l	L	hla 7 00

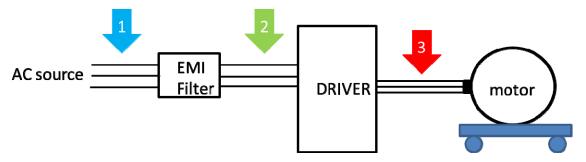
Table 7-63




**EMC Filter Dimension** 

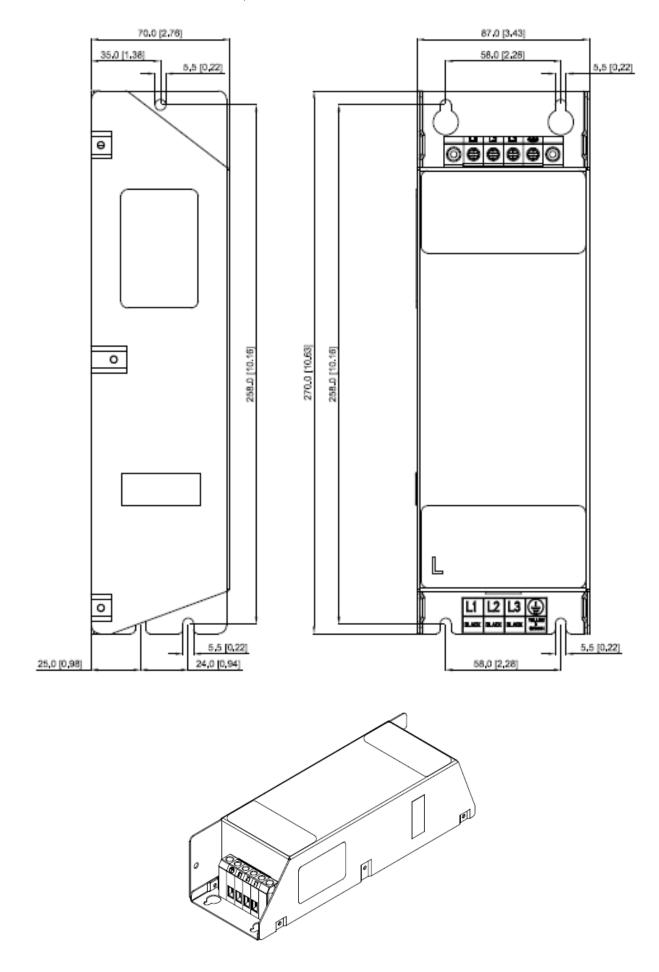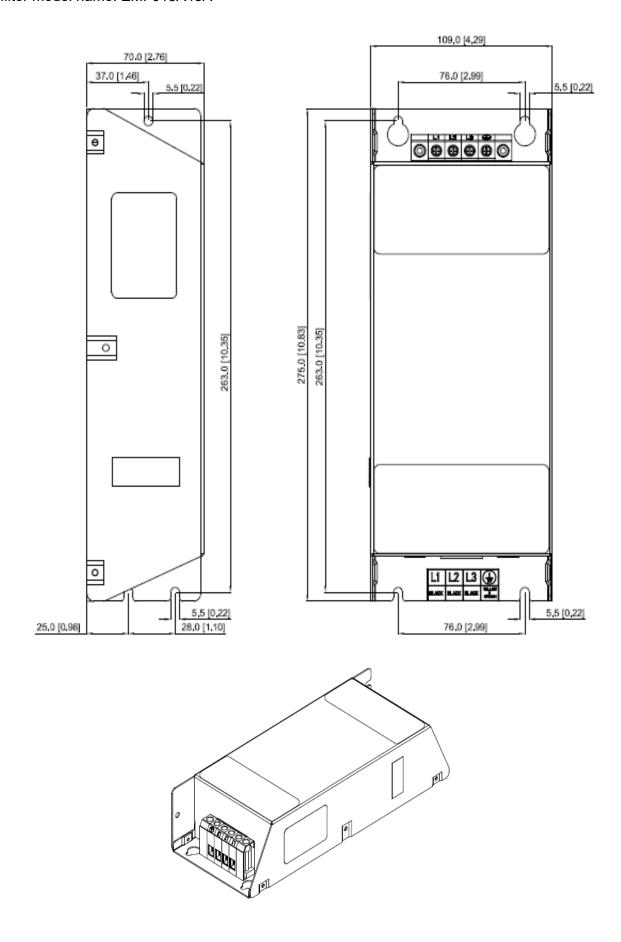
EMC filter model name: EMF021A23A, EMF014A43A






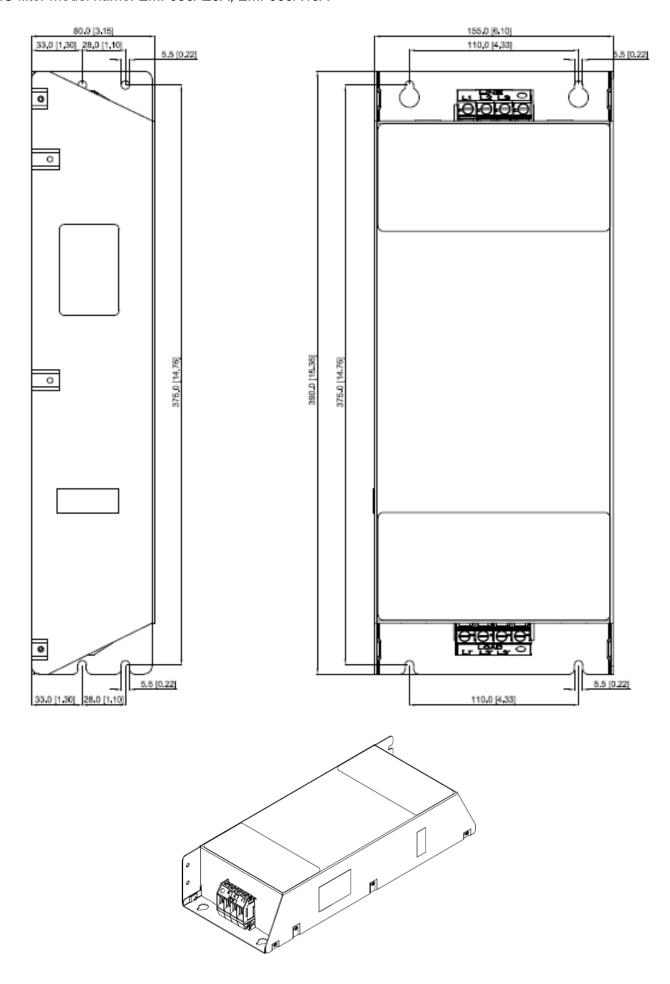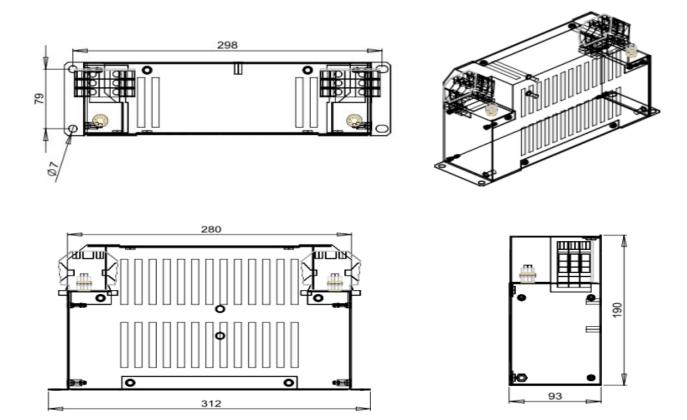
EMC filter model name: EMF056A23A, EMF039A43A







EMC filter model name: B84143D0150R127

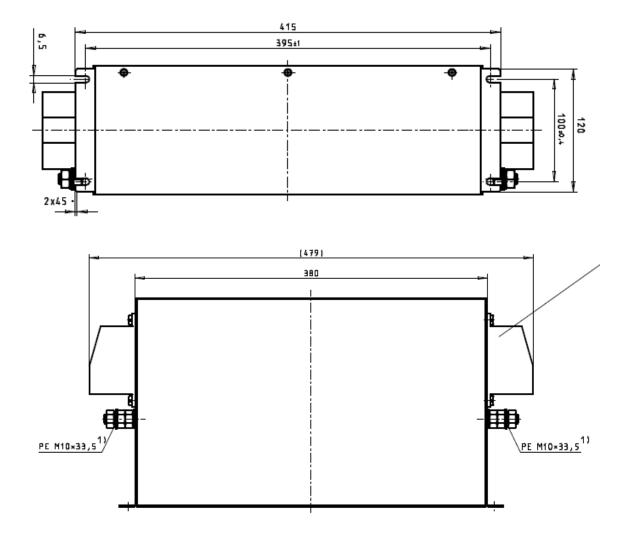


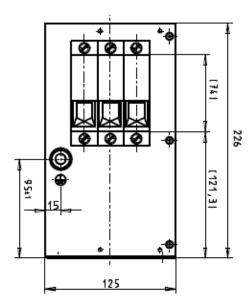


EMC filter model name: B84143D0200R127

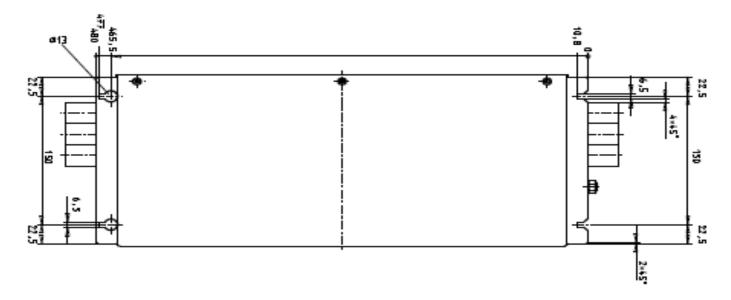

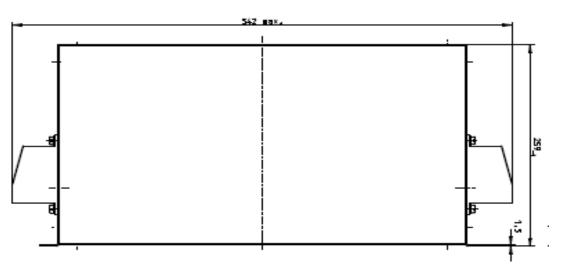


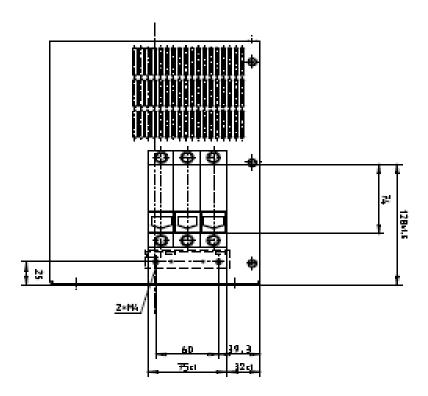


EMC filter model name: B84143B0250S020

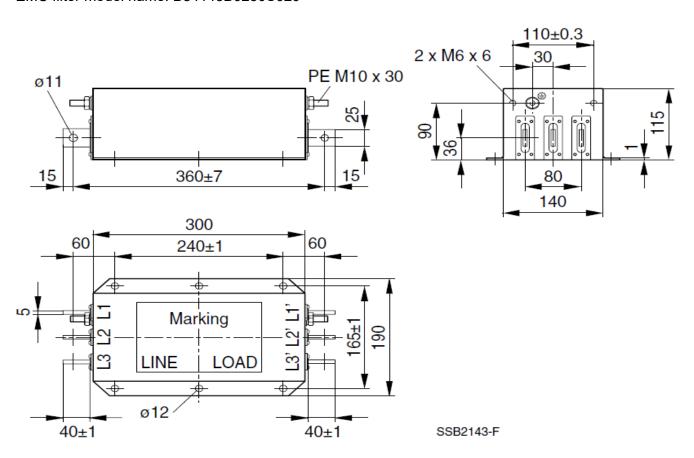


EMC filter model name: B84143B0400S020

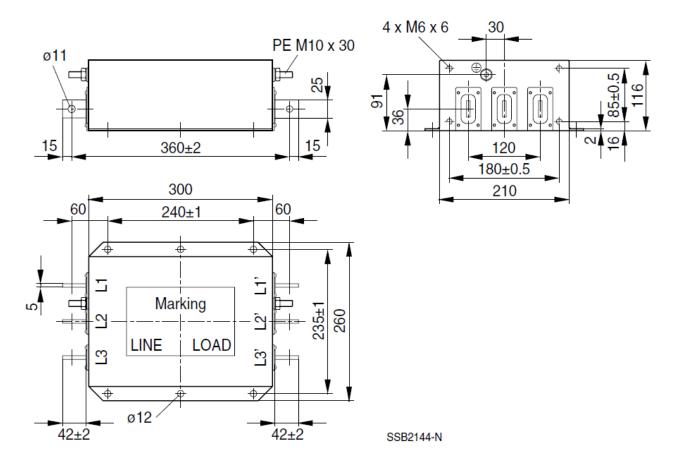


EMC filter model name: B84143B1000S020

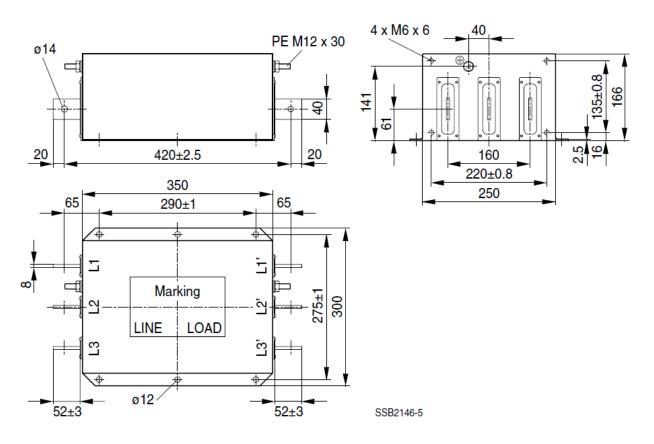

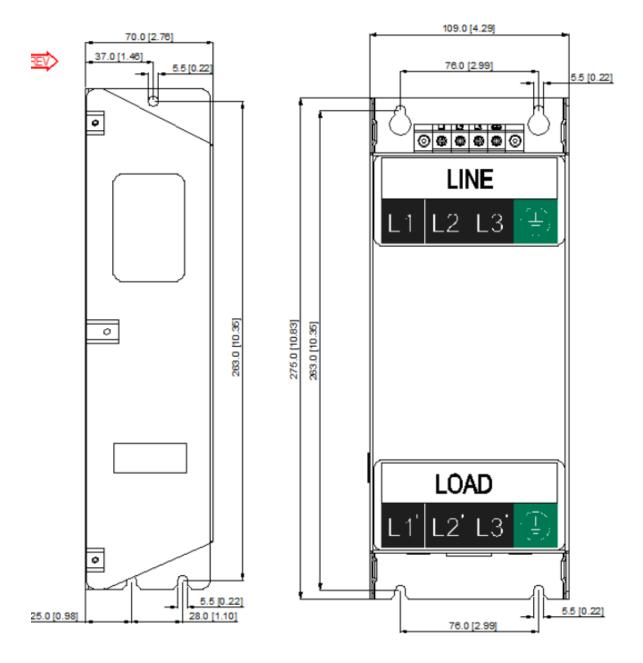


Unit: mm [inch]

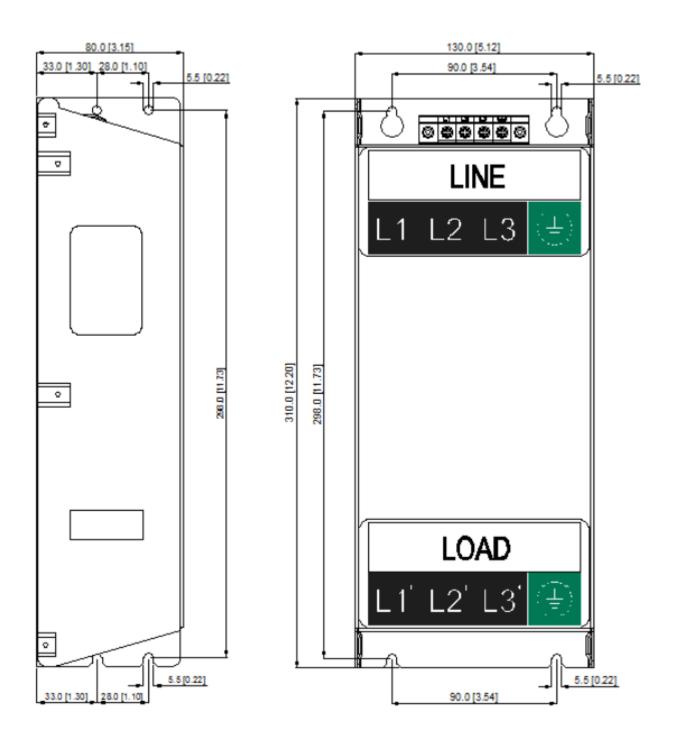EMC filter model name: EMF027A63A




Unit: mm [inch]

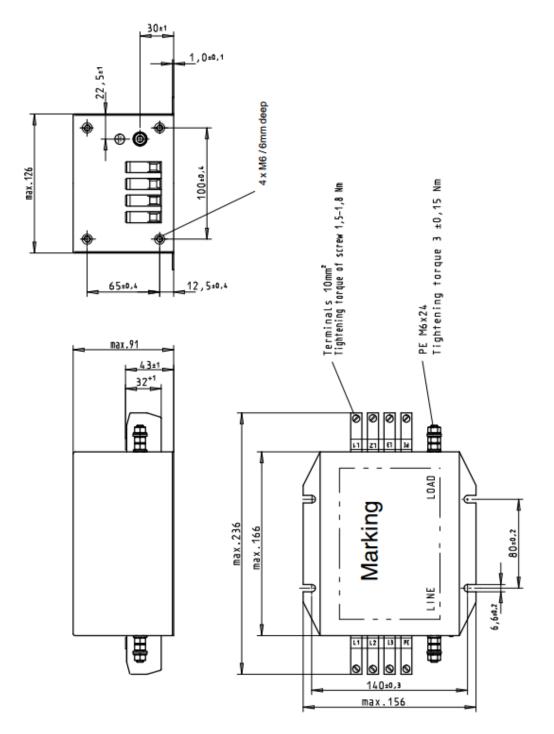EMC filter model name: B84143A0050R021




Unit: mm

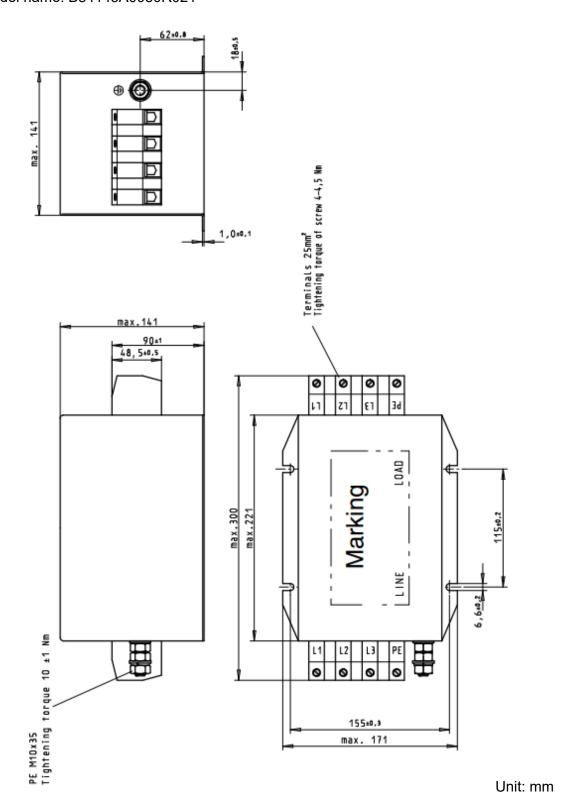
EMC filter model name: B84143A0080R021




EMC filter model name: B84143B0150S021

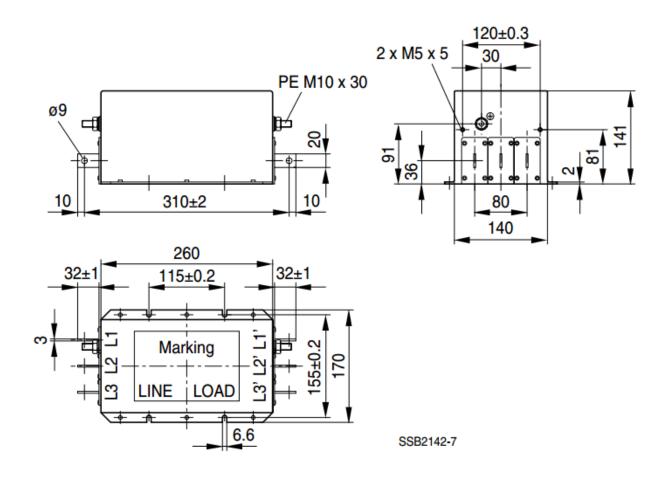


EMC filter model name: B84143B0250S021

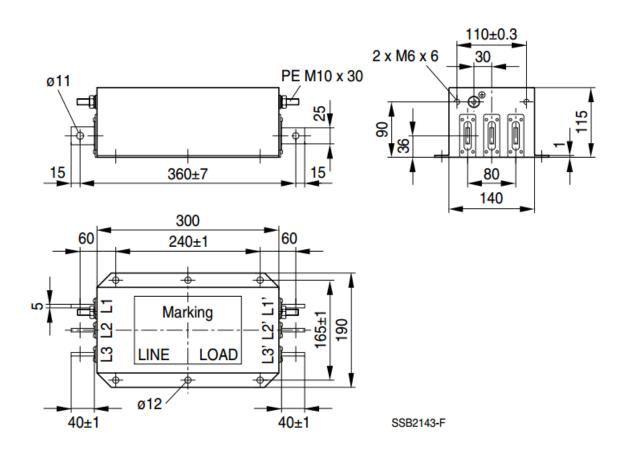

EMC filter model name: B84143B0400S021

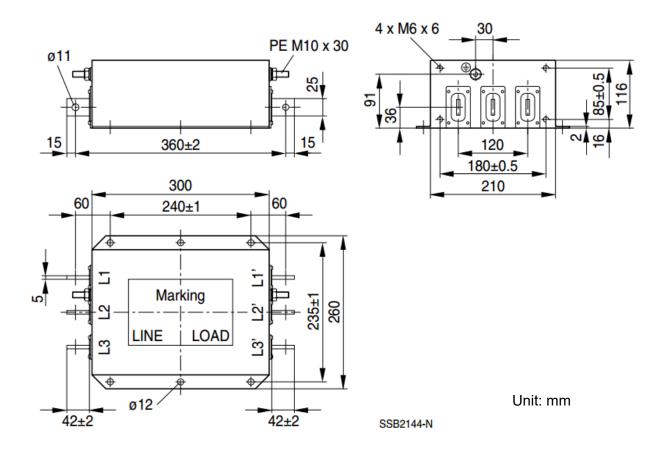

EMC filter model name: B84143B1000S021

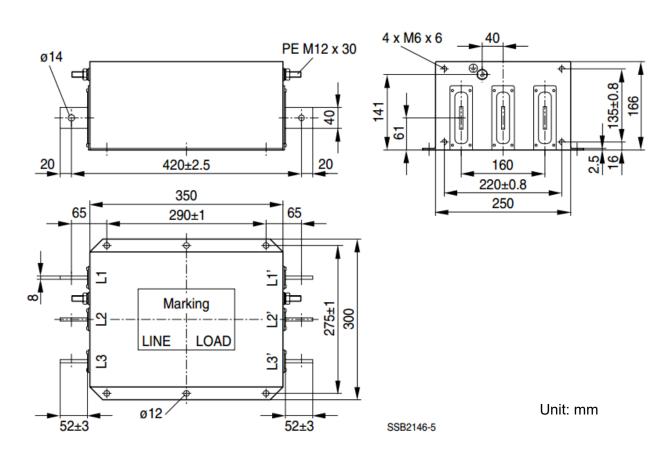

Following table is the suggested shielded cable length of EMC built-in models. User can choose corresponding shielded cable length in accord to required noise emission and electromagnetic interference level.

EMC	EMC built-in model		Comply with EMC (IEC 61800-3 Class C3		Comply with EMC (IEC 61800-3) Class C2			
Frame	Model	(ND)	Shielded cable length	Fc	Shielded cable length	Fc		
	VFD007C43E	4.3						
	VFD015C43E	5.9						
_	VFD022C43E	8.7						
Α	VFD037C43E	14						
	VFD040C43E	15.5		≤ 8kHz		≤ 8kHz		
	VFD055C43E	17	30m		10m			
	VFD075C43E	20	30111		10111			
В	VFD110C43E	26						
	VFD150C43E	35						
	VFD185C43E	40						
С	VFD220C43E	47		≤ 6kHz		≤ 6kHz		
	VFD300C43E	63						

Table 7-64

#### **EMC Filter Installation**

All electrical equipment, including AC motor drives, will generate high frequency/ low frequency noise and will interfere with peripheral equipment by radiation or conduction when in operation. By using an EMC filter with correct installation, much interference can be eliminated. It is recommended to use DELTA EMC filter to have the best interference elimination performance.

We assure that it can comply with following rules when AC motor drive and EMC filter are installed and wired according to user manual:

- 1. EN61000-6-4
- 2. EN61800-3: 1996
- 3. EN55011 (1991) Class A Group 1

## **General precaution**

To ensure EMC filter can maximize the effect of suppressing the interference of AC motor drive, the installation and wiring of AC motor drive should follow the user manual. In addition, be sure to observe the following precautions:

- 1. EMC filter and AC motor drive should be installed on the same metal plate.
- 2. Please install AC motor drive on footprint EMC filter or install EMC filter as close as possible to the AC motor drive.
- 3. Please wire as short as possible.
- 4. Metal plate should be grounded.
- 5. The cover of EMC filter and AC motor drive or grounding should be fixed on the metal plate and the contact area should be as large as possible.

<sup>\*</sup> Shielded cable length of Frame A should be no longer than 30m and Frame B, C no longer than 50m to prevent cable length from being too long, which may cause built-in EMC filter malfunction due to overheat resulting from leakage current and larger wires parasitic capacitance.

## Choose suitable motor cable and precautions

Improper installation and choice of motor cable will affect the performance of EMC filter. Be sure to observe the following precautions when selecting motor cable.

- 1. Use the cable with shielding (double shielding is the best).
- 2. The shielding on both ends of the motor cable should be grounded with the minimum length and maximum contact area.
- 3. Remove any paint on metal saddle for good ground contact with the plate and shielding.

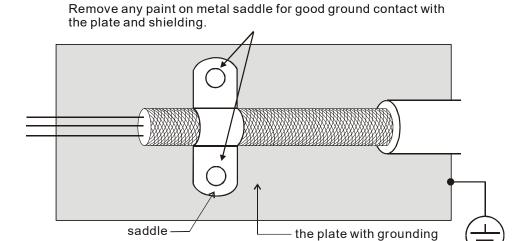


Figure 1

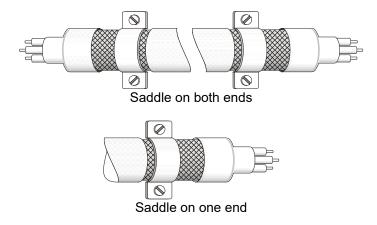



Figure 2

# **Capacitor Filter**

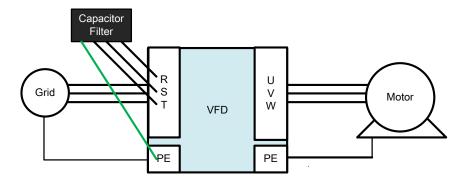Capacitor Filter is a simple filter accessory, installed to provide simple filtering and eliminating interference.

#### Installation


Installed on the input side, connect each cable on terminal R, S, T and PE. As shown in the figure below. (Please do NOT install the capacitor filter on the output side.)





## **Model / Specification**

Model	Capacitance of the capacitor	Temperature	
CXY101-43A	Cx: 1uF±20%	-40∼+85°C	
CAT 101-43A	Cy : 1uF±20%	-40*+65 C	

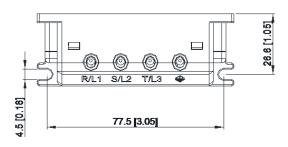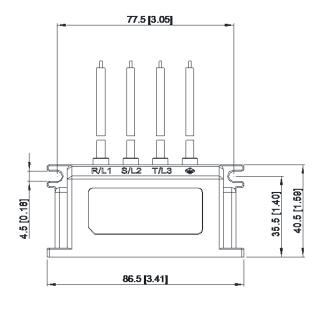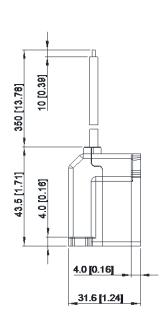Unit: mm [inch]








# 7-7 Panel Mounting (MKC-KPPK)

For MKC-KPPK model, user can choose wall mounting or embedded mounting, protection level is IP66.

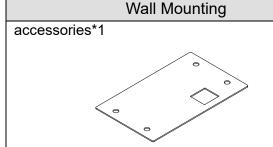Applicable to the digital keypads (KPC-CC01 & KPC-CE01)




Screw \*4 ~M4\*p 0.7 \*L8mm

Panel cutout dimension

Torque: 10~12 kg-cm / [8.7~10.4 lb-in.] / [1.0~1.2 Nm]

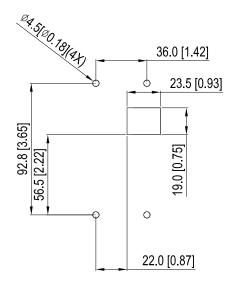Unit: mm [inch]



#### accessories\*2

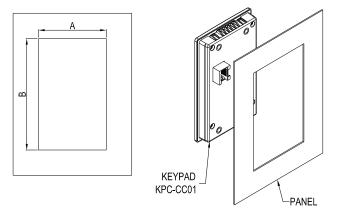


**Embedded Mounting** 

Screw \*4 ~M4\*p 0.7 \*L8mm

Torque: 10~12 kg-cm / [8.7~10.4 lb-in.] / [1.0~1.2 Nm]

# Panel cutout dimension Unit: mm [inch]



#### Normal cutout dimension

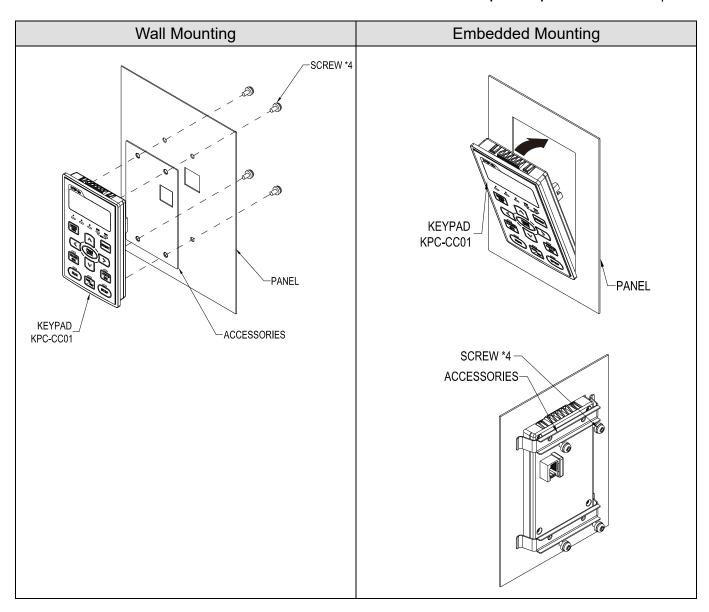
Panel thickness	1.2mm	1.6mm	2.0mm
Α		66.4 [2.614]	
В	110.2 [4.339]	111.3 [4.382]	112.5 [4.429]

\*Deviation: ±0.15mm /±0.0059inch Table 7-65

## Cutout dimension (Waterproof level: IP66)

Panel thickness	1.2mm	1.6mm	2.0mm
Α		66.4 [2.614]	
В		110.8 [4.362]	

\*Deviation: ±0.15mm / ±0.0059inch



## 7-8 Conduit Box Kit

## Appearance

Conduit box kit is optional for VFDXXXCXXA (Frame D and above) and VFDXXXC43S, the protection will be IP20/ NEMA1/ UL TYPE1 after installation.

#### Frame D0


Applicable models

VFD370C43S/43U; VFD450SC43S/43U

Model number 『MKC-D0N1CB』

ITEM	Description	Qty.
1	Screw M5*0.8*10L	4
2	Bushing Rubber 28	2
3	Bushing Rubber 44	2
4	Bushing Rubber 73	2
5	Conduit box cover	1
6	Conduit box base	1

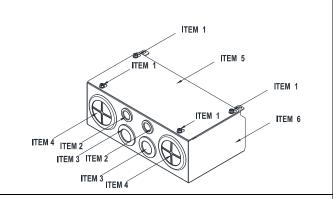Table 7-67



#### Frame D

Applicable models


VFD300C23A/23E; VFD370C23A/23E; VFD550C43A/43E; VFD750C43A/43E; VFD450C63B-00;

VFD550C63B-00; VFD450C63B-21; VFD550C63B-21

Model number MKC-DN1CB J

ITEM	Description	Qty.
1	Screw M5*0.8*10L	4
2	Bushing Rubber 28	2
3	Bushing Rubber 44	2
4	Bushing Rubber 88	2
5	Conduit box cover	1
6	Conduit box base	1

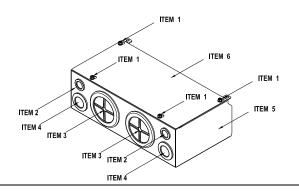**Table 7-68** 



#### Frame E

Applicable models

VFD450C23A/23E; VFD550C23A/23E; VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E;


VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00; VFD750C63B-21; VFD900C63B-21;

VFD1100C63B-21; VFD1320C63B-21

Model number MKC-EN1CB I

ITEM	Description	Qty.		
1	Screw M5*0.8*10L	6		
2	Bushing Rubber 28	2		
3	Bushing Rubber 44	4		
4	Bushing Rubber 100	2		
5	Conduit box cover	1		
6	Conduit box base	1		

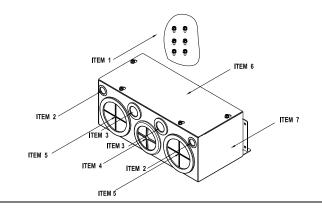Table 7-69



#### Frame F

Applicable models


VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E; VFD1600C63B-00; VFD2000C63B-00;

VFD1600C63B-21; VFD2000C63B-21

Model number 『MKC-FN1CB』

ITEM	Description	Qty.		
1	Screw M5*0.8*10L	8		
2	Bushing Rubber28	2		
3	Bushing Rubber 44	4		
4	Bushing Rubber 100	2		
5	Conduit box cover	1		
6	Conduit box base	1		

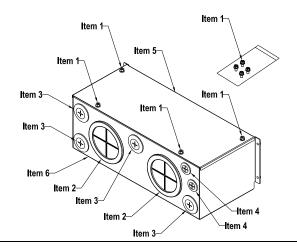Table 7-70



#### Frame G


Applicable models

VFD1850C43A/43E; VFD2200C43A/43E; VFD2500C63B-00; VFD3150C63B-00; VFD2500C63B-21; VFD3150C63B-21

#### Model number MKC-GN1CB

		_
ITEM	Description	Qty.
1	Screw M5*0.8*10L	12
2	Bushing Rubber 28	2
3	Bushing Rubber 44	2
4	Bushing Rubber 130	3
5	Conduit box cover	1
6	Conduit box base	1

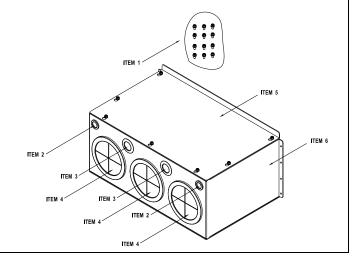Table 7-71




## Applicable models

VFD2800C43A; VFD3150C43A; VFD3550C43A; VFD4500C43A; VFD2800C43E; VFD3150C43E; VFD3550C43E; VFD4500C43E; VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1; VFD4500C43E-1

## Model number 『MKC-HN1CB』

ITEM	Description	Qty.
1	Screw M6*1.0*25L	8
2	Screw M8*1.25*30L	3
3	NUT M8	4
4	NUT M10	4
5	Bushing Rubber 28	4
6	Bushing Rubber 44	2
7	Bushing Rubber 130	4
8	Conduit box cover 1	1
9	Conduit box cover 2	2
10	Conduit box cover 3	2
11	Conduit box cover 4	2
12	Conduit box base	1
13	Accessories 1	2
14	Accessories 2	1

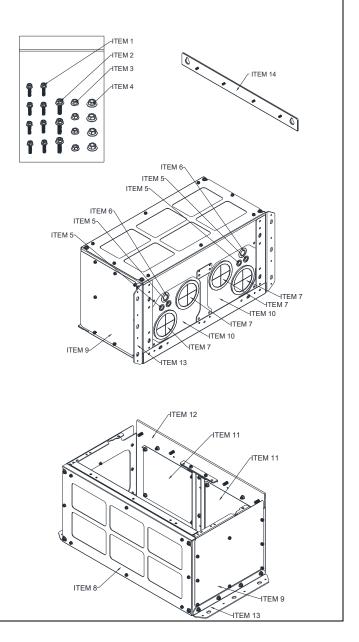Table 7-72




## ■ Conduit Box Installation


### Frame D0

1. Loosen the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure.

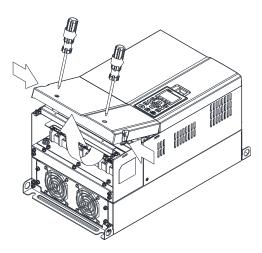
Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]



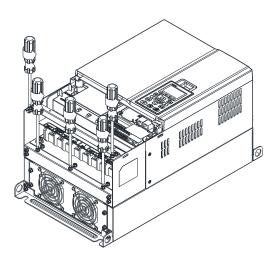
2. Remove the 5 screws shown in the following figure. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



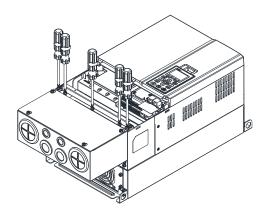3. Install the conduit box by fasten the 5 screws shown in the following figure. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



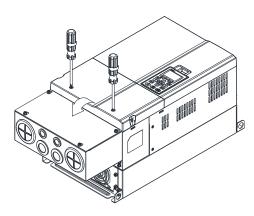
4. Fasten the 2 screws shown in the following figure. Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]




## Frame D

1. Loosen the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure.

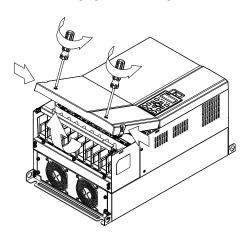
Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]



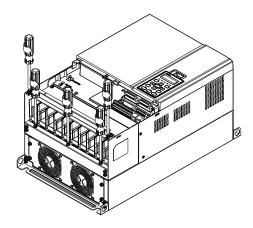
2. Remove the 5 screws shown in the following figure. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



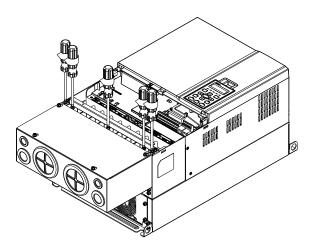3. Install the conduit box by fasten the 5 screws shown in the following figure. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]




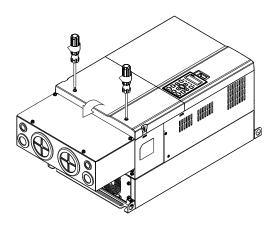4. Fasten the 2 screws shown in the following figure. Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]




## Frame E

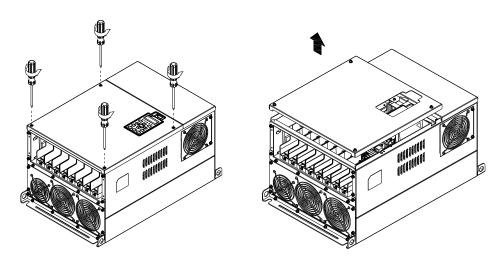
1. Loosen the 4 cover screws and lift the cover; Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]



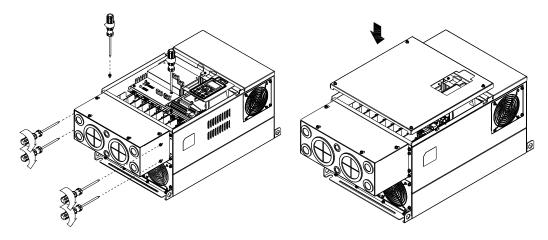2. Fasten the 6 screws shown in the following figure and place the cover back to the original position. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



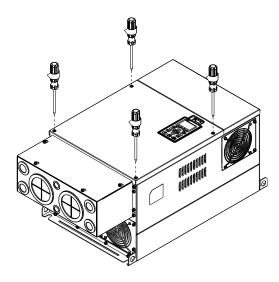
3. Fasten the 4 screws shown in the following figure. Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]




## Frame F

1. Loosen the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure.

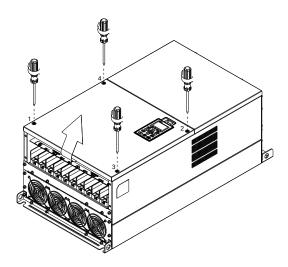
Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]



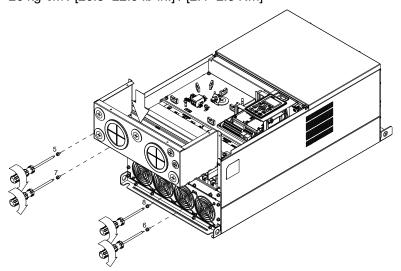2. Install the conduit box by fastens the 4 screws, as shown in the following figure. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



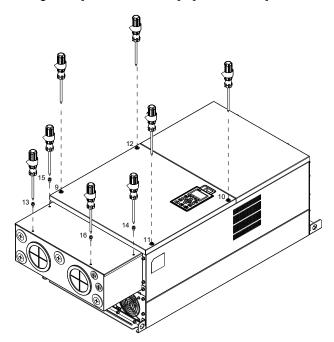3. Install the conduit box by fasten all the screws shown in the following figure Screw 9~12 torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm] Screw 13~16 torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]




## Frame G

1. On the conduit box, loosen 7 of the cover screws and remove the cover Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]


2. On the drive, loosen 4 of the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure.

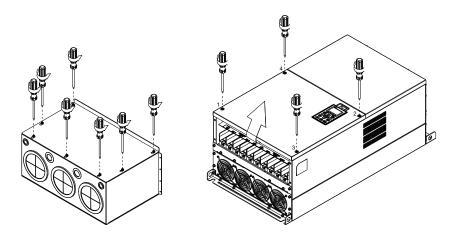Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]




3. Remove the top cover and loosen the screws.

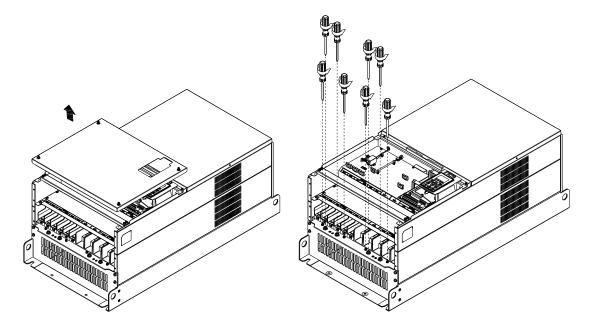
M5 Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm] M8 Screw torque: 100~120 kg-cm / [86.7~104.1 lb-in.] / [9.8~11.8 Nm]



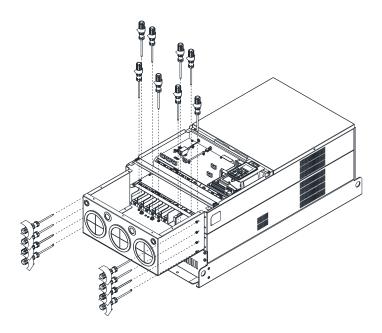
4. Install the conduit box by fastening all the screws shown in the following figure. M5 Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm] M8 Screw torque: 100~120 kg-cm / [86.7~104.1 lb-in.] / [9.8~11.8 Nm]



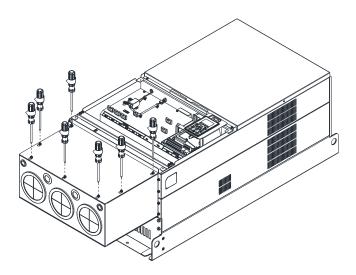5. Fasten all the screws. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]




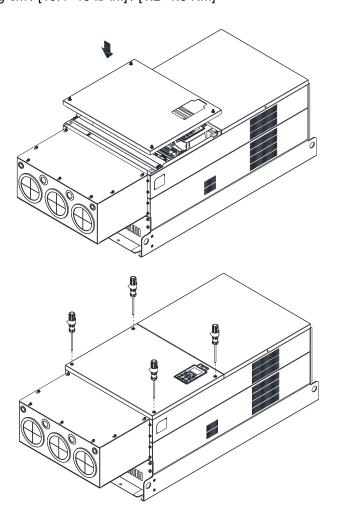6. Place the cover back to the top and fasten the screws (as shown in the figure). Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]




Assembly for Frame H3 (Conduit Box)

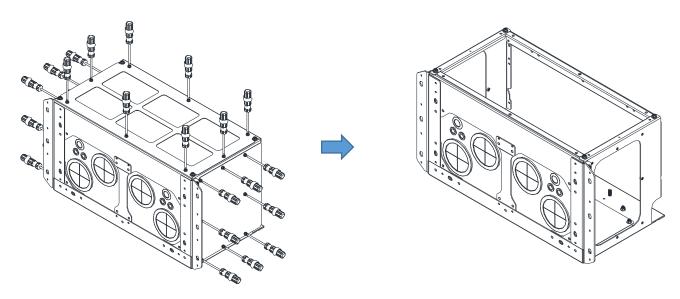
1. Loosen the 3 screws and remove the cover of conduit box H3 as preparation.



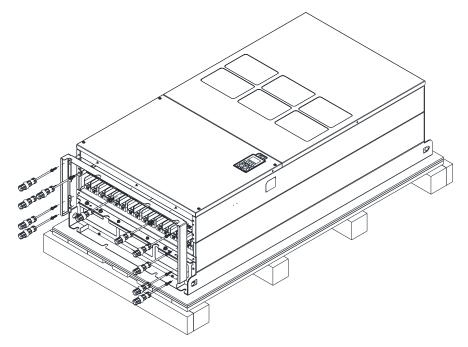
2. Loosen the screws as below figure shown.



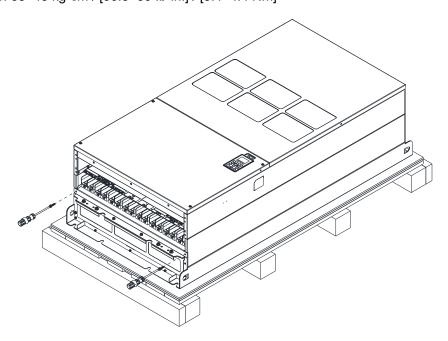
3. Fasten the M6 screws to locations shown in the following figure. Screw Torque: 35~45 kg-cm / [30.3~39 lb-in.] / [3.4~4.4 Nm]



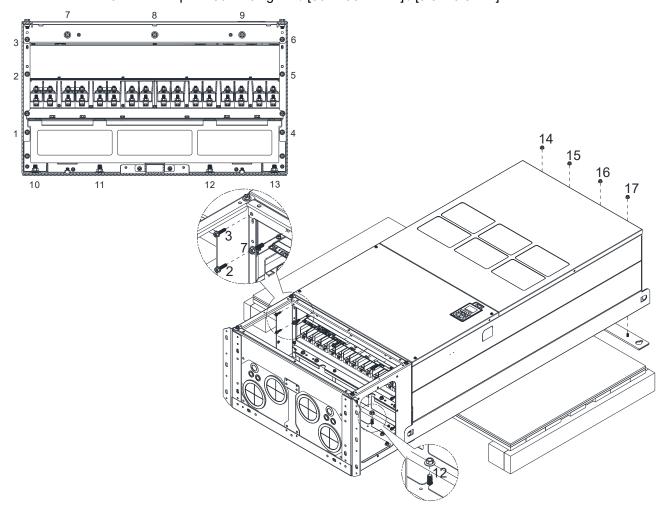
4. Install the conduit box by fasten all the screws shown in the following figure. Screw 1~6: M6 screw torque: 55~65 kg-cm / [47.7~56.4 lb-in] / [5.4~6.4 Nm] Screw 7~9: M8 screw torque: 100~110 kg-cm / [86.7~95.4 lb-in] / [9.8~10.8 Nm] Screw 10~13: M10 screw torque: 250~300 kg-cm / [216.9~260.3 lb-in] / [24.5~29.4 Nm] Screw 14~17: M8 screw torque: 100~110 kg-cm / [86.7~95.4 lb-in] / [9.8~10.8 Nm]



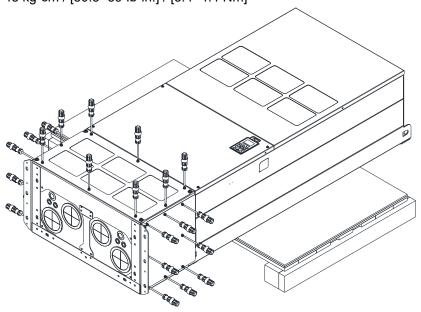5. Fasten the 3 covers and screws, which were loosen from step 1, to the original location. Screw Torque:  $35\sim45$  kg-cm /  $[30.3\sim39$  lb-in.] /  $[3.4\sim4.4$  Nm]




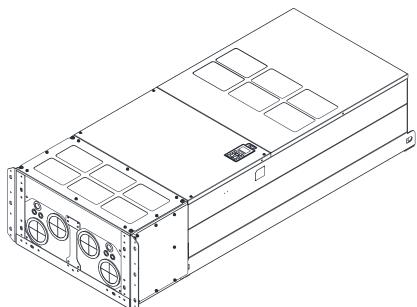6. Installation complete.




Assembly for Frame H2 (Straight Stand)

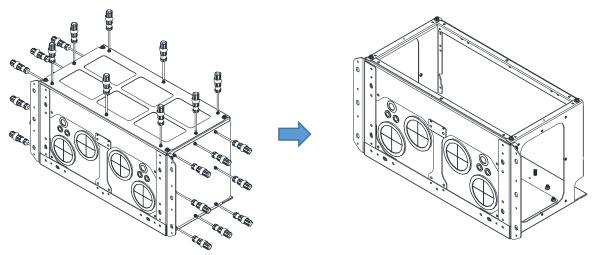
1. Loosen the 3 screws and remove the cover of conduit box.



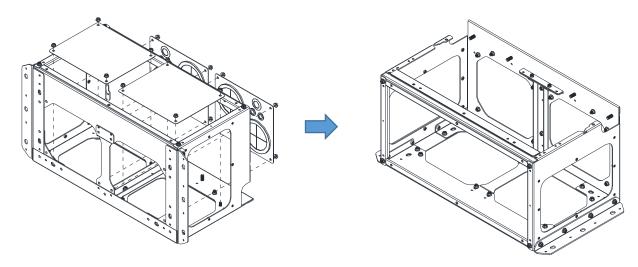2. Remove the 4 covers of conduit box, and fasten the loosen screws back to the original location. Screw Torque: 100~110 kg-cm / [86.7~95.4 lb-in] / [9.8~10.8 Nm]




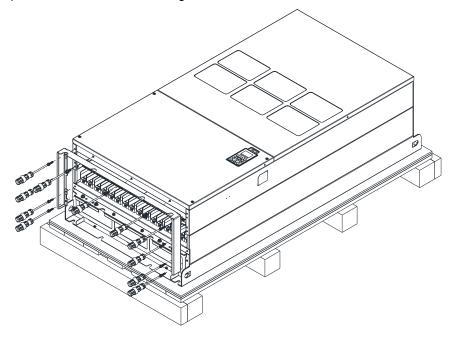3. Remove the parts and screws as below figure shown.



4. Fasten the M6 screws to locations shown in below figure.

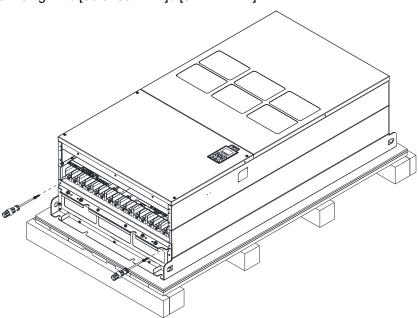Screw Torque: 35~45 kg-cm / [30.3~39 lb-in.] / [3.4~4.4 Nm]




5. Install conduit box and accessories by fasten all the screws shown in the following figure.


Screw 1~6: M6 screw torque:  $55\sim65$  kg-cm /  $[47.7\sim56.4$  lb-in] /  $[5.4\sim6.4$  Nm] Screw 7~9: M8 screw torque:  $100\sim110$  kg-cm /  $[86.7\sim95.4$  lb-in] /  $[9.8\sim10.8$  Nm]

Screw 10~13: M10 screw torque: 250~300 kg-cm / [216.9~260.3 lb-in] / [24.5~29.4 Nm]

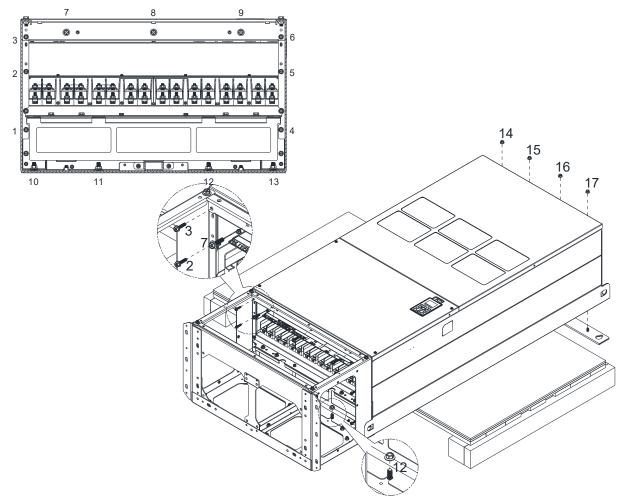Screw 14~17: M8 screw torque: 100~110 kg-cm / [86.7~95.4 lb-in] / [9.8~10.8 Nm]



# 6. Installation complete.

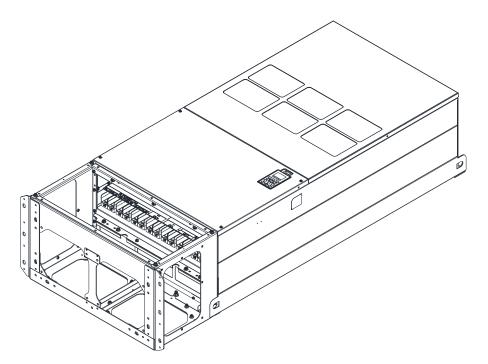

## 7-9 Fan Kit

## Frames of the fan kit

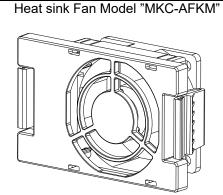
NOTE: The fan does not support hot swap function. For replacement, turn the power off before replacing the fan.

## Frame A

Applicable Model

VFD015C23A; VFD022C23A; VFD037C23A; VFD022C43A/43E; VFD037C43A/43E; VFD040C43A/43E; VFD055C43A/43E;

VFD015C53A-21; VFD022C53A-21; VFD037C53A-21




## Frame B

Applicable Model

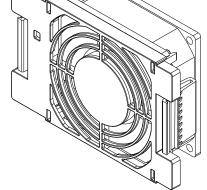VFD055C23A; VFD075C43A/43E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21






Frame B

Applicable Model

VFD075C23A; VFD110C23A; VFD110C43A/43E;

VFD150C43A/43E

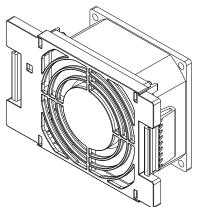Heat sink Fan Model "MKC-BFKM2"



Frame B

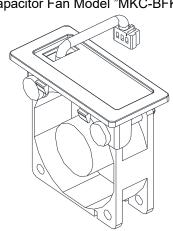
Applicable Model

VFD055C23A; VFD075C23A; VFD110C23A;

VFD075C43A/43E; VFD110C43A/43E; VFD150C43A/43E; VFD055C53A-21;

VFD075C53A-21; VFD110C53A-21; VFD150C53A-21

Capacitor Fan Model "MKC-BFKB"




Frame C

Applicable Model

VFD150C23A; VFD185C23A; VFD220C23A

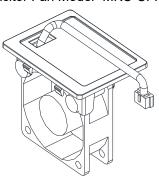Capacitor Fan Model "MKC-CFKB1"




Frame C

Applicable Model

VFD185C43A/43E; VFD220C43A/43E;

VFD300C43A/43E

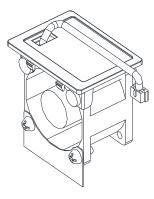Capacitor Fan Model "MKC-CFKB2"



Frame C

Following Model use one set of MKC-CFKM:

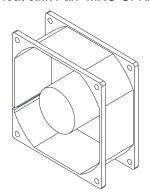
VFD185C43A/E; VFD220C43A/E; VFD300C43A

Following Model use two sets of MKC-CFKM:

VFD150C23A; VFD185C23A; VFD220C23A;

VFD300C43E

Heat sink Fan "MKC-CFKM"




Frame C

Applicable Model


VFD185C63B-21; VFD220C63B-21; VFD300C63B-21;

VFD370C63B-21

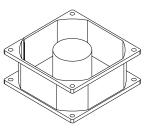Heat sink Fan 'MKC-CFKM1"



Capacitor Fan "MKC-CFKB3"

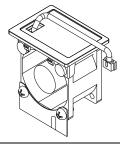


Frame D0

Applicable Model

VFD370C43S/43U; VFD450C43S/43U;

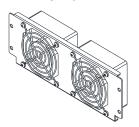Heat sink Fan Model "MKC-D0FKM"




Capacitor Fan Model "MKC-DFKB"



## Frame D

### Applicable Model

VFD300C23A/23E; VFD370C23A/23E; VFD550C43A/43E; VFD750C43A/43E; VFD450C63B-00; VFD550C63B-00; VFD450C63B-21; VFD550C63B-21





## Capacitor Fan Model "MKC-DFKB"

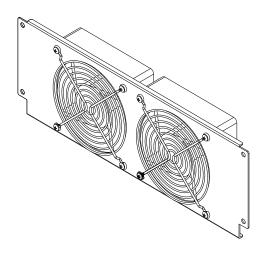


### Frame E

Applicable Model

VFD450C23A/23E; VFD550C23A/23E

Heat sink Fan Model "MKC-EFKM1"




## Frame E

Applicable Model

VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E

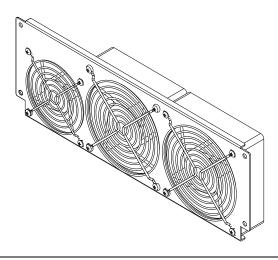Heat sink Fan Model "MKC-EFKM2"




## Frame E

## Applicable Model

VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00; VFD750C63B-21; VFD900C63B-21; VFD1100C63B-21; VFD1320C63B-21

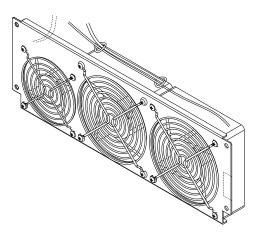Heat Sink Fan Model "MKC-EFKM3"



### Frame E

### Applicable Model

VFD450C23A/23E; VFD550C23A/23E;

VFD750C23A/23E; VFD900C43A/43E;

VFD1100C43A/43E; VFD750C63B-00;

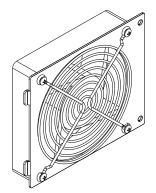
VFD750C63B-21; VFD900C63B-00;

VFD1100C63B-00; VFD1320C63B-00;

VFD900C63B-21; VFD1100C63B-21;

VFD1320C63B-21

# Capacitor Fan Model "MKC-EFKB"



### Frame F

## Applicable Model

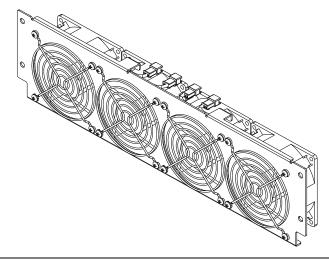
VFD900C23A/23E; VFD1320C43A/43E;

VFD1600C43A/43E; VFD1600C63B-00;

VFD2000C63B-00; VFD1600C63B-21;

VFD2000C63B-21

#### Heat sink Fan Model "MKC-FFKM"



# Frame F

#### Applicable Model

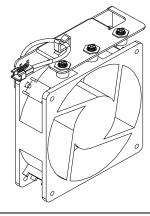
VFD900C23A/23E; VFD1320C43A/43E;

VFD1600C43A/43E; VFD1600C63B-00;

VFD2000C63B-00; VFD1600C63B-21;

VFD2000C63B-21

Capacitor Fan Model "MKC-FFKB"



## Frame G

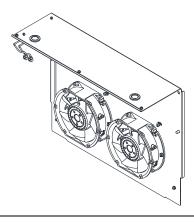
#### Applicable Model

VFD1850C43A/43E; VFD2200C43A/43E;

VFD2500C63B-00; VFD3150C63B-00;

VFD2500C63B-21; VFD3150C63B-21

Heat sink Fan Model "MKC-GFKM"



Applicable Model

Following models use 2 sets of MKC-HFKM fan kit.

VFD2800C43A/43E; VFD3150C43A/43E; VFD3550C43A/43E; VFD4500C43A/43E;

VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1;

VFD4500C43E-1

Heat sink Fan Model "MKC-HFKM"



Heat sink Fan Model "MKC-HFKM1"

Frame H

Applicable Model

Following models use two sets of MKC-HFKM1:

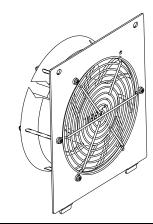
VFD4000C63B-00; VFD4000C63B-21

Following models use three sets of MKC-HFKM1:

VFD4500C63B-00; VFD4500C63B-21;

VFD5600C63B-00; VFD5600C63B-21;

VFD6300C63B-00; VFD6300C63B-21



### Fan Removal

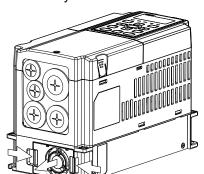
#### Frame A

Model "MKC-AFKM": Heat Sink Fan

Applicable model

VFD015C23A; VFD022C23A; VFD037C23A; VFD022C43A/43E; VFD037C43A/43E; VFD040C43A/43E; VFD055C43A/43E; VFD015C53A-21; VFD022C53A-21; VFD037C53A-21

fan to successfully remove the fan.



Refer to Figure 1, press the tabs on both side of the 2. Disconnect the power terminal before removing the fan. (As shown below.)

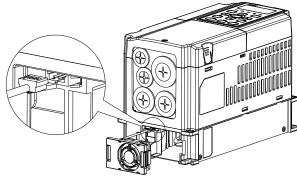


Figure 1 Figure 2


#### Frame B

## Model "MKC-BFKM1" Heat Sink Fan

Applicable model

VFD055C23A; VFD075C43A/43E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21

Refer to Figure 1, press the tab on both side of the fan to successfully remove the fan.

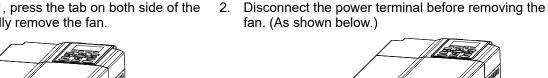

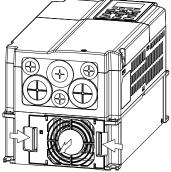


Figure 1

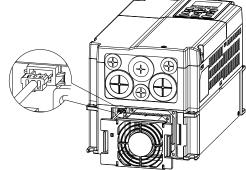


Figure 2

### Frame B

## Model "MKC-BFKM2" Heat Sink Fan

Applicable model

VFD075C23A; VFD110C23A; VFD110C43A/43E; VFD150C43A/43E

1. Refer to Figure 1, press the tab on both side of the fan 2. Disconnect the power terminal before removing the to successfully remove the fan. fan. (As shown below.)

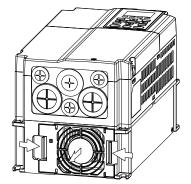


Figure 1

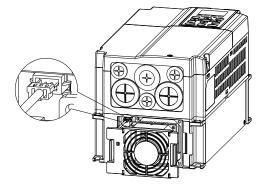


Figure 2


## Frame B

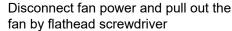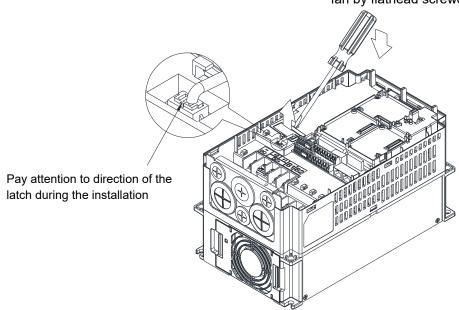
## Model "MKC-BFKB" Capacitor Fan

Applicable model

VFD055C23A; VFD075C23A; VFD110C23A; VFD075C43A/43E; VFD110C43A/43E; VFD150C43A/43E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21

Disconnect fan power and pull out the fan by using flathead screwdriver. (As shown in the larger picture)





#### Frame C

## Model "MKC-CFKM / MKC-CFKM1" Heat Sink Fan

Applicable model

Single fan kit applicable models (only fan kit 1 is required to be installed):

VFD185C43A/E; VFD220C43A/E; VFD300C43A; VFD185C63B-21; VFD220C63B-21; VFD300C63B-21; VFD370C63B-21

Duo fan kit applicable models (both fan kit 1 and 2 are required to be installed): VFD150C23A; VFD185C23A; VFD220C23A; VFD300C43E

(As shown Figure 1) Before removing the fan, remove the cover by using a slotted screwdriver.

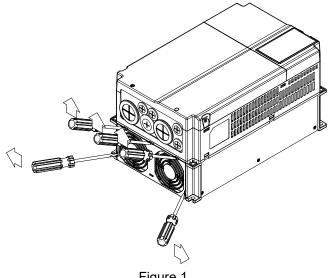


Figure 1

2. (As shown in Figure 2), remove the power connector, loosen the screw and remove the fan kit. When installing the fan kit, have the label on the fan kit facing inside of the motor drive. Screw's torque force: 10~12 kg-cm / [8.7~10.4 lb-in.] / [1.0~1.2 Nm]

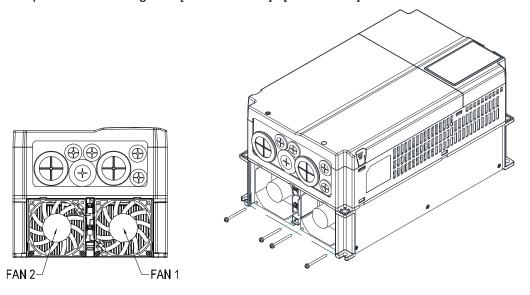


Figure 2

### Frame C

Model "MKC-CFKB1" Capacitor Fan

Applicable model

VFD150C23A; VFD185C23A; VFD220C23A

Model "MKC-CFKB2" Capacitor Fan

Applicable model

VFD185C43A/43E; VFD220C43A/43E; VFD300C43A/43E

## Model "MKC-CFKB3" Capacitor Fan

Applicable model

VFD185C63B-21; VFD220C63B-21; VFD300C63B-21; VFD370C63B-21

Disconnect fan power and pull out the fan by using flathead screwdriver. (As shown in the larger picture)

Disconnect fan power and pull out the fan by flathead screwdriver.

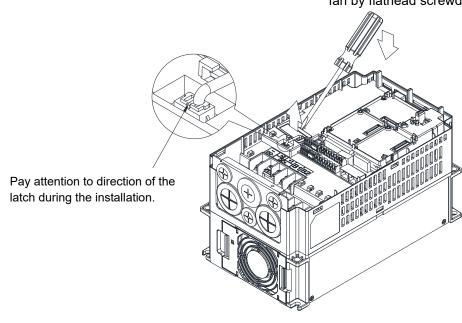


Figure 1

#### Frame D0

# Model "MKC-DFKB" Capacitor Fan

Applicable model

VFD370C43S/43U; VFD450C43S/43U

 Loosen screw 1 and screw 2, press the tab on the right and left to remove the cover, follow the direction the arrows indicate. Press on top of digital keypad to properly remove it. Screw 1, 2 Torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]


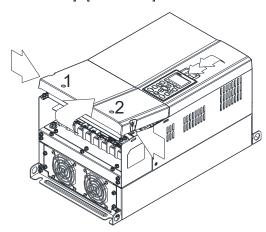


Figure 1

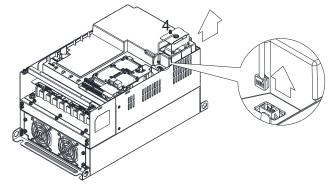3. Loosen screw 4 (figure 3) and disconnect fan power and pull out the fan. (As shown in the enlarged picture 3) Screw 4 Torque: 10~12 kg-cm / [8.7~10.4 lb-in.] / [1.0~1.2 Nm]



 (Figure 2) Loosen screw 3, press the tab on the right and the left to remove the cover. Screw 3 Torque: 6~8 kg-cm / [5.2~6.9 lb-in.] / [0.6~0.8 Nm]

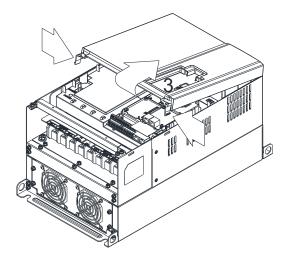


Figure 2

Figure 3

#### Frame D0

## Model "MKC-D0FKM" Heat Sink Fan

Applicable model

VFD370C43S/43U; VFD450C43S/43U

- 1. Loosen the screw and remove the fan kit. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in. / [2.4~2.5 Nm]
- 2. (As shown Figure 1) Before pulling out the fan, make sure the fan power is disconnected.

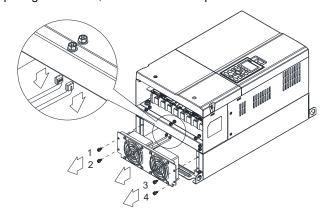


Figure 1


#### Frame D

### Model "MKC-DFKB" Capacitor Fan

Applicable model

VFD300C23A/23E; VFD370C23A/23E; VFD550C43A/43E; VFD750C43A/43E; VFD450C63B-00; VFD550C63B-00; VFD450C63B-21; VFD550C63B-21

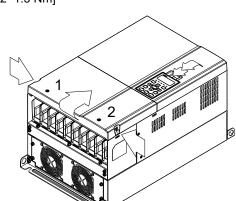 (Figure 1) Loosen screw 1 and screw 2, press the tab on the right and the left to remove the cover, follow the direction the arrows indicate in the following figure. Press on the top of digital keypad to properly remove it. Screw 1, 2 Torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]



 (Figure 2) Loosen screw 3 & 4, press the tab on the right and the left to remove the cover. Screw 3, 4 Torque: 6~8 kg-cm / [5.2~6.9 lb-in.] / [0.6~0.8 Nm]

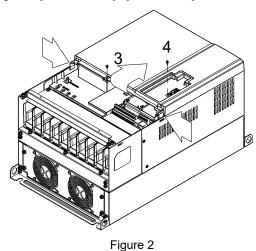


Figure 1

3. Loosen screw 5 (figure 3) and disconnect fan power and pull out the fan. (As shown in the enlarged picture 3) Screw 5 Torque: 10~12 kg-cm / [8.6~10.4 lb-in.] / [1.0~1.2 Nm]

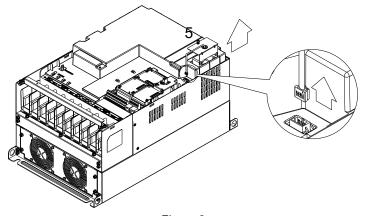


Figure 3

#### Frame D

#### Model "MKC-DFKM" Heat Sink Fan

Applicable model

VFD300C23A/23E; VFD370C23A/23E; VFD550C43A/43E; VFD750C43A/43E; VFD450C63B-00; VFD550C63B-00; VFD450C63B-21; VFD550C63B-21

- 1. Loosen the screw and remove the fan kit. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]
- 2. (As shown Figure 1) Before removing the fan, remove the cover by using a slotted screwdriver.

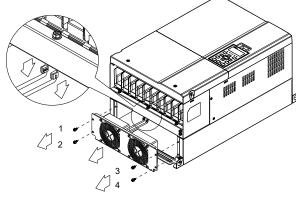


Figure 1

#### Frame E

Applicable model

Applicable for MKC-EFKM1: VFD450C23A/23E; VFD550C23A/23E

Applicable for MKC-EFKM2: VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E

Applicable for MKC-EFKM3: VFD750C63B-00; VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00; VFD750C63B-21;

VFD900C63B-21; VFD1100C63B-21; VFD1320C63B-21

Applicable for MKC-EFKB: VFD450C23A/23E; VFD550C23A/23E; VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E;

VFD750C63B-00; VFD750C63B-21; VFD900C63B-00; VFD900C63B-21; VFD1100C63B-00;

VFD1100C63B-21; VFD1320C63B-00; VFD1320C63B-21

#### Model "MKC-EFKM1" Heat Sink Fan

Loosen screw 1~4 (figure 1) and disconnect fan power and pull out the fan. (As shown in the enlarged picture 3) Screw1~4 Torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]

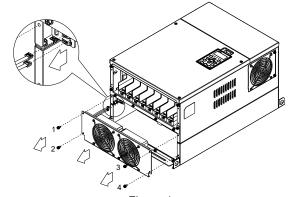


Figure 1

## Model "MKC-EFKM2" / "MKC-EFKM3" Heat Sink Fan

Loosen screw 1~4 (figure 2) and disconnect fan power and pull out the fan. (As shown in the enlarged picture 3) Screw1~4 Torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]

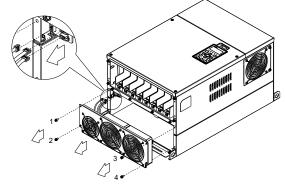


Figure 2

## Model "MKC-EFKB" Capacitor Fan

1. Loosen screw 1~2 (figure 3) and disconnect fan power and pull out the fan. (As shown in the enlarged picture 3) Screw1~2 Torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]

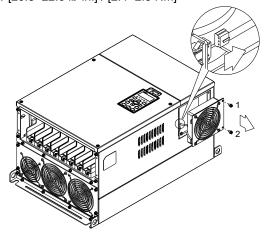


Figure 3

### Frame F

Applicable model

VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E; VFD1600C63B-00; VFD2000C63B-00; VFD1600C63B-21; VFD2000C63B-21

## Fan model "MKC-FFKM" Heat Sink Fan

Loosen the screws and plug out the power of fan before removing (figure 1). Screw torque:  $24\sim26$  kg-cm /  $[20.8\sim22.6$  lb-in.] /  $[2.4\sim2.5$  Nm]

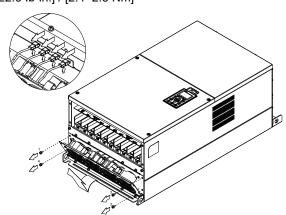


Figure 1

## Fan model "MKC-FFKB" Capacitor Fan

 Loosen the screw (figure 1) and removes the cover. Screw torque: 12~15 kg-cm / [10.4~13 lb-in.] / [1.2~1.5 Nm]

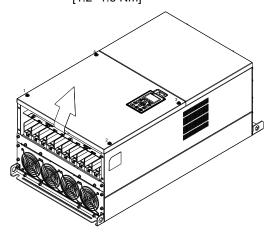


Figure 1

2. Loosen the screw (figure 2) and removes the cover. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]


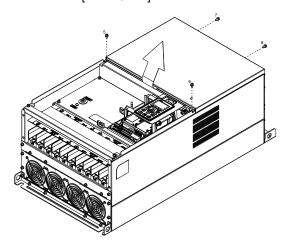


Figure 2

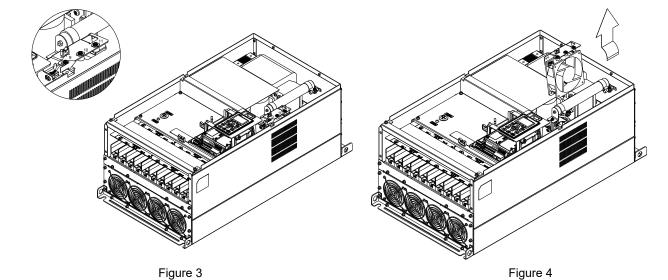3. Loosen the screws and remove the fan. (figure 3 and figure 4) Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



#### Frame G

Applicable model

VFD1850C43A/43E; VFD2200C43A/43; VFD2500C63B-00; VFD3150C63B-00; VFD2500C63B-21; VFD3150C63B-21

### Fan model "MKC-GFKM" Heat Sink Fan

 Loosen the screw (figure 1) and remove the cover. Screw torque: 12~15 kg-cm / [10.4~13.1 lb-in.] / [1.2~1.5 Nm]

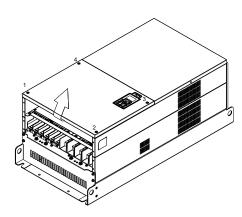


Figure 1

4. Loosen screw 1, 2, 3 and remove the protective ring (as shown in figure 3) Screw torque: 14~16 kg-cm / [12.2~13.9 lb-in.] / [1.4~1.6 Nm]


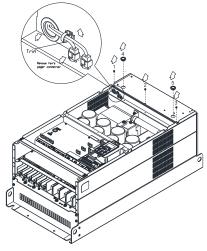


Figure 3

For old drivers switching new fans, please follow below steps:

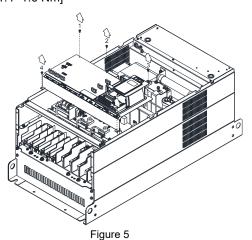Loosen screws 1~5, remove the cover (as below figure shown) M4 screw torque: 14~16 kg-cm / [12.2~13.9 lb-in] / [1.4~1.6 Nm]



2. For 1~8 shown in the figure 2: Loosen the screws Screw torque: 35~40 kg-cm / [30.4~34.7 lb-in.] / [3.4~3.9 Nm]

3. For 9~11 shown in the figure 2: Loosen the screws and removes the cover. Screw M4 torque: 14~16 kg-cm / [12.2~13.9 lb-in.] / [1.4~1.6 Nm]

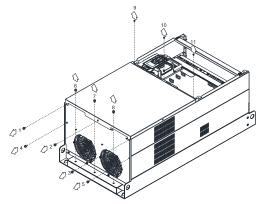


Figure 2

Lift the fan by putting your finger through the protective holes, as indicates in 1 and 2 on the figure 4.

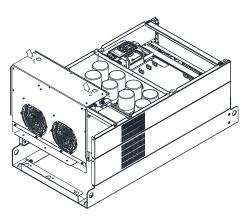


Figure 4

 Add cable model 3864483201 to connect the power board and fan connector. (The cable 3864483201 goes with the fan as accessory)

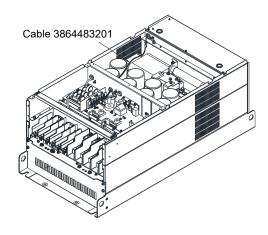



Figure 6

Applicable model

VFD2800C43A/43E; VFD3150C43A/43E; VFD3550C43A/43E; VD4500C43A/43E; VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1; VFD4500C43E-1

## Fan model "MKC-HFKM" Heat Sink Fan

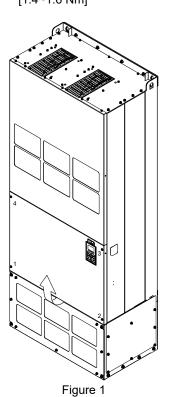 Loosen the screw 1~4 and remove the top cover (figure 1) Screw torque: 14~16 kg-cm / [12.2~13.9 lb-in.] / [1.4~1.6 Nm]



Loosen the screw 5~12 and remove the top cover (figure 2). Screw torque: 24~26kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



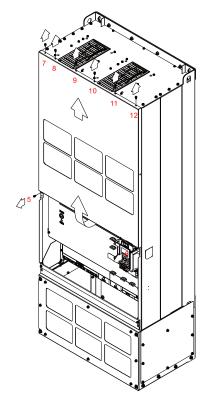


Figure 2

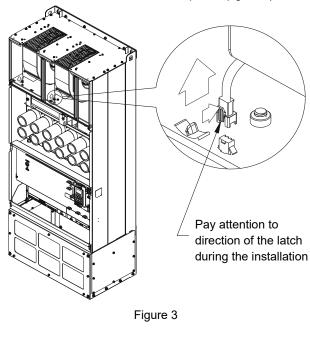3. Press the latch to disconnect fan power (figure 3).



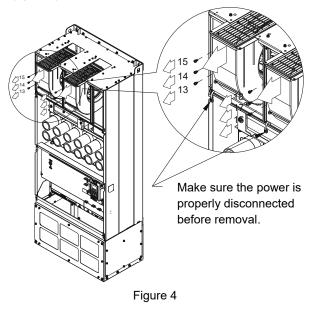Loosen the screw 13~18 and remove the fan. Screw torque: 24~26kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm] (figure 4)




Applicable model

VFD4000C63B-00; VFD4000C63B-21


#### Fan model "MKC-HFKM1" Heat Sink Fan

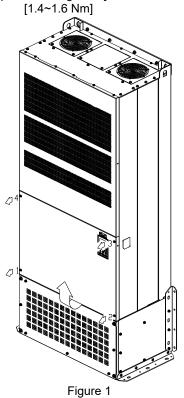Loosen the screw 1~4 and remove the top cover (figure 1) Screw torque: 14~16 kg-cm / [12.2~13.9 lb-in.] /



Screw torque: 24~26kg-cm / [20.8~22.6 lb-in.] /

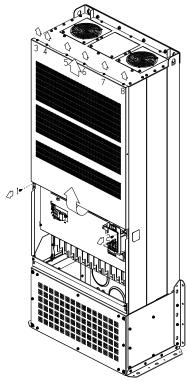
[2.4~2.5 Nm]



Loosen the screw 1~8 and remove the top cover (figure 2).

Figure 2

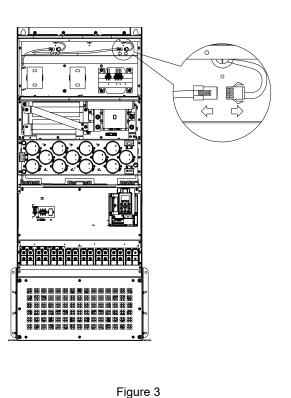Disconnect the fan connector (figure 3).



Loosen screws 1~4 (as shown below) and remove the fan. Make sure the fan is disconnected when removing. Screw torque: 24~26kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm] (figure 4)

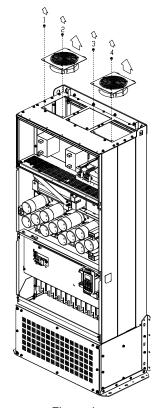



Figure 4

Applicable model

VFD4500C63B-00; VFD5600C63B-00; VFD6300C63B-00; VFD4500C63B-21; VFD5600C63B-21; VFD6300C63B-21

#### Fan model "MKC-HFKM1" Heat Sink Fan

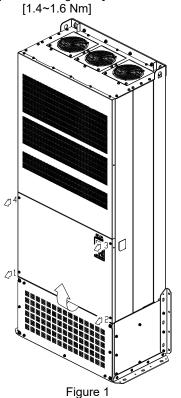1. Loosen the screw 1~4 and remove the top cover (figure 1) Screw torque: 14~16 kg-cm / [12.2~13.9 lb-in.] /



 Loosen the screw 1~8 and remove the top cover (figure 2).
 Screw torque: 24~26kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]


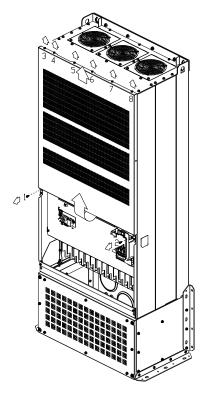


Figure 2

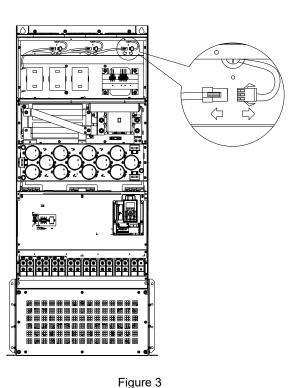3. Disconnect the fan connector (figure 3).



4. Loosen screws 1~6 (as shown below) and remove the fan. Make sure the fan is disconnected when removing. Screw torque: 24~26kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm] (figure 4)

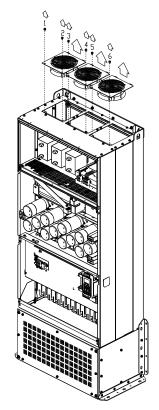


Figure 4


280.0 [11.02] 296.0 [11.65]

# 7-10 Flange Mounting Kit
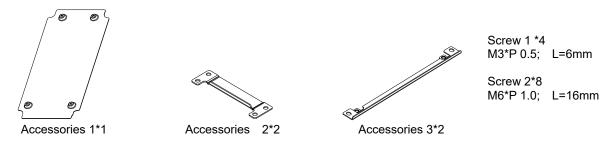
# Applicable Models, Frame A~F Frame A

### Applicable model

VFD015C23A; VFD022C23A; VFD022C43A/43E; VFD015C53A-21; VFD022C53A-21; VFD037C53A-21




<sup>『</sup>MKC-AFM』

## Applicable model

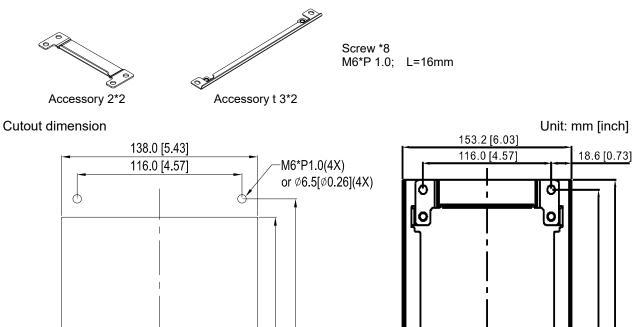VFD007C23A; VFD007C43A/43E; VFD015C43A/43E; VFD037C23A; VFD037C43A/43E; VFD040C43A/43E;

## VFD055C43A/43E



<sup>『</sup>MKC-AFM1』

# 『MKC-AFM1』 Installation

1. Install accessory 1 by fastening 4 of the screw 1 (M3) (figure 1). Screw torque: 6~8 kg-cm / [5.21~6.94 lb-in.] / [0.6~0.8 Nm]

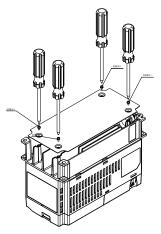


Figure 1

2. Install accessory 2&3 by fastening 2 of the screw 2 (M6) (figure 2). Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm]

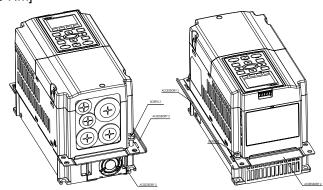


Figure 2

3. Install accessory 2 & 3 by fastening 2 of the screw 2 (M6) (figure 3). Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm]

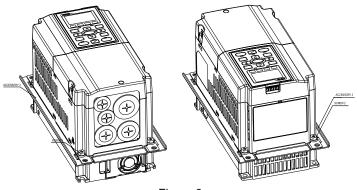


Figure 3

4. Plate installation, place 4 of the screw 2 (M6) (figure 4) through accessory 2 & 3 and the plate then fasten the screws. Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm]

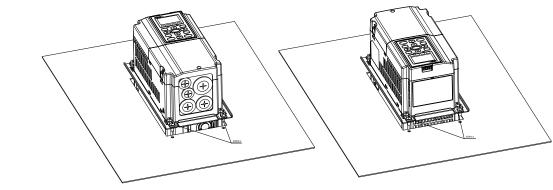


Figure 4

# 『MKC-AFM』 Installation

1. Fasten screw\*2 (M6) and accessory 2 & 3. Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm] (figure 1)

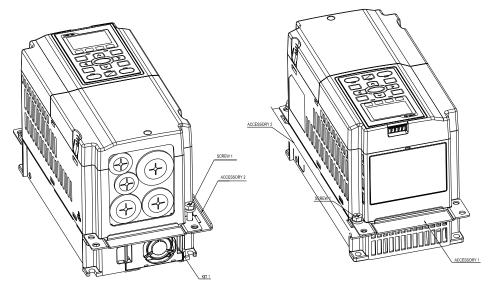


Figure 1

2. Fasten screw\*2 (M6) and accessory 2 & 3. Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm] (figure 2)


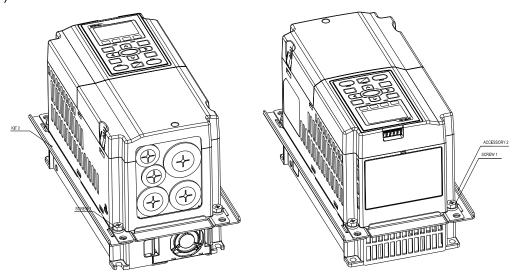


Figure 2

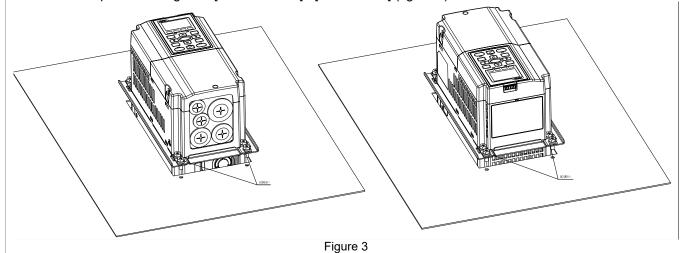3. Plate installation, place 4 of the screw \*4 (M6) through accessory 2 & 3 and the plate then fasten the screws. Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm] (figure 3)



## Frame B

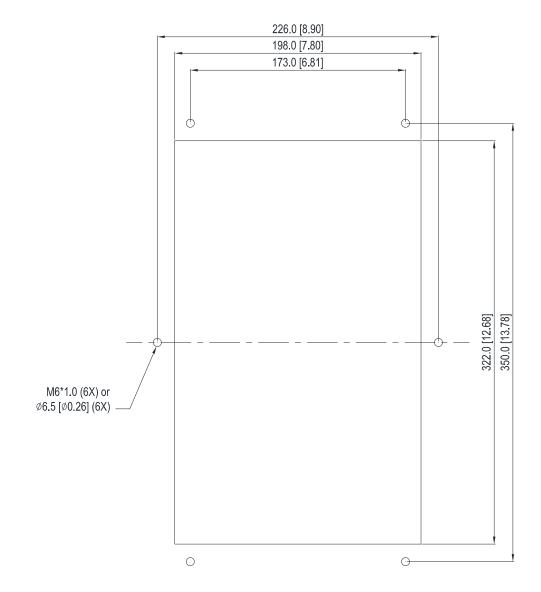
『MKC-BFM』

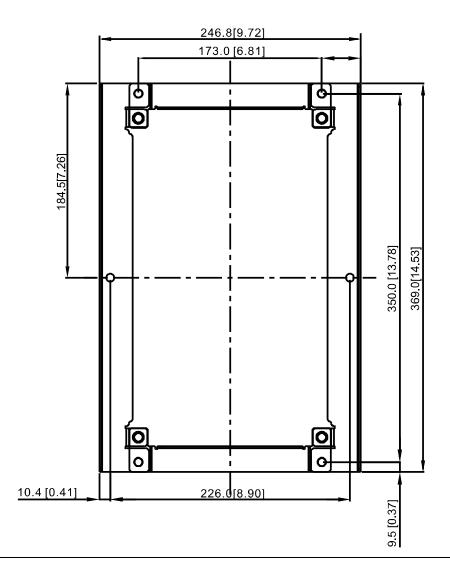
## Applicable model

VFD055C23A; VFD075C23A; VFD110C23A; VFD075C43A/43E; VFD110C43A/43E; VFD150C43A/43E; VFD055C53A-21; VFD075C53A-21; VFD110C53A-21; VFD150C53A-21




Cutout dimension Unit: mm [inch]






# 

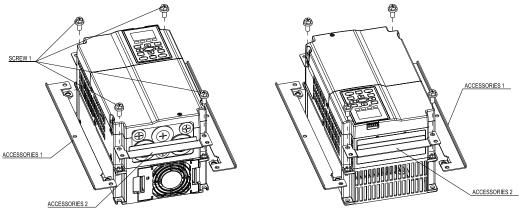Install accessory 1& 2 by fastening 4 of the screw 1 (M8). Screw torque: 40~45 kg-cm / [34.7~39.0 lb-in.] / [3.9~4.4 Nm] (As shown in the following figure)



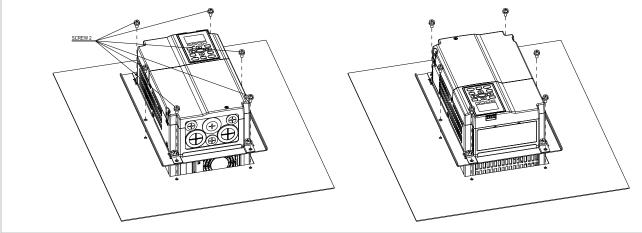2. Plate installation, place 6 of the screw 2 (M6) through accessory 1 & 2 and the plate then fasten the screws. Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm] (As shown in the following figure)




### 『MKC-CFM』


### Applicable model

VFD150C23A; VFD185C23A; VFD220C23A; VFD185C43A/43E; VFD220C43A/43E; VFD300C43A/43E; VFD185C63B-21;

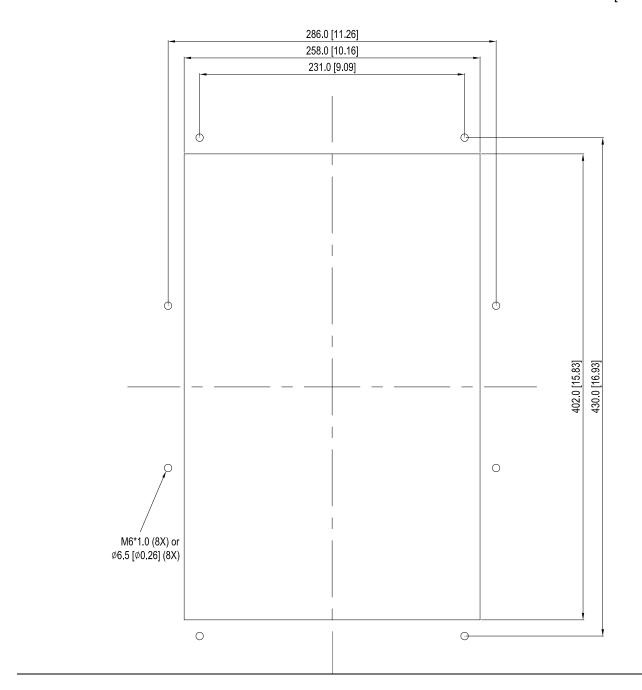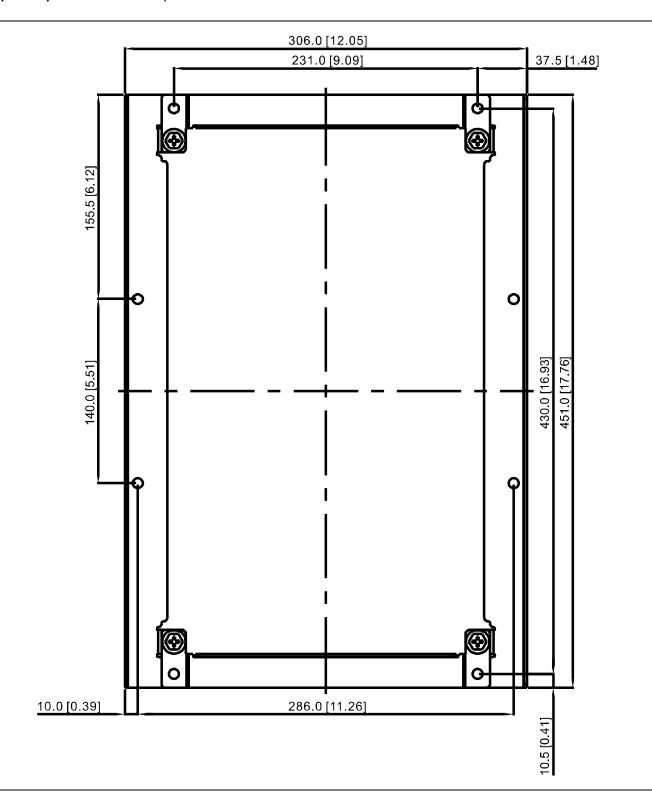VFD220C63B-21; VFD300C63B-21; VFD370C63B-21







### 

1. Install accessory 1& 2 by fastening 4 of the screw 1(M8). Screw torque: 50~55 kg-cm / [43.4~47.7 lb-in.] / [4.9~5.4 Nm] (As shown in the following figure)


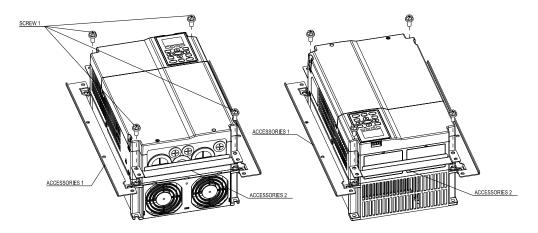



Plate installation, place 8 of the screw 2 (M6) through Accessory 1 & 2 and the plate then fasten the screws.
 Screw torque: 25~30 kg-cm / [21.7~26 lb-in.] / [2.5~2.9 Nm] (As shown in the following figure)

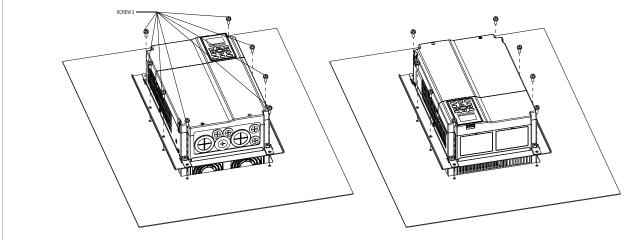

# Frame D0

Applicable model

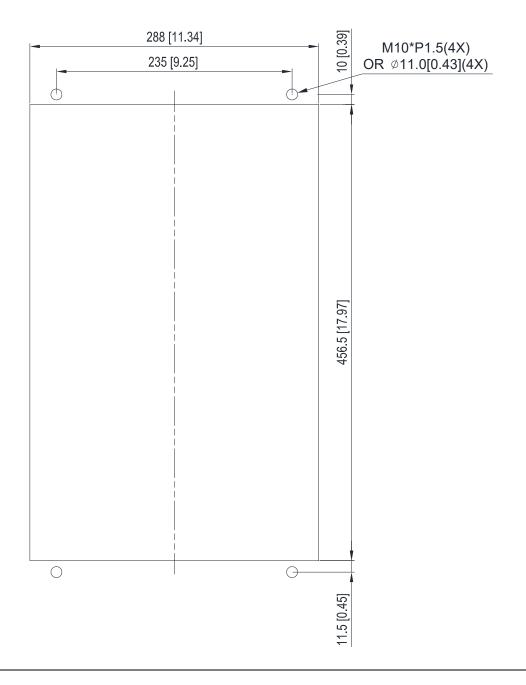VFD370C43S/U; VFD450C43S/U




# Frame D

# Applicable model

VFD300C23A/23E; VFD370C23A/23E; VFD550C43A/43E; VFD750C43A/43E; VFD450C63B-00; VFD550C63B-00; VFD550C65B-00; VFD550C65B-00; VFD550C65B-00; VFD550C65B-00; VFD550C65B-00; VFD550C65B-00; VFD550C65B-00; VFD550C65B-000; VFD550C65B-000; VFD550C65B-000; VFD550C65B-0

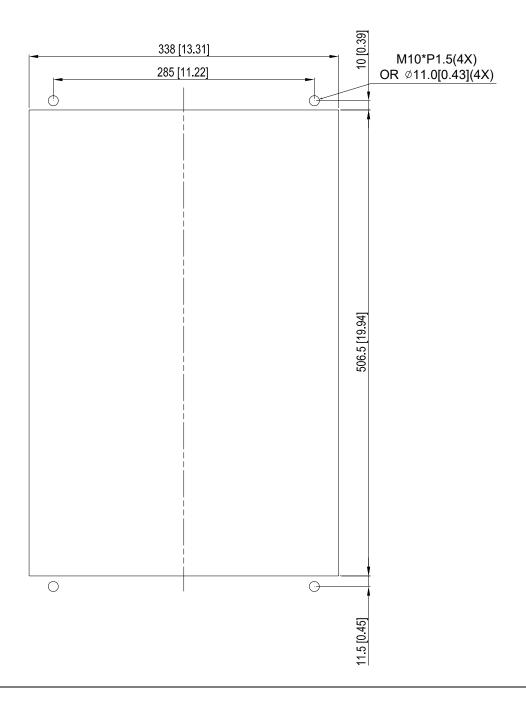VFD450C63B-21; VFD550C63B-21




### Frame E

Applicable model

 $VFD450C23A/23E;\ VFD550C23A/23E;\ VFD750C23A/23E;\ VFD900C43A/43E;\ VFD1100C43A/43E;\ VFD750C63B-00;$ 


VFD900C63B-00; VFD1100C63B-00; VFD1320C63B-00; VFD750C63B-21; VFD900C63B-21; VFD1100C63B-21;

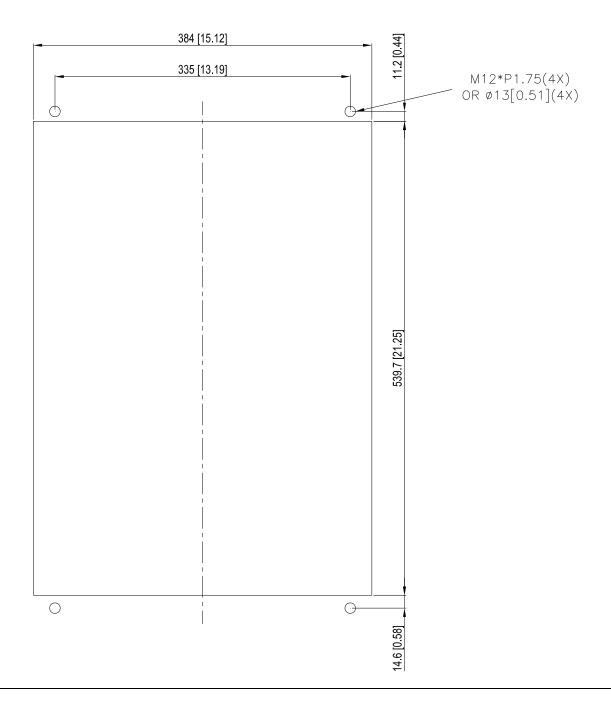VFD1320C63B-21




#### Frame D0 & D & E

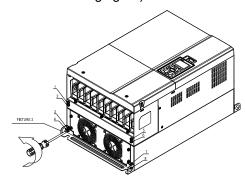
the following figure).



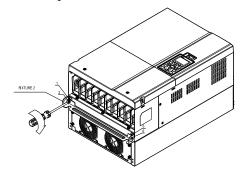
Fasten 4 screws (as shown in the following figure). 4. Screw torque: 30~32 kg-cm / [26.0~27.8 lb-in.] / [2.9~3.1 Nm].



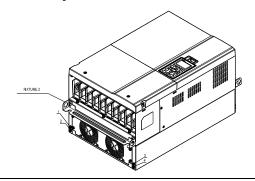
Fasten 4 screws (as shown in the following figure). 6. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



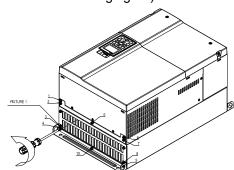
1. Loosen 8 screws and remove Fixture 2 (as shown in 2. Loosen 10 screws and remove Fixture 1 (as shown in the following figure).



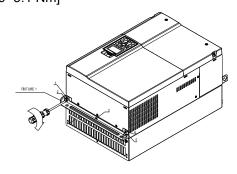Fasten 5 screws (as shown in the following figure). Screw torque: 30~32 kg-cm / [26.0~27.8 lb-in.] / [2.9~3.1 Nm]



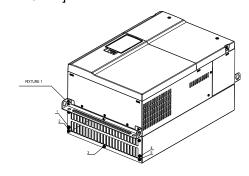Fasten 5 screws (as shown in the following figure). Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]




Place 4 screws (M10) through Fixture 1 & 2 and the plate then fasten the screws. (as shown in the following figure)

Frame D0/D M10\*4

Screw torque: 200~240 kg-cm / [173.6~208.3 lb-in.] / [19.6~235 Nm]

Frame E M12\*4

Screw torque: 300~400 kg-cm / [260~347 | Ib-in.] / [29.4~39.2 Nm]

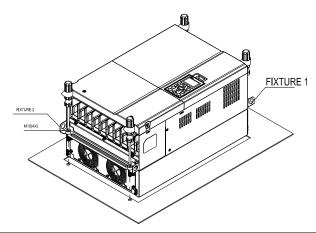


### Frame F


Applicable model


VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E; VFD1600C63B-00; VFD2000C63B-00;

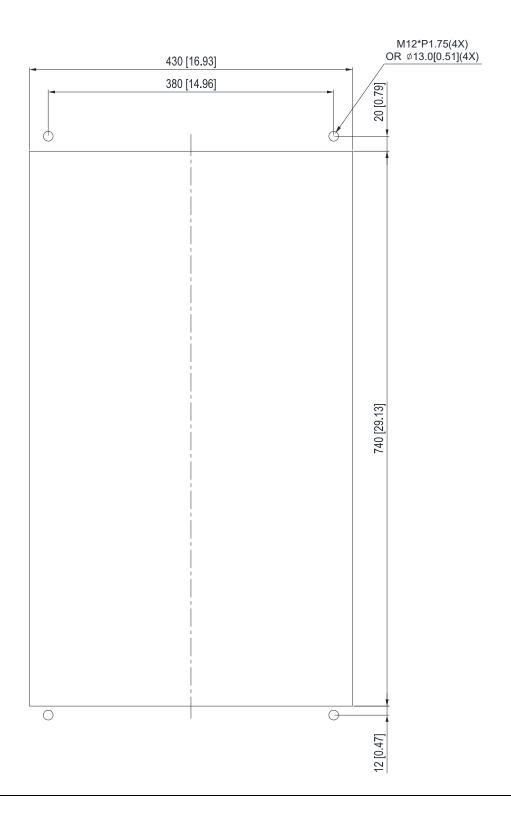VFD1600C63B-21; VFD2000C63B-21




### Frame F




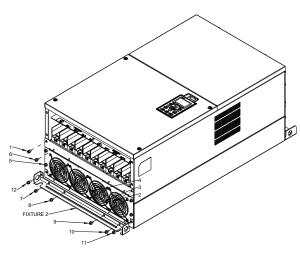

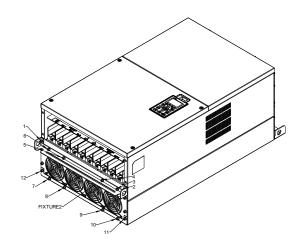
2. Loosen 12 screws and remove Fixture 2. Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



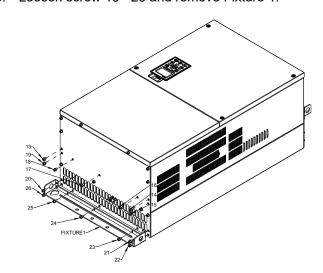3. Loosen screw 13 ~26 and remove Fixture 1.




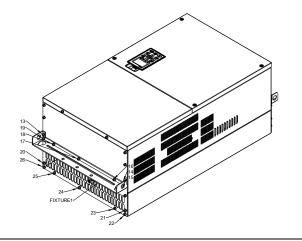Install Fixture 1 by fasten screw 13 ~26
 Screw torque: 24~26 kg-cm / [20.8~22.6 lb-in.] / [2.4~2.5 Nm]



5. Place 4 of the M12 screws through Fixture 1&2 and plate then fasten the screws.

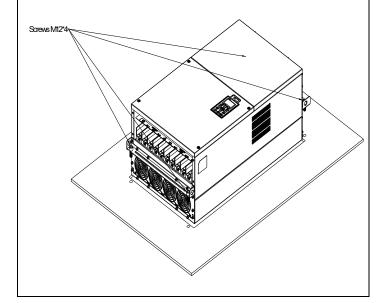Screw torque: 300~400 kg-cm / [260~347 lb-in.] / [29.4~39.2 Nm]



### 7-11 Power Terminal Kit

<sup>™</sup> MKC-PTCG 』 (Applicable for Frame G models-VFDXXXCXXA)

Applicable model

VFD1850C43A; VFD2200C43A

(The MKC-PTCG is optional for the above models, after installation, the 12 plus will be 6 plus.)

#### Accessories

Item	Description	Q'ty
1	Copper Assy.	3
1.1	Copper	3
1.2	Screw M12*25L	6
1.3	Spring	6
1.4	Washer	6
1.5	Nuts	6


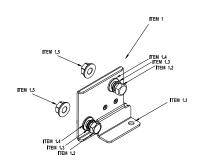


Diagram of power terminal connection M12 Torque: 408 kg-cm / [354.1 lb-in] / [39.98 Nm]

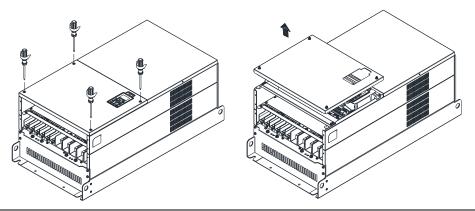


# 『MKC-PTCG』 Installation


1. Loosen the 4 screws on the cover, as shown in the following figure. Screw Torque:  $12\sim15$  kg-cm /  $[10.4\sim13$  lb-in] /  $[1.2\sim1.5$  Nm]



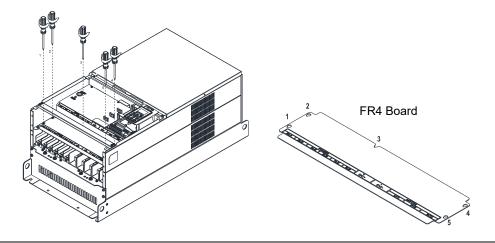2. Remove the 5 screws from the FR4 board, as shown in the following figure. (The FR4 board is not needed after the installation of the power terminal kit). Screw Torque: 12~15 kg-cm / [10.4~13 lb-in] / [1.2~1.5 Nm]




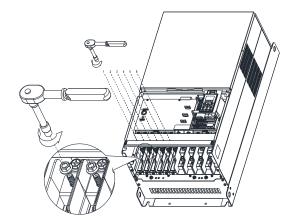3. Loosen the upper M8 nuts (1~6) with a sleeve wrench (12mm of the sleeve). M8 Torque: 90kg / [78.1 lb-in] / [8.8 Nm]



4. Install the 3pcs copper assy., as shown in the following figure 1. Fasten the upper M8 nuts (1~6) with a sleeve wrench (12mm of the sleeve), as shown in the figure 2 below.

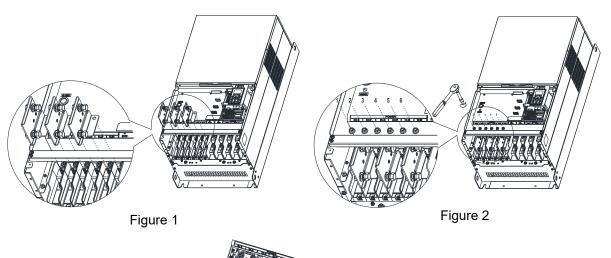
M8 Torque: 180 kg-cm / [156.2 lb-in] / [17.65 Nm]



Copper Assy. Installation complete

5. Put the cover back and fasten the screws as shown in the figure below. Screw Torque: 12~15 kg-cm / [10.4~13 lb-in] / [1.2~1.5 Nm]

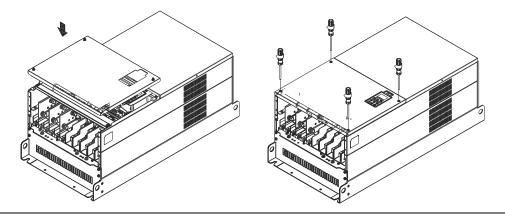Figure 3



### 7-12 USB/RS-485 Communication Interface IFD6530

# M

# Warning

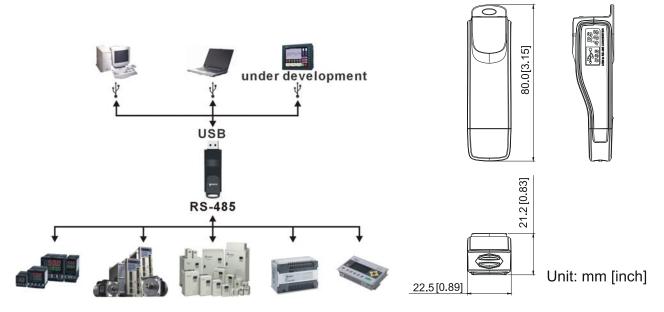
- ✓ Please thoroughly read this instruction sheet before installation and putting it into use.
- ✓ The content of this instruction sheet and the driver file may be revised without prior notice.

  Please consult our distributors or download the most updated instruction/ driver version at 
  <a href="http://www.delta.com.tw/product/em/control/cm/control\_cm\_main.asp">http://www.delta.com.tw/product/em/control/cm/control\_cm\_main.asp</a>

#### 1. Introduction

IFD6530 is a convenient RS485-to-USB converter, which does not require external power-supply and complex setting process. It supports baud rate from 75 to 115.2Kbps and auto switching direction of data transmission. In addition, it adopts RJ-45 in RS485 connector for users to wire conveniently. And its tiny dimension, handy use of plug-and-play and hot-swap provide more conveniences for connecting all DELTA IABG products to your PC. Applicable Models: All DELTA IABG products.

# (Application & Dimension)



# 2. Specifications

Power supply	No external power is needed	
Power consumption	1.5W	
Isolated voltage	2,500V <sub>DC</sub>	
Baud rate	75Kbps, 150Kbps, 300Kbps, 600Kbps, 1,200Kbps, 2,400Kbps, 4,800Kbps, 9,600Kbps, 19,200Kbps, 38,400Kbps, 57,600Kbps, 115,200Kbps	
RS-485 connector	RJ-45	
USB connector	A type (plug)	
Compatibility	Full compliance with USB V2.0 specification	
Max. cable length	RS-485 Communication Port: 100 m	
Support RS-485 half-duplex transmission		

Table 7-73

#### ■ RJ-45



PIN	Description
1	Reserved
2	Reserved
3	GND
4	SG-

PIN	Description
5	SG+
6	GND
7	Reserved
8	+9V

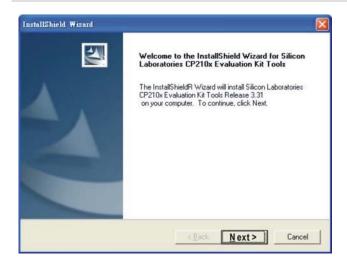
# 3. Preparations before Driver Installation

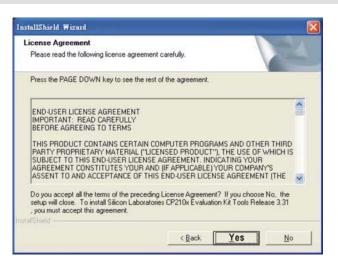
Please extract the driver file (IFD6530\_Drivers.exe) by following steps.

You could find driver file (IFD6530 Drivers.exe) in the CD supplied with IFD6530.


Note: DO NOT connect IFD6530 to PC before extracting the driver file.

#### STEP 1 STEP 2





#### STEP 3 STEP 4

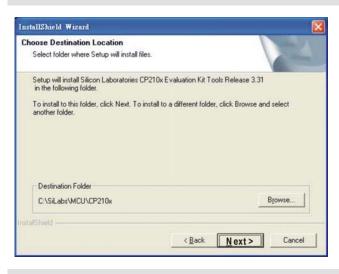



#### STEP 5

You should have a folder marked SiLabs under drive C. c:\ SiLabs

#### 4. Driver Installation

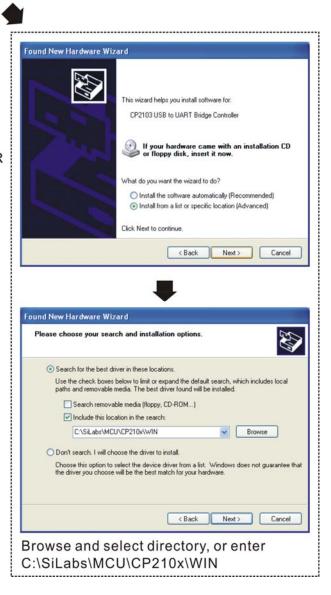
After connecting IFD6530 to PC, please install driver by following steps.

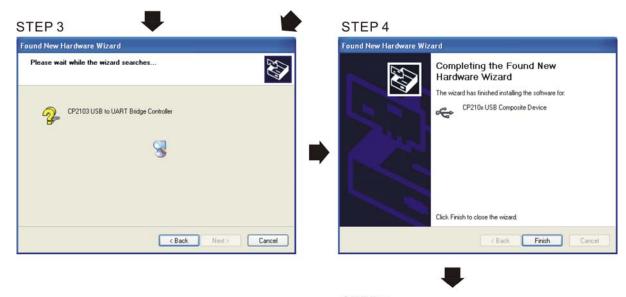
#### STEP 1











STEP 5
Repeat Step 1 to Step 4 to complete
COM PORT setting.

# 5. LED Display

- 1. Steady Green LED ON: power is ON.
- 2. Blinking orange LED: data is transmitting.

[This page intentionally left blank]

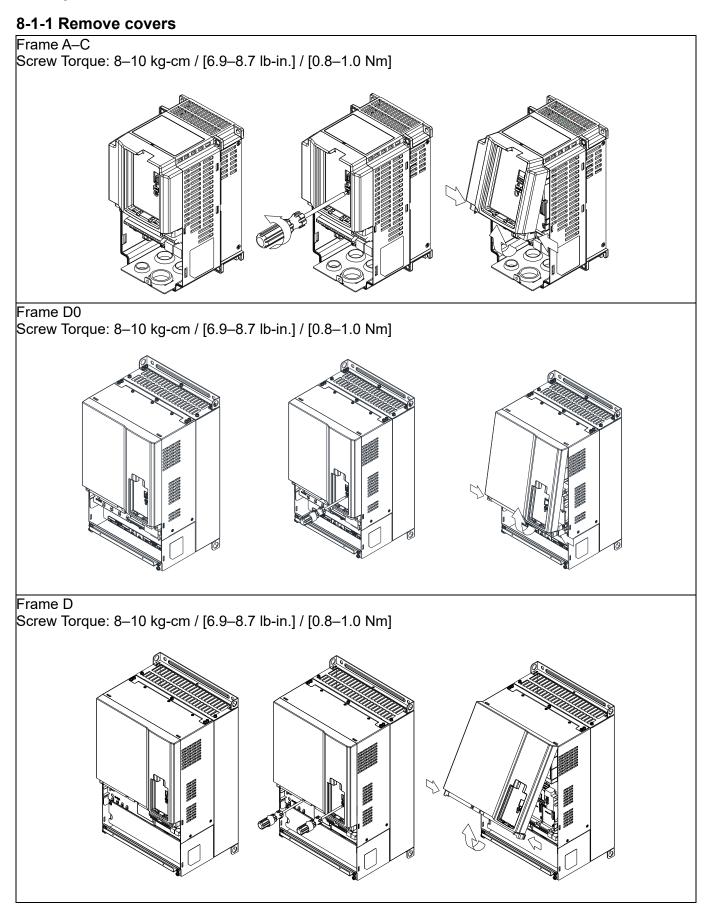
# Chapter 8 Option Cards

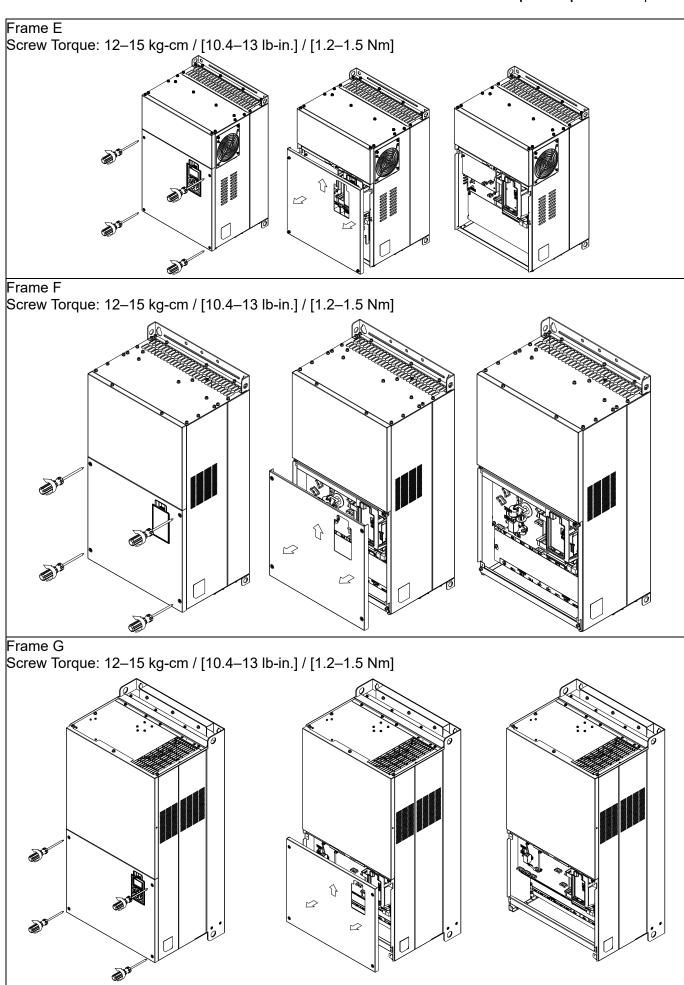
- 8-1 Option Card Installation
- 8-2 EMC-D42A -- Extension card for 4-point digital input/ 2-point digital input
- 8-3 EMC-D611A -- Extension card for 6-point digital input (110V<sub>AC</sub> input voltage)
- 8-4 EMC-R6AA -- Relay output extension card (6-point N.O. output contact)
- 8-5 EMC-A22A -- Extension card for 2-point analog input/ 2-point analog output
- 8-6 EMC-BPS01 -- +24V power card
- 8-7 EMC-PG01L / EMC-PG02L -- PG card (Line driver)
- 8-8 EMC-PG010 / EMC-PG020 -- PG card (Open collector)
- 8-9 EMC-PG01U / EMC-PG02U -- PG card (ABZ Incremental encoder signal/ UVW Hall position signal input)
- 8-10 EMC-PG01R -- PG card (Resolver)
- 8-11 CMC-MOD01 -- Communication card, Modbus TCP
- 8-12 CMC-PD01 -- Communication card, PROFIBUS DP
- 8-13 CMC-DN01 -- Communication card, DeviceNet
- 8-14 CMC-EIP01 -- Communication card, EtherNet/IP
- 8-15 CMC-EC01 -- Communication card, EtherCAT
- 8-16 CMC-PN01 -- Communication card, PROFINET
- 8-17 EMC-COP01 -- Communication card, CANopen
- 8-18 Delta Standard Fieldbus Cables

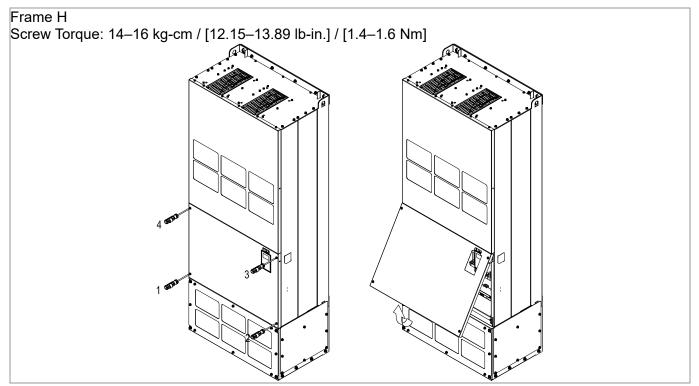
Please select applicable option cards for your drive or contact local distributor for suggestion.

To prevent drive damage during installation, please remove the digital keypad and the cover before wiring. Refer to the following instruction.


# **8-1 Option Card Installation**







## 8-1-2 Option Card Installation Location

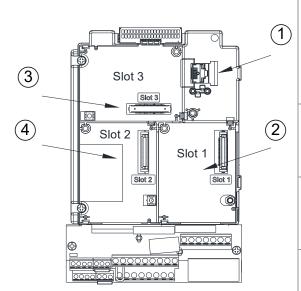

- 1 RJ45 (Socket) for digital keypad KPC-CC01
  Please refer to CH10 Digital Keypad for more details on KPC-CC01.
  - Please refer to CH10 Digital Keypad for more details on optional accessory RJ45 extension cable.
- 2 Communication extension card (Slot 1) CMC-MOD01; CMC-PD01; CMC-DN01; CMC-EIP01; EMC-COP01; CMC-EC01; CMC-PN01
- 3 I/O & Relay extension card (Slot 3)
  EMC-D42A; EMC-D611A; EMC-R6AA;
  EMC-BPS01; EMC-A22A
- 4 PG Card (Slot 2)


EMC-PG01L; EMC-PG02L; EMC-PG01O; EMC-PG02O;

EMC-PG01U; EMC-PG02U; EMC-PG01R;


# Screws Specification for option card terminals:

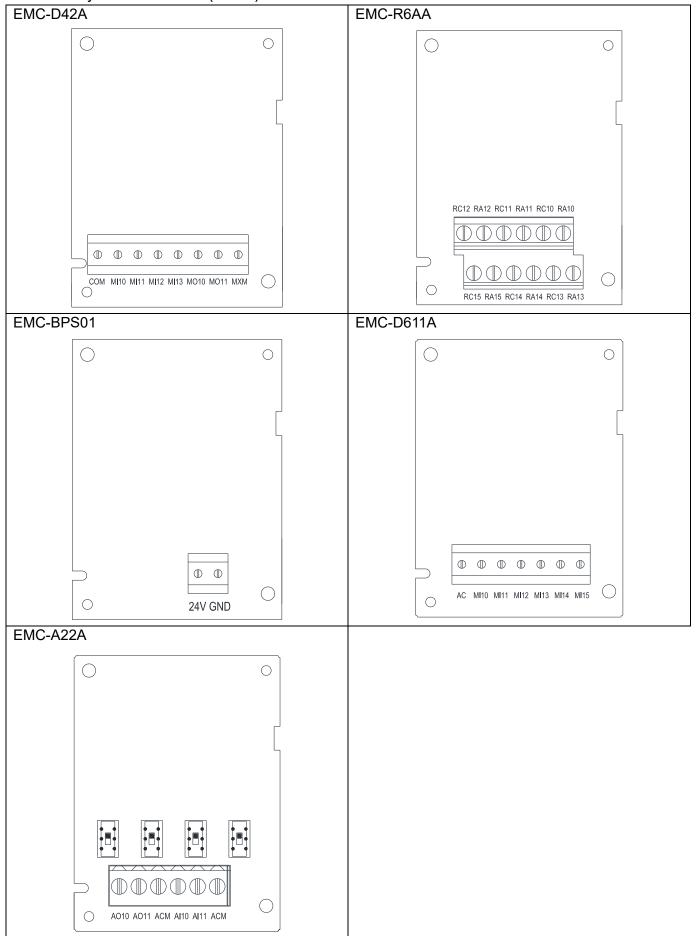EMC-D42A; EMC-D611A;	Wire gauge	0.2–0.5 mm <sup>2</sup> [26–20 AWG]
EMC-BPS01	Torque	5 kg-cm / [4.4 lb-in] / [0.5 Nm]
EMC DGAA	Wire gauge	0.2–0.5 mm <sup>2</sup> [26–20 AWG]
EMC-R6AA	Torque	8 kg-cm / [7 lb-in] / [0.8 Nm]
EMC-PG01L; EMC-PG01O	Wire gauge	0.2–0.5 mm <sup>2</sup> [26–20 AWG]
EMC-PG01R; EMC-PG01U	Torque	2 kg-cm / [1.73 lb-in] / [0.2 Nm]


# I/O & Relay extension card (Slot 3)



# PG card (Slot 2)

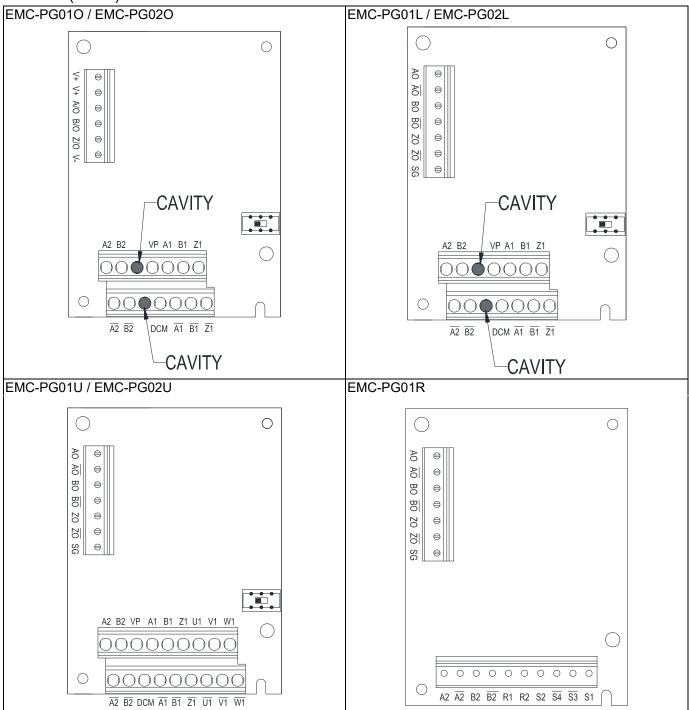


# Communication extension card (Slot 1)

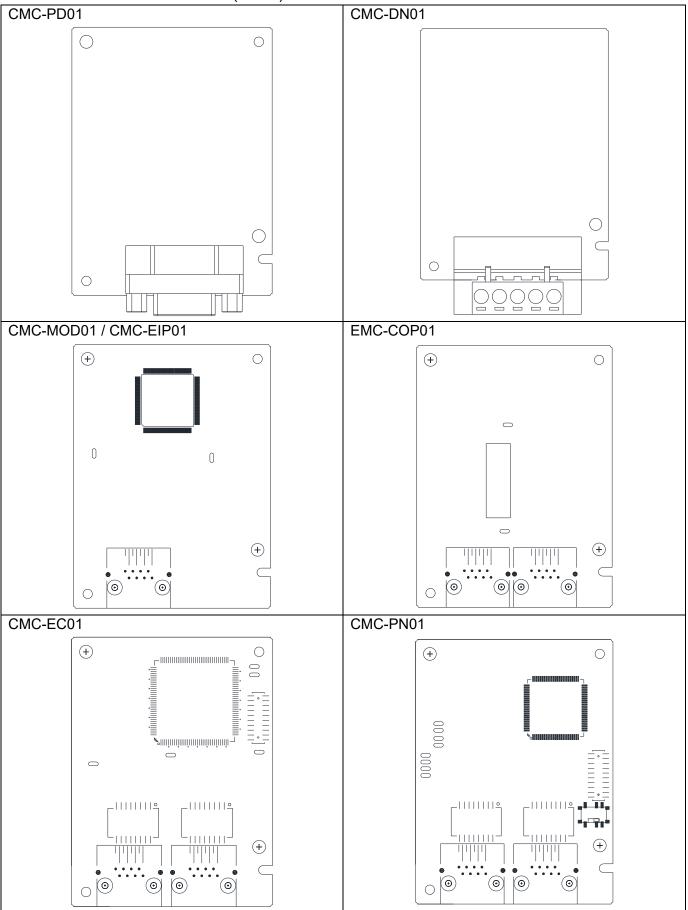


### 8-1-3 Installation and Disconnection of Extension Card


#### 8-1-3-1 Installation

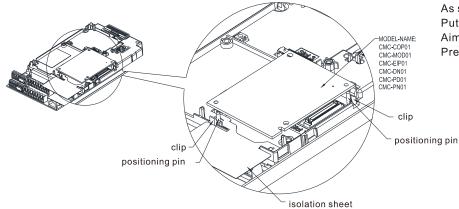
Communication card: EMC-COP01, CMC-MOD01, CMC-EIP01, CMC-DN01, CMC-PD01, CMC-PD01, CMC-PN01



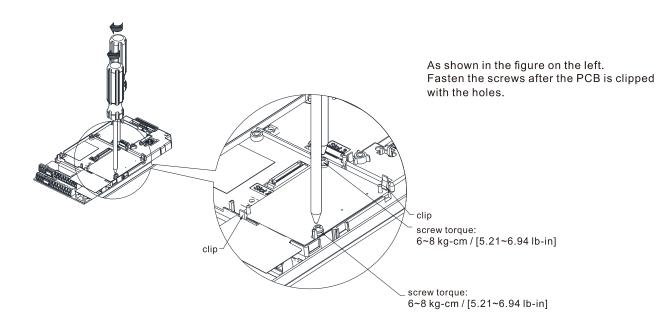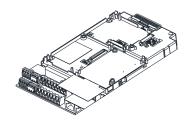As shown in the figure on the left.
Put the isolation sheet into the positioning pin.
Aim the two holes at the positioning pin.
Press the pin to clip the holes with the PCB.










As shown in the figure on the left, installation is completed.

# I/O & Relay Card: EMC-D42A, EMC-D611A, EMC-R6AA, EMC-BPS01, EMC-A22A

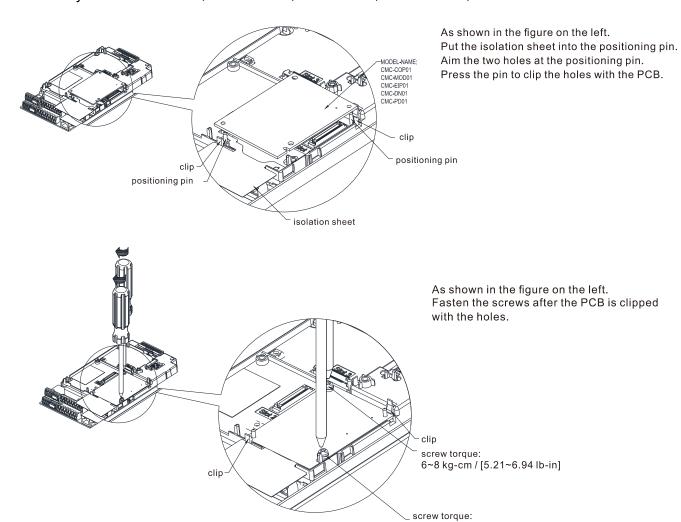

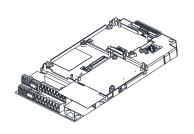






As shown in the figure on the left, installation is completed.


6~8 kg-cm / [5.21~6.94 lb-in]

### PG Card: EMC-PG01U, EMC-PG01R, EMC-PG01L, EMC-PG01O

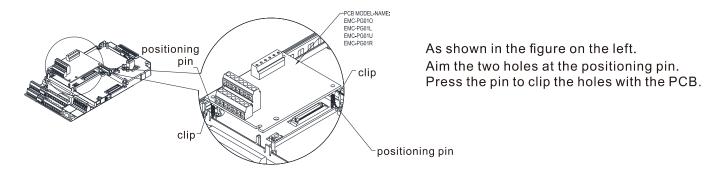

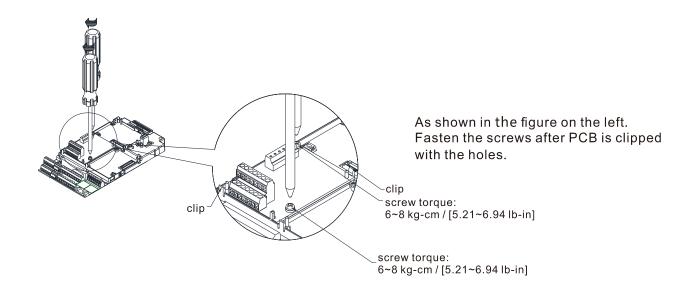

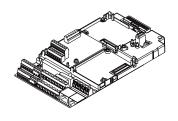





As shown in the figure on the left, installation is completed.

# 8-1-3-2 Disconnecting the extension card

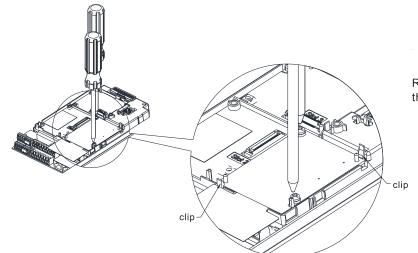
Communication card: EMC-COP01, CMC-MOD01, CMC-EIP01, CMC-DN01, CMC-PD01, CMC-PD01, CMC-PN01



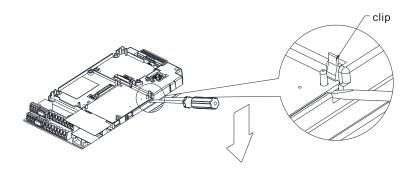Remove the two screws as shown in the figure on the left.




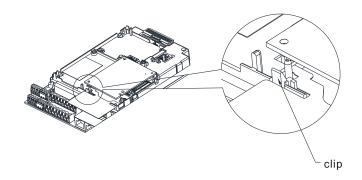
As shown in the figure on the left. Twist to open the clip. Insert a slot type screwdriver into the hollow to prize the PCB off the clip.




As shown in the figure on the left. Twist to open the other clip to remove the PCB.

# I/O & Relay card: EMC-D42A, EMC-D611A, EMC-R6AA, EMC-BPS01, EMC-A22A

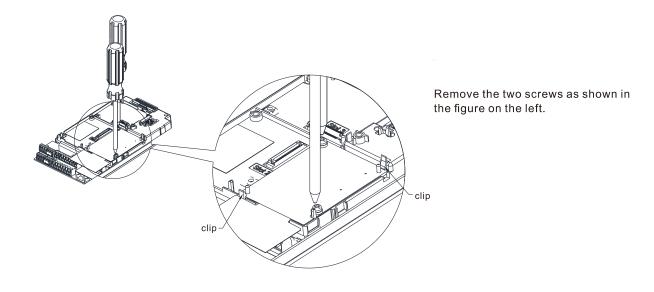

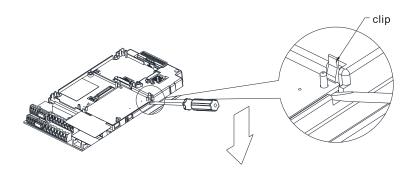


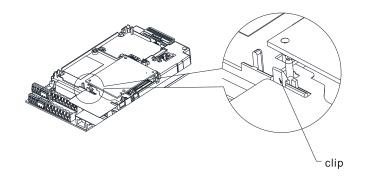As shown in the figure on the left. Twist to open the clip. Insert a slot type screwdriver into the hollow to prize the PCB off the clip.




As shown in the figure on the left. Twist to open the other clip to remove the PCB.

# PG card: EMC-PG01U, EMC-PG01R, EMC-PG01L, EMC-PG01O

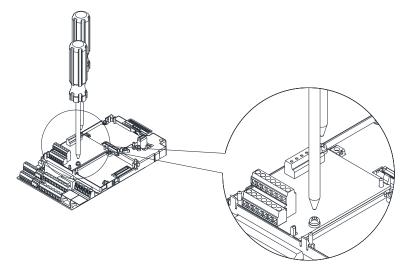

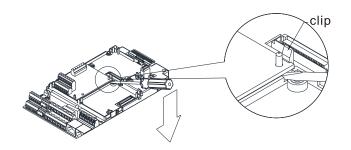
Remove the two screws as shown in the figure on the left.



As shown in the figure on the left.

Twist to open the clip.

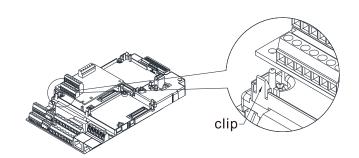Insert a slot type screwdriver into the hollow to prize the PCB off the clip.



As shown in the figure on the left. Twist to open the other clip to remove the PCB.

# 8-2 EMC-D42A -- Extension card for 4-point digital input/ 2-point digital input

	Terminals	Descriptions
I/O Extension Card	СОМ	Common for Multi-function input terminals Select SINK (NPN) / SOURCE (PNP) in J1 jumper / external power supply
	MI10-MI13	Refer to parameters 02-26–02-29 to program the multi-function inputs MI10–MI13.  Internal power is applied from terminal E24: +24V <sub>DC</sub> ±5% 200mA, 5W  External power +24V <sub>DC</sub> : max. voltage 30V <sub>DC</sub> , min. voltage 19V <sub>DC</sub> , 30W  ON: the activation current is 6.5mA  OFF: leakage current tolerance is 10µA
	MO10-MO11	Multi-function output terminals (photocoupler) The AC motor drive releases various monitor signals, such as drive in operation, frequency attained and overload indication, via transistor (open collector).  MO10  MXM
	MXM	Common for multi-function output terminals MO10, MO11(photocoupler) Max 48V <sub>DC</sub> 50mA

# **8-3 EMC-D611A** -- Extension card for 6-point digital input (110V<sub>AC</sub> input voltage)

<u> </u>	2 2 2/((0))(0)(0)	cara rer e permi argitar impar ( rie vita ge)
	Terminals	Descriptions
	AC	AC power Common for multi-function input terminal (Neutral)
I/O Extension Card	MI10–MI15	Refer to Pr. 02-26–Pr. 02-31 for multi-function input selection Input voltage: 100–130V <sub>AC</sub> Input frequency: 47–63Hz Input impedance: 27Kohm Terminal response time: ON: 10ms
		OFF: 20ms

# **8-4 EMC-R6AA** -- Relay output extension card (6-point N.O. output contact)

	Terminals	Descriptions
		Refer to Pr. 02-36– Pr. 02-41 for multi-function output selection
		Resistive load:
		3A (N.O.) / 250V <sub>AC</sub>
Relay Extension		5A (N.O.) / 30V <sub>DC</sub>
Card	RA10-RA15 RC10-RC15	Inductive load (COS 0.4)
		1.2A (N.O.) / 250V <sub>AC</sub>
		2.0A (N.O.) / 30V <sub>DC</sub>
		It is used to output each monitor signal, such as drive is in
		operation, frequency attained or overload indication.

# **8-5 EMC-A22A** -- Extension card for 2-point analog input/ 2-point analog output

	Terminals	Descriptions
		Refer to Pr. 14-00–Pr. 14-01 for function selection (input), and Pr.
		14-18–Pr. 14-19 for mode selection.
	A140 A144	There are two sets of AI port, SSW3 (AI10) and SSW4 (AI11),
	AI10, AI11	which can be switched to Voltage or Current mode.
		Voltage mode: Input 0–10V
Analog I/O		Current mode: Input 0–20mA / 4–20mA
Extension Card	AO10, AO11	Refer to Pr. 14-12–Pr. 14-13 for function selection (output), and Pr.
		14-36–Pr. 14-37 for mode selection.
		There are two sets of AO port, SSW1 (AO10) and SSW2 (AO11),
		which can be switched to Voltage or Current mode.
		Voltage mode: Output 0–10V
		Current mode: Output 0-20mA / 4-20mA
	ACM	Analog signal common terminal

# **8-6 EMC-BPS01** -- +24V power card

	Terminals	Descriptions
		Input power: 24V±5%
		Maximum input current: 0.5A
		Note:
		Do not connect drive control terminal GND directly to the
		EMC-BPS01 input terminal GND.
	24V GND	Function: When the drive is only powered by EMC-BPS01, the
External Power		communication can be assured and support all communication
Supply		cards and following functions:
Зирріу		Parameters read and write
		Keypad can be displayed
		Keypad button can be operated (except RUN)
		Analog input is effective
		Multi-input (FWD, REV, MI1–MI8) needs external power supply to
		operate
		Following functions are not supported :
		Relay output (including extension card), PG card, PLC function

Note: Refer to I/O & Relay extension card installation/ disconnecting method for PG Card installation/ disconnecting.

# 8-7 EMC-PG01L / EMC-PG02L -- PG card (Line driver)

### 8-7-1 Terminal description

Set by Pr.10-00-10-02, Pr.10-16-10-18


Terminals		Descriptions
	VP	Output voltage for power: +5V/+12V±5% (use FSW3 to switch +5V/+12V) Max. output current: 200mA
	DCM	Common for power and signal
PG1	A1, /A1, B1, /B1, Z1, /Z1	Encoder input signal (Line Driver or Open Collector) Open Collector input voltage: +5—+24V (Note 1) It can be 1-phase or 2-phase input. EMC-PG01L: Max. input frequency: 300kHz EMC-PG02L: Max. input frequency: 30kHz (Note 2)
PG2	A2, /A2, B2, /B2	Pulse Input signal (Line Driver or Open Collector) Open Collector input voltage: +5—+24V (Note1) It can be 1-phase or 2-phase input. EMC-PG01L: Max. input frequency: 300kHz EMC-PG02L: Max. input frequency: 30kHz (Note 2)
PG OUT	AO, /AO, BO, /BO, ZO, /ZO, SG	PG Card Output signals. It has division frequency function: 1–255 times  Max. output voltage for Line driver: 5V <sub>DC</sub> Max. output current: 15mA  EMC-PG01L Max. output frequency: 300kHz  EMC-PG02L Max. output frequency: 30kHz  SG is the GND of PG card. It is also the GND of position machine or PLC to make the output signal to be the common pivot point.


Note 1: Open Collector application, input current 5–15mA to each set then each set needs one pull-up resistor. If input voltage of open collector is 24V, the power of encoder needs to be connected externally. Please refer to diagram 2 of PG1.

5V	Recommended pull-up resistor: above 100–220 $\Omega$ , 1/2W
12V	Recommended pull-up resistor: above 510 $\Omega$ –1.35k $\Omega$ , 1/2W
24V	Recommended pull-up resistor: above 1.8k–3.3kΩ, 1/2W


Note 2: If the required bandwidth is not over 30kHz at the application, it is recommended to use EMC-PG02O/L (bandwidth 30kHz) to avoid interference.

PG1 card wiring diagram (the image 1 and 2 below are wiring diagrams of Open Collector encoder)

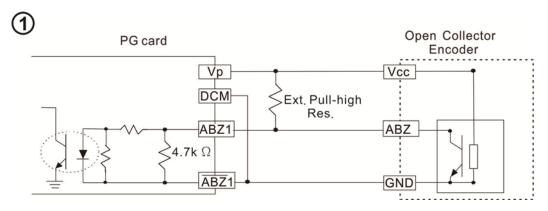

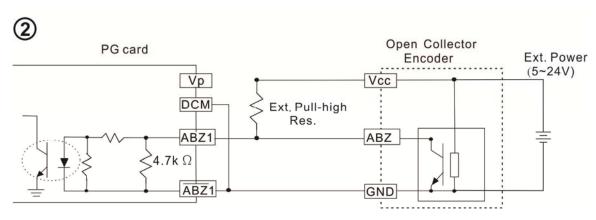


# PG2 Wiring Diagram

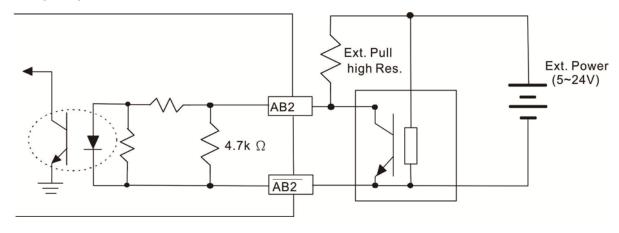

# 8-7-2 EMC-PG01L / EMC-PG02L Wiring Diagram

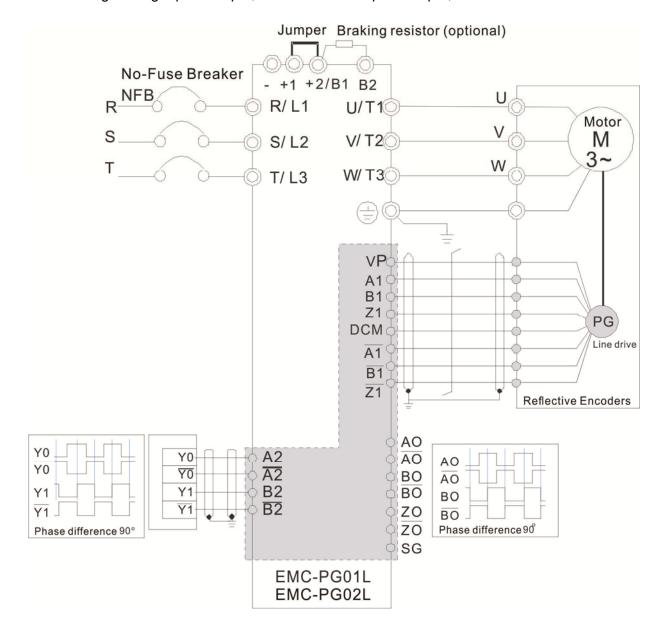- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V<sub>AC</sub> and above).
- ☑ Recommended wire size 0.21–0.81mm<sup>2</sup> [AWG24–AWG18].
- ☑ Cable length: Single-phase input, less than 30m/ 2-phase input, less than 100m



# 8-8 EMC-PG010 / EMC-PG020 -- PG card (Open collector)

### 8-8-1 Terminal descriptions

Set by Pr.10-00-10-02, Pr.10-16-10-18


Terminals		Descriptions
PG1	VP	Output voltage for power: +5V/+12V±5% (use FSW3 to switch +5V/+12V) Max. output current: 200mA
	DCM	Common for power and signal
	A1, /A1, B1, /B1, Z1, /Z1	Encoder Input signal (Line Driver or Open Collector) Open Collector Input Voltage: +5V-+24V (Note 1) It can be 1-phase or 2-phase input. EMC-PG01O Max. input frequency: 300kHz EMC-PG02O Max. input frequency: 30kHz (Note 2)
PG2	A2, /A2, B2, /B2	Pulse Input Signal (Line Driver or Open Collector) Open Collector Input Voltage: +5-+24V (Note 1) It can be 1-phase or 2-phase input. EMC-PG01O Max. input frequency: 300kHz EMC-PG02O Max. input frequency: 30kHz (Note 2)
PG OUT	V+, V+	Needs external power source for PG OUT circuit.  Input voltage of power: +7V – +24V
	V-	Input voltage for the negative side
	A/O, B/O, Z/O	PG Card Output signals has division frequency function: 1–255 times. On the open collector's output signal, add a high-pull resistor on the external power V+–V- (e.g. power of PLC) to prevent the interference of the receiving signal. Max. [Three pull-up resistor are included in the package (1.8kΩ/1W)] (Note 1) EMC-PG01O Max. input frequency: 300kHz EMC-PG02O Max. input frequency: 30kHz

Note 1: Open Collector application, input current 5–15mA to each set then each set needs one pull-up resistor. If input voltage of open collector is 24V, the power of encoder needs to be connected externally. Please refer to diagram 2 of PG1.

5V	Recommended pull-up resistor: above 100–220 $\Omega$ , 1/2W
12V	Recommended pull-up resistor: above 510 $\Omega$ –1.35k $\Omega$ , 1/2W
24V	Recommended pull-up resistor: above 1.8k–3.3kΩ, 1/2W

Note 2: If the required bandwidth is not over 30kHz at the application, it is recommended to use EMC-PG02O/L (bandwidth 30kHz) to avoid interference.

PG1 card wiring diagram (the image 1 and 2 below are wiring diagrams of Open Collector encoder)

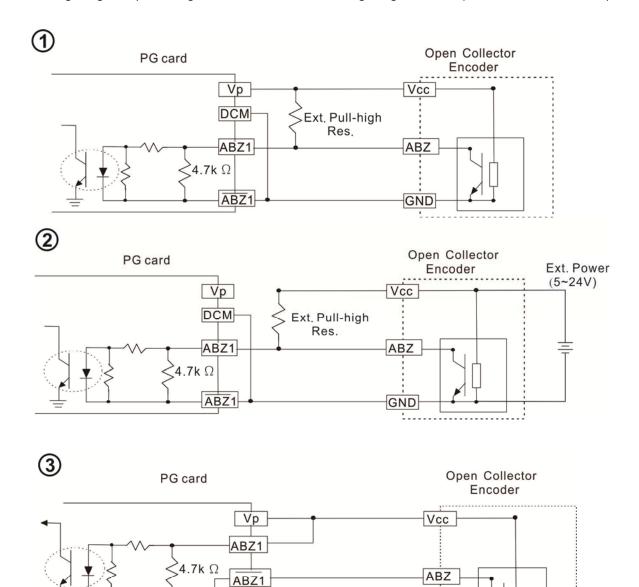


When wiring in this way, if there is a signal on EMC-PG010's A1, B1 and Z1, LED lights is OFF.

DCM

If A1, B1 and Z1 have no signals, LED lights is ON.


# PG2 Wiring Diagram

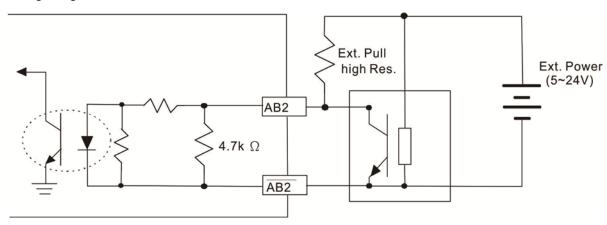

GND

# 8-8-2 EMC-PG010 / EMC-PG020 Wiring Diagram

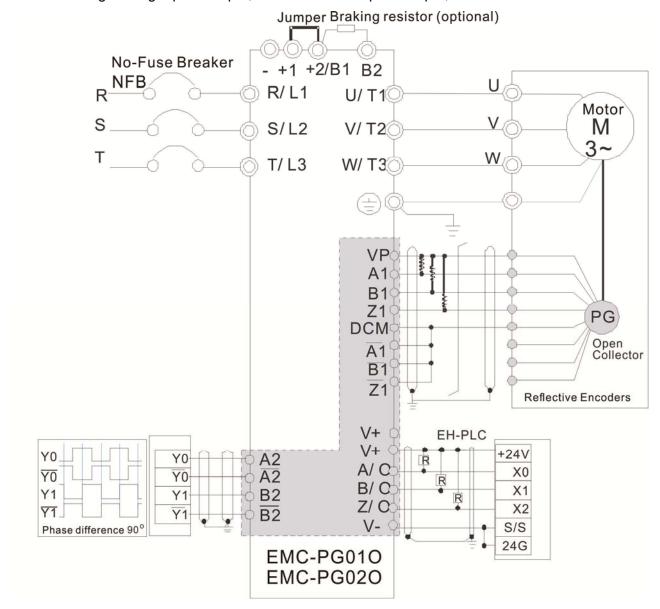- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V<sub>AC</sub> and above).
- ☑ Recommended wire size 0.21–0.81mm<sup>2</sup> [AWG24–AWG18].
- ☑ Cable length: Single-phase input, less than 30m/ 2-phase input, less than 100m



# 8-9 EMC-PG01U / EMC-PG02U

- -- PG card (ABZ Incremental encoder signal/ UVW Hall position signal input)
- 1. FSW1 S: Standard UVW Output Encoder; D: Delta Encoder
- 2. When using the Delta Encoder, wait for at least 250ms after powering up to receive signals from UVW. If a running command is received before UVW signals finish, a PGF5 error message will be given. So wait for 250ms before sending a running command.
- 3. EMC-PG02U has encoder disconnection detection function.

# 8-9-1 Terminal descriptions


Set by Pr.10-00-10-02, Pr.10-16-10-18

Terminals		Descriptions
	VP	Output voltage for power: +5V/+12V±5% (use FSW3 to switch +5V/+12V)
		Max. output current: 200mA
DC1	DCM	Common for power and signal
PG1	A1, /A1, B1, /B1, Z1, /Z1	Encoder input signal (Line Driver) It can be 1-phase or 2-phase input. Max. output frequency: 300kHz
	U1, /U1, V1, /V1, W1, /W1	Encoder input signal
PG2	A2, /A2, B2, /B2	Pulse Input signal (Line Driver or Open Collector) Open Collector Input Voltage: +5-+24V (Note1) It can be 1-phase or 2-phase input. Max. output frequency: 300kHz.
PG OUT	AO, /AO, BO, /BO, ZO, /ZO, SG	PG Card Output signals. It has division frequency function: 1–255 times  Max. output voltage for Line driver: 5V <sub>DC</sub> Max. output current: 15mA  Max. output frequency: 300kHz  SG is the GND of PG card. It is also the GND of position machine or PLC to make the output signal to be the common pivot point.

Note 1: Open Collector application, input current 5–15mA to each set then each set needs one pull-up resistor.


5V	Recommended pull-up resistor: above100–220 $\Omega$ , 1/2W
12V	Recommended pull-up resistor: above 510 $\Omega$ –1.35k $\Omega$ , 1/2W
24V	Recommended pull-up resistor: above1.8k–3.3kΩ, 1/2W
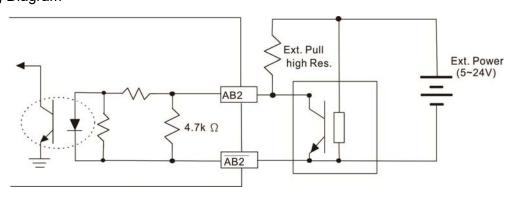
#### **PG2** Wiring Diagram



# 8-9-2 EMC-PG01U / EMC-PG02U Wiring Diagram

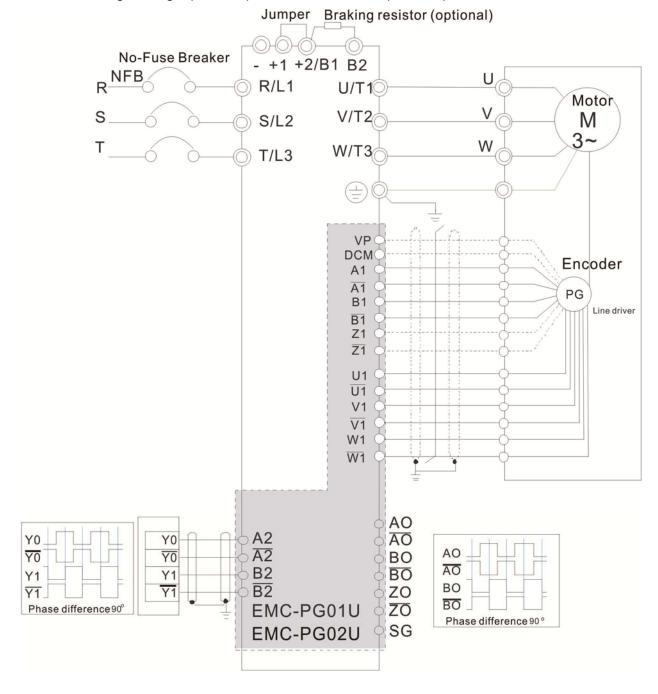- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V<sub>AC</sub> and above).
- ☑ Recommended wire size 0.21–0.81mm² [AWG24–AWG18].
- ☐ Cable length: Single-phase input, less than 30m/ 2-phase input, less than 100m



# 8-10 EMC-PG01R -- PG card (Resolver)

#### 8-10-1 Terminal Descriptions


Set by Pr.10-00-10-02 and Pr.10-30 Resolver. (Pr.10-00=3, Pr.10-01=1024)

Terminals		Descriptions
	R1- R2	Resolver Output Power
PG1		7Vrms, 10kHz
PGI	S1, /S3,	Resolver Input Signal (S2, /S4=Sin; S1, /S3=Cos)
	S2, /S4,	3.5±0.175Vrms, 10kHz
PG2	Pulse Input signal (Line Driver or Open Collector) A2, /A2, Open Collector Input Voltage: +5–+24V (Note1) B2, /B2 It can be 1-phase or 2-phase input. Max. output frequency: 300kHz	
PG OUT	PG Card Output signals. It has division frequency function: times  AO, /AO,  BO /BO	

Note 1: Open Collector application, input current 5–15mA to each set then each set needs one pull-up resistor.

5V	Recommended pull-up resistor: above 100–220Ω, 1/2W
12V	Recommended pull-up resistor: above 510 $\Omega$ –1.35k $\Omega$ , 1/2W
24V	Recommended pull-up resistor: above 1.8k–3.3kΩ, 1/2W

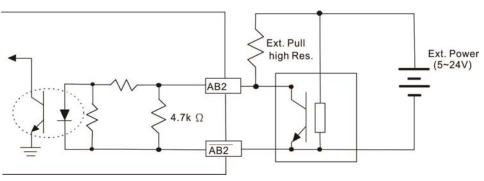
# PG2 Wiring Diagram



- DOS (Degradation of Signal): If the amplitude of the sine wave input of the S1-/S3/ S2-/S4 is lower than or higher than the encoder IC's specification, a red light will be on. The possible reasons which cause this problem are the following.
  - 1. The turns ratio of the resolver encoder is not 1:0.5 which makes the sine wave input of the S1-/S3/S2-/S4 not equal to 3.5±0.175Vrms.
  - 2. While motor is running, motor creates common mode noise which makes accumulated voltage to be more than 3.5±0.175Vrms
- LOT (Loss of Tracking): Compare the angle of S1-/S3/S2-/S4 sine wave input to the R1-R2 cosine wave. If their difference is more than 5 degree, a red light will be on. Here are the possible reasons why that happens:
  - The output frequency of the PG card is incorrect.
  - 2. The specification of Resolver's encoder is not 10kHz
  - The motor creates common mode noise while it is running. That causes a big difference, while
    the motor is rotating, between main winding's cosine wave angle and the sine wave angle of
    second and third windings.

#### 8-10-2 EMC-PG01R Wiring Diagram

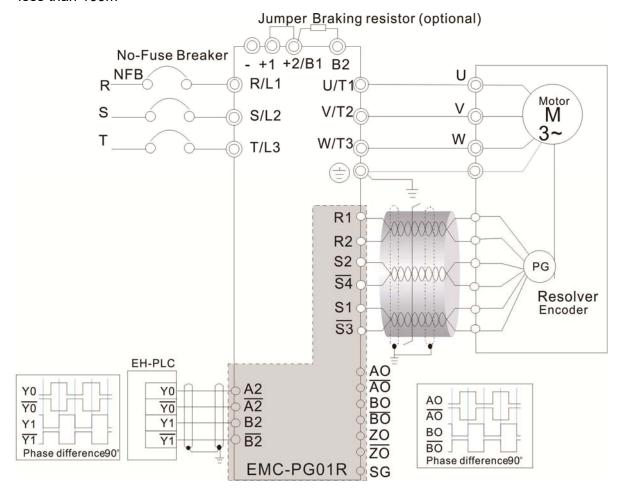- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V<sub>AC</sub> and above).
- ☑ Recommended wire size 0.21–0.81mm² [AWG24–AWG18].
- ☑ Cable length: PG1 input, less than 30m; PG2 single-phase input, less than 30m/ 2-phase input, less than 100m




# 8-11 CMC-MOD01 -- Communication card, Modbus TCP

# 8-11-1 Features

- 1. Supports Modbus TCP protocol
- 2. MDI/MDI-X auto-detect
- 3. Baud rate: 10/100Mbps auto-detect
- 4. E-mail alarm
- 5. AC motor drive keypad/ Ethernet configuration
- 6. Virtual serial port.
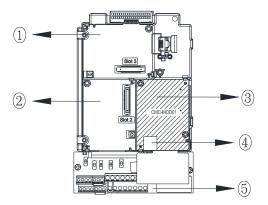
# 8-11-2 Product File



1	I/O CARD & Relay Card
2	PG Card
3	Comm. Card
4	RJ-45 connection port
(5)	Removable control circuit
	terminal

# 8-11-3 Specifications

# **Network Interface**

Interface	RJ-45 with Auto MDI/MDIX
Number of ports	1 Port
Transmission method	IEEE 802.3, IEEE 802.3u
Transmission cable	Category 5e shielding 100M
Transmission speed	10/100 Mbps Auto-Detect
Notwork protocol	ICMP, IP, TCP, UDP, DHCP, HTTP, SMTP, MODBUS OVER TCP/IP,
Network protocol	Delta Configuration

# **Electrical Specification**

Power supply voltage	5V <sub>DC</sub> (supply by the AC motor drive)
Insulation voltage	500V <sub>DC</sub>
Power consumption	0.8W
Weight	25g

#### **Environment**

Noise immunity	ESD (IEC 61800-5-1, IEC 61000-4-2)  EFT (IEC 61800-5-1, IEC 61000-4-4)  Surge Test (IEC 61800-5-1, IEC 61000-4-5)  Conducted Susceptibility Test (IEC 61800-5-1, IEC 61000-4-6)	
Operation/ storage	Operation: -10°C–50°C (temperature), 90% (humidity) Storage: -25°C –70°C (temperature), 95% (humidity)	
Vibration/ shock immunity	International standard: IEC 61800-5-1, IEC 60068-2-6/ IEC 61800-5-1, IEC 60068-2-27	

#### 8-11-4 Communication Parameters for VFD-C2000 Connected to Ethernet

When VFD-C2000 is linked to Ethernet, please set up the communication parameters based on the table below. Ethernet master will be able to read/write the frequency word and control word of VFD-C2000 after communication parameters setup.

Parameter	Function	Set value (Dec)	Explanation
Pr. 00-20	Source of frequency command setting	8	The frequency command is controlled by communication card.
Pr. 00-21	Source of operation command setting	5	The operation command is controlled by communication card.
Pr. 09-30	Decoding method for communication	0	Decoding method for Delta AC motor drive
Pr. 09-75	IP setting	0	Static IP(0) / Dynamic distribution IP(1)
Pr. 09-76	IP address -1	192	IP address 192.168.1.5
Pr. 09-77	IP address -2	168	IP address 192.168.1.5
Pr. 09-78	IP address -3	1	IP address 192.168.1.5
Pr. 09-79	IP address -4	5	IP address 192.168.1.5
Pr. 09-80	Netmask -1	255	Netmask 255.255.255.0
Pr. 09-81	Netmask -2	255	Netmask 255.255.255.0
Pr. 09-82	Netmask -3	255	Netmask 255.255.255.0
Pr. 09-83	Netmask -4	0	Netmask 255.255.255.0
Pr. 09-84	Default gateway -1	192	Default gateway 192.168.1.1
Pr. 09-85	Default gateway -2	168	Default gateway 192.168.1.1
Pr. 09-86	Default gateway -3	1	Default gateway 192.168.1.1
Pr. 09-87	Default gateway -4	1	Default gateway 192.168.1.1

# 8-11-5 Basic Registers

BR#	R/W	Content	Explanation	
#0	R	i Model name	Set up by the system; read only. The model code of CMC-MOD01=H'0203	
#1	R		, 3	
#2	R	Release date of the version  Displaying the data in decimal form. 10,000s digit and 1,000s digit are for "day".  For 1 digit: 0 = morning; 1 = afternoon.		
#11	R/W	Modbus Timeout	Pre-defined setting: 500 (ms)	
#13	R/W	Keep Alive Time	Pre-defined setting: 30 (s)	

# 8-11-6 LED Indicator & Troubleshooting

# LED Indicators

LED	Status		Indication	How to correct it?
POWER	DOWED Cross	On	Power supply in normal status	
FOWER	Green	Off	No power supply	Check the power supply
LINK Gree	On Green Flashes	Network connection in normal status		
		Network in operation		
		Off	Network not connected	Check if the network cable is connected

# Troubleshooting

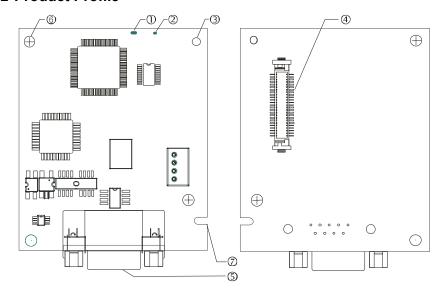
Abnormality	Cause	How to correct it?
POWER LED off	AC motor drive not powered	Check if AC motor drive is powered, and if the power supply is normal.
POWER LED OII	CMC-MOD01 not connected to AC motor drive	Make sure CMC-MOD01 is connected to AC motor drive.
	CMC-MOD01 not connected to network	Make sure the network cable is correctly connected to network.
LINK LED off	Poor contact to RJ-45 connector	Make sure RJ-45 connector is connected to Ethernet port.
	CMC-MOD01 not connected to network	Make sure CMC-MOD01 is connected to network.
No module found	PC and CMC-MOD01 in different networks and blocked by network firewall.	Search by IP or set up relevant settings by AC motor drive keypad.
	CMC-MOD01 not connected to network	Make sure CMC-MOD01 is connected to the network.
Fail to open CMC-MOD01 setup	Incorrect communication setting in DCISoft	Make sure the communication setting in DCISoft is set to Ethernet.
page	PC and CMC-MOD01 in different networks and blocked by network firewall.	Conduct the setup by AC motor drive keypad.
Able to open CMC-MOD01 setup page but fail to utilize webpage monitoring	Incorrect network setting in CMC-MOD01	Check if the network setting for CMC-MOD01 is correct. For the Intranet setting in your company, please consult your IT staff. For the Internet setting in your home, please refer to the network setting instruction provided by your ISP.
Fail to send e-mail	Incorrect network setting in CMC-MOD01	Check if the network setting for CMC-MOD01 is correct.
Tail to some c-mail	Incorrect mail server setting	Please confirm the IP address for SMTP-Server.

# 8-12 CMC-PD01 -- Communication card, PROFIBUS DP

#### 8-12-1 Features

- 1. Supports PZD control data exchange.
- 2. Supports PKW polling AC motor drive parameters.
- 3. Supports user diagnosis function.
- 4. Auto-detects baud rates; supports Max. 12Mbps.

#### 8-12-2 Product Profile



- 1. NET indicator
- 2. POWER indicator
- 3. Positioning hole
- 4. AC motor drive connection port
- 5. PROFIBUS DP connection port
- 6. Screw fixing hole
- 7. Fool-proof groove

# 8-12-3 Specifications

#### **PROFIBUS DP Connector**

Interface	DB9 connector
Transmission method	High-speed RS-485
Transmission cable	Shielded twisted pair cable
Electrical isolation	500V <sub>DC</sub>

#### Communication

Message type	Cyclic data exchange	
Module name	CMC-PD01	
GSD document	DELA08DB.GSD	
Company ID	08DB (HEX)	
Serial transmission speed supported (auto-detection)	9.6Kbps; 19.2Kbps; 93.75Kbps; 187.5Kbps; 500Kbps; 1.5Mbps; 3Mbps; 6Mbps; 12Mbps (bit per second)	

# **Electrical Specification**

Power supply	5V <sub>DC</sub> (supplied by AC motor drive)
Insulation voltage	500V <sub>DC</sub>
Power consumption	1W
Weight	28g


# Environment

Noise immunity	ESD(IEC 61800-5-1, IEC 61000-4-2) EFT(IEC 61800-5-1, IEC 61000-4-4) Surge Teat(IEC 61800-5-1, IEC 61000-4-5) Conducted Susceptibility Test(IEC 61800-5-1, IEC 61000-4-6)
Operation /storage  Operation: -10°C-50°C (temperature), 90% (humidity)  Storage: -25°C-70°C (temperature), 95% (humidity)	
Shock / vibration resistance	International standards: IEC61131-2, IEC60068-2-6 (TEST Fc) / IEC61131-2 & IEC 60068-2-27 (TEST Ea)

# 8-12-4 Installation

# PROFIBUS DP Connector

PIN	PIN name	Definition
1	-	Not defined
2	-	Not defined
3	Rxd/Txd-P	Sending / receiving data P(B)
4	-	Not defined
5	DGND	Data reference ground
6	VP	Power voltage – positive
7	-	Not defined
8	Rxd/Txd-N	Sending/receiving data N(A)
9	-	Not defined



# 8-12-5 LED Indicator & Troubleshooting

There are 2 LED indicators on CMC-PD01: POWER LED and NET LED. POWER LED displays the status of the working power. NET LED displays the connection status of the communication.

# **POWER LED**

LED status	Indication	How to correct it?
Green light on	Power supply in normal status.	
Off	No power	Check if the connection between CMC-PD01 and AC motor drive is normal.

# **NET LED**

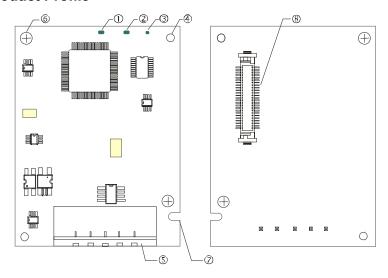
LED status	Indication	How to correct it?
Green light on	Normal status	
Red light on	CMC-PD01 is not connected to PROFIBUS DP bus.	Connect CMC-PD01 to PROFIBUS DP bus.
Red light flashes	Invalid PROFIBUS communication address	Set the PROFIBUS address of CMC-PD01 between 1 – 125 (decimal)
Orange light flashes	CMC-PD01 fails to communication with AC motor drive.	Switch off the power and check whether CMC-PD01 is correctly and normally connected to AC motor drive.

# 8-13 CMC-DN01 -- Communication card, DeviceNet

#### 8-13-1 Functions

- 1. Based on the high-speed communication interface of Delta HSSP protocol, able to conduct immediate control to AC motor drive.
- 2. Supports Group 2 only connection and polling I/O data exchange.
- 3. For I/O mapping, supports Max. 32 words of input and 32 words of output.
- 4. Supports EDS file configuration in DeviceNet configuration software.
- 5. Supports all baud rates on DeviceNet bus: 125Kbps, 250Kbps, 500Kbps and extendable serial transmission speed mode.
- 6. Node address and serial transmission speed can be set up on AC motor drive.
- 7. Power supplied from AC motor drive.

#### 8-13-2 Product Profile



1. NS indicator
2. MS indicator
3. POWER indicator
4. Positioning hole
5. DeviceNet connection port
6. Screw fixing hole
7. Fool-proof groove
8. AC motor drive connection
port

#### 8-13-3 Specifications

#### **DeviceNet Connector**

Interface	5-PIN open removable connector of 5.08mm PIN interval	
Transmission	CAN	
Transmission cable	Shielded twisted pair cable (with 2 power cables)	
Transmission speed	125Kbps, 250Kbps, 500Kbps and extendable serial transmission speed	
Network protocol	DeviceNet protocol	

#### AC Motor Drive Connection Port

Interface	50 PIN communication terminal	
Transmission method	SPI communication	
Terminal function	Communicating with AC motor drive     Transmitting power supply from AC motor drive	
Communication	Delta HSSP protocol	

# **Electrical Specification**

Power supply voltage	5V <sub>DC</sub> (supplied by AC motor drive)	
Insulation voltage	500V <sub>DC</sub>	
Communication wire power consumption	0.85W	
Power consumption	1W	
Weight	23g	

#### Environment

ESD (IEC 61800-5-1, IEC 61000-4-2)
EFT (IEC 61800-5-1, IEC 61000-4-4)
Surge Teat(IEC 61800-5-1, IEC 61000-4-5)
Conducted Susceptibility Test (IEC 61800-5-1, IEC 61000-4-6)
Operation: -10°C –50°C (temperature), 90% (humidity)
Storage: -25°C–70°C (temperature), 95% (humidity)
International standards: IEC61800-5-1, IEC60068-2-6 (TEST Fc) / IEC61800-5-1 & IEC60068-2-27 (TEST Ea)

#### 8-13-4 Installation

#### **DeviceNet Connector**

PIN	Signal	Color	Definition
1	V+	Red	DC24V
2	Н	White	Signal+
3	S	-	Earth
4	L	Blue	Signal-
5	V-	Black	0V



# 8-13-5 LED Indicator & Troubleshooting

There are 3 LED indicators on CMC-DN01. POWER LED displays the status of power supply. MS LED and NS LED are dual-color LED, displaying the connection status of the communication and error messages.

#### **POWER LED**

LED status	Indication	How to correct it?
Off	Power supply in abnormal status.	Check the power supply of CMC-DN01.
Green light On	Power supply in normal status	

# **NS LED**

LED status	Indication	How to correct it?	
Off	No power supply or CMC-DN01 has not completed MAC ID test yet.	<ol> <li>Check the power of CMC-DN01 and see if the connection is normal.</li> <li>Make sure at least one or more nodes are on the bus.</li> <li>Check if the serial transmission speed of CMC-DN01 is the same as that of other nodes.</li> </ol>	
Green light flashes	CMC-DN01 is on-line but has not established connection to the master.	Configure CMC-DN01 to the scan list of the master.     Re-download the configured data to the master.	
Green light on	CMC-DN01 is on-line and is normally connected to the master		
Red light flashes	CMC-DN01 is on-line, but I/O connection is timed-out.	<ol> <li>Check if the network connection is normal.</li> <li>Check if the master operates normally.</li> </ol>	
Red light on	<ol> <li>The communication is down.</li> <li>MAC ID test failure.</li> <li>No network power supply.</li> <li>CMC-DN01 is off-line.</li> </ol>	<ol> <li>Make sure all the MAC IDs on the network are not repeated.</li> <li>Check if the network installation is normal.</li> <li>Check if the baud rate of CMC-DN01 is consistent with that of other nodes.</li> <li>Check if the node address of CMC-DN01 is illegal.</li> <li>Check if the network power supply is normal.</li> </ol>	

# MS LED

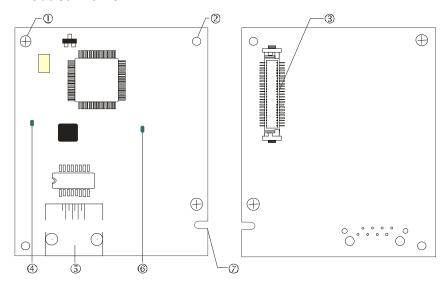
LED status	Indication	How to correct it?	
Off	No power supply or being off-line	Check the power supply of CMC-DN01 and see if the connection is normal.	
Green light flashes	Waiting for I/O data	Switch the master PLC to RUN status	
Green light on	I/O data are normal		
Red light flashes	Mapping error	Reconfigure CMC-DN01     Re-power AC motor drive	
Red light on	Hardware error	<ol> <li>See the error code displayed on AC motor drive.</li> <li>Send back to the factory for repair if necessary.</li> </ol>	
Orange light flashes	CMC-DN01 is establishing connection with AC motor drive.	If the flashing lasts for a long time, turn off the power and check if CMC-DN01 and AC motor drive are correctly installed and normally connected to each other.	

# 8-14 CMC-EIP01 -- Communication card, EtherNet/IP

#### 8-14-1 Features

- 1. Supports Modbus TCP and Ethernet/IP protocol
- 2. Supports all parameters read/write (use with EIP V.1.06)
- 3. MDI/MDI-X auto-detect
- 4. Baud rate: 10/100Mbps auto-detect
- 5. AC motor drive keypad/ Ethernet configuration
- 6. Virtual serial port

#### 8-14-2 Product Profile



# [Figure1]

- 1. Screw fixing hole
- 2. Positioning hole
- AC motor drive connection port
- 4. LINK indicator
- 5. RJ-45 connection port
- 6. POWER indicator
- 7. Alignment groove

# 8-14-3 Specifications

#### **Network Interface**

Interface	RJ-45 with Auto MDI/MDIX	
Number of ports	1 Port	
Transmission method	IEEE 802.3, IEEE 802.3u	
Transmission cable	Category 5e shielding 100M	
Transmission speed	10/100 Mbps Auto-Detect	
Network protocol	ICMP, IP, TCP, UDP, DHCP, HTTP, SMTP, MODBUS over TCP/IP, EtherNet/IP, Delta Configuration	

# **Electrical Specification**

Weight	25g
Insulation voltage	500V <sub>DC</sub>
Power consumption	0.8W
Power supply voltage	5V <sub>DC</sub> (provided by VFD-C2000)


#### **Environment**

	ESD (IEC 61800-5-1, IEC 61000-4-2)				
Noise immunity	EFT (IEC 61800-5-1, IEC 61000-4-4)				
Noise infiniting	Surge Test (IEC 61800-5-1, IEC 61000-4-5)				
Conducted Susceptibility Test (IEC 61800-5-1, IEC 61000-4-6)					
Operation/storage	Operation: -10°C–50°C (temperature), 90% (humidity)				
Operation/storage	Storage: -25°C-70°C (temperature), 95% (humidity)				
Vibration/shock immunity	International standards: IEC 61800-5-1, IEC 60068-2-6/IEC 61800-5-1, IEC 60068-2-27				

#### 8-14-4 Installation

Connecting CMC-EIP01 to Network

- 1. Turn off power to the AC motor drive.
- 2. Open the cover of the AC motor drive.
- 3. Connect a CAT-5e network cable to the RJ-45 port on the CMC-EIP01 (See Figure 2).



[Figure 2]

#### **RJ-45 PIN Definition**

PIN	Signal	Definition
1	Tx+	Positive pole for data transmission
2	Tx-	Negative pole for data transmission
3	Rx+	Positive pole for data receiving
4		N/C

PIN	Signal	Definition
5	-	N/C
6	Rx-	Negative pole for data receiving
7		N/C
8		N/C



# 8-14-5 Communication Parameters for VFD-C2000 Connected to Ethernet

When the VFD-C2000 is connected to an Ethernet network, please set up the communication parameters for it according to the table below. The Ethernet master is only able to read/write the frequency word and control word of VFD-C2000 after the communication parameters are set.

Parameter	Function	Set value (Dec)	Explanation
Pr. 00-20	Source of frequency command setting	8	The frequency command is controlled by communication card.
Pr. 00-21	Source of operation command setting	5	The operation command is controlled by communication card.
Pr. 09-30	Decoding method for communication	0	The decoding method for Delta AC motor drive
Pr. 09-75	IP setting	0	Static IP(0) / Dynamic distribution IP(1)
Pr. 09-76	IP address -1	192	IP address 192.168.1.5
Pr. 09-77	IP address -2	168	IP address 192.168.1.5
Pr. 09-78	IP address -3	1	IP address 192.168.1.5
Pr. 09-79	IP address -4	5	IP address 192.168.1.5

# Chapter 8 Option Cards | C2000

Parameter	Function	Set value (Dec)	Explanation
Pr. 09-80	Netmask -1	255	Netmask 255.255.255.0
Pr. 09-81	Netmask -2	255	Netmask 255.255.255.0
Pr. 09-82	Netmask -3	255	Netmask 255.255.255.0
Pr. 09-83	Netmask -4	0	Netmask 255.255.255.0
Pr. 09-84	Default gateway -1	192	Default gateway 192.168.1.1
Pr. 09-85	Default gateway -2	168	Default gateway 192.168.1.1
Pr. 09-86	Default gateway -3	1	Default gateway 192.168.1.1
Pr. 09-87	Default gateway -4	1	Default gateway 192.168.1.1

# 8-14-6 LED Indicator & Troubleshooting

There are 2 LED indicators on the CMC-EIP01. The POWER LED displays the status of power supply, and the LINK LED displays the connection status of the communication.

#### **LED Indicators**

LED	Status		Indication	How to correct it?
DOWED	Croon	On	Power supply in normal status	
POWER Green		Off	No power supply	Check the power supply.
LINK	_	On	Network connection in normal status	
		Flashing	Network in operation	
		Off	Network not connected	Check if the network cable is connected.

# Troubleshooting

Abnormality	Cause	How to correct it?
DOWED LED . #	AC motor drive not powered	Check if AC motor drive is powered, and if the power supply is normal.
POWER LED off	CMC-EIP01 not connected to AC motor drive	Make sure CMC-EIP01 is connected to AC motor drive.
	CMC-EIP01 not connected to network	Make sure the network cable is correctly connected to network.
LINK LED off	Poor contact to RJ-45 connector	Make sure RJ-45 connector is connected to Ethernet port.
	CMC-EIP01 not connected to network	Make sure CMC-EIP01 is connected to network.
No communication card found	PC and CMC-EIP01 in different networks and blocked by network firewall.	Search by IP or set up relevant settings by AC motor drive keypad.
	CMC-EIP01 not connected to network	Make sure CMC-EIP01 is connected to the network.
Fail to open CMC-EIP01 setup page	Incorrect communication setting in DCISoft	Make sure the communication setting in DCISoft is set to Ethernet.
	PC and CMC-EIP01 in different networks and blocked by network firewall.	Conduct the setup by AC motor drive keypad.

# Chapter 8 Option Cards | C2000

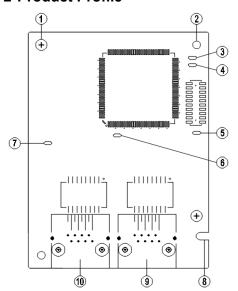
Abnormality	Cause	How to correct it?
Able to open CMC-EIP01 setup page but fail to utilize webpage monitoring	Incorrect network setting in CMC-EIP01	Check if the network setting for CMC-EIP01 is correct. For the Intranet setting in your company, please consult your IT staff. For the Internet setting in your home, please refer to the network setting instruction provided by your ISP.
	Incorrect network setting in CMC-EIP01	Check if the network setting for CMC-EIP01 is correct.
Fail to send e-mail	Incorrect mail server setting	Please confirm the IP address for SMTP-Server.

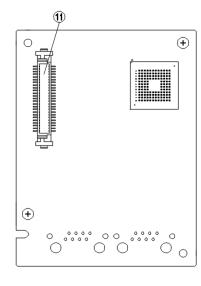
# 8-15 CMC-EC01 -- Communication card, EtherCAT

#### 8-15-1 Features

The EtherCAT of C2000 currently provides standard control mode of CiA402 Velocity (Index 6060=2), but it is non-synchronous control mode. There is no need to turn on the DC (Distribute Clock) function when operating. However, if the DC function is required for using with synchronous products (e.g. ASDA-A2), the CMC-EC01 can still be used normally under this circumstances. The VFD-C2000 supports the EtherCAT function with firmware version 2.02 and above. Please be attention to the firmware you use.

#### 8-15-2 Product Profile





# [Figure 1]

- Screw fixing hole
- 2. Positioning hole
- 3. RUN indicator
- 4. ERR indicator
- 5. POWER indicator
- 6. OUT LINK indicator
- 7. IN LINK indicator
- 8. Fool-proof groove
- 9. RJ-45 connection port
- 10. RJ-45 connection port
- 11. Control board connection port

#### 8-15-3 Specifications

### **Network Interface**

Interface	RJ-45	
Number of ports	2 Port	
Transmission method	IEEE802.3, IEEE802.3u	
Transmission cable	Category 5e shielding 100 M	
Transmission speed	10 / 100 Mbps Auto-Defect	
Network protocol	EtherCAT	

### **Electrical Specification**

Power supply voltage	5V <sub>DC</sub>
Power consumption	0.8W
Insulation voltage	500V <sub>DC</sub>
Weight (g)	27

#### Environment

	ESD (IEC 61800-5-1, IEC 61000-4-2)		
	EFT (IEC 61800-5-1, IEC 61000-4-4)		
Noise immunity	Surge Test (IEC 61800-5-1, IEC 61000-4-5)		
	Conducted Susceptibility Test (IEC 61800-5-1, IEC 61000-4-6)		
Operation	-10°C–15°C (temperature), 90% (humidity)		
Storage	-25°C-70°C (temperature), 95% (humidity)		
Vibration / shock immunity	International standard: IEC 61800-5-1, IEC 60068-2-6 / IEC 61800-5-1, IEC 60068-2-27		

#### 8-15-4 RJ-45 PIN Definition

RJ-45	PIN No.	Signal	Definition
	1	Tx+	Positive pole for data transmission
	2	Tx-	Negative pole for data transmission
12345678	3	Rx+	Positive pole for data receiving
	4		N/C
	5		N/C
	6	Rx-	Negative pole for data receiving
	7		N/C
	8		N/C

# 8-15-5 Communication Parameters for VFD-C2000 Connected to EtherCAT

When operating VFD-C2000 via CMC-EC01, please set the control and operation command as controlled by communication card. When C2000 is connected to EtherCAT network, please set up the communication parameters according to the table below.

Parameter	Set value (Dec)	Explanation
Pr. 00-20	8	The frequency command is controlled by communication card.
Pr. 00-21	5	The operation command is controlled by communication card.
Pr. 09-60	6	Identification: when CMC-EC01 is connected, Pr.09-60 will show value 6 (EtherCAT Slave)
Pr. 09-61		Version of communication card

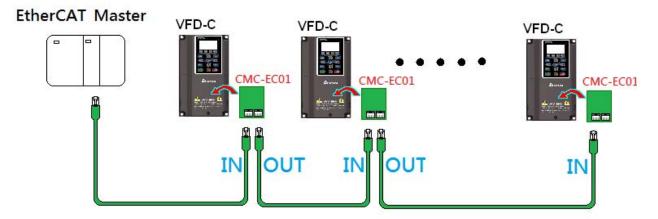
#### 8-15-6 LED Indicator

LED	Status		Indication
DOWED	Craan	On	Power supply in normal status
POWER	Green	Off	No power supply
LINK		On	Operate in normal status
			Pre-operation (On / Off 200ms)
	Green	Flashes	Operate in safe mode (On 200ms / Off 1000ms)
		Off	Initial state


LED	Status		Indication
			Basic configuration error (On / Off 200ms)
ERROR	Red	Flashed	Status switching error (On 200ms / Off 1000ms)
			Times out (On 200ms twice / Off 1000ms)
		Off	No error
		On	Network connection in normal status
IN LINK	Green	Flashes	Network in operation
		Off	Network not connected
		On	Network connection in normal status
OUT LINK	Green	Flashes Network in operation  Off Network not connected	Network in operation
			Network not connected

#### 8-15-7 Network Connection

Because the packet delivery of EtherCAT has directional characteristics, the connection must be correct. The designed delivery direction of CMC-EC01 is left for IN / right for ON, the correct wiring is as below shown:



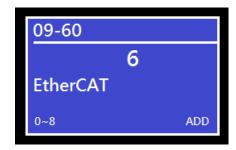When the hardware is installed and power on, check for the display. The current set value of Pr.09-60 will be 6, and shows "EtherCAT" on the display. If the above information does not show on the display, please check the version of VFD-C2000 (V2.02 and above) and the connection of the card.



# 8-16 CMC-PN01 -- Communication card, PROFINET

#### 8-16-1 Features

CMC-PN01 connects C2000 drive to PROFINET to exchange data with the host controller easily.

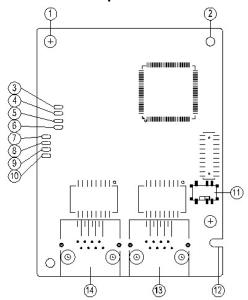
This simple network solution saves cost and time for connection and installation of factory automation.

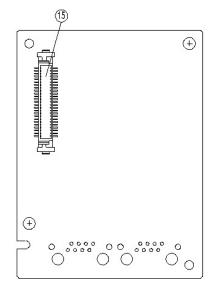
Moreover, its components are compatible with suppliers'.

By installing CMC-PN01 in C2000 through the main PROFINET device, you can:

- 1. Control the drive through PROFINET
- 2. Modify the drive's parameters through PROFINET
- 3. Monitor the drive's status through PROFINET.


### 8-16-2 Product profile





- 1. Screw fixing hole 2. Communication card fixing 3. Indicator light: Ready out
- 4. Indicator light: MT out
- 5. Indicator light: SD
- 6. Indicator light: BF out
- 7. Indicator light: ACT PHY2
- 8. Indicator light: Link PHY2
- 9. Indicator light: ACT PHY1
- 10. ndicator light: Link PHY2
- 11. ON / OFF switch
- 12. Fool-proofing slot to the communication card
- 13. RJ45 port (Port2)
- 14. RJ45 port (Port1)
- 15. A port to connect with control board

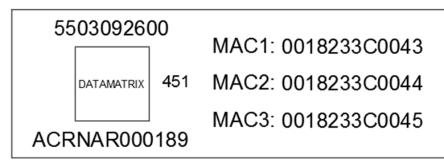Label with MAC address



Definition	Description
MAC1	Port 1 MAC Address
MAC2	Port 2 MAC Address
MAC3	Interface MAC Address

# 8-16-3 Specifications

# Network interface

Item	Specifications
Interface	RJ45
Number of ports	2 ports
Transmission cable	IEEE 802.3
Transmission rate	Category 5e shielding 100 M
Communication protocol	10/100 Mbps auto-negotiate
Interface	PROFINET

# Electrical specification

Item	Specifications
Power supply voltage	5 V <sub>DC</sub>
Power consumption	0.8 W
Insulation voltage	500 V <sub>DC</sub>
Weight (g)	27 (g)

# **Environmental conditions**

Item	Specifications
Noise immunity	ESD (IEC 61800-5-1, IEC 6100-4-2) EFT (IEC 61800-5-1, IEC 6100-4-4) Surge Teat (IEC 61800-5-1, IEC 6100-4-5) Conducted Susceptibility Test (IEC 61800-5-1, IEC 6100-4-6)
Operation and storage	-10–50°C (temperature), 90% (humidity)
Vibration & shock resistance	International Standard: IEC 61800-5-1, IEC 60068-2-6 / IEC 61800-5-1, IEC 60068-2-27

# 8-16-4 Definition of PINs in RJ45 port

RJ45	PIN	Signal	Definition
	1	Tx+	Positive pole for data transmission
	2	Tx-	Negative pole for data transmission
12345678	3	Rx+	Positive pole for receiving data
	4		N/C
	5		N/C
	6	Rx-	Negative pole for receiving data
	7		N/C
	8		N/C

# 8-16-5 To set the communication parameters when C2000 connects with PROFINET

When you operate VFD-C2000 through CMC-PN01, you should set the communication card as the source of VFD-C2000 controls and settings. You need to use the keypad to configure the following parameter addresses to the corresponding values:

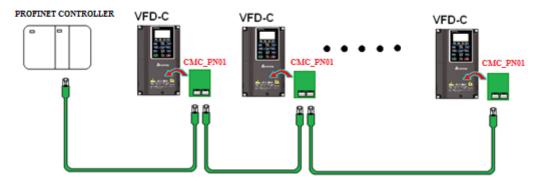
Parameters	Setting value	Description
Pr.00-20	8	The frequency command is controlled by communication card
Pr.00-21	5	The frequency command is controlled by communication card
Pr.09-30	1	Use decoding method (60xx or 20xx)
		Communication card identification:
Pr.09-60	12	When CMC-PN01 communication card is connected, the value
		of this parameter displays "12".

#### 8-16-6 LED indicator introduction

Name	Indica	ator status	Indication
		Always on	PN Stack starts normally
Ready out indicator	Yellow LED	Flashing	PN Stack starts normally, and waiting for syncing with MCU
		Off	PN Stack failed to start
MT out indicator	Green LED	-	-
SD indicator	Red LED	-	-
		Always on	Connection with PROFINET Controller is interrupted
BF out indicator	Red LED	Flashing	Connection is in normal state, but the communication with PROFINET Controller is abnormally
		Off	Connection with PROFINET Controller is in normal state
		Always on	It's online, and exchanging the data with Master normally
ACT PHY1 indicator	Orange LED	Flashing	It's offline, but hand shaking the data with Master
		Off	Initial state
LINK PHY1		Always on	Internet connection is in normal state
indicator	Green LED	Off	Doesn't connect to network
		Always on	It's online, and exchanging the data with Master normally
ACT PHY2 indicator	Orange LED	Flashing	It's offline, but hand shaking the data with Master
		Off	Initial state
LINK PHY2	Green LED	Always on	Internet connection is in normal state
indicator	GIEEN LED	Off	Doesn't connect to network

#### 8-16-7 Network connection

The wiring of CMC-PN01 shows as follows:





When the installation is finished, supply electricity to the drive. The Pr.09-60 of the drive should be able to display "PROFINET" with a current value of 12. If not, make sure your version of the drive is correct (C2000 needs 2.04 or later versions) and the communication card is correctly connected.



# 8-17 EMC-COP01 -- Communication card, CANopen
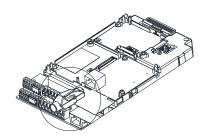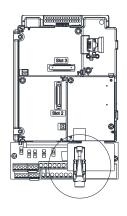
# 8-17-6 Terminating Resistor Position





# 8-17-7 RJ-45 Pin Definition



RS485 socket

Pin	Pin name	Definition
1	CAN_H	CAN_H bus line (dominant high)
2	CAN_L	CAN_L bus line (dominant low)
3	CAN_GND	Ground/0V/V-
7	CAN_GND	Ground/0V/V-

# 8-17-8 Specifications

Interface	RJ-45
Number of ports	1 Port
Transmission method	CAN
Transmission cable	CAN standard cable
Transmission speed	1Mbps, 500Kbps, 250Kbps, 125Kbps, 100Kbps, 50Kbps
Communication protocol	CANopen

# 8-18 Delta Standard Fieldbus Cables

Delta Cables	Part Number	Description	Length
	UC-CMC003-01A	CANopen cable, RJ45 connector	0.3m
	UC-CMC005-01A	CANopen cable, RJ45 connector	0.5m
	UC-CMC010-01A	CANopen cable, RJ45 connector	1m
	UC-CMC015-01A	CANopen cable, RJ45 connector	1.5m
CANopen Cable	UC-CMC020-01A	CANopen cable, RJ45 connector	2m
	UC-CMC030-01A	CANopen cable, RJ45 connector	3m
	UC-CMC050-01A	CANopen cable, RJ45 connector	5m
	UC-CMC100-01A	CANopen cable, RJ45 connector	10m
	UC-CMC200-01A	CANopen cable, RJ45 connector	20m
	UC-DN01Z-01A	DeviceNet cable	305m
DeviceNet Cable	UC-DN01Z-02A	DeviceNet cable	305m
	UC-EMC003-02A	Ethernet / EtherCAT cable, Shielding	0.3m
	UC-EMC005-02A	Ethernet / EtherCAT cable, Shielding	0.5m
	UC-EMC010-02A	Ethernet / EtherCAT cable, Shielding	1m
EtherNet / EtherCAT Cable	UC-EMC020-02A	Ethernet / EtherCAT cable, Shielding	2m
Cable	UC-EMC050-02A	Ethernet / EtherCAT cable, Shielding	5m
	UC-EMC100-02A	Ethernet / EtherCAT cable, Shielding	10m
	UC-EMC200-02A	Ethernet / EtherCAT cable, Shielding	20m
	TAP-CN01	1 in 2 out, built-in 121Ω terminal resistor	1 in 2 out
CANopen / DeviceNet TAP	TAP-CN02	1 in 4 out, built-in 121Ω terminal resistor	1 in 4 out
1/31	TAP-CN03	1 in 4 out, RJ45 connector, built-in 121Ω terminal resistor	1 in 4 out, RJ45
PROFIBUS Cable	UC-PF01Z-01A	PROFIBUS DP cable	305m

# Chapter 9 Specification

- 9-1 230V Series
- 9-2 460V Series
- 9-3 575V Series
- 9-4 690V Series
- 9-5 Environment for Operation, Storage and Transportation
- 9-6 Specification for Operation Temperature and Protection Level
- 9-7 Derating Curve of Ambient Temperature
- 9-8 Efficiency Curve

# 9-1 230V Series

Frame Size				A	4			В			С		[	)		Е		F	
	Model VFDC_ Rated Output Capacity [kVA]				015	022	037	055	075	110	150	185	220	300	370	450	550	750	900
		Rated Output	Capacity [kVA]	2.0	3.2	4.4	6.8	10	13	20	26	30	36	48	58	72	86	102	138
		Rated Outp	ut Current [A]	5	8	11	17	25	33	49	65	75	90	120	146	180	215	255	346
	uty		tor Output [kW]	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90
		Applicable Mo	tor Output [HP]	1	2	3	5	7.5	10	15	20	25	30	40	50	60	75	100	120
	Normal Duty	Overload	l Capacity									1 minu secon							
ing		Max. Output F	requency [Hz]		0.00~599.00														
Rat		Carrier Free	quency [kHz]			2~15 (	Default:	8)				2~10	(Defa	ult: 6)			2~9 (	Defau	lt: 4)
*Output Rating		Rated Output	Capacity [kVA]	1.9	2.8	4.0	6.4	9.6	12	19	25	28	34	45	55	68	81	96	131
ş		Rated Outp	ut Current [A]	4.8	7.1	10	16	24	31	47	62	71	86	114	139	171	204	242	329
	Applicable Motor Output [kW]				0.75	1.5	2.2	3.7	5.5	7.5	11	15	19	22	30	37	45	55	75
	уD	Applicable Mo	0.5	1	2	3	5	7.5	10	15	20	25	30	40	50	60	75	100	
	Heavy Duty	Overload	I Capacity									1 minu secon							
	ĺ	Max. Output F	requency [Hz]							C	0.00~3	00.00							
	•	Carrier Free			2~15 (	Default:	2)				2~10 (Default: 2)					2~	-9 (De	fault: 2)	
	Inn	ut Current [A]	Normal Duty	6.4	12	16	20	28	36	52	72	83	99	124	143	171	206	245	331
1pdt	шР		Heavy Duty	6.1	11	15	18.5	26	34	50	68	78	95	118	136	162	196	233	315
l Bu		Rated Voltage	/ Frequency				3	-phase	AC 20	00V~2	40V (-	15% ~	+10%	· 50 /	60Hz				
Rating Input		Operating Vol	tage Range							1	170~26	64V <sub>AC</sub>							
		Frequency <sup>-</sup>	Tolerance								47~6	3Hz							
		Efficiency	[%]						97.8									98.2	
		Power Fac	ctor								>0.9	98							
		Drive We	ight [Kg]		2.6	£ 0.3			5.4 ± 1		9	.8 ± 1.	5	38.5	± 1.5	64	1.8 ± 1	.5	86.5 ± 1.5
		Cooling	Method	Natural cooling							Fa	n cool	ng						
		Braking Cho	pper				Frame	A~C:	Built-in						Fr	ame D	)~F: O	ptiona	ıl
		DC chok	Frame A~C: Optional Frame D~F: Built-in																
		EMC Filt	Frame A~F: Optional																
	EMC-COP01									Fram	ıe A∼F	: Optio	nal						

Table 9-1

# NOTE

- 1. \*: The factory setting is Normal Duty mode.
- 2. The carrier frequency is default. Increasing the carrier frequency requires a reduction in current. Please refer to Chapter 9-7 Derating Curve of Ambient Temperature.
- 3. The AC motor drive should operate in derating current when its control method is set to FOC Sensorless, TQC+PG, TQC sensorless. PM+PG, PM sensorless Please refer to Pr. 06-55 for more information.
- 4. Select the AC motor drive with capacity one grade larger for the impact load application.
- 5. The rated input current will be affected by not only Power Transformer and the connection of the reactors on input side, but also fluctuates with the impedance of power side.
- 6. For Frame D and above, if the last character of the model is A then it is under IP20 protection level but the wiring terminal is under IP00 protection level; if the last character of the model is E, it is under IP20/NEMA1/UL TYPE1 protection level.

# 9-2 460V Series

	Frame Size  Model VFD C					A	4				В			С		
		Model VFD	C	007	015	022	037	040	055	075	110	150	185	220	300	
		Rated Output	t Capacity [kVA]	2.4	3.2	4.8	7.2	8.4	10	14	19	25	30	36	48	
		Rated Outp	out Current [A]	3.0	4.0	6.0	9.0	10.5	12	18	24	32	38	45	60	
	uty	Applicable Mo	otor Output [kW]	0.75	1.5	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22	30	
	al D	Applicable Mo	otor Output [HP]	1 2 3 5 5 7.5 10 15 20 25 30 40												
	Normal Duty	Overload	d Capacity									5 minutes 30 secon				
ing		Max. Output	Frequency [Hz]		0.00~599.00											
*Output Rating		Carrier Fre	quency [kHz]				2~1	5 (Defaul	t: 8)				2~1	0 (Defaul	t: 6)	
utbn		Rated Output	t Capacity [kVA]	2.3	3.0	4.5	6.5	7.6	9.6	14	18	24	29	34	45	
Ō		Rated Outp	out Current [A]	2.9	3.8	5.7	8.1	9.5	11	17	23	30	36	43	57	
	Duty	Applicable Mo	otor Output [kW]	0.4	0.75	1.5	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22	
	۷y D	Applicable Mo	otor Output [HP]	0.5	1	2	3	5	5	7.5	10	15	20	25	30	
	Heavy I	Overload	d Capacity									5 minutes 30 secon				
		Max. Output						0.00~	300.00							
		Carrier Fre	quency [kHz]				2~1	5 (Defaul	t: 2)				2~10 (Default: 2)			
	Inn	ut Current [A]	Normal Duty	4.3	5.9	8.7	14	15.5	17	20	26	35	40	47	63	
Input Rating	шр	ut Current [A]	Heavy Duty	4.1	5.6	8.3	13	14.5	16	19	25	33	38	45	60	
ıt Ra		Rated Voltage	e / Frequency				3-phas	se AC 380	0V~480V	( -15%~+	10%), 50	/ 60Hz				
Inpu		Operating Vo	ltage Range						323~5	528V <sub>AC</sub>						
		Frequency	Tolerance						47~(	63Hz						
		Efficiency	[%]						97	7.8						
		Power Fa	ctor						>0	.98						
		Drive Weigh	nt [Kg]			2.6±	: 0.3				5.4± 1			9.8± 1.5		
		Cooling Me	ethod	Natural	cooling					Fan c	ooling					
		Braking Ch	opper						Frame A~	·C: Built-ir	1					
		DC chol	ke	Frame A~C: Optional												
	EMC Filter			VFDXXXC43A: Optional; Frame A~C VFDXXXC43E: Built-in												
		EMC-COI	P01				VFD	XXXC43A	: Optiona	I; VFDXX	XC43E: B	uilt-in				

Table 9-2

# NOTE

- 1. \*: The factory setting is Normal Duty mode.
- 2. The carrier frequency is default. Increasing the carrier frequency requires a reduction in current. Please refer to Chapter 9-7 Derating Curve of Ambient Temperature.
- 3. The AC motor drive should operate in derating current when its control method is set to FOC Sensorless, TQC+PG, TQC sensorless. PM+PG, PM sensorless Please refer to Pr. 06-55 for more information.
- 4. Select the AC motor drive with capacity one grade larger for the impact load application.
- 5. The rated input current will be affected by not only Power Transformer and the connection of the reactors on input side, but also fluctuates with the impedance of power side.
- 6. For Frame A, B and C, Model VFDXXXC43A is under IP20/NEMA1/UL TYPE1 protection level.
- 7. For Frame D and above, if the last character of the model is A then it is under IP20 protection level but the wiring terminal is under IP00 protection level; if the last character of the model is E, it is under IP20/NEMA1/UL TYPE1 protection level.

Frame Size  Model VFD- C			D	0	l	D	E		F	-	(	3		Н		
	Model VFDC  Rated Output Capacity [kVA]			450	550	750	900	1100	1320	1600	1850	2200	2800	3150	3550	4500
		Rated Output Capacity [kVA]	58	73	88	120	143	175	207	247	295	367	438	491	544	720
		Rated Output Current [A]	73	91	110	150	180	220	260	310	370	460	550	616	683	866
	ξ	Applicable Motor Output [kW]	37	45	55	75	90	110	132	160	185	220	280	315	355	450
	al Du	Applicable Motor Output [HP]	50	60	75	100	125	150	175	215	250	300	375	420	475	600
	Normal Duty	Overload Capacity	120% of rated output current: 1 minute for every 5 minutes; 160% of rated output current: 3 seconds for every 30 seconds													
ing		Max. Output Frequency [Hz]		0.00~599.00												
*Output Rating		Carrier Frequency [kHz]	2~10	(Defau	ılt: 6)					2~9	9 (Defau	lt: 4)				
ıtput		Rated Output Capacity [kVA]	55	69	84	114	136	167	197	235	280	348	417	466	517	677
Ş		Rated Output Current [A]	69	86	105	143	171	209	247	295	352	437	523	585	649	815
	Applicable Motor Output [kW]			37	45	55	75	90	110	132	160	185	220	280	315	355
	Applicable Motor Output [HP]			53	60	75	100	125	150	175	215	250	300	375	425	475
	Heavy Duty	Overload Capacity		150% of rated output current: 1 minute for every 5 minutes; 180% of rated output current: 3 seconds for every 30 seconds												
		Max. Output Frequency [Hz]							0.0	0~300.0	0					
		Carrier Frequency [kHz]	2~10	(Defau	ılt: 2)					2~9	9 (Defau	lt: 2)				
	Inn	ut Current [A]	74	101	114	157	167	207	240	300	380	400	494	555	625	866
ating	p	Heavy Duty	70	96	108	149	159	197	228	285	361	380	469	527	594	815
Input Rating		Rated Voltage / Frequency					3-pha	ase AC 3	380V~48	0V (-15%	% <b>+10</b> %)	, 50 / 60	Hz			
lub		Operating Voltage Range							323	3~528V <sub>A</sub>	С					
		Frequency Tolerance							4	7~63Hz						
		Efficiency [%]		97	7.8						98	3.2				
		Power Factor								>0.98			1			
		Drive Weight [Kg]	27 ±	1.5	38.5	± 1.5	64.8	± 1.5	86.5	± 1.5	134	± 4		22	28	
		Cooling Method								n cooling						
		Braking Chopper	Frame D0~H: Optional													
		DC choke	Frame D0~H: Built-in													
		EMC Filter	EMC Filter Frame D0~H: Optional													
		EMC-COP01					VFD	XXC43	A : Optio	onal; VFI	DXXXC4	3E: Built	t-in			

Table 9-3

# NOTE

- 1. \*: The factory setting is Normal Duty mode.
- 2. The carrier frequency is default. Increasing the carrier frequency requires a reduction in current. Please refer to Chapter 9-7 Derating Curve of Ambient Temperature.
- 3. The AC motor drive should operate in derating current when its control method is set to FOC Sensorless, TQC+PG, TQC sensorless. PM+PG, PM sensorless Please refer to Pr. 06-55 for more information.
- 4. Select the AC motor drive with capacity one grade larger for the impact load application.
- 5. The rated input current will be affected by not only Power Transformer and the connection of the reactors on input side, but also fluctuates with the impedance of power side.
- 6. For Frame A, B and C, Model VFDXXXC43A is under IP20/NEMA1/UL TYPE1 protection level.
- 7. For Frame D and above, if the last character of the model is A then it is under IP20 protection level but the wiring terminal is under IP00 protection level; if the last character of the model is E, it is under IP20/NEMA1/UL TYPE1 protection level.
- 8. Model VFD4500C43x does not have UL certification.

# 9-3 575V Series

Frame Size				А		В								
		Model VFD	C53A-21	015	022	037	055	075	110	150				
	,	Rated Output C	apacity [kVA]	3	4.3	6.7	9.9	12.1	18.6	24.1				
	Light Duty	Rated Output	Current [A]	3	4.3	6.7	9.9	12.1	18.7	24.2				
	ight	Applicable Moto	r Output [kW]	1.5	2.2	3.7	5.5	7.5	11	15				
	_	Applicable Moto	r Output [HP]	2	3	5	7.5	10	15	20				
0	ty	Rated Output C	apacity [kVA]	2.5	3.6	5.5	8.2	10	15.4	19.9				
*Output Rating	Normal Duty	Rated Output	Current [A]	2.5	3.6	5.5	8.2	10	15.5	20				
out R	orme	Applicable Moto	r Output [kW]	0.75	1.5	2.2	3.7	5.5	7.5	11				
Outp	ž	Applicable Moto	r Output [HP]	1	2	3	5	7.5	10	15				
*	ty	Rated Output C	apacity [kVA]	2.1	3	4.6	6.9	8.3	12.9	16.7				
	, Dui	Rated Output	Current [A]	2.1	3	4.6	6.9	6.9 8.3		16.8				
	Heavy Duty	Applicable Moto	r Output [kW]	0.75	1.5	2.2	3.7	3.7	7.5	7.5				
	I	Applicable Moto	r Output [HP]	1	2	3	5	5	10	10				
		Carrier Frequer	icy [kHz]	2~15 (Default: 6)										
			Light Duty	3.8	5.4	10.4	14.9	16.9	21.3	26.3				
Б	Inp	out Current [A]	Normal Duty	3.1	4.5	7.2	12.3	15	18	22.8				
Ratir			Heavy Duty	2.6	2.6 3.8 5.8 10.7 12.5 16.9									
Input Rating		Rated Voltage /	Frequency			3-phase AC 52	25 ~ 600 V ( -15%	~+10%), 50/60 H	lz					
드		Operating Volta	ge Range				446~660V <sub>AC</sub>							
		Frequency To	lerance				47~63Hz							
		Efficiency [%	]		97			98						
		Power Facto	r				>0.98							
		Drive Weight [I	Kg]		3 ± 0.3			4.8 ±	: 1					
		Cooling Metho	od	Natural	cooling			Fan cooling						
		Braking Chopp	per	Frame A~B: Built-in										
		DC choke		Frame A~B: Optional										
		EMC Filter					Frame A~B: Option	onal						

Table 9-4



<sup>\*</sup> Parameter 00-16; available load modes: Light Duty (LD), Normal Duty (ND) and Heavy Duty (HD); default setting is LD mode

# 9-4 690V Series

Frame Size				(	<b>C</b>		[	)		E	<b>=</b>		
	Model VFD C63B-00 / -21  Rated Output Capacity [kVA]				220	300	370	450	550	750	900	1100	1320
		Rated Outp	out Capacity [kVA]	29	36	43	54	65	80	103	124	149	179
	uty	Applicable Mot	or Output [690V, kW]	18.5	22	30	37	45	55	75	90	110	132
	Light Duty	Applicable Mot	tor Output [690V, HP]	25	30	40	50	60	75	100	125	150	175
	Lig	Applicable Mot	tor Output [575V, HP]	20	25	30	40	50	60	75	100	125	150
		Rated Ou	tput Current [A]	24	30	36	45	54	67	86	104	125	150
		Rated Outp	out Capacity [kVA]	24	29	36	43	54	65	80	103	124	149
ing	Applicable Motor Output [690V, kW] Applicable Motor Output [690V, HP] Applicable Motor Output [575V, HP]			15	18.5	22	30	37	45	55	75	90	110
*Output Rating	Applicable Motor Output [690V, HP]				25	30	40	50	60	75	100	125	150
ltpul	Nor	Applicable Mot	tor Output [575V, HP]	15	20	25	30	40	50	60	75	100	125
õ		Rated Ou	tput Current [A]	20	24	30	36	45	54	67	86	104	125
		Rated Outp	out Capacity [kVA]	17	24	29	36	43	54	65	80	103	124
	Outy	Applicable Mot	11	15	18.5	22	30	37	45	55	75	90	
	Heavy Duty	Applicable Mot	15	20	25	30	40	50	60	75	100	125	
	He	Applicable Mot	tor Output [575V, HP]	10	15	20	25	30	40	50	60	75	100
		Rated Ou	itput Current [A]	14	20	24	30	36	45	54	67	86	104
		Carrier Fre	quency [kHz]		2~9 (Default: 4)								
			Light Duty	29	36	43	54	65	81	84	102	122	147
β	I	nput Current [A]	Normal Duty	24	29	36	43	54	65	66	84	102	122
Ratir			Heavy Duty	20	24	29	36	43	54	53	66	84	102
Input Rating		Rated Voltag	je / Frequency			3-pha	ase AC 52	5 V~ 690 V	/ ( -15%~+	10%), 50/	60 Hz		
=		Operating V	oltage Range					446 ~ 7	759 V <sub>AC</sub>				
		Frequency	y Tolerance					47~6	63Hz				
		Efficienc	y [%]					9	7				
		Power F	actor					>0	.98				
		Drive Weig	ht [Kg]		10 ±	: 1.5		39 ±	: 1.5		61 ±	± 1.5	
		Cooling M					Fan c	ooling					
		Braking Cl	Frame C: Built-in Frame D~E: Optional										
		DC ch		Frame C	Optional					E: Built-in			
		EMC F	Filter					Frame C~l	E: Optiona	I			No 0.5

Table 9-5



<sup>\*</sup> Parameter 00-16; available load modes: Light Duty (LD), Normal Duty (ND) and Heavy Duty (HD); default setting is LD mode

Frame Size				F		G		Н				
	Model VFD C63B-00/21			1600	2000	2500	3150	4000	4500	5600	6300	
*Output Rating		Rated Output Capacity [kVA]		215	263	347	418	494.5	534.7	678.5	776	
	Light Duty	Applicable Motor Output [690V, kW]		160	200	250	315	400	450	560	630	
		Applicable Motor Output [690V, HP]		215	270	335	425	530	600	745	850	
		Applicable Motor Output [575V, HP]		175	200	250	350	400	450	500	745	
		Rated Output Current [A]		180	220	290	350	430	465	590	675	
		Rated Output Capacity [kVA]		179	215	239	347	402.5	442.7	534.7	776	
	Juty	Applicable Motor Output [690V, kW]		132	160	200	250	315	355	450	630	
	Normal Duty	Applicable Motor Output [690V, HP]		175	215	270	335	425	475	600	850	
Indir	Nori	Applicable Motor Output [575V, HP]		150	175	200	250	350	400	450	745	
ر ک		Rated Output Current [A]		150	180	220	290	350	385	465	675	
		Rated Output Capacity [kVA]		149	179	215	263	333.5	356.5	483	776	
	Juty	Applicable Motor Output [690V, kW]		110	132	160	200	250	280	400	630	
	Heavy Duty	Applicable Motor Output [690V, HP]		150	175	215	270	335	375	530	850	
	Рез	Applicable Motor Output [575V, HP]		125	150	175	200	250	335	450	745	
		Rated Output Current [A]		125	150	180	220	290	310	420	675	
	Carrier Frequency [kHz]				2~9 (Default: 4)							
	Input Current [A] Light Duty  Normal Duty			178	217	292	353	454	469	595	681	
Б				148	178	222	292	353	388	504	681	
Ratii	Heavy Duty		123	148	181	222	292	313	423	681		
Input Rating	Rated Voltage / Frequency			3-phase AC 525 V~ 690V ( -15%~+10%), 50/60 Hz								
=	Operating Voltage Range			446 ~ 759 V <sub>AC</sub>								
	Frequency Tolerance					47~63 Hz						
		Efficienc	97 98									
	Power Factor				>0.98							
	Drive Weight [Kg]				88 ± 1.5 135 ± 4 243 ± 5							
Cooling Method				Fan cooling								
Braking Chopper				Frame F~H: Optional								
DC choke				Frame F~H: Built-in								
EMC Filter				Frame F~H: Optional								

Table 9-6



<sup>\*</sup> Parameter 00-16; available load modes: Light Duty (LD), Normal Duty (ND) and Heavy Duty (HD); default setting is LD mode

# **General Specifications**

	Control Method	230V/ 460V model: 1: V/F, 2: SVC, 3: VF+PG, 4: FOC+PG, 5: TQC+PG, 6: PM+PG, 7: FOC sensorless, 8: TQC sensorless, 9: PM sensorless 575V/ 690V model: 1: V/F, 2: V/F+PG, 3: SVC
acteristics	Starting Torque	IM: Reach up to 150% of 1/50 rated speed PM: Reach up to 150% of 1/100 rated speed
	V/F Curve	4 point adjustable V/F curve and square curve
	Speed Circuit Response Bandwidth	Open-circuit: 5Hz Close-circuit: Max. 40Hz for IM, and Max. 100Hz for PM
	Torque Limit	230V/ 460V model: Normal duty: a max. of 160% torque current; Heavy duty: a max. of 180% torque current 575V/ 690V model: Max. 200% torque current
	Torque Accuracy	TQC + PG: ±5% TQC Sensorless: ±15%
	Max. Output Frequency (Hz)	Normal duty: 0.01~599.00Hz; Heavy duty: 0.00~300.00 Hz
	Frequency Output Accuracy	Digital command: ±0.01%, -10°C~ +40°C; Analog command: ±0.1%, 25 ±10°C
	Output Frequency Resolution	Digital command: 0.1Hz, Analog command: 0.05% X max. output frequency (Pr.01-00) / 11 bit
Control Characteristics	Overload Tolerance	230V/ 460V model:  Normal duty: 120% of rated current can endure for1 minute during every 5 minutes  160% of rated current can endure for 3 seconds during every 30 seconds.  Heavy duty: 150% of rated current can endure for1 minute during every 5 minutes  180% of rated current can endure for 3 seconds during every 30 seconds.  575V/ 690V model:
		Light duty: 120% of rated current can endure for 1 minute.  Normal duty: 120% of rated current can endure for 1 minute, 150% can endure for 3 seconds.  Heavy duty: 150% of rated current can endure for 1 minute, 180% can endure for 3 seconds.
	Frequency Setting Signal	-10~ +10V, 0~ +10V, 4~20mA, 0~20mA, Pulse input
	Accel. / decel. Time	0.00~600.00 / 0.0~6000.0 seconds
	Main Control Function	Torque control, Speed/torque control switching, Feed forward control, Zero-servo control, Momentary power loss ride thru, Speed search, Over-torque detection, Torque limit, 16-step speed (max), Accel. / decel. time switch, S-curve accel. / decel., 3-wire sequence, Auto-Tuning (rotational, stationary), Dwell, Slip compensation, Torque compensation, JOG frequency, Frequency upper / lower limit settings, DC injection braking at start / stop, High slip braking, PID control (with sleep function), Energy saving control, MODBUS communication (RS-485 RJ45, max. 115.2 Kbps), Fault restart, Parameter copy
	Fan Control	230V model: Models above VFD150C23A (including VFD150C23A) are PWM control Models below VFD110C23A (including VFD110C23A) are ON / OFF switch control 460V model: Models above VFD185C43A (including VFD185C43A) are PWM control Models below VFD150C43A (including VFD150C43A) are ON / OFF switch control 575V/ 690V model: PWM control
	Motor Protection	Electronic thermal relay protection
Protection Characteristics		For drive model 230V and 460V  Over-current protection: 240% rated current for normal duty; 250% rated current for heavy duty  Current clamp  Normal duty: 170~175%  Heavy duty: 175~180%  For drive model 575V and 690V (except 630kW)
	Over-current Protection	Over-current protection: 240% rated current for normal duty  Current clamp "Light duty: 125~145% "; "Normal duty: 170~175% "; "Heavy duty: 200~250% "  For 630kW  Over-current protection: 240% rated current for normal duty  Current clamp "Light duty, normal duty, and heavy duty: 170~175% "
	Over-voltage Protection	230V model: drive will stop when DC-BUS voltage exceeds 410V 460V model: drive will stop when DC-BUS voltage exceeds 820V 690V model: drive will stop when DC-BUS voltage exceeds 1189V
	Over-temperature Protection	Built-in temperature sensor

# Chapter 9 Specification | C2000

Ī	Stall Prevention	Stall prevention during acceleration, deceleration and running independently				
	Restart after Instantaneous Power Failure	Parameter setting up to 20 seconds				
	Grounding Leakage Current Protection	Leakage current is higher than 50% of rated current of the AC motor drive				
	Short-circuit Current Rating (SCCR)	Per UL 508C, the drive is suitable for use on a circuit capable of delivering not more than 100kA symmetrical amperes (rms) when protected by fuses given in the fuse table.				
	Certifications	( € cUL) us GB/T12668-2				

Table 9-7



The setting range of max. output frequency changes as carrier wave and control modes changes. Refer to Pr. 01-00 and Pr. 06-55 for more information.

Model VFD4500C43x does not have UL certification.

## 9-5 Environment for Operation, Storage and Transportation

			environment, such as dust, direct sunlight, corrosive / inflammable gasses, alt in the air must be less than 0.01mg / cm² every year.	
	Installation location	IEC60364-1 / IEC60664-1 Pollution degree 2, Indoor use only		
	Surrounding Temperature	Storage / Transportation	-25 ~ +70	
	(°C)	Non-condensation, non-frozen		
		Operation	Max. 95%	
	Rated Humidity	Storage / Transportation	Max. 95%	
		No condense water		
Environment	Air Pressure	Operation / Storage	86~106	
	(kPa)	Transportation	70~106	
		IEC 60721-3-3		
	Pollution Level	Operation	Class 3C3; Class 3S2	
		Storage	Class 1C2; Class 1S2	
		Transportation	Class 2C2; Class 2S2	
			lrive is to be used under harsh environment with high level of contamination dust), make sure it is installed in an environment qualified for IP54 such as in	
	Altitude	Operation	If AC motor drive is installed at altitude 0~1000m, follow normal operation restriction. If it is installed at altitude 1000~2000m, decrease 1% of rated current or lower 0.5°C of temperature for every 100m increase in altitude. Maximum altitude for Corner Grounded is 2000m.	
Daakaga Dran	Storage	ISTA procedure 1A (according to weight) IEC60068-2-31		
Package Drop	Transportation	13 TA procedure TA (according to weight) IEC00000-2-31		
Vibration	1.0mm, peak to peak value range from 2Hz to 13.2 Hz; 0.7G~1.0G range from 13.2Hz to 55Hz; 1.0G range from 55Hz to 512Hz. Comply with IEC 60068-2-6			
Impact	IEC / EN 60068	60068-2-27		
Operation Position	Max. allowed o	ffset angle ±10° (ι ition)	ınder normal 10°→ 10°	
			Table 0.0	

Table 9-8

## 9-6 Specification for Operation Temperature and Protection Level

Model	Frame	Top cover	Conduit Box	Protection Level	Operation Temperature
	Frame A~C re 230V: 0.75~22kW 460V: 0.75~30kW  Frame D~H	Top cover removed	Standard conduit plate	IP20 / UL Open Type	-10~50°C
		Standard with top cover		IP20 / UL Type1 / NEMA1	-10~40°C
VFDxxxCxxA VFDxxxCxxS		N/A	No conduit box	IP00 IP20 / UL Open Type  The circled area: IP00 Other than the circled area: IP20  Figure 9-1	-10~50°C
VFDxxxCxxE VFDxxxCxxU	Frame A~C 460V: 0.75~30kW	Top cover removed	Standard conduit plate	IP20 / UL Open Type	-10~50°C
		Standard with top cover		IP20 / UL Type1 / NEMA1	-10~40°C
	Frame D~H 230V: ≥ 22kW 460V: ≥ 30kW	N/A	Standard conduit box	IP20 / UL Type1 / NEMA1	-10~40°C

Table 9-9

## 9-7 Derating Curve of Ambient Temperature

Protection Level	Operating Environment		
	230V / 460V: When the AC motor drive operates at the rated current, and the		
	ambient temperature has to be between -10 ~ +40°C. When the		
	temperature is over 40°C, the rated current decreases 2% for every		
UL Type I / IP20	increase by 1°C. The maximum allowable temperature is 60°C.		
OL Type 17 IF 20	575V / 690V: When the AC motor drive operates at the rated current, and the		
	ambient temperature has to be between -10 ~ +40°C. When the		
	temperature is over 40°C, the rated current decreases 2.5% for every		
	increase by 1°C. The maximum allowable temperature is 60°C.		
	230V / 460V: When the AC motor drive operates at the rated current, and the		
	ambient temperature has to be between -10 ~ +50°C. When the		
	temperature is over 50°C, the rated current decreases 2% for every		
UL Open Type / IP20	increase by 1°C. The maximum allowable temperature is 60°C.		
OL Open Type / II 20	575V / 690V: When the AC motor drive operates at the rated current, and the		
	ambient temperature has to be between -10 ~ +50°C. When the		
	temperature is over 50°C, the rated current decreases 2.5% for every		
	increase by 1°C. The maximum allowable temperature is 60°C.		
	If AC motor drive is installed at altitude 0~1000m, follow normal operation		
	restriction. If it is install at altitude 1000~2000m, decrease 1% of rated current or		
High Altitude	lower 0.5°C of temperature for every 100m increase in altitude. Maximum altitude		
	for Corner Grounded is 2000m. Contact Delta for more information, if you need to		
	use this motor drive at an altitude of 2000m or higher.		

Table 9-10

## Ambient temperature derating curve

230V / 460V Normal control ambient temperature derating curve

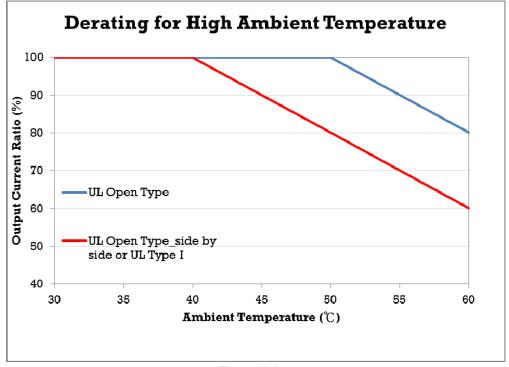


Figure 9-2

## 230V / 460V Advanced control ambient temperature derating curve

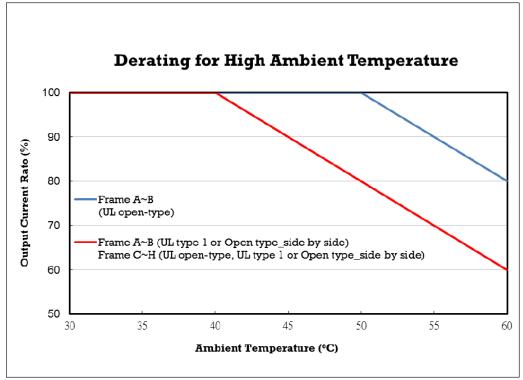


Figure 9-3

## 575V / 690V Ambient temperature derating curve

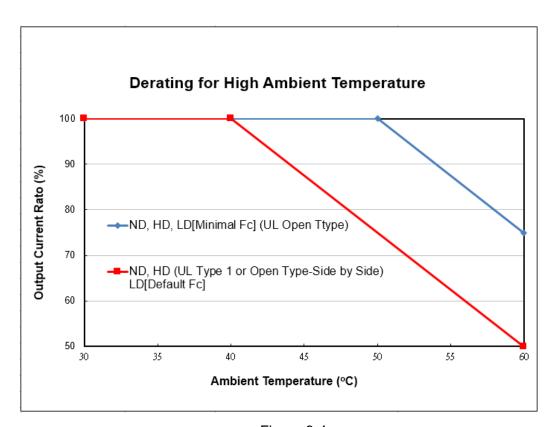


Figure 9-4

## Current derating at high altitude

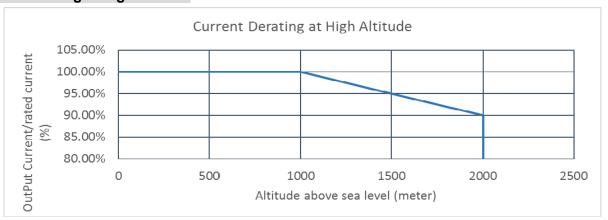


Figure 9-5


Table 9-10

## Carrier wave derating curve

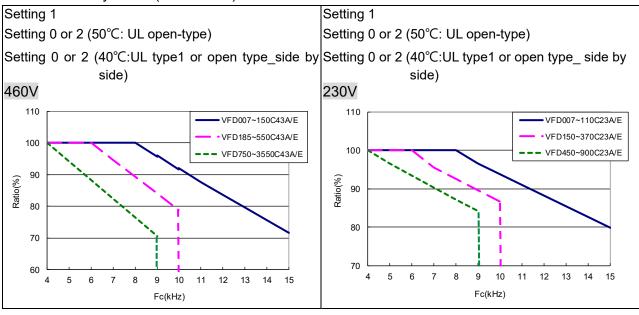
230V / 460V

General Control Derating Curve (Pr.00-10=1 and Pr.00-11=0~3)


In Normal Duty mode (Pr.00-16=0)




## In Heavy Duty mode (Pr.00-16=1)

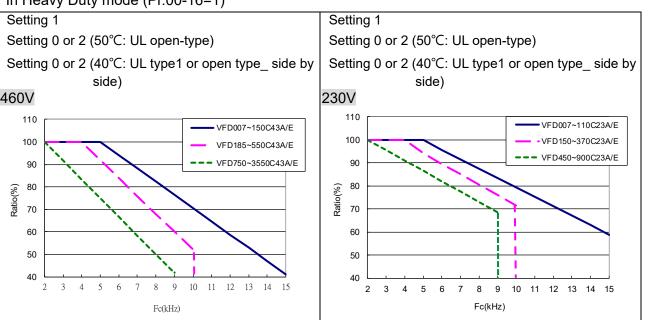

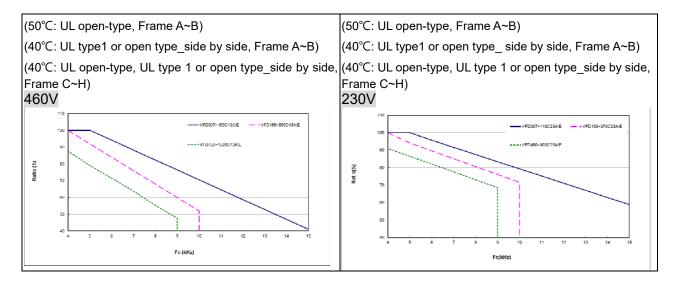Advanced Control Derating Curve (Pr.00-10=1, and Pr.00-11=4~7; or Pr.00-10=3, and Pr.00-13=1~3) In Normal Duty mode (Pr.00-16=0)



## In Heavy Duty mode (Pr.00-16=1)

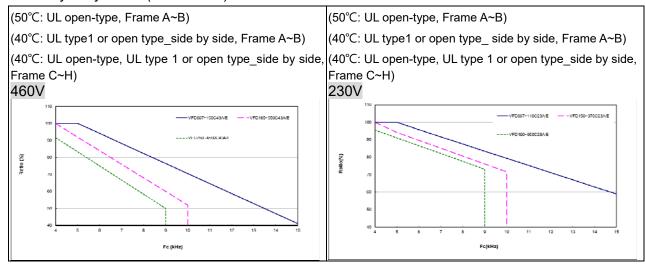

## 575V Derating Curve (Pr.00-16=0 or 1 or 2)

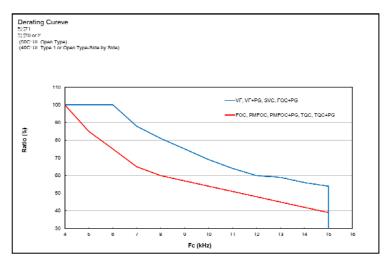


Figure 9-6

## 690V Derating Curve

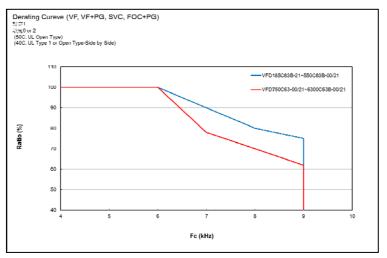


Figure 9-7

## 9-8 Efficiency Curve



Figure 9-8

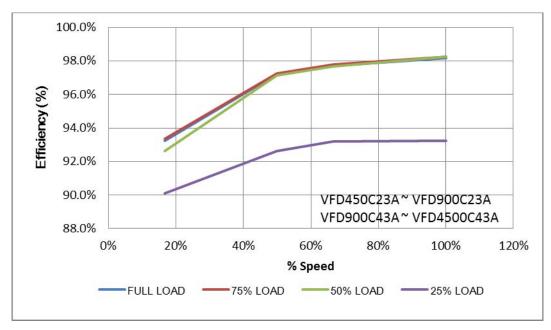


Figure 9-9

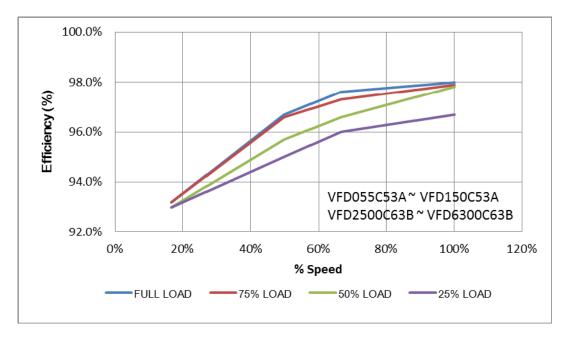


Figure 9-10

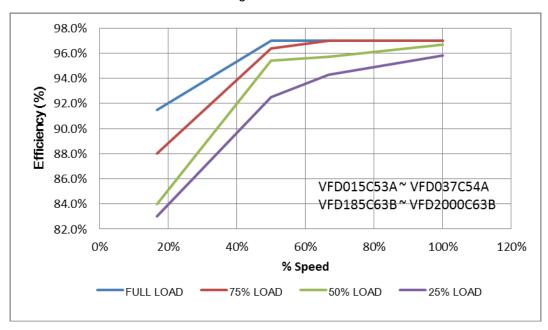


Figure 9-11

# Chapter 10 Digital Keypad

- 10-1 Descriptions of Digital Keypad
- 10-2 Function of Digital Keypad KPC-CC01
- 10-3 TPEditor Installation Instruction
- 10-4 Fault Code Description of Digital Keypad KPC-CC01
- 10-5 Unsupported Functions when using TPEditor on KPC-CC01 Keypad

## 10-1 Descriptions of Digital Keypad

The default communication format is ASCII 9600, 7, N, 2 in C2000. But the communication format is RTU 19200, 8, N, 2. To enable the communication between C2000 and KPC-CC01, you need to set up the communication parameters of C2000 before linking the drive and the keypad (KPC-CC01).

Follow the set-up steps below:

- Set Pr.09-00 = 1 (the communication address)
- Set Pr.09-01 = 19.2 kbps (the COM1 transmission speed)
- Set Pr.09-04 = 13 (8, N, 2; RTU) (the COM1 communicatino protocol)



### KPC-CC01

Communication Interface RJ45 (socket), RS-485 interface

Installation Method

- 1. Embedded type and can be put flat on the surface of the control box. The front cover is water proof.
- 2. Buy a MKC-KPPK model to do wall mounting or embedded mounting. Its protection level is IP66.
- 3. The maximum RJ45 extension lead is 5 m (16ft)
- 4. This keypad can only be used on Delta's motor drive C2000, CH2000 and CP2000.

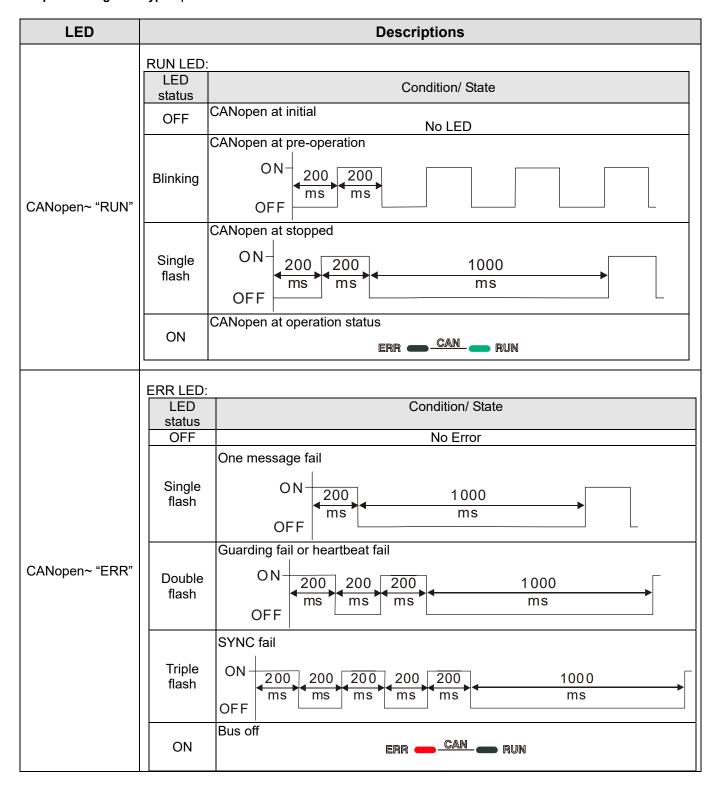
## **Descriptions of Keypad Functions**

Key	Descriptions			
RUN	Start Operation Key  1. It is only valid when the source of operation command is from the keypad.  2. It can operate the AC motor drive by the function setting and the RUN LED will be ON.  3. It can be pressed again and again at stop process.			
STOP	<ol> <li>Stop Command Key. This key has the highest priority in any situation.</li> <li>When it receives STOP command, no matter if the AC motor drive is in operation or stop status, the AC motor drive needs to execute "STOP" command.</li> <li>The RESET key can be used to reset the drive after the fault occurs.</li> <li>The reasons why the error cannot be reset:         <ul> <li>a. Because the condition which triggers the fault is not cleared. When the condition is cleared, the fault can be reset.</li> <li>b. Because it's the fault status checking when power-on. When the condition is cleared, re-power again, and the fault can be reset.</li> </ul> </li> </ol>			
FWD	Operation Direction Key  1. This key only controls the operation direction, and will NOT activate the drive. FWD: forward, REV: reverse.  2. Refer to the LED descriptions for more details.			
ENTER	ENTER Key Press ENTER and go to the no command.	ext level. If it is the last	level then press ENTER to execute the	
ESC	ESC Key ESC key function is to leave current menu and return to the last menu. It also functions as a return key or cancel key in the sub-menu.			
MENU	Press menu to return to main n Menu content: 1. Parameter Setup 2. Quick Start 3. Application Selection List 4. Changed List 5. Copy Parameter 6. Fault Record	7. Language Setup 8. Time Setup 9. Keypad Locked 10. PLC Function 11. Copy PLC 12. Display Setup	13. Startup Menu 14. Main Page 15. PC Link 16. Start Wizard	


Key	Descriptions
	Direction: Left / Right / Up / Down  1. In the numeric value setting mode, it is used to move the cursor and change the numeric value.  2. In the menu/text selection mode, it is used for item selection.
F1 F2 F3 F4	<ol> <li>Function Key</li> <li>The functions keys have factory settings and can be defined by users. The factory settings of F1 and F4 work with the function list below. For example, F1 is JOG function, F4 is a speed setting key for adding/deleting user defined parameters.</li> <li>Other functions must be defined by TPEditor first (please use version 1.60 or above). TPEditor software can be downloaded at:         http://www.deltaww.com/services/DownloadCenter2.aspx?seciD=8&amp;pid=2&amp;tid=0&amp;CID=06&amp;itemID=060302&amp;typeID=1&amp;downloadID=.&amp;title= Select     </li> </ol>
	Product Series&dataType=8:✓=1&hl=en-US Please refer to instruction for TPEditor in Chapter 10-3.
HAND	<ol> <li>HAND Key</li> <li>This key is executed by the parameter settings of the source of Hand frequency and hand operation. The factory settings of both source of Hand frequency and hand operation are the digital keypad.</li> <li>Press HAND key at stop status, the setting will switch to hand frequency source and hand</li> </ol>
	operation source. Press HAND key at operation status, it stops the AC motor drive first (display AHSP warning), and switch to hand frequency source and hand operation source.  3. KPC-CC01 displays HAND mode on the screen.
AUTO	AUTO Key  1. This key is executed by the parameter settings of the source of AUTO frequency and AUTO operation. The factory setting is the external terminal (source of operation is 4~20mA).
	<ol> <li>Press Auto key at stop status, the setting will switch to hand frequency source and hand operation source. Press Auto key at operation status, it stops the AC motor drive first (display AHSP warning), and switch to auto frequency source and auto operation source.</li> <li>KPC-CC01 displays AUTO mode on the screen</li> </ol>

## **Descriptions of LED Functions**

LED	Descriptions
RUN	Steady ON: operation indicator of the AC motor drive, including DC brake, zero speed, standby, restart after fault and speed search.  Blinking: drive is decelerating to stop or in the status of base block.  Steady OFF: drive doesn't execute the operation command
STOP	Steady ON: stop indicator of the AC motor drive. Blinking: drive is in the standby status. Steady OFF: drive doesn't execute "STOP" command.
FWD	Operation Direction LED  1. Green light is on, the drive is running forward.  2. Red light is on, the drive is running backward.  3. Twinkling light: the drive is changing direction.  Operation Direction LED under Torque Mode
	<ol> <li>Green light is ON: when the torque command ≥ 0, and the motor is running forward.</li> <li>Red light is ON: when the torque command &lt; 0, and the motor is running backward.</li> <li>Twinkling light: when the torque command &lt; 0, and the motor is running forward.</li> </ol>




## 10-2 Function of Digital Keypad KPC-CC01

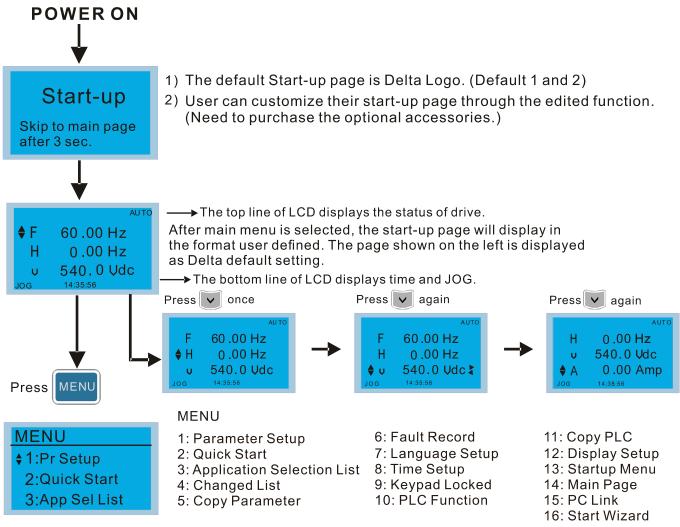




- 1. Startup page can only display pictures, no flash.
- 2. When Power ON, it will display startup page then the main page. The main page displays Delta's default setting F/H/A/U, the display order can be set by Pr.00.03 (Startup display). When the selected item is U page, use left key and right key to switch between the items, the display order of U page is set by Pr.00.04 (User display).

## **Display Icon**





- : present setting
- ▼: roll down the page for more options

Press for more options

► : show complete sentence

Press ( ) for complete information


## Display item



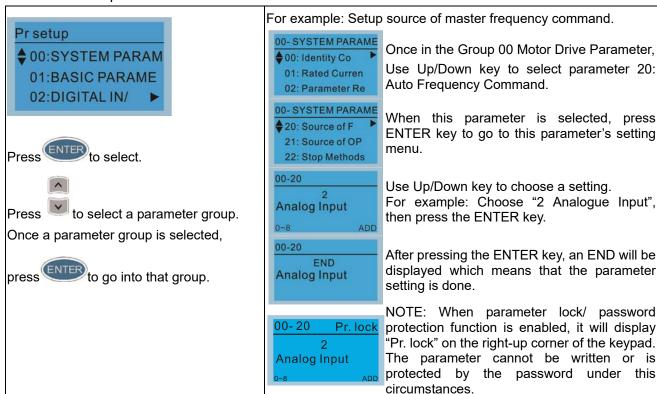
### **MENU**

1: Parameter Setup 6: Fault Record 11: Copy PLC 2: Quick Start 7: Language Setup 12: Display Setup 13: Startup Menu 3: Application Selection List 8: Time Setup 9: Keypad Locked 4: Changed List 14: Main Page 10: PLC Function 5: Copy Parameter 15: PC Link 16: Start Wizard

### 1. Parameter Setup



### 2. Quick Start

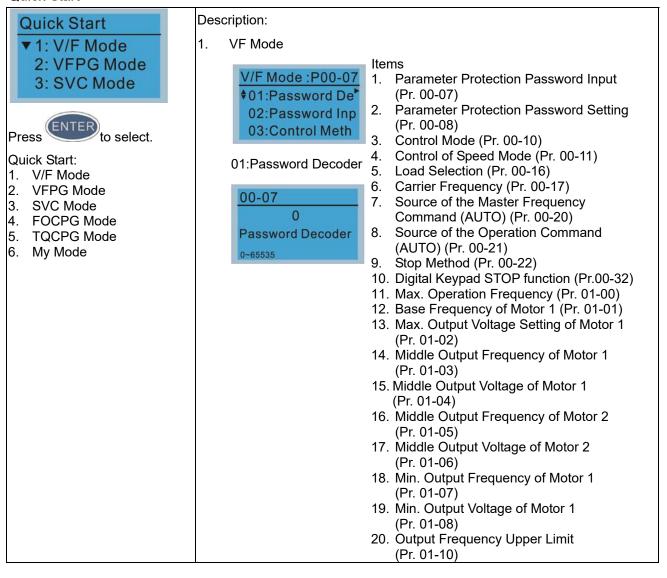


- 21. Output Frequency Lower Limit (Pr. 01-11)
- 22. Accel. Time 1 (Pr. 01-12)
- 23. Decel Time 1 (Pr. 01-13)
- 24. Over-voltage Stall Prevention (Pr. 06-01)
- 25. Derating protection (Pr. 06-55)
- 26. Software Brake Level (Pr. 07-00)
- 27. Speed tracking during start-up (Pr. 07-12)
- 28. Emergency stop (EF) & force to stop selection (Pr. 07-20)
- 29. Filter Time of Torque Command (Pr. 07-24)
- 30. Filter Time of Slip Compensation (Pr. 07-25)
- 31. Torque compensation gain (Pr. 07-26)
- 32. Slip Compensation Gain (Pr. 07-27)

### 2. VFPG Mode

VFPG Mode:P00-07 †01:Password De<sup>b</sup> 02:Password Inp 03:Control Meth

01: Password Decoder



#### Items

- Parameter Protection Password Input (Pr. 00-07)
- Parameter Protection Password Setting (Pr. 00-08)
- 3. Control Mode (Pr. 00-10)
- 4. Control of Speed Mode (Pr. 00-11)
- 5. Load Selection (Pr. 00-16)
- 6. Source of the Master Frequency Command (AUTO) (Pr. 00-20)
- 7. Source of the Operation Command (AUTO) (Pr. 00-21)
- 8. Stop Method (Pr. 00-22)
- 9. Digital Keypad STOP function (Pr. 00-32)
- 10. Max. Operation Frequency (Pr. 01-00)
- 11. Base Frequency of Motor 1 (Pr. 01-01)
- Max. Output Voltage Setting of Motor 1 (Pr. 01-02)
- 13. Min. Output Frequency of Motor 1 (Pr. 01-07)
- 14. Min. Output Voltage of Motor 1 (Pr. 01-08)
- 15. Output Frequency Upper Limit (Pr. 01-10)
- 16. Output Frequency Lower Limit (Pr. 01-11)
- 17. Accel. Time 1 (Pr. 01-12)
- 18. Decel Time 1 (Pr. 01-13)
- 19. Over-voltage Stall Prevention (Pr. 06-01)
- 20. Software Brake Level (Pr. 07-00)
- 21. Filter Time of Torque Command (Pr. 07-24)
- 22. Filter Time of Slip Compensation (Pr. 07-25)
- 23. Slip Compensation Gain (Pr. 07-27)
- 24. Encoder Type Selection (Pr. 10-00)
- 25. Encoder Pulse (Pr. 10-01)
- 26. Encoder Input Type Setting (Pr. 10-02)
- 27. ASR Control (P) 1 (Pr. 11-06)
- 28. ASR Control (I) 1 (Pr. 11-07)
- 29. ASR Control (P) 2 (Pr. 11-08)
- 30. ASR Control (I) 2 (Pr. 11-09)
- 31. P Gain of Zero Speed (Pr. 11-10)
- 32. I Gain of Zero Speed (Pr. 11-11)

3. SVC Mode

\$VC Mode :P00-07 ♦01:Password De 02:Password Inp 03:Control Meth

01: Password Decoder



#### Items

- 1. Parameter Protection Password Input (Pr. 00-07)
- 2. Parameter Protection Password Setting (Pr. 00-08)
- 3. Control Mode (Pr. 00-10)
- 4. Control of Speed Mode (Pr. 00-11)
- 5. Load Selection (Pr. 00-16)
- 6. Carrier Frequency (Pr. 00-17)
- 7. Source of the Master Frequency Command (AUTO) (Pr. 00-20)
- 8. Source of the Operation Command (AUTO) (Pr. 00-21)
- 9. Stop Method (Pr. 00-22)
- 10. Digital Keypad STOP function (Pr. 00-32)
- 11. Max. Operation Frequency (Pr. 01-00)
- 12. Base Frequency of Motor 1 (Pr. P01-01)
- Max. Output Voltage Setting of Motor 1 (Pr. 01-02)
- 14. Min. Output Frequency of Motor 1 (Pr. 01-07)
- Min. Output Voltage of Motor 1 (Pr. 01-08)
- 16. Output Fréquency Upper Limit (Pr. 01-10)
- 17. Output Frequency Lower Limit (Pr. 01-11)
- 18. Accel. Time 1 (Pr. 01-12)
- 19. Decel Time 1 (Pr. 01-13)
- 20. Full-load Current of Induction Motor 1 (Pr. 05-01)
- Rated Power of Induction Motor 1 (Pr. 05-02)
- Rated Speed of Induction Motor 1 (Pr. 05-03)
- Pole Number of Induction Motor 1 (Pr. 05-04)
- No-load Current of Induction Motor 1 (Pr. 05-05)
- Over-voltage Stall Prevention (Pr. 06-01)
- 26. Over-current Stall Prevention during Acceleration (Pr. 06-03)
- 27. Derating Protection (Pr. 06-55)
- 28. Software Brake Level (Pr. 07-00)
- Emergency Stop (EF) & Force to Stop Selection (Pr. 07-20)
- 30. Filter Time of Torque Command (Pr. 07-24)
- Filter Time of Slip Compensation (Pr. 07-25)
- 32. Slip Compensation Gain (Pr. 07-27)

4. FOCPG Mode

†01:Password Inp 02:Password Meth

#### Items

- Parameter Protection Password Input (Pr. 00-07)
- Parameter Protection Password Setting (Pr. 00-08)
- 3. Control Mode (Pr. 00-10)
- 4. Control of Speed Mode (Pr. 00-11)

01: Password Decoder



- 5. Source of the Master Frequency Command (AUTO) (Pr. 00-20)
- 6. Source of the Operation Command (AUTO) (Pr. 00-21)
- 7. Stop Method (Pr. 00-22)
- 8. Max. Operation Frequency (Pr. 01-00)
- 9. Base Frequency of Motor 1 (Pr. 01-01)
- Max. Output Voltage Setting of Motor 1 (Pr. 01-02)
- 11. Output Frequency Upper Limit (Pr. 01-10)
- 12. Output Frequency Lower Limit (Pr. 01-11)
- 13. Accel. Time 1 (Pr. 01-12)
- 14. Decel Time 1 (Pr. 01-13)
- 15. Full-load Current of Induction Motor 1 (Pr. 05-01)
- 16. Rated Power of Induction Motor 1 (Pr. 05-02)
- 17. Rated Speed of Induction Motor 1 (Pr. 05-03)
- 18. Pole Number of Induction Motor 1 (Pr. 05-04)
- No-load Current of Induction Motor 1 (Pr. 05-05)
- Over-voltage Stall Prevention (Pr. 06-01)
- 21. Over-current Stall Prevention during Acceleration (Pr. 06-03)
- 22. Derating Protection (Pr. 06-55)
- 23. Software Brake Level (Pr. 07-00)
- 24. Emergency Stop (EF) & Force to Stop Selection (Pr. 07-20)
- 25. Encoder Type Selection (Pr. 10-00)
- 26. Encoder Pulse (Pr. 10-01)
- 27. Encoder Input Type Setting (Pr. 10-02)
- 28. System Control (Pr. 11-00)
- 29. Per Unit of System Inertia (Pr. 11-01)
- 30. ASR1 Low-speed Bandwidth (Pr. 11-03)
- 31. ASR2 High-speed Bandwidth (Pr. 11-04)
- 32. Zero-speed Bandwidth (Pr. 11-05)

#### TQCPG Mode

TQCPG Mode:P00-07 †01:Password De 02:Password Inp 03:Control Meth


01: Password Decoder



### Items

- 1. Password Input (Decode) (Pr. 00-07)
- 2. Password Setting (Pr. 00-08)
- 3. Control Mode (Pr. 00-10)
- 4. Control of Speed Mode (Pr. 00-11)
- 5. Source of the Master Frequency Command (Pr. 00-20)
- 6. Source of the Operation Command (Pr. 00-21)
- 7. Max. Operation Frequency (Pr. 01-00)
- 8. Base Frequency of Motor 1 (Pr. 01-01)
- 9. Max. Output Voltage Setting of Motor 1 (Pr. 01-02)
- Full-load Current of Induction Motor 1 (Pr. 05-01)
- 11. Rated Power of Induction Motor 1 (Pr. 05-02)
- 12. Rated Speed of Induction Motor 1 (Pr. 05-03)

- 13. Pole Number of Induction Motor 1 (Pr. 05-04)
- 14. No-load Current of Induction Motor 1 (Pr. 05-05)
- 15. Over-voltage Stall Prevention (Pr. 06-01)
- 16. Software Brake Level (Pr. 07-00)
- 17. Encoder Type Selection (Pr. 10-00)
- 18. Encoder Pulse (Pr. 10-01)
- 19. Encoder Input Type Setting (Pr. 10-02)
- 20. System Control (Pr. 11-00)
- 21. Per Unit of System Inertia (Pr. 11-01)
- 22. ASR1 Low-speed Bandwidth (Pr. 11-03)
- 23. ASR2 High-speed Bandwidth (Pr. 11-04)
- 24. Zero-speed Bandwidth (Pr. 11-05)
- 25. Max. Torque Command (Pr. 11-27)
- 26. Source of Torque Offset (Pr. 11-28)
- 27. Torque Offset Setting (Pr. 11-29)
- 28. Source of Torque Command (Pr. 11-33)
- 29. Torque Command (Pr. 11-34)
- 30. Speed Limit Selection (Pr. 11-36)
- 31. Forward Speed Limit (torque mode) (Pr. 11-37)
- 32. Reverse Speed Limit (torque mode) (Pr. 11-38)
- 6. My Mode





Click F4 in parameter setting page, the parameter will be saved to My Mode. To delete or correct the parameter, enter this parameter and click the "DEL" on the bottom right corner.

#### **Items**

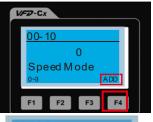It can save 01~32 sets of parameters (Pr). Setup process

Go to "Parameter Setup" function.
 Press ENTER to go to the parameter which you need to use. There is an ADD on the bottom right-hand corner of the screen. Press F4 on the keypad to add this parameter to My Mode.







 The parameter (Pr) will be displayed in My mode if it is properly saved.
 To correct or to delete this Pr., click DEL.


3. To delete a parameter, go to "My Mode" and select a parameter which you need to delete.

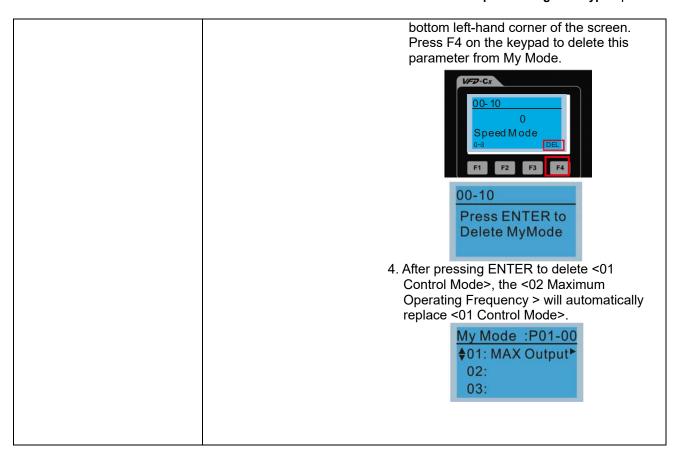Press ENTER to enter the parameter setting screen. There is a DEL on the




## 3. Application Selection List

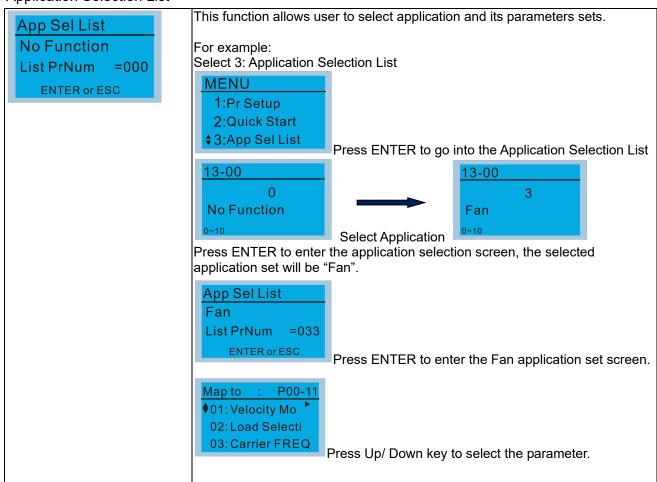


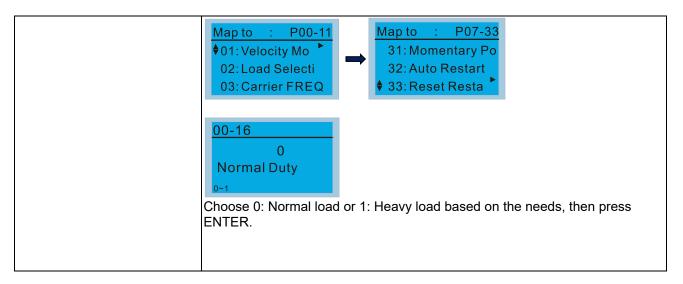


## Changed List

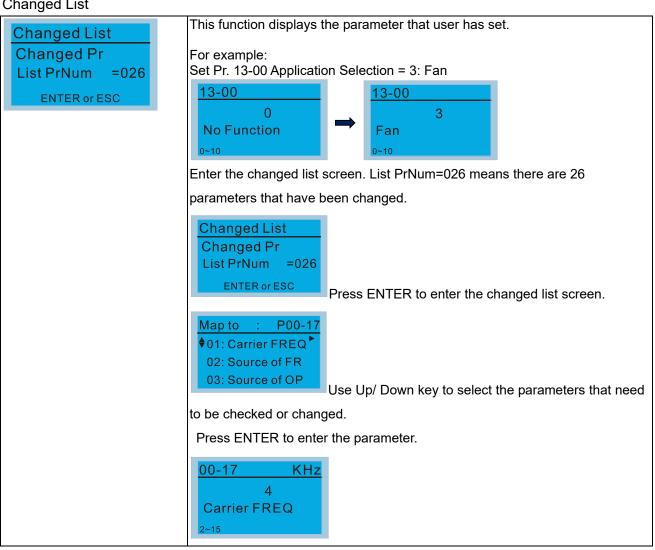


#### 5. Copy Parameter

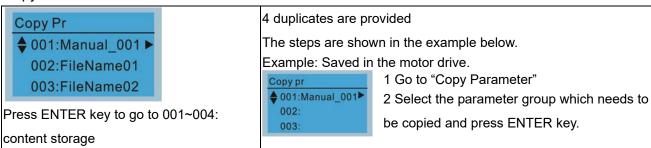

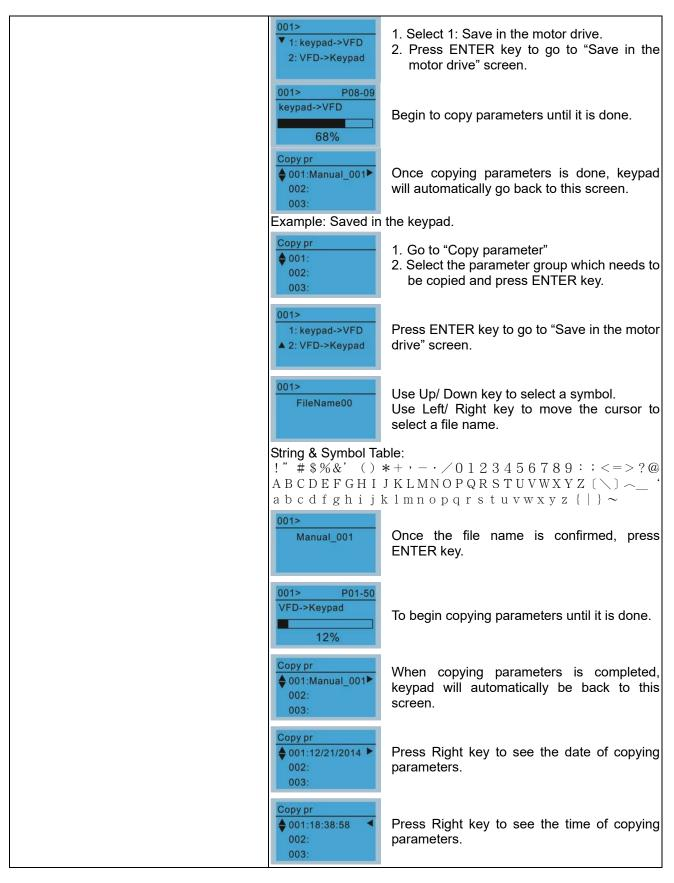

### 6. Fault Record

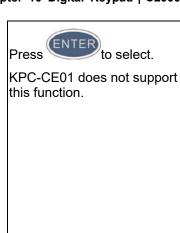Able to store 6 error codes (Keypad V1.02 and previous versions)
Able to store 30 error codes (Keypad V1.20 and later version)
The most recent error record is shown as the first record. Select an error record to see its details such as date, time, frequency, current, voltage, DCBUS voltage)





Press Up/ Down key to select an error record.

After selecting an error code, press ENTER to see that error record's detail

Press Up/ Down key to see an error record's detail such as date, time, frequency, current, voltage, DCBUS voltage.


Press Up/ Down key to select an error record.

After selecting an error code, press ENTER to see that error record's detail

Press Up/ Down key to see an error record's detail such as date, time, frequency, current, voltage, DCBUS voltage.

Fault actions of AC motor drive are recorded and saved to KPC-CC01. When KPC-CC01 is removed and applied to another AC motor drive, the previous fault records will not be deleted. The new fault records of the present AC motor drive will accumulate to KPC-CC01.

## 7. Language Setup



Use Up / Down key to select language, than press ENTER.

Language setting option is displayed in the language of the user's choice. Language setting options:

- 1. English
- 2. 繁體中文
- 3. 简体中文
- 4. Türkçe

- 5. Русский
- 6. Español
- 7. Português
- 8. français

## 8. Time Setup



Use Left / Right key to select Year, Month, Day, Hour, Minute or Second to set up



Use Up / Down key to set up Year

Use Up / Down key to set up Month

Use Up / Down key to set up Day



Use Up / Down key to set up Hour

Use Up / Down key to set up Minute

Use Up / Down key to set up Second

After setting up, press ENTER to confirm the setup.



Limitation: The charging process of the super capacitor will finish in about 6 minutes. When the digital keypad is removed, the time setting will be in standby status for 7 days. After this period, the time needs to be reset.

### 9. Keypad Locked



Keypad Locked

This function is used to lock the keypad. The main page would not display "keypad locked" when the keypad is locked, however it will display the message please press ESC and then ENTER to unlock the keypad when any key is pressed.



u 540.0Vdc

When the keypad is locked, the main screen doesn't display any status to show that.

Press any key on the keypad; a screen as shown in image on the left will be displayed.

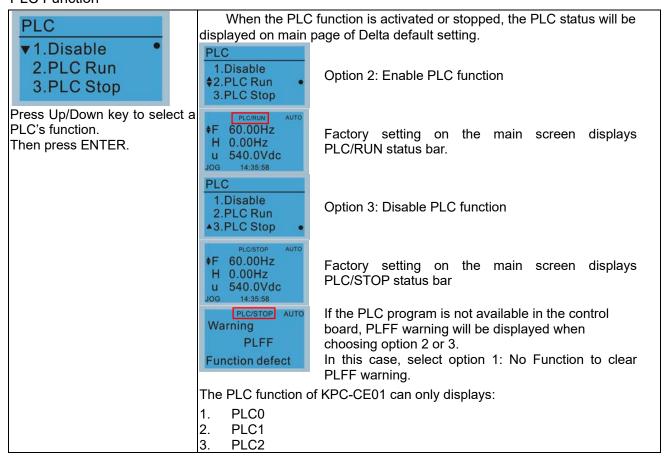
If ESC key is not pressed, the keypad will automatically be back to this screen.

The keypad is still locked at this moment. By pressing any key, a screen as shown in the image on the left will still be displayed.


Press ESC for 3 seconds to unlock the keypad and the keypad will be back to this screen. Then each key on the keypad is functional.


After the above steps, the keypad will not be locked when turning off the power and turning on the power again.

### 10. PLC Function




## 11. Copy PLC

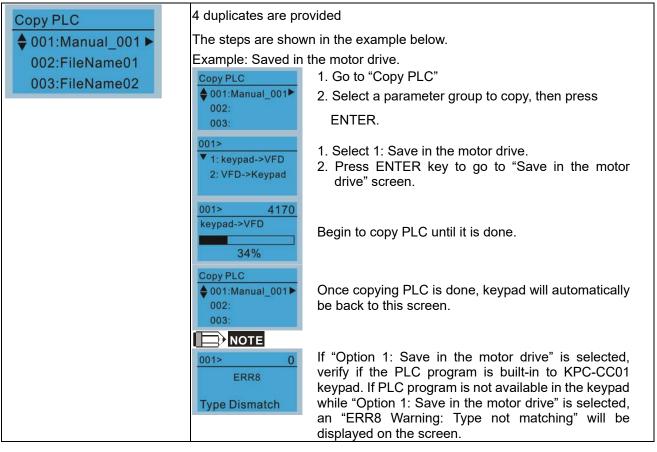

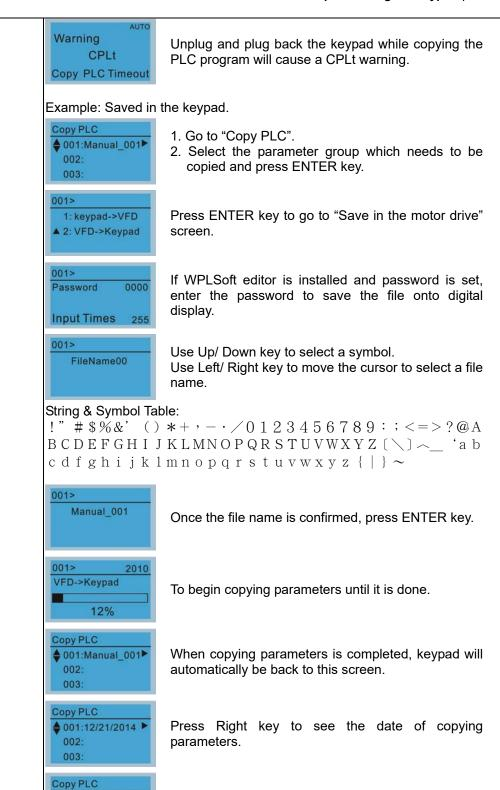

Press Right key to see the time of copying

## 12. Display setup




parameters.


♦ 001:18:38:58

002:

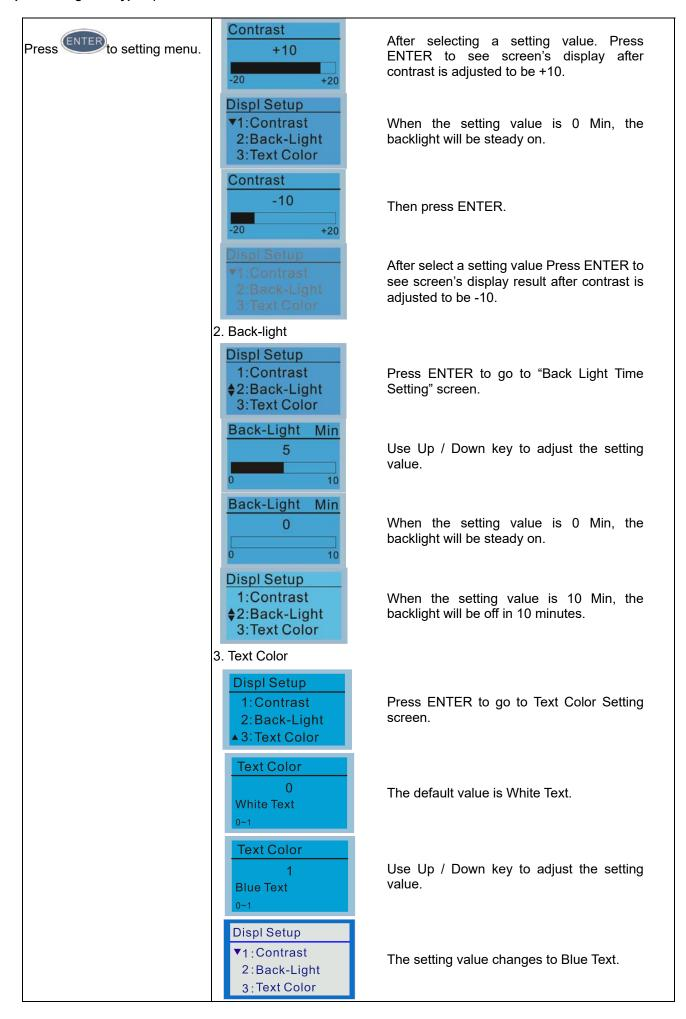003:



## 13. Start-up



1. Default 1 **DELTA LOGO** 



2. Default 2 **DELTA Text** 



3. User Defined: optional accessory is required (TPEditor & USB / RS-485 Communication Interface-IFD6530)

Install an editing accessory would allow users to design their own start-up page. If editor accessory is not installed, "user defined" option will display a blank page.




### USB/RS-485 Communication Interface-IFD6530

Please refer to Chapter 07 Optional Accessories for more detail.

Go to Delta's website to download TPEditor V1.60 or later versions.

nloadID=,&title=-- Select Product Series --&dataType=8;&check=1&hl=en-US

## 14. Main page



Default picture and editable picture are available upon selection.





to select.

Default page



F 60.00Hz >>> H >>> A >>> U (circulate)

2. User Defined: optional accessory is required (TPEditor & USB / RS-485 Communication Interface-IFD6530)

Install an editing accessory would allow users to design their own main page. If editor accessory is not installed, "user defined" option will display a blank page.



## USB/RS-485 Communication Interface-IFD6530

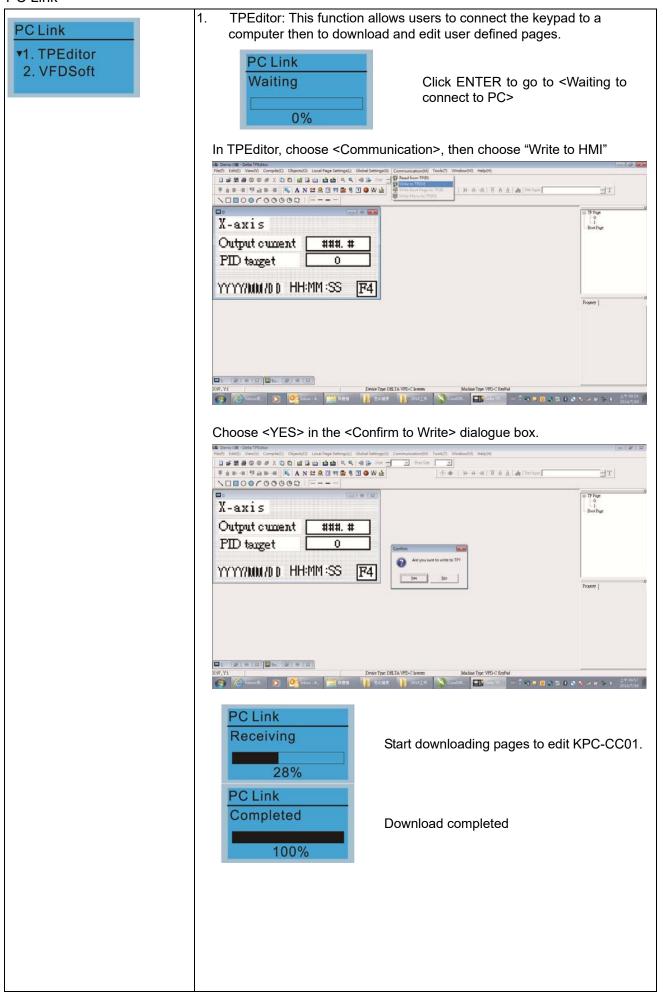
Please refer to Chapter 07 Optional Accessories for more detail.

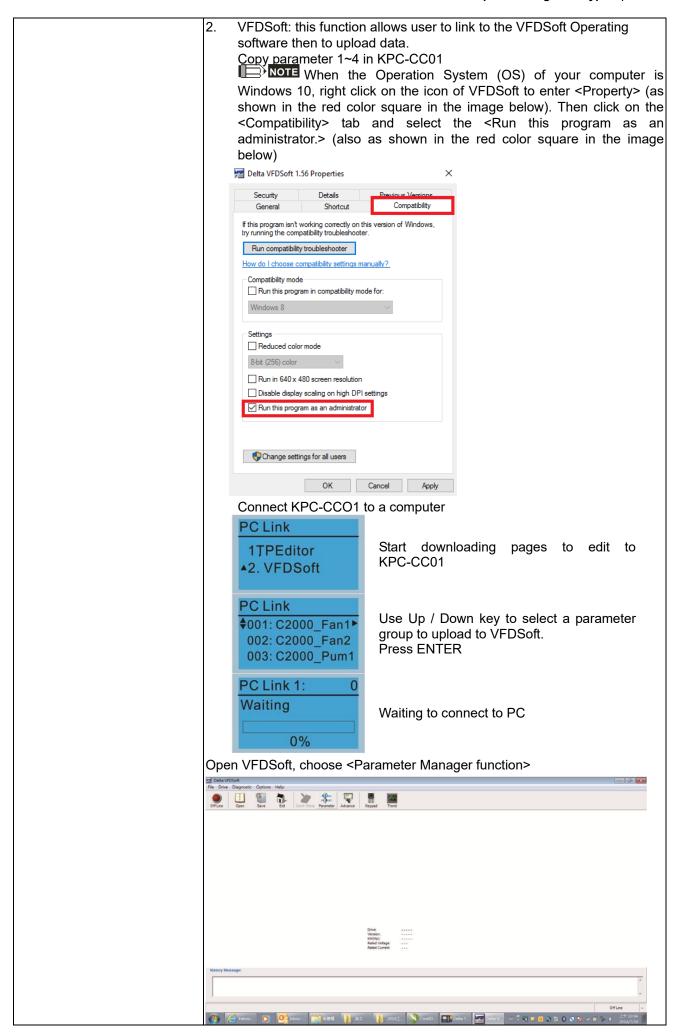
#### **TPEditor**

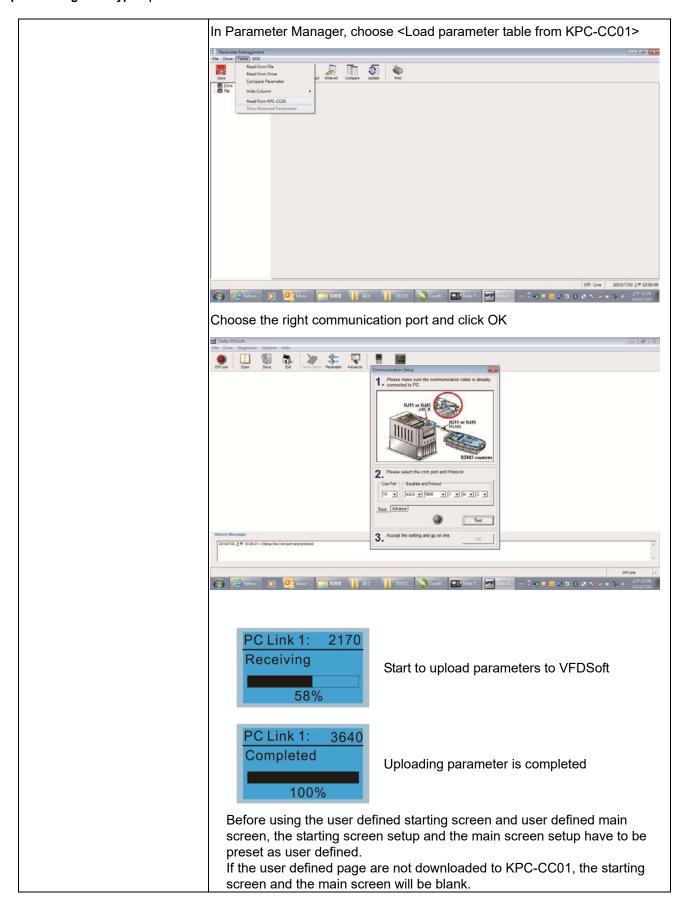
Go to Delta's website to download TPEditor V1.60 or later versions.

nloadID=,&title=-- Select Product Series --&dataType=8;&check=1&hl=en-US


### 15. PC Link








## 16. Start Wizard

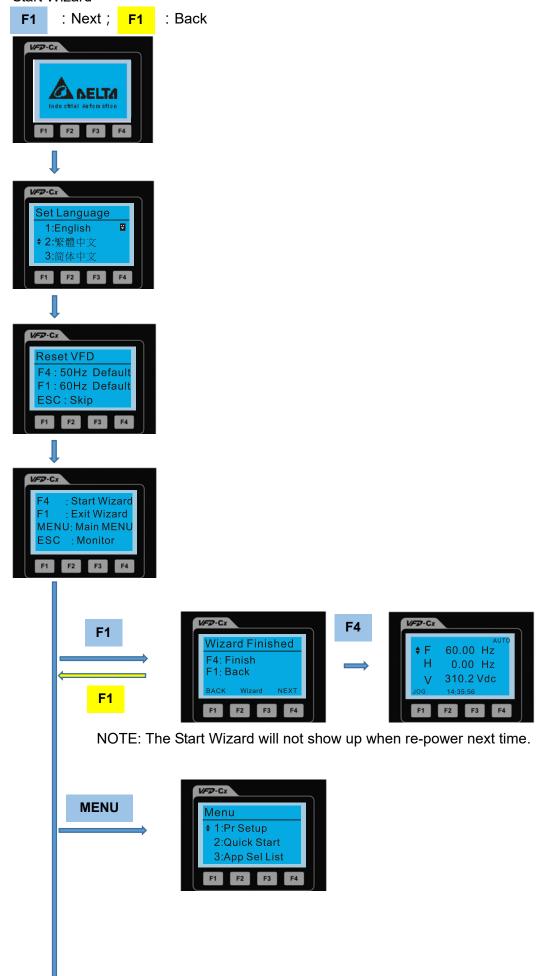


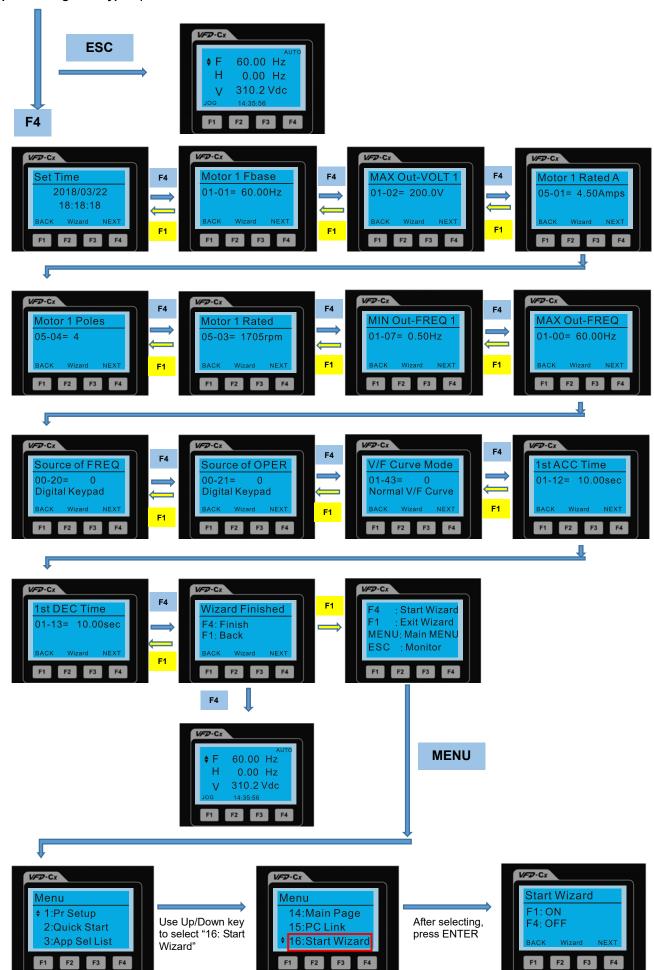


NOTE: The "16: Start Wizard" on the menu is to set whether shows start wizard when start up the drive.

## Other display

When a fault occurs, the menu will display:





- Press STOP / RESET button to reset the fault code. If still no response, please contact local distributor or return to the factory. To view the fault DCBUS voltage, output current and output voltage, press "MENU"→"Fault Record".
- 2. After resetting, if the screen returns to main page and shows no fault after pressing ESC, the fault is cleared.
- 3. When fault or warning message appears, backlight LED will blink until the fault or the warning is cleared.

## Optional accessory: RJ45 Extension Lead for Digital Keypad

Part No.	Description
CBC-K3FT	RJ45 extension lead, 3 feet (approximately 0.9m)
CBC-K5FT	RJ45 extension lead, 5 feet (approximately 1.5 m)
CBC-K7FT	RJ45 extension lead, 7 feet (approximately 2.1 m)
CBC-K10FT	RJ45 extension lead, 10 feet (approximately 3 m)
CBC-K16FT	RJ45 extension lead, 16 feet (approximately 4.9 m)

Note: When you need to buy communication cables, buy non-shielded, 24 AWG, 4 twisted pair, 100 ohms communication cables.

## 10-3 TPEditor Installation Instruction

TPEditor can edit up to 256 HMI (Human-Machine Interface) pages with a total storage capacity of 256KB. Each page can edit 50 normal objects and 10 communication objects.

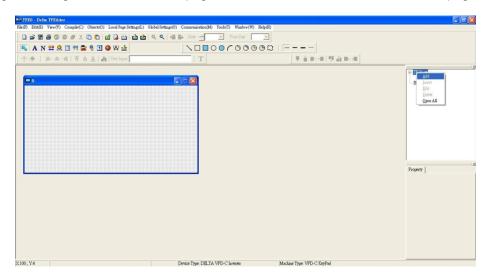
- 1) TPEditor: Setup & Basic Functions
  - 1. Run TPEditor version 1.60 or above



2. Go to File (F) → Click on New. The Window below will pop up. At the device type, click on the drop down menu and choose DELTA VFD-C Inverter. At the TP type, click on the drop down menu and choose VFD-C KeyPad. As for File Name, enter TPE0. Now click on OK.




3. You are now at the designing page. Go to Edit (E) → Click on Add a New Page (A) or go to the TP page on the upper right side, right click once on TP page and choose Add to increase one more page for editing.




4. Edit Startup Page

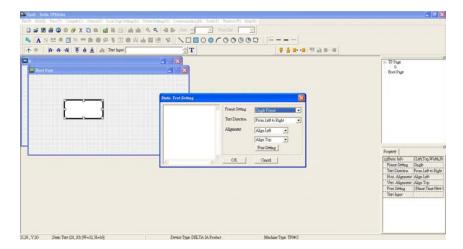5. Static Text A. Open a blank page, click once on this button A, and then double click on that blank page. The following window will pop up.



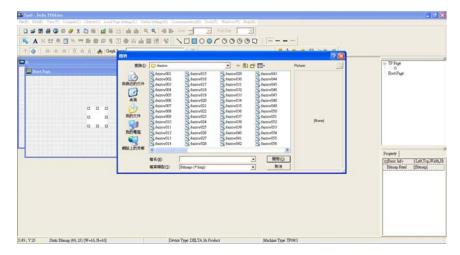
6. Static Bitmap → Open a blank page, then click once on this button and then double click on that blank page. The following window will pop up.



Please note that Static Bitmap setting supports only images in BMP format. Now choose an image that you need and click open, then that image will appear in the Static Bitmap window.

- 7. Geometric Bitmap

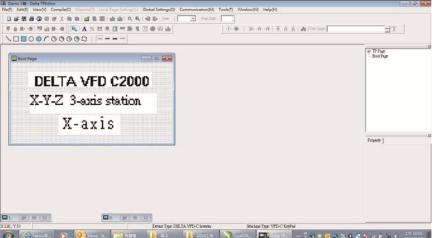  11 kinds of geometric bitmap to choose. Open a new blank page then click once on a geometric bitmap icon that you need. Then drag that icon and enlarge it to the size that you need on that blank page.
- 8. Finish editing the keypad starting screen and select **Communication>Input User Defined Keypad Starting Screen**.




#### Chapter 10 Digital Keypad | C2000


- 9. Downloading setting: Go to Tool > Communication. Set up communication port and speed of IFD6530.
- 10. Only three speed selections are available: 9600 bps, 19200 bps and 38400 bps.



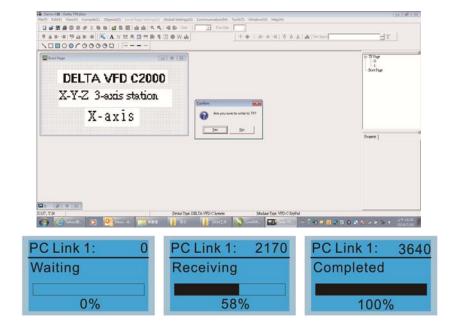11. When a dialogue box displayed on the screen asking to confirm writing or not, press buttons on the keypad to go to MENU, select PC LINK and then press ENTER and wait for few seconds. Then select YES on the screen to start downloading.



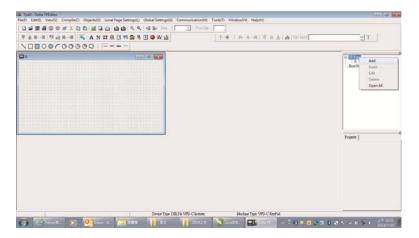- 2) Edit Main Page & Example of Download
  - 1. Go to editing page, select Edit > Add one page or press the button ADD on the right hand side of the HMI page to increase number of pages to edit. This keypad currently supports up to 256 pages.




2. On the bottom right-hand corner of the HMI, click on a page number to edit or go to VIEW > HMI page to start editing main page. As shown in the image, the following objects are available. From left to right: Static Text, ASCII Display, Static Bitmap, Scale, Bar Graph, Button, Clock Display, Multi-state bit map, Units, Numeric Input and 11 geometric bitmaps and lines of different width. The application of Static Text, Static Bitmap, and geometric bitmap is the same as the editing startup page.




3. Numeric / ASCII Display: To add a Numeric / ASCII Display object to a screen, double click on the object to set up Related Devices, Frame Setting, Fonts and Alignment.



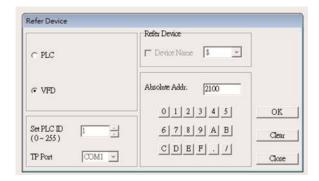Related Device: Choose the VFD Communication Port that you need, if you want to read output frequency (H), set the VFD Communication Port to \$2202. For other values, please refer to ACMD ModBus Comm Address List.




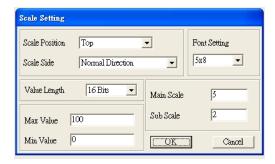4. Scale Setting : On the Tool Bar, click on for Scale Setting. You can also edit Scale Setting in the Property Window on the right hand side of your computer screen.



- a. Scale Position: Click on the drop down list to choose which position that you need to place a scale.
- b. Scale Side: Click on the drop down list to choose if you want to number your scale from smaller number to bigger number or from big to small. Click OK to accept this setting or click Cancel to abort.
- c. Font Setting: Click on the drop down list to choose the Font setting that you need then click OK to accept the setting or click Cancel to abort.
- d. Value Length: Click on the drop down to choose 16 bits or 32 bits. Then click OK to accept the setting or click Cancel to abort.
- e. Main Scale & Sub Scale: In order to divide the whole scale into equal parts, key in the numbers of your choices for main scale and sub scale.
- f. Maximum value & Minimum Value are the numbers on the two ends of a scale. They can be negative numbers. But the values allowed to be input are limited by the length of value. For example, when the length of value is set to **be hexadecimal**, the maximum and the minimum value cannot be input as -4000.

Follow the Scale setting mentioned above; you will have a scale as shown below.




5. Bar Graph setting



- a. Related Device: Choose the VFD Communication Port that you need.
- b. Direction Setting: Click on the drop down menu to choose one of the following directions: From Bottom to Top, From Top to Bottom, From Left to Right or From Right to Left.
- c. Maximum Value & Minimum Value: They define the range covered by the maximum value and minimum value. If a value is smaller than or equal to the minimum value, then the bar graph will be blank. If a value is bigger or equal to the maximum value, then the bar graph will be full. If a value is between minimum and maximum value, then the bar graph will be filled proportionally.

6. Button <sup>1</sup>8: Currently this function only allows the Keypad to switch pages, other functions are not yet available. Text input function and Image inserted functions are not yet supported.

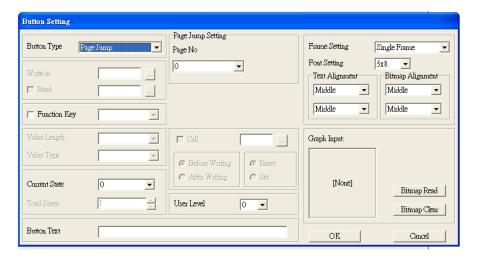Double click on <sup>®</sup> to open set up window.



<Button Type> allows users set up buttons' functions. <Page Jump> and <Constant Setting> are the only two currently supported functions.

#### A. [Page Jump] function setting

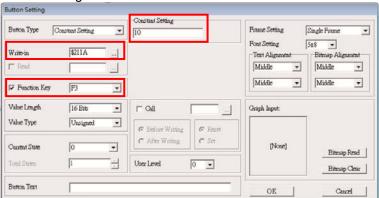
- Page Jump setting: After you choose the Page Jump function in the drop down list, you will see this Page Jump Setting Menu
- Function Key> allows you to assign functions to the following keys on the KPC-CC01 keypad: F1, F2, F3, F4, Up, Down, Left and Right. Please note that the Up and Down keys are locked by TPEditor. These two keys cannot be programmed. If you want to program Up and Down keys, go to Tool→Function Key Settings (F) →Re-Define Up / Down Key (R).



 Button Text: This function allows user to name buttons. For example, key in <Next Page> in the empty space, a button will have the wording <Next Page> displayed on it.

#### B. [Constant setting] function

This function is to set up the memory address' value of the VFD or PLC. When pressing the <function button> set up in before, a value will be written to the memory address of the <Constant Setting>. This function can be used as initializing a variable.




7. Clock Display Setting : The setup window of the Clock Display is shown as the image below. Time, Day or Date can be displayed on the keypad.


Open a new file and click once in that window, you will see the following
In the clock display setting, you can choose to display Time, Day or Date on the Keypad. To adjust time, go to #9 on the Keypad's menu. You can also adjust Frame Setting, Font Setting and Alignment.



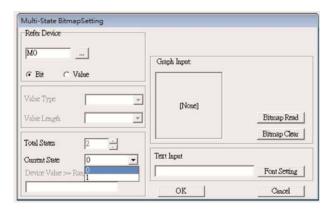8. Multi-state bitmap : The setup window of the multi-state is shown as the image below. This object reads the bit's property value of the PLC. It defines what image or wording is when this bit is 0 or when this bit is 1. Set the initial status to be 0 or 1 to define the displayed image or wording.



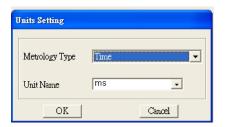9. Unit Measurement : Click once on this Button
Open a new file and double click on that window, you will see the following:




Choose from the drop down list the Metrology and the Unity Name that you need. As for Metrology, you have the following choices: Length, Square Measure, Volume/Solid Measure, Weight, Speed, Time and Temperature. The unit name changes automatically when you change metrology type.

## 10. Numeric Input Setting:

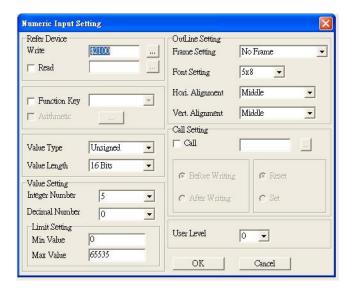This menu allows you to provide parameters or communication ports and to input numbers.

Click once on this button

Open a new file and double click on that window, you will see the following:




- a. Related Device: There are two blank spaces to fill in, one is <Write> and another one is <Read>. Input the numbers that you want to display and the corresponding numbers of a parameter and that of a communication port. For example, input 012C to Read and Write Parameter Pr. 01-44.
- b. Outline Setting: The Frame setting, Font setting, Vertical Alignment and Horizontal Alignment are the same as mentioned before. Click on the drop down menu and choose the setting that you need.
- c. Function key: The setting here allows you to program keys on the keypad. Press the key on the menu then the corresponding key on the keypad will start to blink, then press Enter to confirm the setting.
- d. Value Type & Value Length: These two factors influence the range of the Minimum and Maximum Value of the Limit Setting. Please note that the corresponding supporting values for C2000 have to be 16bits. The 32bits values are not supported.
- e. Value Setting: This part is set automatically by the keypad itself.
- f. Limit Setting: Input the range the security setting here.


For example, if you set Function Key as F1, Minimum Value as 0 and Maximum Value as 4, then press F1 on Keypad. Then you can press Up and Down key on the keypad to increase or decrease the value. Press Enter Key on the keypad to confirm your setting. You can also go to parameter table 01-44 to verify if your input value is correct.


11. Download TP Page: Press Up or Down key on the keypad until you reach #13 PC Link.

Then press Enter on the keypad and you will see the word "Waiting" on keypad's screen. Now choose a page that you have created then go to Communication (M) → Write to TP (W) to start downloading the page to the keypad.

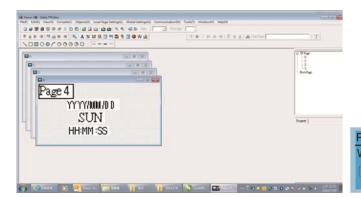When you see the word Completed on the keypad's screen, that means the download is done. Then you can press ESC on the keypad to go back to the menu of the keypad.







## 10-4 Digital Keypad KPC-CC01 Fault Codes and Descriptions

As a status bar to display the information of main menu.

"OFF" will be displayed on the keypad if the keypad doesn't read the status of control board, otherwise it will display HAND/AUTO. The default value of control board is AUTO.

Fault code description kpdFlash Read Er

### **Fault Codes**

LCM Display *	Description	Corrective Actions
Fault FrEr kpdFlash Read Er	Keypad flash memory read error	An error has occurred on keypad's flash memory.  1. Press RESET on the keypad to clear errors.  2. Verify if there's any problem on Flash IC.  3. Shut down the system, wait for ten minutes, and then power on again the system.  If none of the solution above works, contact your authorized local dealer.
Fault FSEr kpdFlash Save Er	Keypad flash memory save error	An error has occurred on keypad's flash memory.  1. Press RESET on the keypad to clear errors.  2. Verify if there's any problem on Flash IC.  3. Shut down the system, wait for ten minutes, and then power on again the system.  If none of the solution above works, contact your authorized local dealer.
Fault FPEr kpdFlash Pr Er	Keypad flash memory parameter error	Errors occurred on factory setting of parameters. It might be caused by firmware update.  1. Press RESET on the keypad to clear errors.  2. Verify if there's any problem on Flash IC.  3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
Fault VFDr Read VFD Info Er	Keypad flash memory when read AC drive data error	<ul> <li>Keypad cannot read any data sent from VFD.</li> <li>1. Verify if the keypad is properly connected to the motor drive by a communication cable such as RJ-45.</li> <li>2. Press RESET on the keypad to clear errors.</li> <li>3. Shut down the system, wait for ten minutes, and then power on again the system.</li> <li>If none of the solution above works, contact your local authorized dealer.</li> </ul>
Fault CPUEr CPU Error	A serious CPU error occurs to the Keypad	A Serious error has occurred on keypad's CPU.  1. Verify if there's any problem on CPU clock?  2. Verify if there's any problem on Flash IC?  3. Verify if there's any problem on RTC IC?  4. Verify if the communication quality of the RS485 is good?  5. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.


### **Warning Codes**

LCM Display *	Description	Corrective Actions
Warning CE01 Comm Command Er	Modbus function code error	Motor drive doesn't accept the communication command sent from keypad.  1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45.  2. Press RESET on the keypad to clear errors. If none of the above solution works, contact your local authorized dealer.
Warning CE02 Comm Address Er	Modbus data address error	<ul> <li>Motor drive doesn't accept keypad's communication address.</li> <li>1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45.</li> <li>2. Press RESET on the keypad to clear errors.</li> <li>If none of the above solution works, contact your local authorized dealer.</li> </ul>
Warning CE03 Comm Data Error	Modbus data value error	<ul> <li>Motor drive doesn't accept the communication data sent from keypad.</li> <li>1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45.</li> <li>2. Press RESET on the keypad to clear errors.</li> <li>If none of the above solution works, contact your local authorized dealer.</li> </ul>
Warning CE04 Comm Slave Error	Modbus slave drive error	<ul> <li>Motor drive cannot process the communication command sent from keypad.</li> <li>1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45.</li> <li>2. Press RESET on the keypad to clear errors.</li> <li>3. Shut down the system, wait for ten minutes, and then power on again the system.</li> <li>If none of the above solution works, contact your local authorized dealer.</li> </ul>
Warning CE10 KpdComm Time Out	Modbus transmission time-Out	<ul> <li>Motor drive doesn't respond to the communication command sent from keypad.</li> <li>1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45.</li> <li>2. Press RESET on the keypad to clear errors.</li> <li>3. Shut down the system, wait for ten minutes, and then power on again the system.</li> <li>If none of the above solution works, contact your local authorized dealer.</li> </ul>
Warning TPNO TP No Object	Object not supported by TP Editor	<ul> <li>Keypad's TP Editor uses unsupported object or Drive series.</li> <li>1. Verify how the TP Editor should use that object.     Delete unsupported object and unsupported setting.</li> <li>2. Reedit the TP editor and then download it.</li> <li>3. Make sure the Drive series support TP functions. If it didn't, the main page will display default.</li> <li>If none of the above solution works, contact your local authorized dealer.</li> </ul>

The warning code which shows as "CExx" only occurs when the communication problem between the drive and keypad, and it's nothing to do with the drive and other device. Be noted that the warning code description to judge the cause of error if "CExx" occurs.

### **File Copy Setting Fault Description:**

These faults will happen when KPC-CC01 cannot perform the command after clicking the Enter button in copy function.



LCM Display *	Description	Corrective Actions
001> P00-00 ERR1 Read Only	Parameter and file are read only	The property of the parameter / file is read-only and cannot be written to.  1. Verify the specification on the user manual. If the solution above doesn't work, contact your local authorized dealer.
001> P00-00 ERR2 Write Fail	Fail to write parameter and file	An error occurred while writing to a parameter / file.  1. Verify if there's any problem on the Flash IC.  2. Shut down the system, wait for ten minutes, and then power on again the system.  If none of the solution above work, contact your local authorized dealer.
P00-00 ERR3 VFD Running	AC drive is in operating status	A setting cannot be made while motor drive is in operation.  1. Verify if the drive is not in operation.  If the solution above doesn't work, contact your local authorized dealer.
001> P00-00 ERR4 Pr Lock	AC drive parameter is locked	A setting cannot be made because a parameter is locked.  1. Verify if the parameter is locked or not. If it is locked, unlock it and try to set up the parameter again. If the solution above doesn't work, contact your local authorized dealer.
P00-00 ERR5 Pr Changing	AC drive parameter changing	A setting cannot be made because a parameter is being modified.  1. Verify if the parameter is being modified. If it is not being modified, try to set up that parameter again. If the solution above doesn't work, contact your local authorized dealer.
P00-00  ERR6  Fault Code	Fault code	A setting cannot be made because an error has occurred on the motor drive.  1. Verify if there's any error occurred on the motor drive. If there isn't any error, try to make the setting again.  If the solution above doesn't work, contact your local authorized dealer.
P00-00 ERR7 Warning Code	Warning code	A setting cannot be made because of a warning message given to the motor drive.  1. Verify if there's any warning message given to the motor drive.  If the solution above doesn't work, contact your local authorized dealer.
P00-00  ERR8  Type Dismatch	File type dismatch	The copied data are not the same type, so the setting cannot be made.  1. Verify if the products' serial numbers need to be copied fall in the category. If they are in the same category, try to make the setting again.  If the solution above doesn't work, contact your authorized dealer.

LCM Display *	Description	Corrective Actions
001> P00-00	File is locked with password	<ul> <li>A setting cannot be made, because some data are locked.</li> <li>1. Verify if the data are unlocked or able to be unlocked. If the data are unlocked, try to make the setting again.</li> <li>2. Shut down the system, wait for ten minutes, and then power on again the system.</li> <li>If none of the solution above works, contact your local authorized dealer.</li> </ul>
P00-00  ERR10  Password Fail	File password is incorrect	<ul> <li>A setting cannot be made because the password is incorrect.</li> <li>1. Verify if the password is correct. If the password is correct, try to make the setting again.</li> <li>2. Shut down the system, wait for ten minutes, and then power on again the system.</li> <li>If none of the solution above works, contact your local authorized dealer.</li> </ul>
001> P00-00 ERR11 Version Fail	Different version of copied data	<ul> <li>A setting cannot be made, because the version of the data is incorrect.</li> <li>1. Verify if the version of the data matches the motor drive. If it matches, try to make the setting again.</li> <li>If none of the solution above works, contact your local authorized dealer.</li> </ul>
P00-00  ERR12  VFD Time Out	AC drive copy function time-out	A setting cannot be made, because data copying timeout expired.  1. Redo data copying.  2. Verify if copying data is authorized. If it is authorized, try again to copy data.  3. Shut down the system, wait for ten minutes, and then power on again the system.  If none of the solution above works, contact your local authorized dealer.


<sup>※</sup> The content in this chapter only applies on V1.01 and above of KPC-CC01 keypad.

## 10-5 Functions not supported when using TPEditor with KPC-CC01


1. Local Page Setting and Global Setting functions are not supported.



2. [Communication]→[Read from TP] functions are not supported.



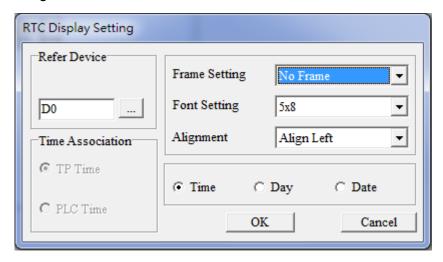3. In RTC Display Setting, the Refer Device cannot be modified.



# Chapter 11 Summary of Parameter Settings

This chapter provides a summary of parameter (Pr.) setting ranges and defaults. You can set, change, and reset parameters through the digital keypad.

## NOTE

- 1)  $\mathcal{N}$ : You can set this parameter during operation
- 2) For more details on parameters, please refer to Ch12 Description of Parameter Settings.

### **00 Drive Parameters**

IM: Induction Motor; PM: Permanent Magnet Motor

Pr.	Parameter Name	Setting Range	Default
		4: 230V, 0.75kW	
		5: 460V, 0.75kW	
		6: 230V, 1.50kW	
		7: 460V, 1.50kW	
		8: 230V, 2.20kW	
		9: 460V, 2.20kW	
		10: 230V, 3.70kW	
		11: 460V, 3.70kW	
		12: 230V, 5.50kW	
		13: 460V, 5.50kW	
		14: 230V, 7.50kW	
		15: 460V, 7.50kW	
	Identity code of the AC motor drive	16: 230V, 11.0kW	
		17: 460V, 11.0kW	
00-00		18: 230V, 15.0kW	Read
		19: 460V, 15.0kW	only
		20: 230V, 18.5kW	
		21: 460V, 18.5kW	
		22: 230V, 22.0kW	
		23: 460V, 22.0kW	
		24: 230V, 30.0kW	
		25: 460V, 30.0kW	
		26: 230V, 37.0kW	
		27: 460V, 37.0kW	
		28: 230V, 45.0kW	
		29: 460V, 45.0kW	
		30: 230V, 55.0kW	
		31: 460V, 55.0kW	
		32: 230V, 75.0kW	
		33: 460V, 75.0kW	

Chapter 11 Summary of Parameter Settings | C2000

		34: 230V, 90.0kW	
		35: 460V, 90.0kW	
		37: 460V, 110.0kW	
		39: 460V, 132.0kW	
		41: 460V, 160.0kW	
		43: 460V, 185.0kW	
		45: 460V, 220.0kW	
		47: 460V, 280.0kW	
		49: 460V, 315.0kW	
		51: 460V, 355.0kW	
		55: 460V, 450.0kW	
		93: 460V, 4kW	
		505: 575V, 1.5kW	
		506: 575V, 2.2kW	
		507: 575V, 3.7kW	
		508: 575V, 5.5kW	
		509: 575V, 7.5kW	
		510: 575V, 11kW	
		511: 575V, 15kW	
		612: 690V, 18.5kW	
		613: 690V, 22kW	
		614: 690V, 30kW	
		615: 690V, 37kW	
		616: 690V, 45kW	
		617: 690V, 55kW	
		618: 690V, 75kW	
		619: 690V, 90kW	
		620: 690V, 110kW	
		621: 690V, 132kW	
		622: 690V, 160kW	
		686: 690V, 200kW	
		687: 690V, 250kW	
		626: 690V, 315kW	
		628: 690V, 400kW	
		629: 690V, 450kW	
		631: 690V, 560kW	
		632: 690V, 630kW	
00-01 Di	isplay AC motor drive rated current	Display by models	Read
00-01   DI	nopiay AC motor universited current	Display by Illoucis	only
		0: No function	
00-02 Pa	arameter reset	1: Parameter write protect	0
		5: Reset kWh display to 0	

	Pr.	Parameter Name	Setting Range	Default
			6: Reset PLC (including CANopen Master Index)	
			7: Reset CANopen Index (Slave)	
			9: Reset all parameters to defaults with base	
			frequency at 50 Hz	
			10: Reset all parameters to defaults with base	
			frequency at 60 Hz	
			0: F (frequency command)	
	00-03	Start up diaplay adjection	1: H (output frequency)	0
~	00-03	Start-up display selection	2: U (multi-function display, see Pr. 00-04)	0
			3: A (output current)	
			0: Display output current (A) (Unit: Amp)	
			1: Display counter value (c) (Unit: CNT)	
			2: Display actual output frequency (H.) (Unit: Hz)	
			3: Display DC BUS voltage (v) (Unit: V <sub>DC</sub> )	
			4: Display output voltage (E) (Unit: V <sub>AC</sub> )	
			5: Display output power angle (n) (Unit: deg)	
			6: Display output power in kW (P) (Unit: kW)	
			7: Display actual motor speed rpm (r) (Unit: rpm)	
			8: Display estimate output torque % (t) (Unit: %)	
			9: Display PG feedback (G) (refer to Pr. 10-00 and	
			Pr. 10-01) (Unit: PLS)	
			10: Display PID feedback (b) (Unit: %)	
			11: Display AVI in % (1.) (Unit: %)	
			12: Display ACI in % (2.) (Unit: %)	
~	00-04	Content of multi-function display	13: Display AUI in % (3.) (Unit: %)	3
<i>,</i> .	00-04	(user-defined)	14: Display the temperature of IGBT (i.) (Unit: °C)	
			15: Display the temperature of capacitance (c.)	
			(Unit: °C)	
			16: The status of digital input (ON / OFF) (i)	
			17: The status of digital output (ON / OFF) (o)	
			18: Multi-step speed (S)	
			19: The corresponding CPU pin status of digital	
			input (d)	
			20: The corresponding CPU pin status of digital	
			output (0.)	
			21: Actual motor position (PG1 of PG card) (P.)	
			The maximum value is 32bits display	
			22: Pulse input frequency (PG2 of PG card) (S.)	
			23: Pulse input position (PG2 of PG card) (q.)	
			The maximum value is 32bits display	

		24: Position command tracing error (E.) 25: Overload count (0.00~100.00%) (o.) (Unit: %) 26: Ground fault GFF (G.) (Unit: %)	
		26: Ground fault GFF (G.) (Unit: %)	1
		27: DC BUS voltage ripple (r.) (Unit: V <sub>DC</sub> )	
		28: Display PLC data D1043 (C)	
		29: Display PM pole section (EMC-PG01U	
		application) (4.)	
		30: Display output of user defined (U)	
		31: Display Pr. 00-05 user gain (K)	
		32: Number of actual motor revolution during	
		operation (PG card plug in and Z phase signal	
		input) (Z.)	
		33: Motor actual position during operation (when PG	
		card is connected) (q)	
		34: Operation speed of fan (F.) (Unit: %)	
		35: Control mode display:	
		0 = Speed control mode (SPD)	
		1 = Torque control mode (TQR) (t.)	
		36: Present operating carrier frequency of drive (Hz)	
		(J.)	
		38: Display drive status (6.)	
		39: Display estimated output torque, positive and	
		negative, using Nt-m as unit (t 0.0: positive	
		torque; -0.0: negative torque (C.)	
		40: Torque command (L.) (Unit: %)	
		41: kWh display (J) (Unit: kWh)	
		42: PID target value (h.) (Unit: %)	
		43: PID offset (o.) (Unit: %)	
		44: PID output frequency (b.) (Unit: Hz)	
		45: Hardware ID	
		49: Motor temperature (PTC, PT100, KTY84-130)	
		51: PMSVC torque offset	
		52: Al10%	
		53: Al11%	
	Coefficient gain in actual output	1	
00-05	frequency	0.00–160.00	1.00
			Read
00-06	Software version	Read only	only
	Parameter protection password	0–65535	
00-07	input	0–4: the number of password attempts allowed	0

	Pr.	Parameter Name	Setting Range	Default
			0–65535	
_	00-08	Parameter protection password	0: No password protection / password entered	0
~	00-08	setting	correctly (Pr. 00-07)	U
			1: Parameter set	
			0: Speed mode	
	00-10	Control mode	1: Point-to-point position control mode	0
~	00-10	Control mode	2: Torque mode	U
			3: Homing mode	
			0: IMVF (IM V/F control)	
			1: IMVFPG (IM V/F control + Encoder)	
			2: IM/PM SVC (IM / PM space vector control)	
			3: IMFOCPG (IM FOC + Encoder)	
	00-11	Speed control mode	4: PMFOCPG (PM FOC + Encoder)	0
			5: IMFOC sensorless (IM FOC sensorless )	
			6: PM sensorless (PM FOC sensorless)	
			7: IPM sensorless (Interior PM FOC sensorless)	
	00-12	Point-to-point position mode	0: Relative position	0
			1: Absolute position	
			0: IM TQCPG (IM torque control + Encoder)	
	00-13	Torque mode control	1: PM TQCPG (PM torque control + Encoder)	0
			2: IM TQC sensorless (IM sensorless torque control)	
	00-16	Load selection	0: Normal load	0
	00-10	Load selection	1: Heavy load	0
			Normal load	
			VF, VFPG, PMFOCPG, PMFOC, IMFOC,	
			230V/460V IMFOCPG, IMTQCPG IPMFOC IMTQC	
			1–15HP 2–15kHz 4–15kHz 4–10kHz 4–14kHz	8
			20–50HP 2–10kHz 4–10kHz 4–10kHz 4–10kHz 60–125HP 2–9kHz 4–9kHz 4–9kHz 4–9kHz	6 4
				-
			Heavy load	
	00-17	Carrier frequency	VF, VFPG, SVC, PMFOCPG, PMFOC, IMFOC,	
	00-17	Carrier requeries	230V/460V IMFOCPG, IMTQCPG IPMFOC IMTQC	
			1–15HP 2–15kHz 4–10kHz 4–14kHz	2
			20–50HP 2–10kHz 4–10kHz 4–10kHz 4–10kHz 60–125HP 2–9kHz 4–9kHz 4–9kHz 4–9kHz	
	575V/690V (Light/ Normal/ Heavy load)  Power/ Control mode VF, VFPG, SVC  1–15HP (575V) 2–15kHz			
			Power/ Control mode	6
			20–600HP (690V) 2–9kHz	6 4 3
			850HP (690V) 2–9kHz	3

Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
			bit0: Control command by PLC force control	
	00.40	PLC command mask	bit1: Frequency command by PLC force control	Read
	00-19		bit2: Position command by PLC force control	only
			bit3: Torque command by PLC force control	
			0: Digital keypad	
			1: RS-485 communication	
			2: External analog input (Pr. 03-00)	
			3: External UP / DOWN terminal (multi-function	
		Martanfaranaan	input terminal)	
	00.00	Master frequency command	4: Pulse input without direction command (Pr.10-16	0
	00-20	(AUTO) source / Source selection	without direction), use with PG card	0
		of the PID target	5: Pulse input with direction command (Pr. 10-16),	
			use with PG card	
			6: CANopen communication card	
			8: Communication card (does not include CANopen	
			card)	
			0: Digital keypad	
		Operation command (AUTO) source	1: External terminals.	
	00-21		2: RS-485 communication.	0
			3: CANopen communication card	
			5: Communication card (does not include CANopen	
			card)	
	00-22	Cton mothod	0: Ramp to stop	0
<b>7</b>	00-22	Stop method	1: Coast to stop	0
			0: Enable forward / reverse	
×	00-23	Control of motor direction	1: Disable reverse	0
			2: Disable forward	
	00-24	Digital keypad frequency command	Dood only	Read
	00-24	memory	Read only	only
			bit0-3: user defined decimal place	
			0000b: no decimal place	
			0001b: one decimal place	
			0010b: two decimal places	
			0011b: three decimal places	
×	00-25	User defined characteristics	bit4–15: user defined unit	0
			000xh: Hz	
			001xh: rpm	
			002xh: %	
			003xh: kg	
			004xh: m/s	

Pr.	Parameter Name	Setting Range	Default
		005xh: kW	
		006xh: HP	
		007xh: ppm	
		008xh: 1/m	
		009xh: kg/s	
		00Axh: kg/m	
		00Bxh: kg/h	
		00Cxh: lb/s	
		00Dxh: lb/m	
		00Exh: lb/h	
		00Fxh: ft/s	
		010xh: ft/m	
		011xh: m	
		012xh: ft	
		013xh: degC	
		014xh: degF	
		015xh: mbar	
		016xh: bar	
		017xh: Pa	
		018xh: kPa	
		019xh: mWG	
		01Axh: inWG	
		01Bxh: ftWG	
		01Cxh: psi	
		01Dxh: atm	
		01Exh: L/s	
		01Fxh: L/m	
		020xh: L/h	
		021xh: m3/s	
		022xh: m3/h	
		023xh: GPM	
		024xh: CFM	
		xxxxh: Hz	
		0: Disable	
		0–65535 (when Pr. 00-25 set to no decimal place)	
		0.0–6553.5 (when Pr. 00-25 set to 1 decimal place)	
00-26	Maximum user-defined value	0.00–655.35 (when Pr. 00-25 set to 2 decimal	0
		places)	
		0.000–65.535 (when Pr. 00-25 set to 3 decimal	
		places)	

Chapter 11 Summary of Parameter Settings | C2000

Pr.	Parameter Name	Setting Range	Default	
00-27	User-defined value	Read only	Read	
		·	Only	
		Standard HOA function     When switching between local and remote, the		
		drive stops.		
		When switching between local and remote, the		
		drive runs with REMOTE settings for frequency		
		and operation status.		
		3: When switching between local and remote, the		
00-29	LOCAL / REMOTE mode	drive runs with LOCAL settings for frequency and	0	
		operation status.		
		4: When switching between local and remote, the		
		drive runs with LOCAL settings when switched to		
		Local and runs with REMOTE settings when		
		switched to Remote for frequency and operation		
		status.		
		0: Digital keypad		
	Master frequency command	1: RS-485 communication		
		2: External analog input (Pr. 03-00)		
		3: External UP / DOWN terminal	0	
00-30		4: Pulse input without direction command		
	(HAND) source	(Pr. 10-16 without direction)		
		5: Pulse input with direction command (Pr. 10-16)		
		6: CANopen communication card		
		8: Communication card (does not include CANopen		
		card)		
		0: Digital keypad 1: External terminals.		
	Operation command (HAND)	2: RS-485 communication.		
00-31	source	3: CANopen communication card	0	
	300100	5: Communication card (does not include CANopen		
		card)		
		0: Disable STOP key		
00-32	Digital keypad STOP function	1: Enable STOP key	0	
		TZIYIX		
00-40		→ Homing mode		
	Homing mode	➤ Z pulse setting	0000h	
		Note: Forward run = clockwise (CW)		
		Reverse run = counterclockwise (CCW)		

	Pr.	Parameter Name		Setting Range	Default
				0: Forward run to home.	
				Set PL forward limit as check point.	
				1: Reverse run (CCW) to home.	
				Set NL reverse limit (CCWL) as check point.	
				2: Forward run to home. Set ORG:	
				OFF $ ightarrow$ ON as check point.	
				3: Reverse to home. Set ORG:	
				OFF $ ightarrow$ ON as check point.	
				4: Forward run and search for Z-pulse as check	
				point.	
				5: Reverse run and search for Z-pulse as check	
				point.	
				6: Forward run to home. Set ORG:	
				ON  o OFF as check point.	
				7: Reverse run to home. Set ORG:	
				ON  o OFF as check point.	
				8: Define current position as home.	
				Set X to 0, 1, 2, 3, 6, 7 first.	
			Υ	0: Reverse run to Z pulse	
			•	1: Continue forward run to Z pulse	
				2: Ignore Z pulse	
				When home limit is reached, set X to 2, 3, 4, 5,	
			Z	6, 7 first.	
				0: Display the error	
				1: Reverse the direction	
×	00-41	Homing by frequency 1	0.0	0–599.00 Hz	8.00
×	00-42	Homing by frequency 2	0.0	0–599.00 Hz	2.00
×	00-48	Display filter time (current)	0.0	01–65.535 sec.	0.100
×	00-49	Display filter time (keypad)	0.0	01–65.535 sec.	0.100
	00-50	Software version (date)	Rea	ad only	#####

## **01 Basic Parameters**

	Pr.	Parameter Name	Setting Range	Default
~	01-00	Maximum operation frequency	0.00–599.00 Hz	60.00 /
,	01-00	maximum operation frequency	0.00-333.00 112	50.00
	01-01	Output frequency of motor 1	0.00–599.00 Hz	60.00 /
	0101	- Calpar inequency of motor i	0.00 000.00 112	50.00
			230V: 0.0–255.0 V	200.0
	01-02	Output voltage of motor 1	460V: 0.0–510.0 V	400.0
	0102	Cutput Veltage of Motor 1	575V: 0.0–637.0 V	575.0
			690V: 0.0–765.0 V	660.0
	01-03	Mid-point frequency 1 of motor 1	0.00–599.00 Hz	3.00
			230V: 0.0–240.0 V	11.0
<b>.</b>	01-04	Mid-point voltage 1 of motor 1	460V: 0.0–480.0 V	22.0
^	01-04	wiid-point voltage i of motor i	575V: 0.0–637.0 V	0.0
			690V: 0.0–720.0 V	0.0
	01-05	Mid-point frequency 2 of motor 1	0.00–599.00 Hz	1.50
			230V: 0.0–240.0 V	5.0
	04.06	1.06 Mid point voltage 2 of motor 1	460V: 0.0–480.0 V	10.0
~	01-06	Mid-point voltage 2 of motor 1	575V: 0.0V–637.0 V	0.0
			690V: 0.0–720.0 V	0.0
	01-07	Min. output frequency of motor 1	0.00–599.00 Hz	0.50
			230V: 0.0–240.0 V	1.0
	04.00	Min autout valtage of mateur	460V: 0.0–480.0 V	2.0
~	01-08	Min. output voltage of motor 1	575V: 0.0–637.0 V	0.0
			690V: 0.0–720.0 V	0.0
	01-09	Start-up frequency	0.00–599.00 Hz	0.50
*	01-10	Output frequency upper limit	0.00–599.00 Hz	599.00
*	01-11	Output frequency lower limit	0.00–599.00 Hz	0
			Pr. 01-45=0: 0.00–600.00 sec.	
	01-12	Acceleration time 1	Pr. 01-45=1: 0.00-6000.0 sec.	10.00
^	01-12	Acceleration time 1	The default of motor drive with 30HP and above:	10.00
			60.00 / 60.0	
			Pr. 01-45=0: 0.00–600.00 sec.	
×	01-13	Deceleration time 1	Pr. 01-45=1: 0.00–6000.0 sec.	10.00
			The default of motor drive with 30HP and above:	
			60.00 / 60.0	
			Pr. 01-45=0: 0.00–600.00 sec.	
*	01-14	Acceleration time 2	Pr. 01-45=1: 0.00–6000.0 sec.	10.00
			The default of motor drive with 30HP and above:	
	01-15	Deceleration time 2	60.00 / 60.0	10.00
7	U I-15	Deceleration time 2	Pr. 01-45=0: 0.00–600.00 sec.	10.00

	Pr.	Parameter Name	Setting Range	Default
			Pr. 01-45=1: 0.00–6000.0 sec.	
			The default of motor drive with 30HP and above:	
			60.00 / 60.0	
			Pr. 01-45=0: 0.00–600.00 sec.	
*	01-16	Acceleration time 3	Pr. 01-45=1: 0.00–6000.0 sec.	10.00
			The default of motor drive with 30HP and above:	
			60.00 / 60.0	
			Pr. 01-45=0: 0.00–600.00 sec.	
×	01-17	Deceleration time 3	Pr. 01-45=1: 0.00–6000.0 sec.  The default of motor drive with 30HP and above:	10.00
			60.00 / 60.0	
			Pr. 01-45=0; 0.00–600.00 sec.	
			Pr. 01-45=1: 0.00–6000.0 sec.	
×	01-18	Acceleration time 4	The default of motor drive with 30HP and above:	10.00
			60.00 / 60.0	
			Pr. 01-45=0: 0.00-600.00 sec.	
	04.40	Deceleration time 4	Pr. 01-45=1: 0.00–6000.0 sec.	10.00
*	01-19	Deceleration time 4	The default of motor drive with 30HP and above:	10.00
			60.00 / 60.0	
			Pr. 01-45=0: 0.00-600.00 sec.	
<b>√</b>	01.20	01-20 JOG acceleration time	Pr. 01-45=1: 0.00–6000.0 sec.	10.00
~	01-20	JOG acceleration time	The default of motor drive with 30HP and above:	10.00
			60.00 / 60.0	
			Pr. 01-45=0: 0.00–600.00 sec.	
~	01-21	JOG deceleration time	Pr. 01-45=1: 0.00–6000.0 sec.	10.00
,	0121	goo deceleration time	The default of motor drive with 30HP and above:	10.00
			60.00 / 60.0	
×	01-22	JOG frequency	0.00-599.00Hz	6.00
~	01-23	First / Fourth acceleration /	0.00-599.00Hz	0.00
,		deceleration frequency	0.00	0.00
~	01-24	S-curve acceleration begin time 1	Pr. 01-45=0: 0.00–25.00 sec.	0.20
,			Pr. 01-45=1: 0.0–250.0 sec.	
~	01-25	S-curve acceleration arrival time 2	Pr. 01-45=0: 0.00–25.00 sec.	0.20
			Pr. 01-45=1: 0.0–250.0 sec.	
×	01-26	S-curve deceleration begin time 1	Pr. 01-45=0: 0.00–25.00 sec.	0.20
			Pr. 01-45=1: 0.0–250.0 sec.	,
~	01-27	S-curve deceleration arrival time 2	Pr. 01-45=0: 0.00–25.00 sec.	0.20
			Pr. 01-45=1: 0.0–250.0 sec.	
	01-28	Skip frequency 1 (upper limit)	0.00–599.00 Hz	0.00
	01-29	Skip frequency 1 (lower limit)	0.00–599.00 Hz	0.00
	01-30	Skip frequency 2 (upper limit)	0.00–599.00 Hz	0.00

Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
•	01-31	Skip frequency 2 (lower limit)	0.00–599.00 Hz	0.00
	01-32	Skip frequency 3 (upper limit)	0.00-599.00 Hz	0.00
	01-33	Skip frequency 3 (lower limit)	0.00–599.00 Hz	0.00
			0: Waiting for output	
	01-34	Zero-speed mode	1: Zero-speed operation	0
			2: Minimum frequency (Refer to Pr. 01-07, 01-41)	
	01-35	Output frequency of motor 2	0.00–599.00 Hz	60.00 / 50.00
			230V: 0.0–255.0 V	200.0
			460V: 0.0–510.0 V	400.0
	01-36	Output voltage of motor 2	575V: 0.0–637.0 V	575.0
			690V: 0.0–765.0 V	660.0
	01-37	Mid-point frequency 1 of motor 2	0.00–599.00 Hz	3.00
			230V: 0.0–240.0 V	11.0
			460V: 0.0–480.0 V	22.0
~	01-38	Mid-point voltage 1 of motor 2	575V: 0.0–637.0 V	0.0
			690V: 0.0-720.0 V	0.0
•	01-39	Mid-point frequency 2 of motor 2	0.00–599.00 Hz	1.50
			230V: 0.0–240.0 V	5.0
	04.40	Mid naint valtana 2 of mates 2	460V: 0.0–480.0 V	10.0
~	01-40	Mid-point voltage 2 of motor 2	575V: 0.0–637.0 V	0.0
			690V: 0.0-720.0 V	0.0
	01-41	Min. output frequency of motor 2	0.00-599.00 Hz	0.50
•			230V: 0.0–240.0 V	1.0
	01-42	Min. autout valtage of mater 2	460V: 0.0–480.0 V	2.0
~	01-42	Min. output voltage of motor 2	575V: 0.0–637.0 V	0.0
			690V: 0.0–720.0 V	0.0
			0: V/F curve determined by Pr. 01-00-01-08	
			1: 1.5 <sup>th</sup> V/F curve	
			2: 2 <sup>nd</sup> V/F curve	
			3: 60Hz, voltage saturation in 50Hz	
			4: 72Hz, voltage saturation in 60Hz	
			5: 50Hz, decrease gradually with cube	
	01-43	V/F curve selection	6: 50Hz, decrease gradually with square	0
			7: 60Hz, decrease gradually with cube	
			8: 60Hz, decrease gradually with square	
			9: 50Hz, medium starting torque	
			10: 50Hz, high starting torque	
			11: 60Hz, medium starting torque	
			12: 60Hz, high starting torque	

### Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
			13: 90Hz, voltage saturation in 60Hz	
			14: 120Hz, voltage saturation in 60Hz	
			15: 180Hz, voltage saturation in 60Hz	
			0: Linear acceleration and linear deceleration	
			1: Auto-acceleration and linear deceleration	
~	01-44	Auto-acceleration and	2: Linear acceleration and auto-deceleration	0
~	01-44	auto-deceleration setting	3: Auto-acceleration and auto-deceleration	U
			4: Stall prevention by auto-acceleration and	
			auto-deceleration (limited by Pr. 01-12~01-21)	
	01-45	Time unit for accel. / decel. and S	0: Unit: 0.01 sec.	0
	01-45	curve	1: Unit: 0.1 sec.	U
	01-46	CANanan quiak atan tima	Pr. 01-45=0: 0.00–600.00 sec.	1.00
~	01-40	CANopen quick stop time	Pr. 01-45=1: 0.0–6000.0 sec.	1.00
		Pagaparative apargy restriction	0: Disable	
	01-49	Regenerative energy restriction control method	1: Over voltage energy restriction	0
		Control method	2: Traction energy control (TEC)	

## 02 Digital Input / Output Parameters

Pr.	Parameter Name	Setting Range	Default
		0: Two-wire mode 1, power on for operation control	
02-00	Two-wire / Three-wire operation	1: Two -wire mode 2, power on for operation	0
02-00	control	control	U
		2: Three-wire, power on for operation control	
02-01	Multi-function input command 1 (MI1)	0: No function	1
02-02	Multi-function input command 2 (MI2)	1: Multi-step speed command 1 / multi-step	2
02-03	Multi-function input command 3 (MI3)	position command 1	3
02-04	Multi-function input command 4 (MI4)	2: Multi-step speed command 2 / multi-step	4
02-05	Multi-function input command 5 (MI5)	position command 2	0
02-06	Multi-function input command 6 (MI6)	3: Multi-step speed command 3 / multi-step	0
02-07	Multi-function input command 7 (MI7)	position command 3	0
02-08	Multi-function input command 8 (MI8)	4: Multi-step speed command 4 / multi-step	0
02-26	Input terminal of I/O extension card	position command 4	0
02-20	(MI10)	5: Reset	U
02-27	Input terminal of I/O extension card	6: JOG command (By KPC-CC01 or external	0
02-21	(MI11)	control)	U
02-28	Input terminal of I/O extension card	7: Acceleration / deceleration speed inhibit	0
02-20	(MI12)	8: 1 <sup>st</sup> and 2 <sup>nd</sup> acceleration / deceleration time	U
02-29	Input terminal of I/O extension card	selection	0
02-25	(MI13)	9: 3 <sup>rd</sup> and 4 <sup>th</sup> acceleration / deceleration time	Ů,
02-30	Input terminal of I/O extension card	selection	0
02 00	(MI14)	10: EF input (Pr. 07-20)	
02-31	Input terminal of I/O extension card	11: Base Block (B.B) input from external	0
02 01	(MI15)	12: Output stop	ŭ
		13: Cancel the setting of auto-acceleration /	
		auto-deceleration time	
		14: Switch between motor 1 and motor 2	
		15: Rotating speed command from AVI	
		16: Rotating speed command from ACI	
		17: Rotating speed command from AUI	
		18: Forced to stop (Pr. 07-20)	
		19: Digital up command	
		20: Digital down command	
		21: PID function disabled	
		22: Clear the counter	
		23: Input the counter value (MI6)	
		24: FWD JOG command	
		25: REV JOG command	

	Pr.	Parameter Name	Setting Range	Default
			26: TQC / FOC mode selection	
			27: ASR1 / ASR2 selection	
			28: Emergency stop (EF1)	
			29: Signal confirmation for Y-connection	
			30: Signal confirmation for ∆-connection	
			31: High torque bias (Pr. 11-30)	
			32: Middle torque bias (Pr. 11-31)	
			33: Low torque bias (Pr. 11-32)	
			34: Switch between multi-step position and	
			multi-step speed control	
			35: Enable single-point position control	
			36: Enable multi-step position learning function	
			(valid at stop)	
			37: Enable full position control pulse command	
			input	
			38: Disable write EEPROM function	
			39: Torque command direction	
			40: Force coasting to stop	
			41: HAND switch	
			42: AUTO switch	
			43: Enable resolution selection (Pr. 02-48)	
			44: Reverse direction homing (NL)	
			45: Forward direction homing (PL)	
			46: Homing (ORG)	
			47: Enable homing function	
			48: Mechanical gear ratio switch	
			49: Enable drive	
			50: Slave dEb action to execute	
			51: Selection for PLC mode bit 0	
			52: Selection for PLC mode bit 1	
			53: Trigger CANopen quick stop	
			55: Brake release	
L			56: Local / Remote selection	
~	02-09	UP / DOWN key mode	0: UP / DOWN by acceleration / deceleration time	0
"	02-08	OF / DOWN REY HIDGE	1: UP / DOWN constant speed (Pr. 02-10)	U
		Constant speed, acceleration /		
~	02-10	deceleration speed of the UP / DOWN	0.001–1.000Hz / ms	0.001
		key		
~	02-11	Multi-function input response time	0.000-30.000 sec.	0.005
~	02-12	Multi-function input mode selection	0000h–FFFFh (0: N.O.; 1: N.C.)	0000h

	Pr.	Parameter Name	Setting Range	Default
*	02-13	Multi-function output 1 RLY1	0: No function	11
*	02-14	Multi-function output 2 RLY2	1: Indication during RUN	1
*	02-16	Multi-function output 3 (MO1)	2: Operation speed reached	66
*	02-17	Multi-function output 4 (MO2)	3: Desired frequency reached 1 (Pr. 02-22)	0
×	02-36	Output terminal of the I/O extension card (MO10) or (RA10)	4: Desired frequency reached 2 (Pr. 02-24) 5: Zero speed (Frequency command)	0
*	02-37	Output terminal of I/O extension card (MO11) or (RA11)	6: Zero speed including STOP (Frequency command)	0
×	02-38	Output terminal of I/O extension card (RA12)	7: Over-torque 1 (Pr. 06-06-06-08) 8: Over-torque 2 (Pr. 06-09-06-11)	0
*	02-39	Output terminal of I/O extension card (RA13)	9: Drive is ready 10: Low voltage warning (Lv) (Pr. 06-00)	0
×	02-40	Output terminal of I/O extension card (RA14)	11: Malfunction indication 12: Mechanical brake release (Pr. 02-32)	0
*	02-41	Output terminal of I/O extension card (RA15)	13: Over-heat warning (Pr. 06-15) 14: Software brake signal indication (Pr. 07-00)	0
×	02-42	Output terminal of I/O extension card (MO16 virtual terminal)	15: PID feedback error (Pr. 08-13, Pr. 08-14) 16: Slip error (oSL)	0
*	02-43	Output terminal of I/O extension card (MO17 virtual terminal)	17: Count value reached, does not return to 0 (Pr. 02-20)	0
×	02-44	Output terminal of I/O extension card (MO18 virtual terminal)	18: Count value reached, returns to 0 (Pr. 02-19)	0
*	02-45	Output terminal of I/O extension card (MO19 virtual terminal)	19: External interrupt B.B. input (Base Block) 20: Warning output	0
*	02-46	Output terminal of I/O extension card (MO20 virtual terminal)	21: Over-voltage 22: Over-current stall prevention	0
=			23: Over-voltage stall prevention	
			24: Operation mode 25: Forward command	
			26: Reverse command	
			27: Output when current ≥ Pr. 02-33	
			28: Output when current < Pr. 02-33	
			29: Output when frequency ≥ Pr. 02-34	
			30: Output when frequency < Pr. 02-34	
			31: Y-connection for the motor coil	
			32: Δ-connection for the motor coil	
			33: Zero speed (actual output frequency)	
			34: Zero speed including stop (actual output	
			frequency)	
			35: Error output selection 1 (Pr. 06-23)	

	Pr.	Parameter Name	Setting Range	Default
Ī			36: Error output selection 2 (Pr. 06-24)	
			37: Error output selection 3 (Pr. 06-25)	
			38: Error output selection 4 (Pr. 06-26)	
			39: Position reached (Pr. 10-19)	
			40: Speed reached (including stop)	
			41: Multi-position reached	
			42: Crane function	
			43: Actual motor speed higher than Pr. 02-47	
			44: Low current output (use with Pr. 06-71~06-73)	
			45: UVW output electromagnetic valve switch	
			46: Master dEb output	
			47: Closed brake output	
			49: Homing action complete output	
			50: Output control for CANopen	
			51: Analog output control for RS485 interface	
			(InnerCOM / MODBUS)	
			52: Output control for communication cards	
			65: Output for both CAN & 485 control	
			66: SO output logic A	
			67: Analog input level reached	
			68: SO output logic B	
			70: FAN warning output	
~	02-18	Multi-function output direction	0000h~FFFFh (0: N.O.; 1: N.C.)	0000h
~	02-19	Terminal counting value reached (returns to 0)	0–65500	0
~	02-20	Preliminary counting value reached (does not return to 0)	0–65500	0
~	02-21	Digital output gain (DFM)	1–166	1
أر	02-22	Desired frequency reached 1	0.00-599.00Hz	60.00 /
~	02-22	Desired frequency reactied 1	0.00-599.00HZ	50.00
~	02-23	The width of the desired frequency reached 1	0.00-599.00Hz	2.00
~	02-24	Desired frequency reached 2	0.00-599.00Hz	60.00 / 50.00
~	02-25	The width of the desired frequency reached 2	0.00-599.00Hz	2.00
Ī	02-32	Brake delay time	0.000-65.000 sec.	0.000
~	02-33	Output current level setting for multi-function output terminal	0–100%	0

	Pr.	Parameter Name	Setting Range	Default
	02-34	Output frequency setting for	0.00-599.00Hz	2.00
	02-34	multi-function output terminal	(Motor speed when using PG Card)	3.00
		External operation control selection	0: Disable	
×	02-35	after reset and activate	1: Drive runs if the RUN command remains after	0
		and reset and activate	reset or reboot	
×	02-47	Motor zero-speed level	0–65535 rpm	0
*	02-48	Maximum frequency of resolution switch	0.00-599.00Hz	60.00
*	02-49	Switch delay time of maximum output frequency	0–65.000 sec.	0.000
Ī	02-50	Display the status of multi-function input terminal	Monitor the status of multi-function input terminals	Read only
Ī	02-51	Display the status of multi-function	Monitor the status of multi-function output terminals	Read
}		output terminal  Display the external multi-function	terminals	only Read
	02-52	input terminals used by PLC	Monitor the status of PLC input terminals	only
	02-53	Display the external multi-function	Monitor the status of PLC output terminals	Read
	02-00	output terminals used by PLC	Monitor the status of PLC output terminals	only
	02-54	Display the frequency command	0.00–599.00Hz (Read only)	Read
	02 01	executed by external terminal	0.00 000.00112 (((dad 0111y))	only
	02-56	Brake release check time	0.000-65.000 sec.	0.000
		Multi-function output terminal:		
×	02-57	function 42: brake current check	0–100%	0
-		point		
į	00.50	Multi-function output terminal	0.00.500.001	0.00
*	02-58	(function 42): brake frequency check	0.00-599.00Hz	0.00
-		point Fraguerous reached datastics		
	02-63	Frequency reached detection amplitude	0.00-599.00Hz	0.00
			1: EMC-BPS01	
			4: EMC-D611A	Read
	02-70	IO card types	5: EMC-D42A	only
			6: EMC-R6AA	Offig
			11: EMC-A22A	
			0: Use frequency with speed control as DFM	
	02-71	DFM output selection	output frequency	0
		'	1: Use frequency with system acceleration /	
			deceleration as DFM output frequency	
	02-74	Internal / external multi-function input	0000-FFFFh	0000h
		terminal selection		

### Chapter 11 Summary of Parameter Settings | C2000

Pr.	Parameter Name	Setting Range	Default
02.75	Internal multi-function output terminal	0000 EEEE	0000h
02-75	selection	0000-FFFFh	0000h

## 03 Analog Input / Output Parameters

	Pr.	Parameter Name	Setting Range	Default
*	03-00	Analog input selection (AVI)	0: No function	1
×	03-01	Analog input selection (ACI)	1: Frequency command (speed limit under torque	0
×	03-02	Analog input selection (AUI)	control mode)	0
			2: Torque command (torque limit under speed mode)	
			3: Torque compensation command	
			4: PID target value	
			5: PID feedback signal	
			6: Thermistor (PTC / KTY-84) input value	
			7: Positive torque limit	
			8: Negative torque limit	
			9: Regenerative torque limit	
			10: Positive / negative torque limit	
			11: PT100 thermistor input value	
			13: PID compensation value	
*	03-03	Analog input bias (AVI)	-100.0–100.0%	0.0
×	03-04	Analog input bias (ACI)	-100.0–100.0%	0.0
*	03-05	Analog input bias (AUI)	-100.0–100.0%	0.0
<b>₩</b>	03-07	Positive / negative bias mode	0: No bias	
	03-07	(AVI)	1: Lower than or equal to bias	
<b>.</b>	03-08	Positive / negative bias mode	2: Greater than or equal to bias	0
	03-06	(ACI)	3: The absolute value of the bias voltage while serving	U
<b>.</b>	03-09	Positive / negative bias mode	as the center	
	03-09	(AUI)	4: Bias serves as the center	
			0: Negative frequency is not allowed. The digital	
			keypad or external terminal controls the forward and	
		Reverse setting when analog	reverse direction.	
	03-10	signal input is negative	1: Negative frequency is allowed. Positive frequency =	0
		frequency	run in forward direction; negative frequency = run in	
			reverse direction. The digital keypad or external	
			terminal control cannot switch the running direction.	
*	03-11	Analog input gain (AVI)	-500.0–500.0%	100.0
*	03-12	Analog input gain (ACI)	-500.0–500.0%	100.0
*	03-13	Analog positive input gain (AUI)	-500.0–500.0%	100.0
*	03-14	Analog negative input gain (AUI)	-500.0–500.0%	100.0
*	03-15	Analog input filter time (AVI)	0.00-20.00 sec.	0.01
×	03-16	Analog input filter time (ACI)	0.00-20.00 sec.	0.01
×	03-17	Analog input filter time (AUI)	0.00–20.00 sec.	0.01

	Pr.	Parameter Name	Setting Range	Default
	00.40	And the state of t	0: Disable (AVI, ACI, AUI)	0
*	03-18	Analog input addition function	1: Enable	0
•			0: Disable	
		Signal loss selection for	1: Continue operation at the last frequency	_
	03-19	analog input 4–20mA	2: Decelerate to 0Hz	0
		- '	3: Stop immediately and display ACE	
×	03-20	Multi-function output 1 (AFM1)	0: Output frequency (Hz)	0
×	03-23	Multi-function output 2 (AFM2)	1: Frequency command (Hz)	0
ŀ			2: Motor speed (Hz)	
			3: Output current (rms)	
			4: Output voltage	
			5: DC BUS voltage	
			6: Power factor	
			7: Power	
			8: Output torque	
			9: AVI	
			10: ACI	
			11: AUI	
			12: Iq current command	
			13: Iq feedback value	
			14: Id current command	
			15: Id feedback value	
			18: Torque command	
			19: PG2 frequency command	
			20: CANopen analog output	
			21: RS-485 analog output	
			22: Communication card analog output	
			23: Constant voltage output	
			25: CANopen and RS-485 analog output	
*	03-21	Analog output gain 1 (AFM1)	0.0–500.0%	100.0
		Analog output 1 in REV direction (AFM1)	0: Absolute value of output voltage	
×	03-22		1: Reverse output 0 V; forward output 0–10 V	0
		(ALIMIT)	2: Reverse output 5–0 V; forward output 5–10 V	
×	03-24	Analog output gain 2 (AFM2)	0.0–500.0%	100.0
Ì		Analog output 2 in REV direction (AFM2)	0: Absolute value of output voltage	
×	03-25		1: Reverse output 0 V; forward output 0–10 V	0
			2: Reverse output 5–0 V; forward output 5–10 V	
×	03-27	AFM2 output bias	-100.00–100.00%	0.00
		· · · · · · · · · · · · · · · · · · ·	0: 0–10V	
×	03-28	28 AVI terminal input selection	1: 0–20mA	0
			2: 4–20mA	-
			=- : = <del></del>	

	Pr.	Parameter Name	Setting Range	Default
*	03-29	ACI terminal input selection	0: 4–20mA	
			1: 0–10V	0
			2: 0–20mA	
	03-30	PLC analog output terminal		Read
		status	Monitor the status of PLC analog output terminals	only
			0: 0–20mA output	
~	03-31	AFM2 output selection	1: 4–20mA output	0
×	03-32	AFM1 DC output setting level	0.00-100.00%	0.00
~	03-33	AFM2 DC output setting level	0.00–100.00%	0.00
~	03-35	AFM1 filter output time	0.00-20.00 sec.	0.01
×	03-36	AFM2 filter output time	0.00-20.00 sec.	0.01
•		Multi-function MO output by AI level source	0: AVI	0
×	03-44		1: ACI	
			2: AUI	
~	03-45	Al upper level	-100.00-100.00%	50.00
~	03-46	Al lower level	-100.00-100.00%	10.00
,			0: Regular curve	
		Analog input curve selection	1: Three-point curve of AVI	
			2: Three-point curve of ACI	
.,	02.50		3: Three-point curve of AVI & ACI	0
~	03-50		4: Three-point curve of AUI	
			5: Three-point curve of AVI & AUI	
			6: Three-point curve of ACI & AUI	
			7: Three-point curve of AVI & ACI & AUI	
			Pr. 03-28=0, 0.00–10.00V	0.00
×	03-51	AVI lowest point	Pr. 03-28=1, 0.00–20.00mA	0.00
			Pr. 03-28=2, 0.00–20.00mA	4.00
*	03-52	AVI proportional lowest point	-100.00–100.00%	0.00
	03-53	AVI mid-point	Pr. 03-28=0, 0.00–10.00V	5.00
*			Pr. 03-28=1, 0.00–20.00mA	10.00
			Pr. 03-28=2, 0.00–20.00mA	12.00
*	03-54	AVI proportional mid-point	-100.00–100.00%	50.00
			Pr. 03-28=0, 0.00–10.00V	10.00
*	03-55	AVI highest point	Pr. 03-28=1, 0.00–20.00mA	20.00
			Pr. 03-28=2, 0.00–20.00mA	20.00
*	03-56	AVI proportional high point	-100.00–100.00%	100.00
*	03-57	ACI lowest point	Pr. 03-29=0, 0.00–20.00mA	4.00
			Pr. 03-29=1, 0.00–10.00V	0.00
			Pr. 03-29=2, 0.00–20.00mA	0.00
×	03-58	ACI proportional lowest point	-100.00–100.00%	0.00

### Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
			Pr. 03-29=0, 0.00–20.00mA	12.00
×	03-59	ACI mid-point	Pr. 03-29=1, 0.00–10.00V	5.00
			Pr. 03-29=2, 0.00–20.00mA	10.00
×	03-60	ACI proportional mid-point	-100.00–100.00%	50.00
			Pr. 03-29=0, 0.00-20.00mA	20.00
×	03-61	ACI highest point	Pr. 03-29=1, 0.00-10.00V	10.00
			Pr. 03-29=2, 0.00–20.00mA	20.00
×	03-62	ACI proportional highest point	-100.00–100.00%	100.00
×	03-63	Positive AUI voltage lowest point	0.00-10.00V	0.00
*	03-64	Positive AUI voltage proportional lowest point	-100.00%—100.00%	0.00
*	03-65	Positive AUI voltage mid-point	0.00-10.00V	5.00
*	03-66	Positive AUI voltage proportional mid-point	-100.00%—100.00%	50.00
*	03-67	Positive AUI voltage highest point	0.00-10.00V	10.00
*	03-68	Positive AUI voltage proportional highest point	-100.00%—100.00%	100.00
*	03-69	Negative AUI voltage highest point	-10.00V–0.00V	0.00
*	03-70	Negative AUI voltage proportional highest point	-100.00%—100.00%	0.00
*	03-71	Negative AUI voltage mid-point	-10.00-0.00V	-5.00
*	03-72	Negative AUI voltage proportional mid-point	-100.00%—100.00%	-50.00
*	03-73	Negative AUI voltage lowest point	-10.00–0.00V	-10.00
*	03-74	Negative AUI voltage proportional lowest point	-100.00%—100.00%	-100.00

## **04 Multi-step Speed Parameters**

	Pr.	Parameter Name	Setting Range	Default
×	04-00	1 <sup>st</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-01	2 <sup>nd</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-02	3 <sup>rd</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-03	4 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-04	5 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-05	6 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-06	7 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-07	8 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-08	9 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-09	10 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-10	11 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-11	12 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-12	13 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-13	14 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-14	15 <sup>th</sup> step speed frequency	0.00-599.00Hz	0.00
×	04-15	Position command 1 (rotation)	-30000–30000	0
×	04-16	Position command 1 (pulse)	-32767–32767	0
×	04-17	Position command 2 (rotation)	-30000–30000	0
×	04-18	Position command 2 (pulse)	-32767–32767	0
×	04-19	Position command 3 (rotation)	-30000–30000	0
×	04-20	Position command 3 (pulse)	-32767–32767	0
×	04-21	Position command 4 (rotation)	-30000–30000	0
×	04-22	Position command 4 (pulse)	-32767–32767	0
×	04-23	Position command 5 (rotation)	-30000–30000	0
×	04-24	Position command 5 (pulse)	-32767–32767	0
×	04-25	Position command 6 (rotation)	-30000–30000	0
×	04-26	Position command 6 (pulse)	-32767–32767	0
×	04-27	Position command 7 (rotation)	-30000–30000	0
×	04-28	Position command 7 (pulse)	-32767–32767	0
×	04-29	Position command 8 (rotation)	-30000–30000	0
×	04-30	Position command 8 (pulse)	-32767–32767	0
×	04-31	Position command 9 (rotation)	-30000–30000	0
×	04-32	Position command 9 (pulse)	-32767–32767	0
×	04-33	Position command 10 (rotation)	-30000–30000	0
×	04-34	Position command 10 (pulse)	-32767–32767	0
×	04-35	Position command 11 (rotation)	-30000–30000	0
×	04-36	Position command 11 (pulse)	-32767–32767	0

	Pr.	Parameter Name	Setting Range	Default
×	04-37	Position command 12 (rotation)	-30000–30000	0
×	04-38	Position command 12 (pulse)	-32767–32767	0
×	04-39	Position command 13 (rotation)	-30000–30000	0
*	04-40	Position command 13 (pulse)	-32767–32767	0
*	04-41	Position command 14 (rotation)	-30000–30000	0
×	04-42	Position command 14 (pulse)	-32767–32767	0
×	04-43	Position command 15 (rotation)	-30000–30000	0
×	04-44	Position command 15 (pulse)	-32767–32767	0
×	04-50	PLC buffer 0	0–65535	0
×	04-51	PLC buffer 1	0–65535	0
*	04-52	PLC buffer 2	0–65535	0
*	04-53	PLC buffer 3	0–65535	0
*	04-54	PLC buffer 4	0–65535	0
×	04-55	PLC buffer 5	0–65535	0
×	04-56	PLC buffer 6	0–65535	0
×	04-57	PLC buffer 7	0–65535	0
×	04-58	PLC buffer 8	0–65535	0
×	04-59	PLC buffer 9	0–65535	0
×	04-60	PLC buffer 10	0–65535	0
×	04-61	PLC buffer 11	0–65535	0
×	04-62	PLC buffer 12	0–65535	0
×	04-63	PLC buffer 13	0–65535	0
×	04-64	PLC buffer 14	0–65535	0
×	04-65	PLC buffer 15	0–65535	0
×	04-66	PLC buffer 16	0–65535	0
×	04-67	PLC buffer 17	0–65535	0
×	04-68	PLC buffer 18	0–65535	0
×	04-69	PLC buffer 19	0–65535	0
×	04-70	PLC Application parameter 0	0–65535	0
×	04-71	PLC Application parameter 1	0–65535	0
×	04-72	PLC Application parameter 2	0–65535	0
×	04-73	PLC Application parameter 3	0–65535	0
×	04-74	PLC Application parameter 4	0–65535	0
×	04-75	PLC Application parameter 5	0–65535	0
×	04-76	PLC Application parameter 6	0–65535	0
×	04-77	PLC Application parameter 7	0–65535	0
×	04-78	PLC Application parameter 8	0–65535	0
×	04-79	PLC Application parameter 9	0–65535	0
×	04-80	PLC Application parameter 10	0–65535	0

Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
×	04-81	PLC Application parameter 11	0–65535	0
*	04-82	PLC Application parameter 12	0–65535	0
×	04-83	PLC Application parameter 13	0–65535	0
*	04-84	PLC Application parameter 14	0–65535	0
*	04-85	PLC Application parameter 15	0–65535	0
*	04-86	PLC Application parameter 16	0–65535	0
*	04-87	PLC Application parameter 17	0–65535	0
*	04-88	PLC Application parameter 18	0–65535	0
*	04-89	PLC Application parameter 19	0–65535	0
*	04-90	PLC Application parameter 20	0–65535	0
*	04-91	PLC Application parameter 21	0–65535	0
*	04-92	PLC Application parameter 22	0–65535	0
*	04-93	PLC Application parameter 23	0–65535	0
*	04-94	PLC Application parameter 24	0–65535	0
*	04-95	PLC Application parameter 25	0–65535	0
*	04-96	PLC Application parameter 26	0–65535	0
*	04-97	PLC Application parameter 27	0–65535	0
*	04-98	PLC Application parameter 28	0–65535	0
*	04-99	PLC Application parameter 29	0–65535	0

### **05 Motor Parameters**

	Pr.	Parameter Name	Setting Range	Default
			No function     Simple rolling auto-tuning for induction motor (IM)	
			2: Static auto-tuning for induction motor (IM)	
			4: Dynamic test for PM magnetic pole	
	05-00	Motor parameter auto tuning	(with the running in forward direction)	0
			5: Rolling auto-tuning for PM (IPM / SPM)	
			6: Advanced rolling auto-tuning for IM motor flux curve	
			12: FOC sensorless inertia estimation	
			13: Static auto-tuning for PM (IPM / SPM)	Depending
	05-01	Full-load current for induction motor 1 (A)	Depending on the model power	Depending on the model power
×	05-02	Rated power for induction motor 1 (kW)	0.00-655.35kW	Depending on the model power
×	05-03	Rated speed for induction motor 1 (rpm)	0-xxxx (Depending on the motor pole number)	Depending on the motor pole number
	05-04	Number of poles for induction motor 1	2–64	4
	05-05	No-load current for induction motor 1 (A)	0.00–Pr. 05-01 default	Depending on the model power
	05-06	Stator resistance (Rs) for induction motor 1	0.000–65.535Ω	Depending on the model power
	05-07	Rotor resistance (Rr) for induction motor 1	0.000–65.535Ω	0.000
	05-08	Magnetizing inductance (Lm) for induction motor 1	0.0-6553.5mH	0.0
	05-09	Stator inductance (Lx) for induction motor 1	0.0-6553.5mH	0.0
	05-13	Full-load current for induction motor 2 (A)	Depending on the model power	Depending on the model power
*	05-14	Rated power for induction motor 2 (kW)	0.00-655.35kW	Depending on the model power
×	05-15	Rated speed for induction motor 2 (rpm)	0-xxxx (Depending on the motor pole number)	Depending on the motor pole number
	05-16	Number of poles for induction motor 2	2–64	4
	05-17	No-load current for induction motor 2 (A)	0.00– Pr. 05-13 default	Depending on the model power

Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
	05-18	Stator resistance (Rs) for induction motor 2	0.000–65.535Ω	Depending on the model power
	05-19	Rotor resistance (Rr) of induction motor 2	$0.000-65.535\Omega$	0.000
	05-20	Magnetizing inductance (Lm) of induction motor 2	0.0-6553.5mH	0.0
	05-21	Stator inductance (Lx) of induction motor 2	0.0-6553.5mH	0.0
	05-22	Induction motor 1 / 2 selection	1: Motor 1 2: Motor 2	1
*	05-23	Frequency for Y-connection / $\Delta$ -connection switch for an induction motor	0.00-599.00Hz	60.00
	05-24	Y-connection / Δ-connection switch for induction motor	0: Disable 1: Enable	0
*	05-25	Delay time for Y-connection / Δ-connection switch for an induction motor	0.000-60.000 sec.	0.200
	05-28	Accumulated Watt-hour for a motor (W-hour)	Read only	0.0
	05-29	Accumulated Watt-hour for a motor in low word (kW-hour)	Read only	0.0
	05-30	Accumulated Watt-hour for a motor in high word (MW-hour)	Read only	0
	05-31	Accumulated motor operation time (Min.)	0–1439	0
	05-32	Accumulated motor operation time (Day)	0–65535	0
	05-33	Induction motor (IM) or permanent magnet motor (PM) selection	0: IM 1: SPM (Surface permanent magnet motor) 2: IPM (Interior permanent magnet motor)	0
	05-34	Full-load current for a permanent magnet motor	Depending on the model power	Depending on the model power
*	05-35	Rated power for a permanent magnet motor	0.00-655.35kW	Depending on the model power
*	05-36	Rated speed for a permanent magnet motor	0–65535rpm	2000
	05-37	Pole number for a permanent magnet motor	0–65535	10

Pr.	Parameter Name	Setting Range	Default
05-38	System inertia for a permanent	0.0-6553.5kg.cm <sup>2</sup>	Depending on the
05-36	magnet motor	0.0-055.5kg.cm-	motor power
05-39	Stator resistance for a permanent	0.000–65.535Ω	0.000
00-00	magnet motor	0.000-03.33322	0.000
05-40	Permanent magnet motor Ld	0.00–655.35mH	0.00
05-41	Permanent magnet motor Lq	0.00–655.35mH	0.00
05-42	PG offset angle for a permanent	0.0–360.0°	0.0
03-42	magnet motor	0.0-300.0	0.0
05-43	Ke parameter of a permanent	0–65535 (Unit: V / krpm)	0
03-43	magnet motor	0-0000 (Offic. v / Kipifi)	U

# **06 Protection Parameters**

	Pr.	Parameter Name	Setting Range	Default
			230V:	
			Frame A–D: 150.0–220.0V <sub>DC</sub>	180.0
			Frame E and above: 190.0–220.0V <sub>DC</sub>	200.0
~	06-00	Low voltage level	460V:	
,	00-00	Low voltage level	Frame A–D: 300.0–440.0V <sub>DC</sub>	360.0
			Frame E and above: 380.0~440.0V <sub>DC</sub>	400.0
			575V: 420.0–520.0V <sub>DC</sub>	470.0
			690V: 450.0–660.0V <sub>DC</sub>	480.0
			0: Disabled	
			230V: 0.0–450.0V <sub>DC</sub>	380.0
×	06-01	Over-voltage stall prevention	460V: 0.0–900.0V <sub>DC</sub>	760.0
			575V: 0.0–920.0V <sub>DC</sub>	920.0
			690V: 0.0–1087.0V <sub>DC</sub>	1087.0
N	06-02	Selection for over-voltage stall	0: Traditional over-voltage stall prevention	0
		prevention	1: Smart over-voltage stall prevention	
	06-03		230V / 460V models	
			Normal load: 0–160% (100% corresponds to the rated	120
			current of the drive)	
			Heavy load: 0–180% (100% corresponds to the rated	120
			current of the drive)	
~		Over-current stall prevention	575V / 690V models	
^		during acceleration	Light load: 0–125% (100% corresponds to the rated	120
			current of the drive)	
			Normal load: 0–150% (100% corresponds to the rated	120
			current of the drive)	
			Heavy load: 0–180% (100% corresponds to the rated	150
			current of the drive)	
			230V / 460V models	
			Normal load: 0–160% (100% corresponds to the rated	120
			current of the drive)	
			Heavy load: 0–180% (100% corresponds to the rated	120
			current of the drive)	
,	22.24	Over-current stall prevention	575V / 690V models	
×	06-04	during operation	Light load: 0–125% (100% corresponds to the rated	120
			current of the drive)	
			Normal load: 0–150% (100% corresponds to the rated	120
			current of the drive)	
			Heavy load: 0–180% (100% corresponds to the rated	150
			current of the drive)	
			,	

	Pr.	Parameter Name	Setting Range	Default
*	06-05	Acceleration / deceleration time selection for stall prevention at constant speed	0: By current acceleration / deceleration time  1: By the 1 <sup>st</sup> acceleration / deceleration time  2: By the 2 <sup>nd</sup> acceleration / deceleration time  3: By the 3 <sup>rd</sup> acceleration / deceleration time  4: By the 4 <sup>th</sup> acceleration / deceleration time  5: By automatic acceleration / deceleration	0
*	06-06	Over-torque detection selection (OT1)	O: No function  1: Continue operation after over-torque detection during constant speed operation  2: Stop after over-torque detection during constant speed operation  3: Continue operation after over-torque detection during RUN  4: Stop after over-torque detection during RUN	0
*	06-07	Over-torque detection level (OT1)	10–250% (100% corresponds to the rated current of the drive)	120
×	06-08	Over-torque detection time (OT1)	0.0-60.0 sec.	0.1
*	06-09	Over-torque detection selection (OT2)	<ol> <li>No function</li> <li>Continue operation after over-torque detection during constant speed operation</li> <li>Stop after over-torque detection during constant speed operation</li> <li>Continue operation after over-torque detection during RUN</li> <li>Stop after Over-torque detection during RUN</li> </ol>	0
*	06-10	Over-torque detection level (OT2)	10–250% (100% corresponds to the rated current of the drive)	120
×	06-11	Over-torque detection time (OT2)	0.0-60.0 sec.	0.1
*	06-12	Current limit	0–250% (100% corresponds to the rated current of the drive)	170
*	06-13	Electronic thermal relay selection 1 (Motor 1)	O: Inverter motor (with external forced cooling)  1: Standard motor (motor with fan on the shaft)  2: Disable	2
*	06-14	Electronic thermal relay action time 1 (Motor 1)	30.0-600.0 sec.	60.0
*	06-15	Temperature level over-heat (OH) warning	0.0-110.0°C	105.0
*	06-16	Stall prevention limit level (Weak magnetic area current stall prevention level)	0–100% (Pr. 06-03, Pr. 06-04)	100

Chapter 11 Summary of Parameter Settings | C2000

Pr.	Parameter Name	Setting Range	Default
06-17	Fault record 1	0: No fault record	0
00-17	(Present fault record)	1: Over-current during acceleration (ocA)	U
06-18	Fault record 2	2: Over-current during deceleration (ocd)	0
06-19	Fault record 3	3: Over-current during constant speed (ocn)	0
06-20	Fault record 4	4: Ground fault (GFF)	0
06-21	Fault record 5	5: IGBT short-circuit (occ)	0
06-22	Fault record 6	6: Over-current at stop (ocS)	0
		7: Over-voltage during acceleration (ovA)	
		8: Over-voltage during deceleration (ovd)	
		9: Over-voltage during constant speed (ovn)	
		10: Over-voltage at stop (ovS)	
		11: Low-voltage during acceleration (LvA)	
		12: Low-voltage during deceleration (Lvd)	
		13: Low-voltage during constant speed (Lvn)	
		14: Low-voltage at stop (LvS)	
		15: Phase loss protection (OrP)	
		16: IGBT over-heat (oH1)	
		17: Capacitance over-heat (oH2)	
		18: TH1 open: IGBT over-heat protection error (tH1o)	
		19: TH2 open: capacitance over-heat protection error	
		(tH2o)	
		21: Drive over-load (oL)	
		22: Electronics thermal relay protection 1 (EoL1)	
		23: Electronics thermal relay protection 2 (EoL2)	
		24: Motor overheat (oH3) (PTC / PT100)	
		26: Over-torque 1 (ot1)	
		27: Over-torque 2 (ot2)	
		28: Low current (uC)	
		29: Home limit error (LMIT)	
		30: Memory write-in error (cF1)	
		31: Memory read-out error (cF2)	
		33: U-phase current detection error (cd1)	
		34: V-phase current detection error (cd2)	
		35: W-phase current detection error (cd3)	
		36: Clamp current detection error (Hd0)	
		37: Over-current detection error (Hd1)	
		38: Over-voltage detection error (Hd2)	
		39: IGBT short-circuit detection error (Hd3)	
		40: Auto-tuning error (AUE)	
		41: PID feedback loss (AFE)	

Pr.	Parameter Name	Setting Range	Default
		42: PG feedback error (PGF1)	
		43: PG feedback loss (PGF2)	
		44: PG feedback stall (PGF3)	
		45: PG slip error (PGF4)	
		48: Analog current input loss (ACE)	
		49: External fault input (EF)	
		50: Emergency stop (EF1)	
		51: External base block (bb)	
		52: Password error (Pcod)	
		54: Communication error (CE1)	
		55: Communication error (CE2)	
		56: Communication error (CE3)	
		57: Communication error (CE4)	
		58: Communication time-out (CE10)	
		60: Brake transistor error (bF)	
		61: Y-connection / ∆-connection switch error (ydc)	
		62: Deceleration energy backup error (dEb)	
		63: Slip error (oSL)	
		64: Electromagnet switch error (ryF)	
		65: PG card error (PGF5)	
		68: Sensorless estimated speed have wrong direction	
		69: Sensorless estimated speed is over speed	
		70: Sensorless estimated speed deviated	
		71: Watchdog	
		72: Channel 1 (STO1~SCM1) safety loop error (STL1)	
		73: External safety gate (S1)	
		75: External brake error	
		76: Safe torque off (STO)	
		77: Channel 2 (STO2~SCM2) safety loop error (STL2)	
		78: Internal loop error (STL3)	
		82: U phase output phase loss (OPHL)	
		83: V phase output phase loss (OPHL)	
		84: W phase output phase loss (OPHL)	
		85: PG-02U ABZ hardware disconnection	
		86: PG-02U UVW hardware disconnection	
		87: oL3 Low frequency overload protection	
		89: RoPd Initial rotor position detection error	
		90: Inner PLC function is forced to stop	
		93: CPU error	
		101: CANopen software disconnect 1 (CGdE)	
		102: CAN open software disconnect 2 (CHbE)	

	Pr.	Parameter Name	Setting Range	Default
			104: CANopen hardware disconnect (CbFE)	
			105: CANopen index setting error (CldE)	
			106: CANopen slave station number setting error	ı
			(CAdE)	ı
			107: CANopen index setting exceed limit (CFrE)	ı
			111: ictE Internal communication overtime error	ı
			(InrCOM)	ı
			112: PM sensorless shaft lock error	ı
			142: Auto-tuning error 1 (no feedback current error)	ļ
			(AUE1)	<u> </u>
			143: Auto-tuning error 2 (motor phase loss error)	<u> </u>
			(AUE2)	ı
			144: Auto-tuning error 3 (no-load current l₀ measuring	ı
			error) (AUE3)	ı
			148: Auto-tuning error 4 (leakage inductance Lsigma	ı
			measuring error) (AUE4)	ı
×	06-23	Fault output option 1	0–65535 (refer to bit table for fault code)	0
×	06-24	Fault output option 2	0–65535 (refer to bit table for fault code)	0
×	06-25	Fault output option 3	0–65535 (refer to bit table for fault code)	0
×	06-26	Fault output option 4	0–65535 (refer to bit table for fault code)	0
			0: Inverter motor (with external forced cooling)	
×	06-27	Electronic thermal relay selection	1: Standard motor (motor with fan on the shaft)	2
		2 (Motor 2)	2: Disable	
~	06-28	Electronic thermal relay action	30.0-600.0 sec.	60.0
,		time 2 (Motor 2)	00.0 000.0 000.	
			0: Warn and continue operation	ı
W	06-29	PTC detection selection / PT100	1: Warn and ramp to stop	0
,	00-23	motion	2: Warn and coast to stop	
			3: No warning	
×	06-30	PTC level / KTY84 Level	0.0–100.0%	50.0
	06-31	Frequency command at	0.00-599.00Hz	Read
	00-31	malfunction	0.00-399.00112	only
	06-32	Output fraguancy at malfunction	0.00 500 00H-	Read
	00-32	Output frequency at malfunction	0.00-599.00Hz	only
	06-33	Output voltage at malfunation	0.0 6553 5\/	Read
	00-33	Output voltage at malfunction	0.0-6553.5V	only
	06.24	DC voltage of malfunction	0.0 6553 57	Read
	06-34	DC voltage at malfunction	0.0-6553.5V	only
	06-35	Output current at malfunction	0.0 6553 5Amp	Read
	00-35	Output current at malfunction	0.0-6553.5Amp	only

	Pr.	Parameter Name	Setting Range	Default
	06-36	IGBT temperature at malfunction	-3276.7–3276.7°C	Read
	00-00	10b1 temperature at manufiction	-5270.7 5270.7 5	only
	06-37	Capacitance temperature at	-3276.7–3276.7°C	Read
		malfunction	02. 01. 02. 01. 0	only
	06-38	Motor speed at malfunction	-32767–32767rpm	Read
			од. С.	only
	06-39	Torque command at malfunction	-32767–32767%	Read
		'		only
	06-40	Status of the multi-function input	0000h-FFFFh	Read
		terminal at malfunction		only
	06-41	Status of the multi-function output	0000h-FFFFh	Read
		terminal at malfunction		only
	06-42	Drive status at malfunction	0000h-FFFFh	Read
				only
N	06-44	STO latch selection	0: STO latch	0
		-	1: STO no latch	-
		Treatment to output phase loss protection (OPHL)	0: Warn and continue operation	
N	06-45		1: Warn and ramp to stop	3
			2: Warn and coast to stop	
			3: No warning	
×	06-46	Detection time of output phase loss	0.000-65.535 sec.	3.000
×	06-47	Current detection level for output phase loss	0.00–100.00%	1.00
×	06-48	DC brake time of output phase loss	0.000–65.535 sec.	0.000
	00.40	L.M. suts masst	0: Disable	0
×	06-49	LvX auto-reset	1: Enable	0
×	06-50	Time for input phase loss detection	0.00-600.00 sec.	0.20
	06-51	CAP oH warning level	0.0-110.0 degree	Depending on the motor power
			230V series: 0.0–160.0V <sub>DC</sub>	30.0
N	06-52	Ripple of input phase loss	460V series: 0.0–320.0V <sub>DC</sub>	60.0
		Tapple of input phase loss	575V series: 0.0–400.0V <sub>DC</sub>	75.0
			690V series: 0.0–480.0V <sub>DC</sub>	90.0
×	06-53	Detected input phase loss (OrP)	0: Warn and ramp to stop	0
		action	1: Warn and coast to stop	
	00.55	Danatin n masteration	0: Constant rated current and limit carrier wave by	
M	06-55	Derating protection	load current and temperature	0

Chapter 11 Summary of Parameter Settings | C2000

	Pr.	Parameter Name	Setting Range	Default
			1: Constant carrier frequency and limit load current by	
			setting carrier wave	
			2: Constant rated current (same as setting 0), but	
			close current limit	
×	06-56	PT100 voltage level 1	0.000-10.000V	5.000
×	06-57	PT100 voltage level 2	0.000-10.000V	7.000
×	06-58	PT100 level 1 frequency protect	0.00-599.00Hz	0.00
*	06-59	PT100 activation level 1 protect frequency delay time	0–6000 sec.	60
*	06-60	Software detection GFF current level	0.0–6553.5 %	60.0
*	06-61	Software detection GFF filter time	0.00-655.35 sec.	0.10
	06.60	dEb wood bigg lovel	230V: 0.0–100 V <sub>DC</sub>	20.0
	06-62	dEb reset bias level	460V: 0.0–200.0 V <sub>DC</sub>	40.0
	06-63	Operation time of fault record 1 (Day)	0–65535 days	Read only
	06-64	Operation time of fault record 1 (Minutes)	0–1439 min.	Read only
		Operation time of fault record 2		Read
	06-65	(Day)	0–65535 days	only
		Operation time of fault record 2		Read
	06-66	(Minutes)	0–1439 min.	only
		Operation time of fault record 3		Read
	06-67	(Day)	0–65535 days	only
	06-68	Operation time of fault record 3 (Minutes)	0–1439 min.	Read only
		Operation time of fault record 4		Read
	06-69	(Day)	0–65535 days	only
	06-70	Operation time of fault record 4 (Minutes)	0–1439 min.	Read only
×	06-71	Low current setting level	0.0–100.0 %	0.0
×	06-72	Low current detection time	0.00-360.00 sec.	0.00
			0: No function	
			1: Warn and coast to stop	
×	06-73	Low current action	2: Warn and ramp to stop by the 2 <sup>nd</sup> deceleration time	0
			3: Warn and continue operation	
			0–1	
	06-86	PTC Type	0: PTC	0
		- 71	1: KTY84-130	-
			1	

# **07 Special Parameters**

	Pr.	Parameter Name	Setting Range	Default
•	0.70	7.00 D iii i	230V: 350.0-450.0V <sub>DC</sub>	370.0
			460V: 700.0–900.0V <sub>DC</sub>	740.0
~	07-00	Built-in software brake level	575V: 850.0–1116.0V <sub>DC</sub>	895.0
			690V: 939.0–1318.0V <sub>DC</sub>	1057.0
*	07-01	DC brake current level	0–100%	0
~	07-02	DC brake time at run	0.0-60.0 sec.	0.0
~	07-03	DC brake time at stop	0.0-60.0 sec.	0.0
*	07-04	DC brake frequency at stop	0.00-599.00Hz	0.00
~	07-05	Voltage increasing gain	1–200%	100
		Destant offer meanantem in accord	0: Stop operation	
~	07-06	Restart after momentary power	1: Speed tracking by speed before the power loss	0
		loss	2: Speed tracking by minimum output frequency	
~	07-07	Allowed power loss duration	0.0–20.0 sec.	2.0
*	07-08	Base block time	0.0-5.0 sec.	#.#
*	07-09	Current limit of speed tracking	20–200%	100
•			0: Stop operation	
×	07-10	Restart after fault action	1: Speed tracking by current speed	0
			2: Speed tracking by minimum output frequency	
*	07-11	Number of times of restart after fault	0–10	0
,			0: Disable	
	07-12	Speed tracking during start-up	1: Speed tracking by maximum output frequency	0
	07-12	Speed tracking during start-up	2: Speed tracking by motor frequency at start	0
			3: Speed tracking by minimum output frequency	
			0: Disable	
			1: dEb with auto-acceleration / auto-deceleration, the	
			drive does not output the frequency after the power is restored.	
			2: dEb with auto-acceleration / auto-deceleration, the	
×	07-13	dEb function selection	drive outputs the frequency after the power is	0
			restored	
			3: dEb low-voltage control, then increase to 350V <sub>DC</sub> /	
			700V <sub>DC</sub> and decelerate to stop	
			4: dEb high-voltage control of 350V <sub>DC</sub> / 700V <sub>DC</sub> and	
	07-14	dEb function reset time	decelerate to stop 0.0–25.0 sec.	3.0
,	07-15	Dwell time at acceleration	0.00–600.00 sec.	0.00
,	07-16	Dwell frequency at acceleration	0.00-599.00Hz	0.00
<i>N</i>	07-17	Dwell time at deceleration	0.00–600.00 sec.	0.00
N	07-18	Dwell frequency at deceleration	0.00-599.00Hz	0.00
Ĺ	J			5.55

	Pr.	Parameter Name	Setting Range	Default
•			0: Fan always ON 1: Fan is OFF after AC motor drive stops for one minute	
*	07-19	Fan cooling control	2: Fan is ON when AC motor drive runs; fan is OFF when AC motor drive stops.  3: Fan turns ON when temperature (IGBT) reaches	0
			around 60°C. 4: Fan always OFF	
			0: Coast to stop	
			1: Stop by the 1 <sup>st</sup> deceleration time	
		Emergency stop (EF) & force to	2: Stop by the 2 <sup>nd</sup> deceleration time	
×	07-20	stop selection	3: Stop by the 3 <sup>rd</sup> deceleration time	0
		Stop Sciection	4: Stop by the 4 <sup>th</sup> deceleration time	
			5: System deceleration	
			6: Automatic deceleration	
	07-21	Automatic energy-saving	0: Disable	0
*	07-21	selection	1: Enable	0
×	07-22	Energy-saving gain	10~1000%	100
*	07-23	Auto voltage regulation (AVR) function	0: Enable AVR	
			1: Disable AVR	0
			2: Disable AVR during deceleration	
*	07-24	Torque command filter time (V/F and SVC control mode)	0.001-10.000 sec.	0.500
*	07-25	Slip compensation filter time (V/F and SVC control mode)	0.001-10.000 sec.	0.100
	07-26	Torque compensation gain (V/F	IM: 0–10 (when Pr. 05-33 = 0)	0
	07-20	and SVC control mode)	PM: 0-5000 (when Pr. 05-33 = 1 or 2)	U
*	07-27	Slip compensation gain (V/F and SVC control mode)	0.00–10.00	0.00 (Default value is 1.00 in SVC mode)
	27.00		0.0–100.0%	
~	07-29	Slip deviation level	0: No detection	0
*	07-30	Over slip deviation detection time	0.0–10.0 sec.	1.0
			0: Warn and continue operation	
	07.24	Over alia deviation treatment	1: Warn and ramp to stop	
~	07-31	Over slip deviation treatment	2: Warn and coast to stop	0
			3: No warning	
	07.00	Motor shock compensation	0–10000	4000
×	07-32	factor	0: Disable	1000
*	07-33	Auto-restart internal of fault	0.0-6000.0 sec.	60.0

Pr.	Parameter Name	Setting Range	Default
07.20	PMSVC voltage feedback	0.50–2.00	1.00
07-38	forward gain	0.50-2.00	1.00
07-62	dEb gain (Kp)	0–65535	8000
07-63	dEb gain (Ki)	0–65535	150

# **08 High-function PID Parameters**

	Pr.	Parameter Name	Setting Range	Default
j			0: No function	
			1: Negative PID feedback: by analog input	1.0 1.00 0.00 100.0 100.0 Read only 0.0
			(Pr. 03-00-03-02)	
			2: Negative PID feedback: by PG card pulse input,	
			without direction (Pr. 10-02)	
			3: Negative PID feedback:by PG card pulse input,	
		Terminal selection of PID	with direction (Pr. 10-02)	
×	08-00	feedback	4: Positive PID feedback: by analog input	0
		leeupack	(Pr. 03-00-03-02)	
			5: Positive PID feedback: by PG card pulse input,	
			without direction (Pr. 10-02)	
			6: Positive PID feedback: by PG card pulse input,	
			with direction (Pr. 10-02)	
			7: Negative PID feedback: by communication protocol	
			8: Positive PID feedback: by communication protocol	
*	08-01	Proportional gain (P)	0.0–500.0	1.0
	00.00	Integral time (I)	0.00-100.00 sec.	1.00
*	08-02		0.0: No integral	1.00
×	08-03	Differential time (D)	0.00-1.00 sec.	0.00
×	08-04	Upper limit of integral control	0.0–100.0%	100.0
×	08-05	PID output command limit	0.0–110.0%	100.0
~	08-06	PID feedback value by	-200.00–200.00%	Read
	00-00	communication protocol	-200.00-200.00%	only
×	08-07	PID delay time	0.0–35.0 sec.	0.0
×	08-08	Feedback signal detection time	0.0–3600.0 sec.	0.0
			0: Warn and continue operation	
$_{\varkappa}$	08-09	Feedback signal fault treatment	1: Warn and ramp to stop	0
			2: Warn and coast to stop	
			3: Warn and operate at last frequency	
*	08-10	Sleep frequency	0.00-599.00Hz	0.00
*	08-11	Wake-up frequency	0.00-599.00Hz	0.00
×	08-12	Sleep time	0.0-6000.0 sec.	0.0
×	08-13	PID deviation level	1.0–50.0%	10.0
*	08-14	PID deviation time	0.1-300.0 sec.	5.0
×	08-15	PID feedback filter time	0.1–300.0 sec.	5.0
	09.16	DID componentian adjection	0: Parameter setting (Pr. 08-17)	0
<b>"</b>	08-16	PID compensation selection	1: Analog input	0
*	08-17	PID compensation	-100.0–100.0%	0.0

	Pr.	Parameter Name	Setting Range	Default
	08-18		0: Refer to PID output command	
	00-10	Sleep mode function setting	1: Refer to PID feedback signal	0
×	08-19	Wake-up integral limit	0.0–200.0%	50.0
	08-20	PID mode selection	0: Serial connection	0
	00-20	PID mode selection	1: Parallel connection	0
	08-21	Enable PID to change the	0: Operation direction cannot be changed	0
	00-21	operation direction	1: Operation direction can be changed	U
×	08-22	Wake-up delay time	0.00-600.00 sec.	0.00
			bit0 = 1, PID running in reverse follows the setting for	
			Pr. 00-23.	
	08-23	PID control flag	bit0 = 0, PID running in reverse follows PID's calculated	0000h
~	00-23		value.	000011
			bit1 = 1, second decimal place of PID Kp	
			bit1 = 0, first decimal place of PID Kp	

# **09 Communication Parameters**

	Pr.	Parameter Name	Setting Range	Default
×	09-00	Communication address	1–254	1
×	09-01	COM1 transmission speed	4.8-115.2Kbps	9.6
			0: Warn and continue operation	
	00.00		1: Warn and ramp to stop	
×	09-02	COM1 transmission fault treatment	2: Warn and coast to stop	3
			3: No warning and continue operation	
×	09-03	COM1 time-out detection	0.0–100.0 sec.	0.0
			1:7, N, 2 (ASCII)	
			2:7, E, 1 (ASCII)	
			3:7, O, 1 (ASCII)	
			4:7, E, 2 (ASCII)	
			5:7, O, 2 (ASCII)	
			6:8, N, 1 (ASCII)	
			7:8, N, 2 (ASCII)	
			8:8, E, 1 (ASCII)	
×	09-04	COM1 communication protocol	9:8, O, 1 (ASCII)	1
			10:8, E, 2 (ASCII)	
			11 : 8, O, 2 (ASCII)	
			12: 8, N, 1 (RTU)	
			13: 8, N, 2 (RTU)	
			14: 8, E, 1 (RTU)	
			15: 8, O, 1 (RTU)	
			16: 8, E, 2 (RTU)	
			17: 8, O, 2 (RTU)	
×	09-09	Communication response delay time	0.0–200.0ms	2.0
	09-10	Communication main frequency	0.00-599.00Hz	60.00
×	09-11	Block transfer 1	0000-FFFFh	0000h
×	09-12	Block transfer 2	0000–FFFFh	0000h
×	09-13	Block transfer 3	0000-FFFFh	0000h
×	09-14	Block transfer 4	0000-FFFFh	0000h
×	09-15	Block transfer 5	0000-FFFFh	0000h
×	09-16	Block transfer 6	0000-FFFFh	0000h
×	09-17	Block transfer 7	0000-FFFFh	0000h
×	09-18	Block transfer 8	0000-FFFFh	0000h
×	09-19	Block transfer 9	0000-FFFFh	0000h
×	09-20	Block transfer 10	0000-FFFFh	0000h
×	09-21	Block transfer 11	0000-FFFFh	0000h
×	09-22	Block transfer 12	0000-FFFFh	0000h

	Pr.	Parameter Name	Setting Range	Default
×	09-23	Block transfer 13	0000-FFFFh	0000h
×	09-24	Block transfer 14	0000-FFFFh	0000h
×	09-25	Block transfer 15	0000-FFFFh	0000h
×	09-26	Block transfer 16	0000-FFFFh	0000h
	09-30	Communication deceding method	0: Decoding method 1 (20xx)	1
	09-30	Communication decoding method	1: Decoding method 2 (60xx)	1
			0: MODBUS 485	
			-1: Internal communication slave 1	
			-2: Internal communication slave 2	
			-3: Internal communication slave 3	
			-4: Internal communication slave 4	
	09-31	Internal communication protocol	-5: Internal communication slave 5	0
			-6: Internal communication slave 6	
			-7: Internal communication slave 7	
			-8: Internal communication slave 8	
			-10: Internal communication master	
			-12: Internal PLC control	
			bit0: Before PLC scans, set up PLC target	
			frequency=0	
	00.00	DLC command force to 0	bit1: Before PLC scans, set up PLC target	0
<b>/</b> 0	09-33	PLC command force to 0	torque=0	0
			bit2: Before PLC scans, set up the speed limit	
			of torque control mode=0	
	09-35	PLC address	1–254	2
	09-36	CANopen slave address	0: Disable	0
	09-30	CANOPER slave address	1–127	U
			0: 1Mbps	
			1: 500Kbps	
	00.27	CANtonon on and	2: 250Kbps	0
	09-37	CANopen speed	3: 125Kbps	0
			4: 100Kbps (Delta only)	
			5: 50Kbps	
			bit0: CANopen Guarding Time out	
			bit1: CANopen Heartbeat Time out	
			bit2: CANopen SYNC Time out	
	09-39	CANopen warning record	bit3: CANopen SDO Time out	Read only
			bit4: CANopen SDO buffer overflow	
			bit5: Can Bus Off	
			bit6: Error protocol of CANopen	

Chapter 11 Summary of Parameter Settings | C2000

Pr.	Parameter Name	Setting Range	Default
		bit8: The setting values of CANopen indexes	
		are fail	
		bit9: The setting value of CANopen address	
		is fail	
		bit10: The checksum value of CANopen	
		indexes is fail	
		0: Disable (Delta-defined decoding method)	
09-40	CANopen decoding method	1: Enable (CANopen DS402 standard	1
		protocol)	
		0: Node Reset	
		1: Com Reset	
00.44	CANICO	2: Boot up	Read
09-41	CANopen communication status	3: Pre operation	Only
		4: Operation	
		5: Stop	
		0: Not ready for use	
		1: Inhibit Start	
		2: Ready to Switch on	
00.40	CAN an an anatom to the total	3: Switched on	Read
09-42	CANopen control status	4: Enable Operation	Only
		7: Quick Stop Active	
		13: Error Reaction Activation	
		14: Error	
09-45	CAN on an exector function	0: Disable	0
09-45	CANopen master function	1: Enable	0
09-46	CANopen master address	0–127	100
		0–12	
		0: No communication card	
		1: DeviceNet Slave	
		2: Profibus-DP Slave	
09-60	Communication card identification	3: CANopen Slave / Master	##
		4: MODBUS-TCP Slave	
		5: EtherNet / IP Slave	
		6: EtherCAT	
		12: PROFINET	
09-61	Firmware version of communication card	Read only	##
09-62	Product code	Read only	##
09-63	Error code	Read only	##
09-70	Communication card address	DeviceNet: 0-63	4
09-70	(for DeviceNet or PROFIBUS)	Profibus-DP: 1–125	1

11-44

	Pr.	Parameter Name	Setting Range	Default
			Standard DeviceNet:	
			0: 125Kbps	
			1: 250Kbps	
			2: 500Kbps	
			3: 1Mbps (Delta only)	
			Non-standard DeviceNet: (Delta only)	
		Communication pard around patting	0: 10Kbps	
×	09-71	Communication card speed setting (for DeviceNet)	1: 20Kbps	2
		(ioi Deviceivet)	2: 50Kbps	
			3: 100Kbps	
			4: 125Kbps	
			5: 250Kbps	
			6: 500Kbps	
			7: 800Kbps	
			8: 1Mbps	
			0: Standard DeviceNet	
*		Other communication card speed setting (for DeviceNet)	In this mode, baud rate can only be	
	09-72		125Kbps, 250Kbps, 500Kbps in standard	
			DeviceNet speed	0
			1: Non-standard DeviceNet	
			In this mode, the baud rate of DeviceNet	
			can be the same as CANopen (0~8).	
~	09-75	Communication card IP configuration	0: Static IP	0
,	00 70	(for MODBUS TCP)	1: Dynamic IP (DHCP)	
~	09-76	Communication card IP address 1	0–65535	0
,		(for MODBUS TCP)	0 0000	
~	09-77	Communication card IP address 2	0–65535	0
,		(for MODBUS TCP)	0 0000	
~	09-78	Communication card IP address 3	0–65535	0
,		(for MODBUS TCP)	0 0000	
×	09-79	Communication card IP address 4	0–65535	0
,		(for MODBUS TCP)		
×	09-80	Communication card address mask 1	0–65535	
		(for MODBUS TCP)		0
*	09-81	Communication card address mask 2	0–65535	0
		(for MODBUS TCP)		
*	09-82	Communication card address mask 3	0–65535	0
		(for MODBUS TCP)		
*	09-83	Communication card address mask 4	0–65535	0
		(for MODBUS TCP)		

	Pr.	Parameter Name	Setting Range	Default
*	09-84	Communication card gateway address 1 (for MODBUS TCP)	0–65535	0
*	09-85	Communication card gateway address 2 for MODBUS TCP)	0–65535	0
×	09-86	Communication card gateway address 3 (for MODBUS TCP)	0–65535	0
×	09-87	Communication card gateway address 4 (for MODBUS TCP)	0–65535	0
×	09-88	Communication card password (Low word) (for MODBUS TCP)	0–99	0
×	09-89	Communication card password (High word) (for MODBUS TCP)	0–99	0
×	09-90	Reset communication card (for MODBUS TCP)	0: Disable 1: Reset, return to default	0
N	09-91	Additional settings for the communication card (for MODBUS TCP)	bit0: Enable IP filter bit 1: Enable internet parameters (1 bit). When IP address is set, this bit is enabled. After updating the communication card parameters, this bit changes to disabled. bit 2: Enable login password (1 bit). When you enter the login password, this bit is enabled. After updating the communication card parameters, this bit changes to disabled.	0
	09-92	Communication card status (for MODBUS TCP)	bit0: Enable password  When the communication card is set with a password, this bit is enabled.  When the password is cleared, this bit is disabled.	0

# **10 Feedback Control Parameters**

IM: Induction Motor; PM: Permanent Magnet Motor

10-00   Encoder type selection   1. ABZ   2. ABZ (Delta encoder for Delta servo motor)   3. Resolver   4. ABZ / UVW   5. MI8 single phase pulse input   10-01   Encoder pulses per revolution   1-20000   600	Р	Pr.	Parameter Name	Setting Range	Default
10-00   Encoder type selection   2: ABZ (Delta encoder for Delta servo motor)   3: Resolver   4: ABZ / UVW   5: MI8 single phase pulse input   10-01   Encoder pulses per revolution   1-20000   0: Disable   1: Phases A and B are pulse inputs, forward direction if A-phase leads B-phase by 90 degrees   2: Phases A and B are pulse inputs, forward direction if B-phase leads A-phase by 90 degrees   3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction)   4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction)   5: Single-phase input   1-255   1   1   1   1   1   1   1   1   1					
10-00   Encoder type selection   3: Resolver   4: ABZ / UVW   5: MI8 single phase pulse input   10-01   Encoder pulses per revolution   1-20000   60				1: ABZ	
3: Resolver				2: ABZ (Delta encoder for Delta servo motor)	
10-01   Encoder pulses per revolution   1-20000   600	10-	-00	Encoder type selection	3: Resolver	0
10-01   Encoder pulses per revolution   1-20000   600				4: ABZ / UVW	
10-02   Encoder input type setting				5: MI8 single phase pulse input	
1: Phases A and B are pulse inputs, forward direction if A-phase leads B-phase by 90 degrees 2: Phases A and B are pulse inputs, forward direction if B-phase leads A-phase by 90 degrees 3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction) 4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction) 5: Single-phase input  10-03 Frequency division output setting (denominator) 10-04 Electrical gear at load side A1 10-05 Electrical gear at load side A2 10-06 Electrical gear at motor side B1 10-6535 100 10-07 Electrical gear at motor side B2 10-6535 100 10-08 Treatment for encoder / speed observer feedback fault 10-09 Detection time of encoder / speed observer feedback fault 10-09 Detection time of encoder / speed observer feedback fault 10-10 Encoder / speed observer stall level 10-11 Detection time of encoder / speed observer stall 10-12 Encoder / speed observer stall 2 Encoder / speed observer stall 3: Phase A and B are pulse inputs, forward direction if B-phase by 90 degrees 2: Phases A and B are pulse inputs, forward direction if B-phase by 90 degrees 3: Phase A is a pulse input and phase B is a direction imput (L = reverse direction, H = reverse direction) 4: Phase A is a pulse input and phase B is a direction input (L = reverse direction) 4: Phase A is a pulse input and phase B is a direction input (L = reverse direction) 4: Phase A is a pulse input and phase B is a direction input (L = reverse direction) 4: Phase A is a pulse input and phase B is a direction input (L = reverse direction) 4: Phase A is a pulse input and phase B is a direction input (L = reverse direction) 5: Single-phase input 6: Phase A is a pulse input and phase B is a direction input (L = reverse direction) 6: Warn and continue operation 7: Warn and continu	10-	-01	Encoder pulses per revolution	1–20000	600
A-phase leads B-phase by 90 degrees 2: Phases A and B are pulse inputs, forward direction if B-phase leads A-phase by 90 degrees 3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction) 4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction) 5: Single-phase input 10-03 Frequency division output setting (denominator) 10-04 Electrical gear at load side A1 1-65535 100 10-05 Electrical gear at motor side B1 1-65535 100 10-06 Electrical gear at load side A2 1-65535 100 10-07 Electrical gear at motor side B2 1-65535 100 10-08 Treatment for encoder / speed observer feedback fault 0: Warn and coast to stop 10-09 Detection time of encoder / speed observer feedback fault 0-100 sec. 0: Disable 10-10 10-10 Encoder / speed observer stall level 0: No function 115 10-11 Detection time of encoder / speed observer stall 10-10 10-12 Encoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn and ramp to stop 2-2 incoder / speed observer stall 20: Warn and continue operation 1: Warn				0: Disable	
2: Phases A and B are pulse inputs, forward direction if B-phase leads A-phase by 90 degrees 3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction) 4: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = reverse direction) 5: Single-phase input 10-03 Frequency division output setting (denominator) 10-04 Electrical gear at load side A1 1-65535 100 10-05 Electrical gear at motor side B1 1-65535 100 10-06 Electrical gear at motor side B2 1-65535 100 10-07 Electrical gear at motor side B2 1-65535 100 10-08 Treatment for encoder / speed observer feedback fault 0: Warn and coast to stop 10-09 Detection time of encoder / speed observer feedback fault 0-10.0 sec. 0: Disable 10-10 10-10 Encoder / speed observer stall level 0: No function 115 10-11 Detection time of encoder / speed observer stall action 0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 10-2.0 sec. 0: Disable 10-10 10-11 Warn and ramp to stop 2: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 10-2.0 sec. 10.1 10-12 Encoder / speed observer stall 10: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 10-2.0 sec. 10.1				1: Phases A and B are pulse inputs, forward direction if	
B-phase leads A-phase by 90 degrees 3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction) 4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction) 5: Single-phase input  10-03 Frequency division output setting (denominator) 10-04 Electrical gear at load side A1 10-05 Electrical gear at motor side B1 10-06 Electrical gear at load side A2 10-07 Electrical gear at motor side B2 10-08 Treatment for encoder / speed observer feedback fault 10-09 Detection time of encoder / speed observer stall level  10-10 Encoder / speed observer stall action  B-phase leads A-phase by 90 degrees 3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction) 4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = forward direction)  1-255 11 0-00  10-03 Erequency division output set a plus and phase B is a direction input (L = forward direction, H = forward direction) 10-255 10-255 1100 1100 1100 1100 1100 1100 1100 1	10-02		A-phase leads B-phase by 90 degrees		
10-02 Encoder input type setting  3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction)  4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction)  5: Single-phase input  10-03 Frequency division output setting (denominator)  10-04 Electrical gear at load side A1 1-65535 100  10-05 Electrical gear at motor side B1 1-65535 100  10-06 Electrical gear at load side A2 1-65535 100  10-07 Electrical gear at motor side B2 1-65535 100  10-08 Treatment for encoder / speed observer feedback fault 2: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop  10-10 Detection time of encoder / speed observer feedback fault 2: Warn and coast to stop  10-10 Detection time of encoder / speed observer stall level 0: No function 115  10-12 Encoder / speed observer stall action 0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 0: Do-10.0 sec. 0: Disable 0-120% 0: No function 115  10-12 Encoder / speed observer stall action 0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and continue operation 1: Warn and ramp to stop 2: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 1: Warn and ramp to stop 2: Warn and coast to stop 1: Warn and ramp to stop 2: Warn and coast to stop 1: Warn and coast to stop 1: Warn and ramp to stop 2: Warn and coast to stop 1: Warn and coast to stop				2: Phases A and B are pulse inputs, forward direction if	
3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction)  4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction)  5: Single-phase input  10-03  Frequency division output setting (denominator)  10-04  Electrical gear at load side A1  10-05  Electrical gear at motor side B1  10-06  Electrical gear at motor side B2  10-07  Electrical gear at motor side B2  Treatment for encoder / speed observer feedback fault  10-08  Detection time of encoder / speed observer stall level  10-10  Encoder / speed observer stall  10-11  Encoder / speed observer stall  Encoder / speed observer stall  action  3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction)  4: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction input (L = reverse direction, H = forward direction input (L = reverse direction, H = forward direction input (L = reverse direction, H = forward direction input (L = reverse direction, H = forward direction input (L = reverse direction, H = forward direction input (L = forward direction, H = forward direction input (L = forward direction, H = forward direction input (L = forward direction, H = forward direction input (L = forward direction, H = forward direction input (L = forward direction, H = forward direction input (L = forward direction, H = forward direction)  1			B-phase leads A-phase by 90 degrees		
4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction)  5: Single-phase input  10-03  Frequency division output setting (denominator)  10-04  Electrical gear at load side A1  1-65535  100  10-05  Electrical gear at motor side B1  1-65535  100  10-06  Electrical gear at motor side B2  1-65535  100  10-07  Electrical gear at motor side B2  1-65535  100  Treatment for encoder / speed observer feedback fault  10-09  Detection time of encoder / speed observer stall level  Encoder / speed observer stall  10-10  Encoder / speed observer stall  Cultural action  4: Warn and continue operation  1: Warn and ramp to stop  2: Warn and coast to stop		-02	Encoder input type setting	3: Phase A is a pulse input and phase B is a direction	0
input (L = forward direction, H = reverse direction)  5: Single-phase input  10-03  Frequency division output setting (denominator)  1-255  1000  10-04  Electrical gear at load side A1  1-65535  1000  10-05  Electrical gear at motor side B1  1-65535  100  10-07  Electrical gear at motor side B2  1-65535  100  10-08  Treatment for encoder / speed observer feedback fault  10-09  Detection time of encoder / speed observer stall level  10-10  Encoder / speed observer stall  10-11  Detection time of encoder / speed observer stall  10-12  Encoder / speed observer stall  2  Encoder / speed observer stall  action  input (L = forward direction, H = reverse direction)  1-255  10  10-255  100  Warn and continue operation  1: Warn and continue operation  1: Warn and coast to stop  1.0  1.0  1.0  1.0  1.0  1.0  1.0  1.				input (L = reverse direction, H = forward direction)	
10-03   Frequency division output setting (denominator)   1-255   1   1   1   1   1   1   1   1   1				4: Phase A is a pulse input and phase B is a direction	
10-03   Frequency division output setting (denominator)   1-255   1   1				input (L = forward direction, H = reverse direction)	
10-03   setting (denominator)   1-255   1   1     10-04   Electrical gear at load side A1   1-65535   100     10-05   Electrical gear at motor side B1   1-65535   100     10-06   Electrical gear at motor side B2   1-65535   100     10-07   Electrical gear at motor side B2   1-65535   100     10-08   Treatment for encoder / speed observer feedback fault   1: Warn and continue operation   1: Warn and ramp to stop   2   2: Warn and coast to stop   2     10-09   Detection time of encoder / speed observer feedback fault   0-10.0 sec.   0: Disable   1.0     10-10   Encoder / speed observer stall   level   0: No function   115     10-11   Detection time of encoder / speed observer stall   0: Warn and continue operation   1: Warn and continue operation   1: Warn and continue operation   1: Warn and ramp to stop   2   2: Warn and continue operation   1: Warn and ramp to stop   2   2: Warn and coast to stop   2   2: Warn and coast to stop   2   3: Warn and coast to stop   3: Warn				5: Single-phase input	
setting (denominator)  10-04 Electrical gear at load side A1 1–65535 100  10-05 Electrical gear at motor side B1 1–65535 100  10-06 Electrical gear at load side A2 1–65535 100  10-07 Electrical gear at motor side B2 1–65535 100  10-08 Treatment for encoder / speed observer feedback fault 1: Warn and continue operation 1: Warn and coast to stop 1: Warn and continue operation 1: Warn and continue operation 1: Warn and ramp to stop 1: Warn and coast to stop 1	/ 10	00	Frequency division output	4.055	4
10-05 Electrical gear at motor side B1 1-65535 100 10-06 Electrical gear at load side A2 1-65535 100 10-07 Electrical gear at motor side B2 1-65535 100 10-08 Treatment for encoder / speed observer feedback fault 1: Warn and continue operation 1: Warn and coast to stop 1: Warn a	10-03	setting (denominator)	1-255	1	
10-06 Electrical gear at load side A2 1–65535 100  10-07 Electrical gear at motor side B2 1–65535 100  Treatment for encoder / speed observer feedback fault 1: Warn and continue operation 1: Warn and coast to stop 2: Warn and coast to stop 10-09 Detection time of encoder / speed observer feedback fault 0: Disable 10-10 Encoder / speed observer stall level 0: No function 1: Warn and ramp to stop 10-10 Sec. 10-10 Detection time of encoder / 0: Disable 115 Detection time of encoder / 0: No function 115 Detection time of encoder / speed observer stall 10-11 Detection time of encoder / speed observer stall 10: Warn and continue operation 1: Warn and ramp to stop 1: Warn and ramp to stop 1: Warn and coast to stop 100 Wa	10-	-04	Electrical gear at load side A1	1–65535	100
10-07 Electrical gear at motor side B2 1–65535 100  Treatment for encoder / speed observer feedback fault 1: Warn and continue operation 1: Warn and coast to stop 2: Warn and coast to stop 1: Warn and continue operation 1: Warn and coast to stop 1: War	10-	-05	Electrical gear at motor side B1	1–65535	100
Treatment for encoder / speed observer feedback fault  10-08  Treatment for encoder / speed observer feedback fault  1: Warn and ramp to stop 2: Warn and coast to stop  10-09  Detection time of encoder / speed observer feedback fault  10-10  Encoder / speed observer stall level  10-11  Detection time of encoder / speed observer stall  10-12  Encoder / speed observer stall  2  0: Warn and continue operation 1: Warn and coast to stop  1.0  1.0  1.0  1.0  1.0  1.0  1.0  1.	10-	-06	Electrical gear at load side A2	1–65535	100
Treatment for encoder / speed observer feedback fault  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and coast to stop  1: Warn and ramp to stop 2: Warn and continue operation 1: Warn and continue operation 1: Warn and coast to stop 2: Warn and coast to stop 3: Warn and coast to stop	10-	-07	Electrical gear at motor side B2	1–65535	100
10-08   observer feedback fault   1: Warn and ramp to stop   2   2: Warn and coast to stop   2   10-09   Detection time of encoder / speed observer feedback fault   0: Disable   1.0			To the offer and the land	0: Warn and continue operation	
2: Warn and coast to stop  10-09 Detection time of encoder / speed observer feedback fault  10-10 Encoder / speed observer stall level  0: No function  10-11 Detection time of encoder / speed observer stall  0: No function  10-12 Encoder / speed observer stall  0: Warn and coast to stop  1.0  1.0  1.0  1.0  1.0  1.0  1.0  1.	/ 10-	-08	·	1: Warn and ramp to stop	2
10-09   speed observer feedback fault   0: Disable   1.0     10-10   Encoder / speed observer stall level   0-120%   0: No function   115     10-11   Detection time of encoder / speed observer stall   0.0-2.0 sec.   0.1     10-12   Encoder / speed observer stall action   0: Warn and continue operation   1: Warn and ramp to stop   2   2: Warn and coast to stop   2			observer teedback fault	2: Warn and coast to stop	
speed observer feedback fault 0: Disable  10-10 Encoder / speed observer stall level 0: No function  115  10-11 Detection time of encoder / speed observer stall  10-12 Encoder / speed observer stall action  2	/ 10	00	Detection time of encoder /	0.0–10.0 sec.	4.0
10-10   level   0: No function   115     10-11   Detection time of encoder / speed observer stall   0: Warn and continue operation   1: Warn and ramp to stop   2   2: Warn and coast to stop   15   15   15   15   15   15   15   1	10-	-09	speed observer feedback fault	0: Disable	1.0
level   0: No function	/ 10	40	Encoder / speed observer stall	0–120%	445
10-11 speed observer stall 0.0–2.0 sec. 0.1  Encoder / speed observer stall action 0: Warn and continue operation 1: Warn and ramp to stop 2 2: Warn and coast to stop	10-	-10	level	0: No function	115
speed observer stall  10-12  Encoder / speed observer stall action  0: Warn and continue operation 1: Warn and ramp to stop 2 2: Warn and coast to stop	/ 40	44	Detection time of encoder /		0.4
Encoder / speed observer stall 1: Warn and ramp to stop 2 2: Warn and coast to stop	10.	-11	speed observer stall	0.0–2.0 sec.	0.1
1: Warn and ramp to stop 2 2: Warn and coast to stop		Franks I amand the control of the	0: Warn and continue operation		
2: Warn and coast to stop	/ 10-	10-12	·	1: Warn and ramp to stop	2
		action		2: Warn and coast to stop	
Encoder / speed observer slip 0–50%	/ 40	40	Encoder / speed observer slip	0–50%	50
7 10-13 range 0: No function 50	10-	-13	range	0: No function	50

	Pr.	Parameter Name	Setting Range	Default
*	10-14	Detection time of encoder / speed observer slip	0.0–10.0 sec.	0.5
*	10-15	Encoder / speed observer stall and slip error action	O: Warn and continue operation  1: Warn and ramp to stop  2: Warn and coast to stop	2
~	10-16	Pulse input type setting	<ol> <li>Disable</li> <li>Phases A and B are pulse inputs, forward direction if         A-phase leads B-phase by 90 degrees</li> <li>Phases A and B are pulse inputs, forward direction if         B-phase leads A-phase by 90 degrees</li> <li>Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction).</li> <li>Phase A is a pulse input and phase B is a direction input. (L = forward direction, H = reverse direction).</li> <li>Single-phase pulse input (MI8)</li> </ol>	0
×	10-17	Electrical gear A	1–65535	100
×	10-18	Electrical gear B	1–65535	100
×	10-19	Positioning for encoder position	-32767–2400	0
×	10-20	Error range for encoder position reached	0–65535 pulses	10
×	10-21	Filter time (PG2)	0.000-65.535 sec.	0.100
*	10-24	FOC & TQC function control	bit0: ASR control at sensorless torque (0: use PI as ASR; 1: use P as ASR) bit11: Activate DC braking when executing zero torque command (0: ON; 1: OFF) bit12: FOC Sensorless mode, cross zero means speed goes from negative to positive or reverse direction (0: determined by stator frequency; 1: determined by speed command) bit15: Direction control at open loop status (0: Switch ON direction control; 1: Switch OFF direction control)	0
×	10-25	FOC bandwidth for speed observer	20.0–100.0Hz	40.0
×	10-26	FOC minimum stator frequency	0.0–10.0%fN	2.0
×	10-27	FOC low-pass filter time constant	1–1000ms	50
×	10-28	FOC gain for excitation current rise time	33–100%Tr	100
×	10-29	Top limit of frequency deviation	0.00-200.00Hz	20.00

	Pr.	Parameter Name	Setting Range	Default
	10-30	Resolver pole pair	1–50 pole pairs	1
×	10-31	I/F mode, current command	0–150% of motor rated current	40
*	10-32	PM FOC sensorless speed estimator bandwidth	0.00-600.00Hz	5.00
×	10-34	PM sensorless speed estimator low-pass filter gain	0.00-655.35	1.00
×	10-35	AMR (Kp) gain	0.00-3.00	1.00
×	10-36	AMR (Ki) gain	0.00-3.00	0.20
×	10-37	PM sensorless control word	0000-FFFFh	0000
*	10-39	Frequency point to switch from I/F mode to PM sensorless mode	0.00-599.00Hz	20.00
×	10-40	Frequency point to switch from PM sensorless mode to V/F mode	0.00-599.00Hz	20.00
×	10-41	I/F mode, Id current low pass-filter time	0.0–6.0 sec.	0.2
×	10-42	Initial angle detection pulse value	0.0–3.0	1.0
	10-43	PG card version	0–655.35	Read only
×	10-49	Zero voltage time during start-up	0.000-60.000 sec.	0.000
*	10-50	Reverse angle limit (Electrical angle)	0.00-30.00 degree	10.00
×	10-51	Injection frequency	0–1200Hz	500
*	10-52	Injection magnitude	0.0–200.0V 230V Series: 0.0–100.0V 460V Series: 0.0–200.0V 575V Series: 0.0–200.0V 690V Series: 0.0–200.0V	15.0 30.0 30.0 30.0
*	10-53	PM initial rotor position detection method	O: Disable  1: Internal 1/4 rated current attracting the rotor to zero degrees  2: High frequency injection  3: Pulse injection	0

# **11 Advanced Parameters**

	Pr.	Parameter Name	Setting Range	Default
			bit0: Auto-tuning for ASR and APR	
			bit1: Inertia estimate (only in FOCPG mode)	
			bit2: Zero servo	
	11-00	System control	bit6: 0Hz linear-cross	0000h
			bit7: Save or do not save the frequency	
			bit8: Maximum speed for point to point position	
			control	
	11-01	Per unit of system inertia	1–65535 (256 = 1PU)	256
*	11-02	ASR1 / ASR2 switch frequency	5.00–599.00Hz	7.00
×	11-03	ASR1 low-speed bandwidth	1-40Hz (IM) / 1~100Hz (PM)	10
×	11-04	ASR2 high-speed bandwidth	1-40Hz (IM) / 1~100Hz (PM)	10
×	11-05	Zero-speed bandwidth	1–40Hz (IM) / 1~100Hz (PM)	10
×	11-06	ASR 1 gain	0-40Hz (IM) / 1~100Hz (PM)	10
×	11-07	ASR 1 integral time	0.000-10.000 sec.	0.100
*	11-08	ASR 2 gain	0-40Hz (IM) / 0~100Hz (PM)	10
*	11-09	ASR 2 integral time	0.000-10.000 sec.	0.100
×	11-10	ASR gain of zero speed	0-40Hz (IM) / 0~100Hz (PM)	10
*	11-11	ASR1 integral time of zero speed	0.000-10.000 sec.	0.100
*	11-12	Gain for ASR speed feed forward	0–150%	0
*	11-13	PDFF gain value	0–200%	30
×	11-14	ASR output Low-pass filter time	0.000-0.350 sec.	0.008
*	11-15	Notch filter depth	0–20db	0
*	11-16	Notch filter frequency	0.00-200.00Hz	0.00
*	11-17	Forward motor torque limit Quadrant I	0–500%	500
*	11-18	Forward regenerative torque limit	0–500%	500
		Quadrant II		
*	11-19	Reverse motor torque limit  Quadrant III	0–500%	500
*	11-20	Reverse regenerative torque limit  Quadrant IV	0–500%	500
		Flux weakening curve for motor 1		
*	11-21	gain value	0–200%	90
*	11-22	Flux weakening curve for motor 2	0–200%	90
		gain value		
*	11-23	Flux weakening area speed response	0–150%	65
×	11-24	APR gain	0.00-40.00Hz (IM) / 0-100.00Hz (PM)	10.00

	Pr.	Parameter Name	Setting Range	Default
*	11-25	Gain value for the APR feed forward	0–100	30
×	11-26	APR curve time	0.00-655.35 sec.	3.00
~	11-27	Maximum torque command	0–500%	100
			0: Disable	
	44.00	Tarrey offert source	1: Analog signal input (Pr. 03-00)	0
~	11-28	Torque offset source	2: Pr. 11-29	0
			3: Controlled by external terminal (Pr. 11-30-11-32)	
*	11-29	Torque offset setting	-100.0–100.0%	0.0
×	11-30	High torque compensation	-100.0–100.0%	30.0
*	11-31	Middle torque compensation	-100.0–100.0%	20.0
×	11-32	Low torque compensation	-100.0–100.0%	10.0
			0 : Digital keypad	
			1 : RS-485 communication (Pr. 11-34)	
×	11-33	Torque command source	2: Analog signal input (Pr. 03-00)	0
			3: CANopen	
			5: Communication extension card	
×	11-34	Torque command	-100.0–100.0% (Pr. 11-27 set value = 100 %)	0.0
×	11-35	Torque command filter time	0.000-1.000 sec.	0.000
			0: Set by Pr. 11-37 (Forward speed limit) and Pr.	
			11-38 (Reverse speed limit)	
	11 26	Chand limit appartian	1: Set by Pr. 11-37, Pr. 11-38 and Pr. 00-20 (Source	0
	11-36	Speed limit selection	of master frequency command)	0
			2: Set by Pr. 00-20 (Source of master frequency	
			command).	
×	11-37	Forward speed limit (torque mode)	0–120%	10
×	11-38	Reverse speed limit (torque mode)	0–120%	10
	44.00	Zero torque command mode	0: Torque mode	
	11-39	selection	1: Speed mode	0
			0: External terminal	
	44 40	Point-to-point position control	2: RS-485	0
*	11-40	command source	3: CANopen	0
			5: Communication card	
×	11-42	System control flag	0000-FFFFh	0000h
	44.45	Point- to-point position control	0.00, 500,0011	40.05
×	11-43	maximum ferquency	0.00-599.00Hz	10.00
	44.4.	Point-to-point position control	0.00 055.05	4.05
×	11-44	acceleration time	0.00–655.35 sec.	1.00

	Pr.	Parameter Name	Setting Range	Default
*	11-45	Point-to-point position control deceleration time	0.00-655.35 sec.	3.00
	11-46	Torque output filter time	0.000-65.535 sec.	0.050

# 13 Application Parameters by Industry

Pr.	Parameter Name	Setting Range	Default
		0: Disable	
		1: User-defined Parameter	
13-00	Industry Decemptors combination	2: Compressor (IM)	0
13-00	Industry Parameters combination	3: Fan	U
		4: Pump	
		10: Air Handling Unit, AHU	

# **14 Extension Card Parameter**

	Pr.	Parameter Name	Setting Range	Default
	14-00	Extension card Input terminal	0: Disable	0
	14-00	selection (AI10)	1: Frequency command	U
<i>~</i>	14-01	Extension card Input terminal	2: Torque command (torque limit under speed mode)	0
	14-01	selection (AI11)	3: Torque compensation command	U
			4: PID target value	
			5: PID feedback signal	
			6: Thermistor (PTC / KTY-84) input value	
			7: Positive torque limit	
			8: Negative torque limit	
			9: Regenerative torque limit	
			10: Positive/ negative torque limit	
			11: PT100 thermistor input value	
_			13: PID compensation amount	
*	14-08	Analog input filter time (Al10)	0.00-20.00 sec.	0.01
×	14-09	Analog input filter time (AI11)	0.00-20.00 sec.	0.01
~	14-10	Analog input 4–20mA signal loss	0: Disable	0
	14-10	selection (AI10)	1: Continue operation at the last frequency	0
~	14-11	Analog input 4–20mA signal loss	2: Decelerate to 0Hz	0
	1-7-11	selection (AI11)	3: Stop immediately and display ACE	0
~	14-12	Extension card output terminal	0: Output frequency (Hz)	0
	17 12	selection (AO10)	1: Frequency command (Hz)	<u> </u>
~	14-13	Extension card output terminal	2: Motor speed (Hz)	0
	14 10	selection (AO11)	3: Output current (rms)	<u> </u>
			4: Output voltage	
			5: DC BUS voltage	
			6: Power factor	
			7: Power	
			8: Torque	
			9: AVI	
			10: ACI	
			12: q-axis current (Iq)	
			13: q-axis feedback value (lq)	
			14: d-axis current (Id)	
			15: d-axis feedback value (ld)	
			18: Torque command	
			19: PG2 frequency command	
			20: CANopen analog output	
			21: RS-485 analog output	

	Pr.	Parameter Name	Setting Range	Default
			22: Communication card analog output	
			23: Constant voltage output	
			25: CANopen and RS-485 analog output	
*	14-14	Analog output 1 gain output (AO10)	0.0–500.0%	100.0
*	14-15	Analog output 1 gain output (AO11)	0.0–500.0%	100.0
*	14-16	Analog output 1 in REV direction (AO10)	0: Absolute value of output voltage	0
*	14-17	Analog output 1 in REV direction (AO11)	1: Reverse output 0V; Forward output 0–10V 2: Reverse output 5~0V; Forward output 5–10V	0
*	14-18	Extension card input selection (Al10)	0: 0–10V (AVI10) 1: 0–20mA (ACI10) 2: 4–20mA (ACI10)	0
*	14-19	Extension card input selection (Al11)	0: 0–10V (AVI11) 1: 0–20mA (ACI11) 2: 4–20mA (ACI11)	0
	14-20	AO10 DC output setting level	0.00–100.00 %	0.00
	14-21	AO11 DC output setting level	0.00–100.00 %	0.00
×	14-22	AO10 filter output time	0.00-20.00 sec.	0.01
*	14-23	AO11 filter output time	0.00-20.00 sec.	0.01
*	14-36	AO10 output selection	0: 0–10V 1: 0–20mA	0
*	14-37	AO11 output selection	2: 4–20mA	0

[The page intentionally left blank]

# Chapter 12 Description of Parameter Settings

### 12-1 Description of Parameter Settings

### **00 Drive Parameters**

✓ You can set this parameter during operation.

Identity Code of the AC Motor Drive

Default: #.#

Settings Read Only

Display AC Motor Drive Rated Current

Default: #.#

Settings Read Only

- Pr. 00-00 displays the identity code of the AC motor drive. Use the following specification table to check if Pr.00-01 setting is the rated current of the AC motor drive. Pr.00-01 corresponds to the identity code of the AC motor drive (Pr. 00-00).
- The default is the rated current for normal load. Set Pr.00-16 to 1 to display the rated current for heavy load.

	230V Series													
Frame		P	١			В		С						
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22				
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30				
Identity code	4	6	8	10	12	14	16	18	20	22				
Rated current for heavy load (A)	4.8	7.1	10	16	24	31	47	62	71	86				
Rated current for normal load (A)	5	8	11	17	25	33	49	65	75	90				
Frame		)		Е		F								
kW	30	37	45	55	75	90								
HP	40	50	60	75	100	125								
Identity code	24	26	28	30	32	34								
Rated current for heavy duty (A)	114	139	171	204	242	329								
Rated current for normal duty (A)	120	146	180	215	255	346								

	460V Series														
	.00.00														
Frame				В		С									
kW	0.75	1.5	2.2	3.7	4.0	0	5.5	7.	.5	11	15	18.5	22	2	30
HP	1	2	3	5	5		7.5	1	0	15	20	25	30	)	40
Identity code	5	7	9	11	93	3	13	1:	5	17	19	21	23	3	25
Rated current for heavy load (A)	ent for 29 38 57 81 95		5	11	1	17 23		30	36	43	3	57			
Rated current for normal load (A)	1 30 1 40 1 60 1 90 1 10 5		.5	12	18 24		24	32	38	45	5	60			
Frame	D	0			Е	Ξ		F	•	•	G		ŀ	1	
kW	37	45	55	75	90	110	) 13	32	160	185	220	280	315	355	450
HP	50	60	75	100	125	150	) 17	'5	215	250	300	375	425	475	600
Identity code	27	29	31	33	35	37	3	9	41	43	45	47	49	51	55
Rated current for heavy load (A)	69	86	105	143	171	209	24	17	295	352	437	523	585	649	816
Rated current for normal load (A)	73	91	110	150	180	220	26	0	310	370	460	550	616	683	866

	575V Series												
Frame	A B												
kW	1.5	2.2	3.7	5.5	7.5	11	15						
HP	2	3	5	7.5	10	15	20						
Identity code	505	506	507	508	509	510	511						
Rated current for heavy load (A)	2.1	3	4.6	6.9	8.3	13	16.8						
Rated current for normal load (A)	2.5	3.6	5.5	8.2	10	15.5	20						

690V Series													
Frame C D E F													
kW												200	
HP	25	30	40	50	60	75	100	125	150	175	215	270	
Identity code	612	613	614	615	616	617	618	619	620	621	622	686	
Rated current for heavy load (A)	14	20	24	30	36	45	54	67	86	104	125	150	
Rated current for normal load (A)	20	24	30	36	45	54	67	86	104	125	150	180	

Frame		3	Н						
kW	250	315	400	450	560	630			
HP	335	425	530	600	745	840			
Identity code	687	626	628	629	631	632			
Rated current for heavy load (A)	180	220	290	310	420	675			
Rated current for normal load (A)	220	290	350	385	465	675			

### Parameter Reset

Default: 0

Settings 0: No Function

1: Write protection for parameters

5: Reset kWh display to 0

6: Reset PLC (including CANopen Master Index)

7: Reset CANopen Index (Slave)

9: Reset all parameters to defaults with base frequency at 50 Hz

10: Reset all parameters to defaults with base frequency at 60Hz

- When set to 1, all parameters are read only except Pr. 00-02, Pr. 00-07 and Pr. 00-08. Set Pr. 00-02 to 0 before changing other parameter settings.
- When set to 9 or 10, reset all parameters to defaults. If there is a password set in Pr. 00-08, enter the password set in Pr. 00-07 to reset to default.
- When set to 5, kWh displayed value can be reset to 0 even when the drive is operating. Pr. 05-26, Pr. 05-27, Pr. 05-28, Pr. 05-29, and Pr. 05-30 are reset to 0.
- When set to 6, clear internal PLC program (includes the related settings of PLC internal CANopen master)
- When set to 7, reset the related settings of CANopen slave.
- When set to 6, 7, 9, 10, reboot the motor drive after setting.

# ★ ☐ ☐ - ☐ ∃ Start-up Display Selection

Default: 0

Settings 0: F (Frequency command)

1: H (Output frequency)

2: U (User defined)

3: A (Output current)

This parameter determines the start-up display page. This is the user defined choice display according to the setting in Pr.00-04.

### Content of Multi-function Display (User-defined)

Default: 3

Settings 0: Display output current (A) (Unit: Amp)

1: Display counter value (c) (Unit: CNT)

2: Display actual output frequency (H.) (Unit: Hz)

3: Display DC BUS voltage (v) (Unit: V<sub>DC</sub>)

4: Display output voltage (E) (Unit: V<sub>AC</sub>)

5: Display output power angle (n) (Unit: deg)

6: Display output power in kW (P) (Unit: kW)

7: Display actual motor speed rpm (r) (Unit: rpm)

8: Display estimate output torque % (t) (Unit: %)

9: Display PG feedback (G) (refer to Pr. 10-00 and Pr. 10-01) (Unit: PLS)

10: Display PID feedback (b) (Unit: %)

11: Display AVI in % (1.) (Unit: %)

12: Display ACI in % (2.) (Unit: %)

13: Display AUI in % (3.) (Unit: %)

14: Display the temperature of IGBT (i.) (Unit: °C)

15: Display the temperature of capacitance (c.) (Unit: °C)

16: The status of digital input (ON/OFF), refer to Pr. 02-12 (i)

17: The status of digital output (ON/OFF), refer to Pr. 02-18 (o)

18: Multi-step speed (S)

19: The corresponding CPU pin status of digital input (d)

20: The corresponding CPU pin status of digital output (0.)

21: Actual motor position (PG1 of PG card) (P.) The maximum value is 32bits display

22: Pulse input frequency (PG2 of PG card) (S.)

23: Pulse input position (PG2 of PG card) (q.) The maximum value is 32bits display

24: Position command tracing error (E.)

25: Overload counting (0.00–100.00%) (o.) (Unit: %)

26: Ground fault GFF (G.) (Unit: %)

27: DC BUS voltage ripple (r.) (Unit: V<sub>DC</sub>)

28: Display PLC register D1043 data (C)

- 29: Display PM pole section (EMC-PG01U application) (4.)
- 30 : Display output of user defined (U)
- 31: Display Pr. 00-05 user Gain (K)
- 32: Number of actual motor revolution during operation (PG card plug in and Z phase signal input) (Z.)
- 33: Motor actual position during operation (when PG card is connected)(q)
- 34: Operation speed of fan (F.) (Unit: %)
- 35: Control Mode display: 0= Speed control mode (SPD), 1= torque control mode (TQR) (t.)
- 36: Present operating carrier frequency of drive (Hz) (J.)
- 38: Display drive status (6.) (Refer to Note 7)
- 39: Display estimated output torque, positive and negative, using Nt-m as unit (t=0.0: positive torque; -0.0: negative torque) (C.)
- 40: Torque command (L.) (Unit: %)
- 41: kWh display (J) (Unit: kWh)
- 42: PID reference (h.) (Unit: %)
- 43: PID offset (o.) (Unit: %)
- 44: PID output frequency (b.) (Unit: Hz)
- 45: Hardware ID
- 49: Motor temperature (PTC, PT100, KTY84-130)
- 51: PMSVC torque offset
- 52: AI10%
- 53: AI11%

#### Explanation 1

- When Pr. 10-01 is set to 1000 and Pr. 10-02 is set to 1, 2, the displayed range for PG feedback is between 0–4000.
- When Pr. 10-01 is set to 1000 and Pr. 10-02 is set to 3, 4, 5, the displayed range for PG feedback is between 0–1000.
- Home position: If it has Z phase, Z phase will be regarded as home position. Otherwise, home position will be the encoder start up position.

#### Explanation 2

It can also display negative values when setting analog input bias (Pr. 03-03-03-10).

Example: Assume that AVI input voltage is 0 V, Pr. 03-03 is 10.0% and Pr. 03-07 is 4 (Bias serves as the center).

#### Explanation 3

Example: If REV, MI1 and MI6 are ON, the following table shows the status of the terminals.

Normally opened contact (N.O.), 0: OFF, 1: ON

Terminal	MI15	MI14	MI13	MI12	MI11	MI10	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	REV	FWD
Status	0	0	0	0	0	0	0	0	1	0	0	0	0	1	1	0

MI10–MI15 are the terminals for extension cards (Pr. 02-26–02-31).

• The value is 0000 0000 1000 0110 in binary and 0086H in HEX. When Pr. 00-04 is set to 16 or 19, the u page on the keypad displays 0086H.

- The setting value 16 is ON / OFF status of digital input according to Pr. 02-12 setting, and the setting value 19 is the corresponding CPU pin ON / OFF status of the digital input.
- The FWD / REV action and MI1 (which is set as three-wire) are not affected by Pr. 02-12.
- You can set 16 to monitor the digital input status, and then set 19 to check if the circuit is normal.

#### Explanation 4

Assume that RY1: Pr. 02-13 is set to 9 (Drive is ready). After the AC motor drive powers on, if there is no other abnormal status, the contact is ON. The display status is shown below.

Normally opened contact (N.O.)

Terr	minal	MO20	MO19	MO18	MO17	MO16	MO15	MO14	MO13	MO12	MO11	MO10	MO2	MO1	Reserved	RY2	RY1
Sta	atus	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

- If Pr. 00-04 is set to 17 or 20, it displays in hexadecimal "0001h" with LED u page is ON in the keypad.
- The setting value 17 is ON / OFF status of digital output according to Pr. 02-18 setting, and the setting value 19 is the corresponding CPU pin ON / OFF status of the digital output.
- You can set 17 to monitor the digital output status, and then set 20 to check if the circuit is normal.
- Explanation 5

Setting value 8: 100% means the motor rated torque.

Motor rated torque = (Motor rated power x 60 /  $2\pi$ ) / Motor rated rotating speed

Explanation 6

Setting value 25: when displayed value reaches 100.00%, the drive shows "oL" as an overload warning.

Explanation 7

Setting value 38

bit0: The drive is running forward.

bit1: The drive is running backward.

bit2: The drive is ready.

bit3: Errors occurred on the drive.

bit4: The drive is running.

bit5: Warnings occurred on the drive.

### ★ Goefficient Gain in Actual Output Frequency

Default: 0

Settings 0.00-160.00

This parameter is to set coefficient gain in actual output frequency. Set Pr. 00-04= 31 to display the calculation result on the screen (calculation = output frequency \* Pr. 00-05).

### Software Version

Default: Read only

Settings Read only

# Parameter Protection Password Input Default: 0 Settings 0–65535 Display 0–4 (the number of password attempts allowed) This parameter allows you to enter your password (which is set in Pr. 00-08) to unlock the parameter protection and to make changes to the parameter. To avoid problems in the future, be sure to write down the password after you set this parameter. Pr. 00-07 and Pr. 00-08 are used to prevent personnel from setting other parameters by accident. If you forget the password, clear the password setting by input 9999 and press the ENTER key, then enter 9999 again and press ENTER within 10 seconds. After decoding, all the settings return to default. When setting is under password protection, all the parameters read 0, except Pr. 00-08.


Settings 0-65535


0: No password protection or password entered correctly (Pr. 00-07)

1: Password has been set

- This parameter is for setting the password protection. Password can be set directly the first time. After you set the password, the value of Pr.00-08 is 1, which means password protection is activated. At this time, if you want to change any of the parameter settings, you must enter the correct password in Pr.00-07 to deactivate the password temporarily, and this would make Pr.00-08 become 0. After you finish setting the parameters, reboot the motor drive and the password is activated again.
- Entering the correct password in Pr.00-07 only temporarily deactivates the password. To permanently deactivate password protection, set Pr.00-08 to 0 manually. Otherwise, password protection is always reactivated after you reboot the motor drive.
- The keypad copy function works normally only when the password protection is deactivated (temporarily or permanently), and password set in Pr. 00-08 cannot be copied to the keypad. So when copying parameters from the keypad to the motor drive, set the password manually again in the motor drive to activate password protection.
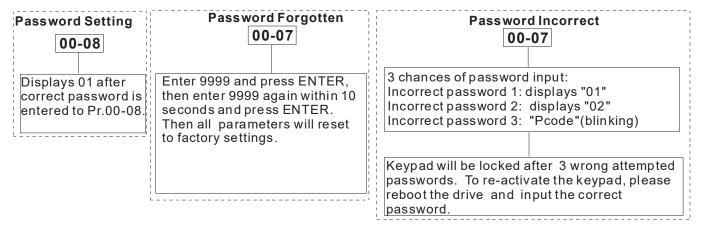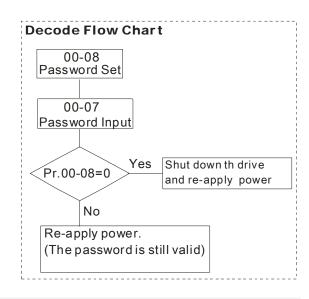
### Password Decode Flow Chart





# ✓ ☐☐ - ☐☐ Control Mode

Default: 0

Settings 0: Speed mode

1: Point-to-Point position control mode

2: Torque mode

3: Homing mode

Determines the control mode of the AC motor drive.

# Speed Control Mode

Default: 0

Settings 0: IMVF (IM V/F control)

1: IMVFPG (IM V/F control+ Encoder)

2: IM/PM SVC (IM/PM space vector control)

3: IMFOCPG (IM FOC + Encoder)

4: PMFOCPG (PM FOC + Encoder)

5: IMFOC Sensorless (IM FOC sensorless)

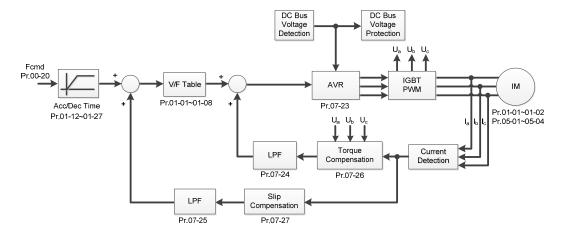
6: PM Sensorless (PM FOC sensorless)

7: IPM Sensorless (Interior PM FOC sensorless)


### Determines the control method of the AC motor drive:

- 0: IM V/F control, you can set the proportion of V/F as required and control multiple motors simultaneously.
- 1: IM V/F control + Encoder, you can use optional PG card with encoder for the closed-loop speed control.
- 2: IM/PM space vector control, get the optimal control by auto-tuning the motor parameters.
- 3: IM FOC + encoder, not only can increase torque, but also can increase the accuracy of the speed control (1:1000).
- 4: PM FOC + Encoder, not only can increase torque, but also can increase the accuracy of the speed control (1:1000).
- 5: IM FOC sensorless, IM field oriented sensorless vector control
- 6: PM FOC sensorless, PM field oriented sensorless vector control
- 7: Interior PM FOC sensorless, Interior PM field oriented sensorless vector control


- There are more detailed explanation of motor adjustment procedure in section 12-2
- When Pr. 00-10=0, and you set Pr. 00-11 to 0, the V/F control diagram is as follows.



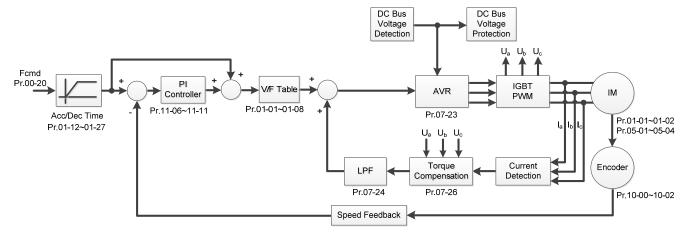
When Pr. 00-10=0, and you set Pr. 00-11 to 1, the V/F control + encoder diagram is as follows.



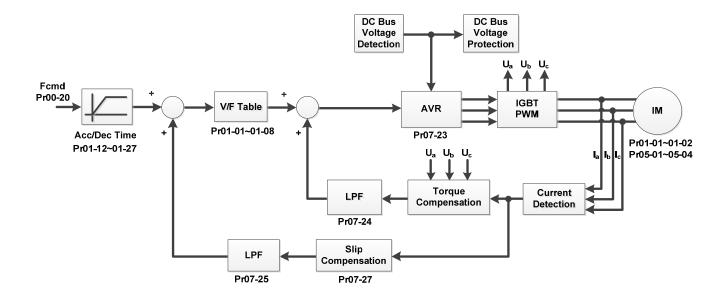
When Pr. 00-10=0, and you set Pr. 00-11 to 2, the space vector control diagram is as follows: IM Space Vector Control (IMSVC):




PM Space Vector Control (PMSVC):

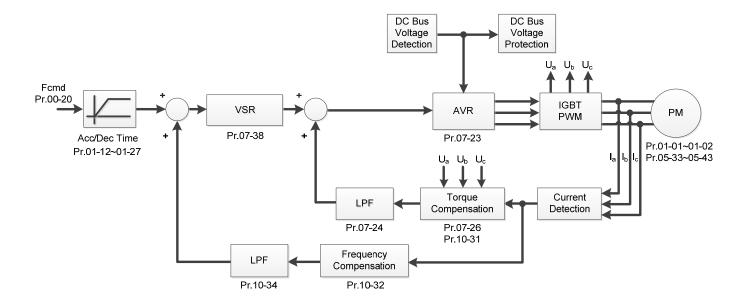

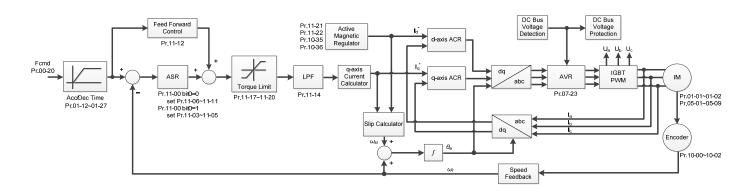
When Pr. 00-10=0, and you set Pr. 00-11 to 3, the IM FOCPG control diagram is as follows:



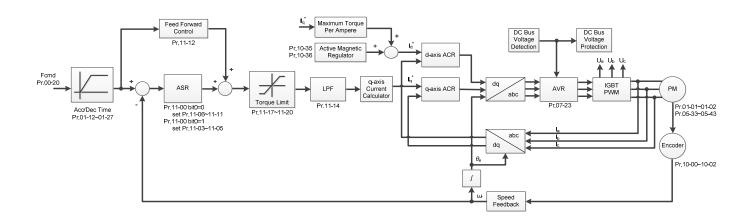
When Pr. 00-10=0, and you set Pr. 00-11 to 4, the PM FOCPG control diagram is as follows:



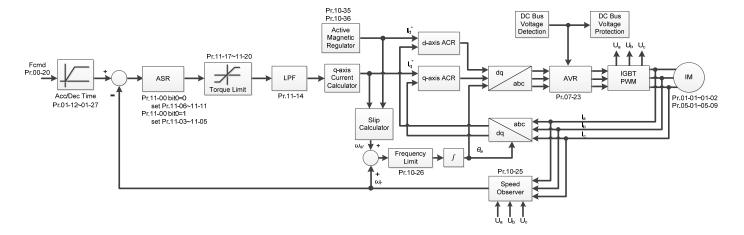
When Pr. 00-10=0, and you set Pr. 00-11 to 5, IMFOC Sensorless control diagram is as follows:



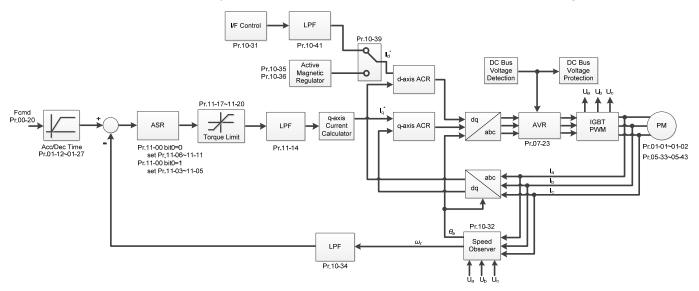When Pr. 00-10=0, and you set Pr. 00-11 to 6, PM FOC Sensorless control diagram is as follows:



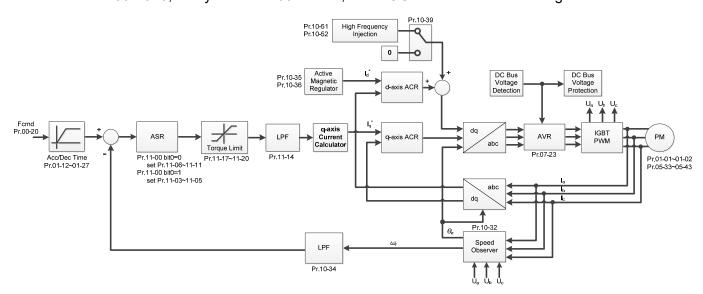When Pr. 00-10=0, and you set Pr. 00-11 to 7, IPM FOC sensorless control diagram is as follows:




# Point-to-Point Position Control


Default: 0

Settings: 0: Relative position
1: Absolute position

Pr. 00-12 = 0 is incremental type P2P; Pr. 00-12 = 1 is absolute type P2P

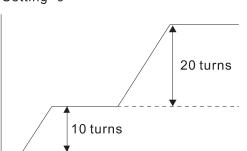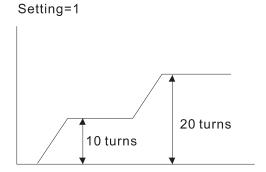Setting=0





# GG - ; } Control of Torque Mode


Default: 0

Settings 0: IM TQCPG (IM Torque control + Encoder)


1: PM TQCPG (PM Torque control + Encoder)

2: IM TQC Sensorless (IM Sensorless torque control)

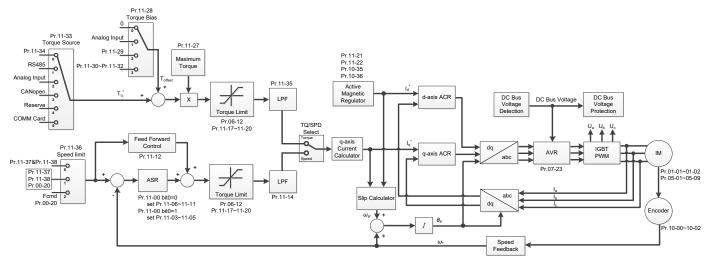
Pr. 00-13=0, IM TQCPG control diagram is as follows:



### Pr. 00-13=1, PM TQCPG control diagram is as follows:

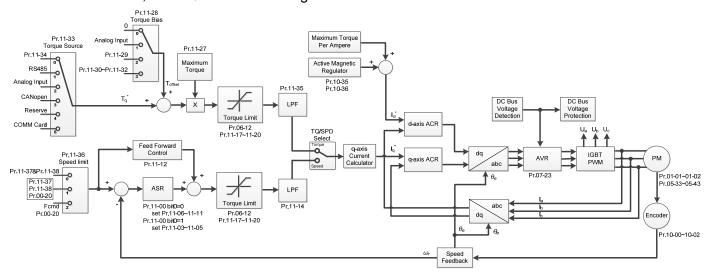

Pr. 00-13=2, IM TQC Sensorless control diagram is as follows:

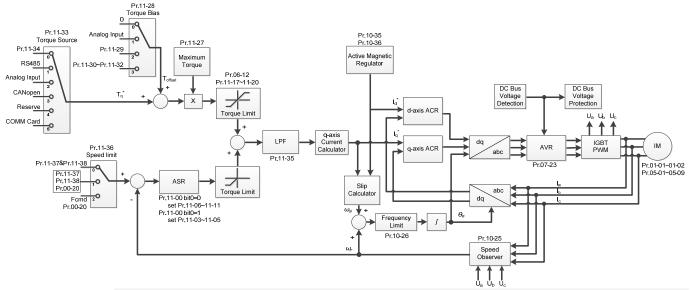

☐☐ - ☐☐ Load Selection

Default: 0

Settings 0: Normal load 1: Heavy load

- Normal load: over-load ability is 160% rated output current in 3 seconds (120% rated output current in 1 minute). Refer to Pr. 00-17 for the setting of carrier wave. Refer to Chapter 9 "Specifications" or Pr. 00-01 for the rated current.
- Heavy load: over-load ability is 180% rated output current in 3 seconds. (150% rated output current in 1 minute). Refer to Pr. 00-17 for the setting of carrier wave. Refer to Chapter 9 "Specifications" or Pr. 00-01 for the rated current.
- Pr.00-01 varies with the setting value for Pr.00-16. The default value and maximum for Pr.06-03 and Pr.06-04 also vary with the setting value of Pr.00-16.
- In Normal load, the default setting of Pr. 06-03, Pr. 06-04 is 120%, and the maximum is 160%. However, if DC voltage is higher than 700 V<sub>DC</sub> (460V series) or 350 V<sub>DC</sub> (230V series), then the maximum is 145%
- In Heavy load, the default setting of Pr. 06-03, Pr. 06-04 is 150%, and the maximum is 180%. However, if DC voltage is higher than 700  $V_{DC}$  (460V series) or 350  $V_{DC}$  (230V series), then the maximum is 165%

Carrier Frequency

Default: Table below

Settings 2–15kHz

This parameter determines the PWM carrier frequency for the AC motor drive.

	230V Series [Normal Load]							
Power/ Control mode	TIMEOCPG IMICOCPGI PMICOCPG I		PMFOC,	IPMFOC	IMFOC,	IMTQC		
mode	Settings	Default	Settings	Default	Settings	Default	Settings	Default
1–15HP [0.75–11kW]	2–15kHz	8kHz	4–15kHz	8kHz	4–10kHz	8kHz	4–14kHz	8kHz
20–50HP [15–37kW]	2–10kHz	6kHz	4–10kHz	6kHz	4–10kHz	6kHz	4–10kHz	6kHz
60–125HP [45–90kW]	2–9kHz	4kHz	4–9kHz	4kHz	4–9kHz	4kHz	4–9kHz	4kHz
	•							

	230V Series [Heavy Load]							
1–15HP [0.75–11kW]	2–15kHz	2kHz	4–15kHz	4kHz	4–10kHz	4kHz	4–14kHz	4kHz
20–50HP [15–37kW]	2–10kHz	2kHz	4–10kHz	4kHz	4–10kHz	4kHz	4–10kHz	4kHz
60–125HP [45–90kW]	2–9kHz	2kHz	4–9kHz	4kHz	4–9kHz	4kHz	4–9kHz	4kHz

	460V Series [Normal Load]							
Power/ Control	VF, VFPG, SVC, IMFOCPG, IMTQCPG		PMFOCPG, PMTQCPG		PMFOC, IPMFOC		IMFOC, IMTQC	
mode	Settings	Default	Settings	Default	Settings	Default	Settings	Default
1–15HP [0.75–11kW]	2–15kHz	8kHz	4-15kHz	8kHz	4-10kHz	8kHz	4–14kHz	8kHz
20–50HP [15–37kW]	2-10kHz	6kHz	4-10kHz	6kHz	4–10kHz	6kHz	4-10kHz	6kHz
60–125HP [45–90kW]	2–9kHz	4kHz	4–9kHz	4kHz	4–9kHz	4kHz	4–9kHz	4kHz
		46	60V Series	[Heavy Lo	ad]			
1–15HP [0.75–11kW]	2–15kHz	2kHz	4–15kHz	4kHz	4–10kHz	4kHz	4–14kHz	4kHz
20–50HP [15–37kW]	2–10kHz	2kHz	4–10kHz	4kHz	4–10kHz	4kHz	4–10kHz	4kHz
60–125HP [45–90kW]	2–9kHz	2kHz	4–9kHz	4kHz	4–9kHz	4kHz	4–9kHz	4kHz


	575V Series [Light/ N	Normal/ Heavy Load]	690V Series [Light/ ]	Normal/ Heavy Load]
Power/ Control		VF, VFF	PG, SVC	
mode	Settings	Default	Settings	Default
1–15HP [0.75–11kW]	2–15kHz	6kHz	-	-
20–600HP [15–450kW]	-	-	2–9kHz	4kHz
850HP [630kW]	-	-	2–9kHz	3kHz

	Carrier Frequency	Acoustic Noise	Electromagnetic Noise or Leakage Current	Heat Dissipation	Current Wave
	2kHz	Significant	Minimal	Minimal	
_	8kHz	<b>1</b>	<b>1</b>		
_	15kHz			<b> </b>	-√√√√ ↓
		Minimal	Significant	Significant	

- From the table, you see that the PWM carrier frequency has significant influences on the electromagnetic noise, the AC motor drive heat dissipation, and the motor acoustic noise. Therefore, if the surrounding noise is greater than the motor noise, lower the carrier frequency is good to reduce the temperature rise. Although it is quiet operation in the higher carrier frequency, the entire wiring and interference resistance should be considerate.
- When the carrier frequency is higher than the factory setting, it needs to protect by decreasing the carrier frequency. See Pr. 06-55 for the related setting and details.

# PLC Command Mask Default: Read Only Settings bit0: Control command by PLC force control bit1: Frequency command by PLC force control bit2: Position command by PLC force control bit3: Torque command by PLC force control Determines if frequency command or control command is locked by PLC Master Frequency Command (AUTO) Source / Source Selection of the PID Target Default: 0 Settings 0: Digital keypad 1: RS-485 communication 2: External analog input (Pr. 03-00) 3: External UP / DOWN terminal (multi-function input terminal) 4: Pulse input without direction command (Pr. 10-16 without direction), use with PG card 5: Pulse input with direction command (Pr. 10-16), use with PG card 6: CANopen communication card 8: Communication card (does not include CANopen card) Set the source of the master frequency in AUTO mode. Pr. 00-20 and Pr. 00-21 are for the settings of frequency source and operation source in AUTO mode. Pr. 00-30 and Pr. 00-31 are for the settings of frequency source and operation source in HAND mode. You can switch the AUTO / HAND mode with the keypad KPC-CC01 (optional) or the multi-function input terminal (MI) to set the master frequency source. The default for the frequency source or operation source is for AUTO mode. It returns to AUTO mode whenever cycle the power. If you use a multi-function input terminal to switch between AUTO and HAND mode, the highest priority is the multi-function input terminal. When the external terminal is OFF, the drive does not accept any operation signal and cannot execute JOG. When Pr. 00-20=4, the pulse input without direction command has included PG and MI8 input. ☐☐ - P Operation Command (AUTO) Source Default: 0 Settings 0: Digital keypad 1: External terminals. Keypad STOP disabled. 2: RS-485 communication. Keypad STOP disabled. 3: CANopen communication card 5: Communication card (does not include CANopen card) Set the source of the operation frequency in AUTO mode. When you control the operation command by the keypad KPC-CC01, keys RUN, STOP and JOG (F1) are valid. Stop Method Default: 0 Settings 0: Ramp to stop 1: Coast to stop

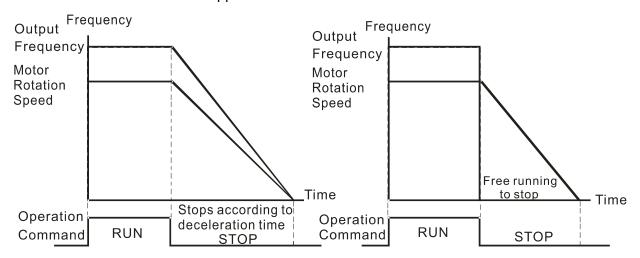Determines how the motor is stopped when the AC motor drive receives the STOP command.



Ramp to Stop and Coast to Stop

- 1. **Ramp to stop:** the AC motor drive decelerates to 0 or the minimum output frequency (Pr. 01-07) according to the set deceleration time, and then to stop.
- 2. **Coast to stop:** the AC motor drive stops output immediately, and the motor coasts to stop according to the load inertia.
  - ☑ Use "ramp to stop" for the safety of personnel, or to prevent material from being wasted in applications where the motor must stop immediately after the drive stops. You must set the deceleration time accordingly.
  - ☑ If idling is allowed, or the load inertia is large, use "coast to stop". For example, blowers, punching machines and pumps

# 

Default: 0

Settings 0: Enable forward/ reverse

1: Disable reverse

2: Disable forward

Enable the AC motor drives to run in the forward / reverse direction. You can use it to prevent a motor from running in a direction that would cause injury or damage the equipment.

# BB - 근목 Digital Keypad Frequency Command Memory

Default: Read Only

Settings Read only

If the keypad is the frequency command source, when Lv or Fault occurs, the parameter stores the current frequency command.

# ✓ ☐☐ - 25 User-Defined Characteristics

Default: 0

Settings bit0-3: user-defined decimal places

0000b: no decimal place 0001b: one decimal place 0010b: two decimal places 0011b: three decimal places

```
bit 4-15: user-defined unit
 000xh: Hz
 001xh: rpm
 002xh: %
 003xh: kg
 004xh: m/s
 005xh: kW
 006xh: HP
 007xh: ppm
 008xh: 1/m
 009xh: kg/s
 00Axh: kg/m
 00Bxh: kg/h
 00Cxh: lb/s
 00Dxh: lb/m
 00Exh: lb/h
 00Fxh: ft/s
 010xh: ft/m
 011xh: m
 012xh: ft
 013xh: degC
 014xh: degF
 015xh: mbar
 016xh: bar
 017xh: Pa
 018xh: kPa
 019xh: mWG
 01Axh: inWG
 01Bxh: ftWG
 01Cxh: psi
 01Dxh: atm
 01Exh: L/s
 01Fxh: L/m
 020xh: L/h
 021xh: m3/s
 022xh: m3/h
 023xh: GPM
 024xh: CFM
 xxxxh: Hz
```

- bit 0–3: the control frequency F page, user-defined unit (Pr.00-04 = d10, PID feedback value) and the number of decimal places (Pr.00-26) which supports up to three decimal places.
- bit 4–15: the control frequency F page, user-defined unit (Pr.00-04 = d10, PID feedback value) and the displayed units for Pr.00-26.

```
user-defined decimal places
0: no decimal place
1: one decimal place
2: two decimal places
3: three decimal places

user-defined unit
0: Hz
1: rpm
2: %
3: kg
```

# ## - 25 Maximum User-Defined Value

Default: 0

Settings 0: Disable

0–65535 (when Pr. 00-25 set to no decimal place)

0.0–6553.5 (when Pr. 00-25 set to 1 decimal place)

0.00-655.35 (when Pr. 00-25 set to 2 decimal places)

0.000-65.535 (when Pr. 00-25 set to 3 decimal places)

When Pr. 00-26 is NOT set to 0, the user-defined value is enabled. After selecting the displayed unit and number of decimal points with Pr.00-25, the setting value of Pr.00-26 corresponds to Pr.01-00 (Maximum motor operating frequency), and then the motor operation frequency has a linear relationship with the displayed value on the digital keypad.

Example:

When the frequency set in Pr. 01-00 = 60.00Hz, the maximum user-defined value for Pr. 00-26 is 100.0%. This also means Pr. 00-25 is set at 0021h to select % as the unit.

### NOTE

The drive display is controlled by the Pr. 00-25 setting when Pr. 00-25 is properly set and Pr.00-26 is not 0.

# ☐☐ - ☐ ☐ User-Defined Value

Settings Read only

Pr. 00-27 displays the user-defined value when Pr. 00-26 is not set to 0.

The user-defined function is valid only when Pr. 00-20 (frequency source) is set to digital keypad or RS-485 communication.

# ## LOCAL / REMOTE Mode

Default: 0

Default: Read only

Settings 0: Standard HOA function

- 1: When switching between local and remote, the drive stops
- 2: When switching between local and remote, the drive runs with REMOTE settings for frequency and operation status
- 3: When switching between local and remote, the drive runs with LOCAL settings for frequency and operation status
- 4: When switching between local and remote, the drive runs with LOCAL setting when switched to Local and runs with REMOTE settings when switched to Remote for frequency and operation status.
- The default of Pr. 00-29 is 0 (standard Hand-Off-Auto function). Set the AUTO frequency and operation source with Pr.00-20 and Pr.00-21. Set the HAND frequency and operation source with Pr.00-30 and Pr.00-31. Select or switch AUTO / HAND mode by using the digital keypad (KPC-CC01) or setting the multi-function input terminal MI = 41, 42.
- When you set the external terminal (MI) to 41 and 42 (AUTO / HAND mode), Pr.00-29 = 1,2,3,4 are disabled. The external terminal has the highest command priority, and Pr. 00-29 functions in standard HOA mode.
- When you do not set Pr.00-29 to 0, the Local / Remote function is enabled, and the top right corner of digital keypad KPC-CC01 (optional) displays LOC or REM (the display is available

when KPC-CC01 is installed with firmware version higher than version 1.021). Set the LOCAL frequency and operation source with Pr.00-20 and Pr.00-21. Set the REMOTE frequency and operation source with Pr.00-30 and Pr.00-31. Select or switch LOC / REM mode with the digital keypad KPC-CC01 (optional) or set the multi-function input terminal MI = 56. The AUTO key of the digital keypad is for the REMOTE function, and HAND key is for the LOCAL function.

- When you set the external terminal (MI) to 56 for LOC / REM mode selection, if you set Pr.00-29 to 0, then the external terminal function is disabled.
- When you set the external terminal (MI) to 56 for LOC / REM mode selection, if Pr.00-29 is not set to 0, then AUTO / HAND key is disabled, and the external terminal has the highest command priority.

# 

Default: 0

Settings 0: Digital keypad

1: RS-485 communication

2: External analog input (Pr. 03-00)

3: External UP/DOWN terminal (multi-function input terminal)

4: Pulse input without direction command (Pr. 10-16 without direction)

5: Pulse input with direction command (Pr. 10-16)

6: CANopen communication card

8: Communication card (does not include CANopen card)

Determines the master frequency source in HAND mode.

# 

Default: 0

Settings 0: Digital keypad

1: External terminals. Keypad STOP disabled.

2: RS-485 communication. Keypad STOP disabled.

3: CANopen communication card

5: Communication card (does not include CANopen card)

- Set the source of the master frequency in HAND mode.
- Pr. 00-20 and Pr. 00-21 are for the settings of frequency source and operation source in AUTO mode. Pr. 00-30 and Pr. 00-31 are for the settings of frequency source and operation source in HAND mode. You can switch the AUTO / HAND mode with the keypad KPC-CC01 (optional) or the multi-function input terminal (MI) to set the master frequency source.
- The default for the frequency source or operation source is for AUTO mode. It returns to AUTO mode whenever cycle the power. If you use a multi-function input terminal to switch between AUTO and HAND mode, the highest priority is the multi-function input terminal. When the external terminal is OFF, the drive does not accept any operation signal and cannot execute JOG.

# ✓ ☐☐ - 3 ☐ Digital Keypad STOP Function

Default: 0


Settings 0: Disable STOP key
1: Enable STOP key

This parameter is valid when the digital keypad is not set as the operation source (Pr. 00-21≠0).
When Pr. 00-21=0, the STOP key on the digital keypad is not affected by the parameter.

# ✓ ☐☐ - Ч☐ Homing mode

Default: 0000h


Settings:



Note: Forward run = clockwise (CW)
Reverse run = counterclockwise (CCW)


- χ 0: Forward run to home. Set PL forward limit as checkpoint.
  - 1: Reverse run (CCW) to home. Set NL reverse limit (CCWL) as checkpoint.
  - 2: Forward run to home. Set ORG : OFF→ON as checkpoint.
  - 3: Reverse to home. Set ORG : OFF $\rightarrow$ ON as checkpoint.
  - 4: Forward run and search for Z-pulse as checkpoint.
  - 5: Reverse run and search for Z-pulse as checkpoint.
  - 6: Forward run to home. Set ORG: ON→OFF as checkpoint.
  - 7: Reverse run to home. Set ORG : ON→OFF as checkpoint.
  - 8: Define current position as home.
- Y Set X to 0, 1, 2, 3, 6, 7
  - 0: reverse run to Z pulse
  - 1: continue forward run to Z pulse
  - 2: Ignore Z pulse
- When home limit is reached, set X to 2, 3, 4, 5, 6, 7 first.
  - 0: display error
  - 1: reverse the direction
- Homing action is controlled by Pr. 00-40, Pr. 00-41, Pr. 00-42 and Pr. 02-01-02-08.
- 1. When Y=0, X=0 or Y=0, X=2

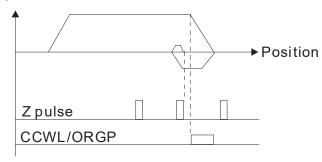Speed




## Chapter 12 Description of Parameter Settings | C2000

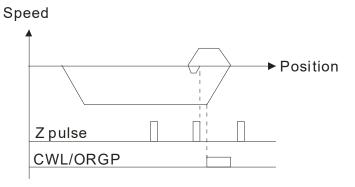
2. When Y=0, X=1 or Y=0, X=3



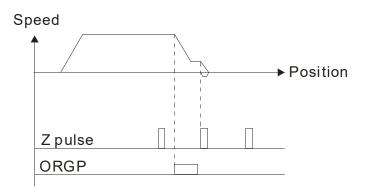
3. When Y=1, X=2



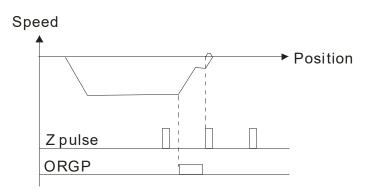
4. When Y=1, X=3



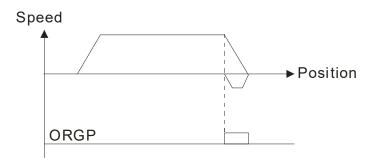
5. When Y=2, X=2



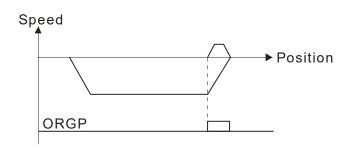
6. When Y=2, X=3



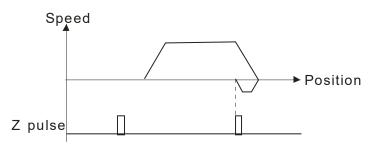7. When Y=2, X=4



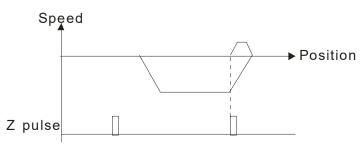8. When Y=2, X=5



★ BB - 4 | Homing by Frequency 1

Default: 8.00

Settings 0.00-599.00Hz

Market Homing by Frequency 2

Default: 2.00

Settings 0.00-599.00Hz

- Controlled by multi-function input terminal Pr. 02-01–02-08 (44–47).
  - 44: Reverse direction homing (NL)
  - 45: Forward direction homing (PL)
  - 46: Homing (ORG)
  - 47: Homing function enabled
- If the drive is not controlled by CAN or PLC, when setting Pr. 00-10 =1 (Control mode = P2P position control), set the external input terminal to 47 (homing function enable) for homing.
- When Pr. 00-10 is set to 3, after homing is complete, you must set control mode (Pr. 00-10 = 1) to execute P2P position control.

Default: 0.100

Settings 0.001-65.535 sec.

Minimize the current fluctuation displayed by digital keypad.

Display Filter Time (Keypad)

Default: 0.100

Settings 0.001–65.535 sec.

Minimize the display value fluctuation displayed by digital keypad.

Software Version (Date)

Default: ####

Settings Read only

Displays the current drive software version by date.

# 01 Basic Parameters

✓ You can be set this parameter during operation.

Default: 60.00 / 50.00

Settings 00.00-599.00 Hz

Determines the AC motor drive's maximum operation frequency range. This setting corresponds to the maximum value for the analog input frequency setting signal (0 – +10 V, 4–20 mA, 0–20 mA, ±10 V).

In normal load mode:

VF, SVC, VFPG, FOCPG: 0–599 Hz

FOC sensorless (IM/PM): 0−300H z/ 500 Hz

In heave load mode:

Output range: 0–300 Hz

Output Frequency of Motor 1 (base frequency and motor rated frequency)

Output Frequency of Motor 2 (base frequency and motor rated frequency)

Default: 60.00 / 50.00

Settings 0.00-599.00 Hz

Set the value according to the motor's rated frequency from the motor's nameplate. If the motor's rated frequency is 60 Hz, set the value to 60 Hz. If the motor's rated frequency is 50 Hz, set the value to 50 Hz.

Output Voltage of Motor 1 (base frequency and motor rated frequency)

Output Voltage of Motor 2 (base frequency and motor rated frequency)

Default:

200.0 / 400.0 / 575.0 / 660.0

Settings 230V series: 0.0-255.0 V

460V series: 0.0–510.0 V 575V series: 0.0–637.0 V 690V series: 0.0–765.0 V

- Set the value according to the motor's rated voltage from the motor's nameplate. If the motor's rated voltage is 220 V, set the value to 220.0 V. If the motor's rated voltage is 200 V, set the value to 200.0 V.
- There are a wide variety of motors, but the power system for each country is different. The convenient and economical way to solve this problem is to use an AC motor drive, which can deal with different voltages and frequencies, while supporting the original characteristics and life of the motor.

☐ ! - ☐ ☐ Mid-point Frequency 1 of Motor 1

Default: 3.00

Settings 0.00-599.00 Hz

v 0 1 0 1	Mid point	: Voltage 1 of Motor 1	
/ U 1-U 1	Mid-point	. Voltage 1 of Motor 1	Defeath
			Default:
			11.0 / 22.0 / 0.0 / 0.0
	Settings		
		460V series: 0.0–480.0 V	
		575V series: 0.0–637.0 V	
		690V series: 0.0-720.0 V	
0.1 - 3.7	Mid-point	Frequency 1 of Motor 2	
			Default: 3.00
	Settings	0.00–599.00 Hz	
<b>~</b> 8 :-38	Mid-point	Voltage 1 of Motor 2	
			Default:
			11.0 / 22.0 / 0.0 / 0.0
	Settings	230V series: 0.0–240.0 V	
	J	460V series: 0.0–480.0 V	
		575V series: 0.0–637.0 V	
		690V series: 0.0–720.0 V	
0.1 - 0.9	Mid-point	Frequency 2 of Motor 1	
0 . 03	wiid point	in requestey 2 or moter.	Default: 1.50
	Settings	0.00–599.00 Hz	Boldan. 1.00
× 8 1-88	- <del></del>	Voltage 2 of Motor 1	
~ <u>U                                   </u>	wiid-poii ii	Voltage 2 of Wotor 1	Default:
			5.0 / 10.0 / 0.0 / 0.0
	C = #1: =:-	0201/	5.07 10.07 0.07 0.0
	Settings	230V series: 0.0–240.0 V	
		460V series: 0.0–480.0 V	
		575V series: 0.0–637.0 V	
	-	690V series: 0.0-720.0 V	
8:-33	Mid-point	Frequency 2 of Motor 2	
			Default: 1.50
	Settings	0.00–599.00 Hz	
<b>₩</b>	Mid-point	Voltage 2 of Motor 2	
			Default:
			5.0 / 10.0 / 0.0 / 0.0
	Settings	230V series: 0.0–240.0 V	
		460V series: 0.0–480.0 V	
		575V series: 0.0–637.0 V	
		690V series: 0.0-720.0 V	
0:1-07	Min. Out	out Frequency of Motor 1	
			Default: 0.50
	Settings	0.00–599.00 Hz	
	-		_

Default:

1.0 / 2.0 / 0.0 / 0.0

Settings 230V series: 0.0-240.0 V

> 460V series: 0.0-480.0 V 575V series: 0.0-637.0 V

690V series: 0.0-720.0 V

H - 4 Min. Output Frequency of Motor 2

Default: 0.50

Settings 0.00-599.00 Hz

Min. Output Voltage of Motor 2

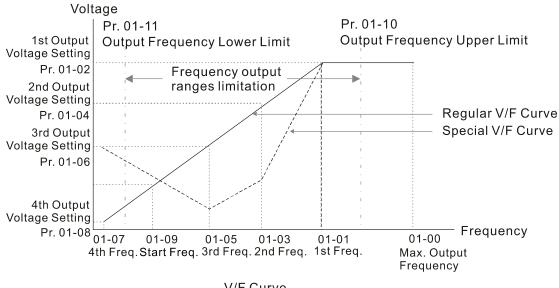
Default:

1.0 / 2.0 / 0.0 / 0.0

Settings 230V series: 0.0-240.0 V

460V series: 0.0-480.0 V 575V series: 0.0-637.0 V 690V series: 0.0-720.0 V


- The V/F curve setting is usually set by the motor's allowable loading characteristics. If the loading characteristics exceeds the loading limit of the motor, you must pay more attention to the heat dissipation, dynamic balance, and bearing lubrication of the motor.
- If the voltage is too high when the motor is at low frequencies, it may cause motor damage, overheating, and may trigger stalling or over-current protection. To prevent motor damage or motor fault, be careful when you set the voltage.
- Pr. 01-35 to Pr. 01-42 is the V/F curve for the motor 2. When multi-function input terminals Pr. 02-01-02-08 and Pr. 02-26-Pr. 02-31 are set to 14 and enabled, the AC motor drive will act as the 2nd V/F curve.
- The diagram below shows the V/F curve for motor 1. You can also find the V/F curve for motor 2 from the same diagram.




V/F Curve

Common settings for the V/F curve:

### (1) General purpose

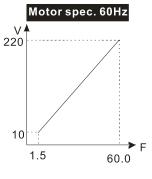


Pr.	Setting
01-00	60.0
01-01	60.0
01-02	220.0
01-03 01-05	1.50
01-04 01-06	10.0
01-07	1.50
01-08	10.0

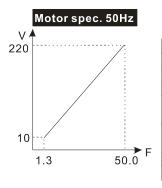


Pr.	Setting
01-00	50.0
01-01	50.0
01-02	220.0
01-03 01-05	1.30
01-04 01-06	10.0
01-07	1.30
01-08	10.0

### (2) For fan and hydraulic machinery

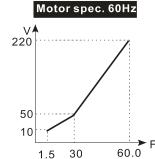


Pr.	Setting
01-00	60.0
01-01	60.0
01-02	220.0
01-03	30.0
01-05	30.0
01-04	50.0
01-06	30.0
01-07	1.50
01-08	10.0

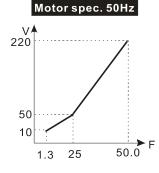


Pr.	Setting
01-00	50.0
01-01	50.0
01-02	220.0
01-03 01-05	25.0
01-04 01-06	50.0
01-07	1.30
01-08	10.0

### (3) High starting torque

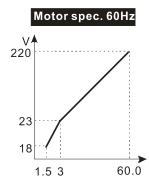

	Pr.	Setting
	01-00	60.0
	01-01	60.0
	01-02	220.0
	01-03 01-05	3.00
	01-04 01-06	23.0
F	01-07	1.50
•	01-08	18.0

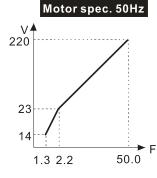

Pr.	Setting
01-00	50.0
01-01	50.0
01-02	220.0
01-03	2.20
01-05	2.20
01-04	00.0
01-06	23.0
01-07	1.30
01-08	14.0

Default: 0.50

# Start-Up Frequency

Settings 0.00-599.00Hz

When the starting frequency is higher than the minimum output frequency, the drives' output is from the starting frequency to the setting frequency. Refer to the following diagram for details.

Fcmd: frequency command

Fstart: start-up frequency (Pr. 01-09)

fstart: actual start-up frequency of drive

Fmin: 4th output frequency setting (Pr. 01-07/ Pr. 01-41)

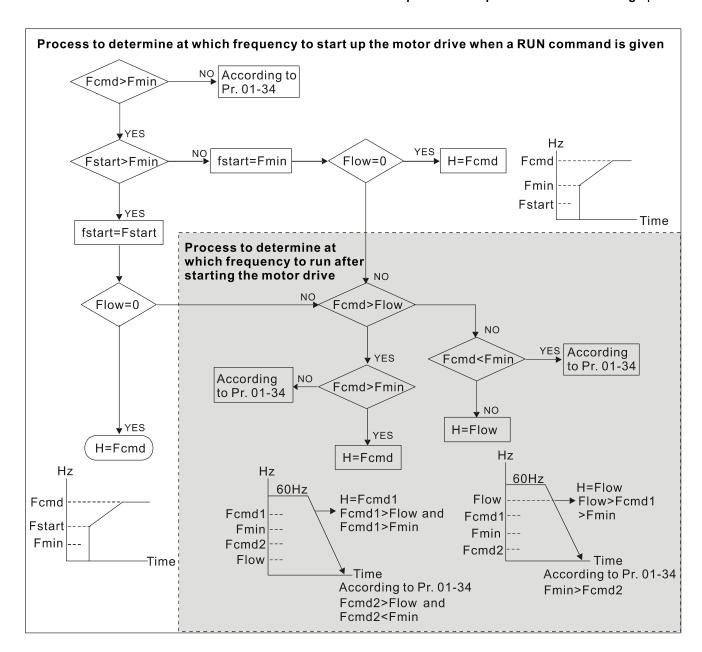
Flow: output frequency lower limit (Pr. 01-11)

When Fcmd > Fmin and Fcmd < Fstart:

If Flow < Fcmd, drive runs directly by Fcmd.

If Flow ≥ Fcmd, drive runs by Fcmd, then rises to Flow according to acceleration time.

The output frequency goes directly to 0 when decelerating to Fmin.



✓ ☐ ! - !☐ Output Frequency Upper Limit

Default: 599.00

Settings 0.00-599.00Hz


Output Frequency Lower Limit

Default: 0.00

Settings 0.00-599.00Hz

- Use the upper and lower limit output frequency settings to limit the actual output frequency. If the frequency setting is higher than the upper limit (Pr. 01-10), the drive uses the upper limit frequency. If output frequency is lower than lower limit (Pr. 01-11) and frequency setting is higher than minimum frequency (Pr. 01-07), the drive uses the lower limit frequency. Set the upper limit frequency > lower limit frequency (Pr.01-10 setting value must be > Pr.01-11 setting value).
- The upper output frequency limits the maximum output frequency of the drive. If the frequency setting is higher than Pr.01-10, the Pr. 01-10 setting limits the output frequency.
- When the drive starts the slip compensation function (Pr.07-27) or PID feedback control, the drive output frequency may exceed frequency command but is still limited by this setting.

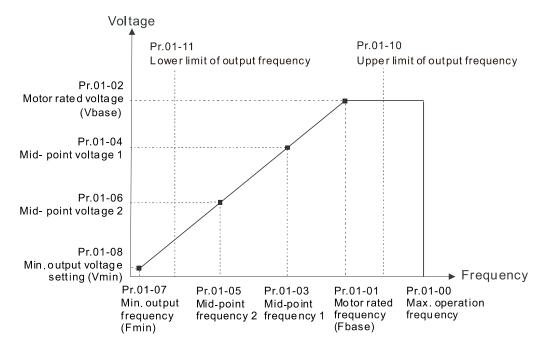Related parameters: Pr.01-00 Maximum Operation Frequency, and Pr.01-11 Output Frequency Lower Limit



- The lower output frequency limits the minimum output frequency of the drive. When the drive frequency command or feedback control frequency is lower than this setting, the lower limit of the frequency limits the drive output frequency.
- When the drive starts, it operates from the minimum output frequency (Pr. 01-07) and accelerates to the setting frequency. It is not limited by the lower output frequency settings.
- Use the output frequency upper and lower limit settings to prevent operator misuse, overheating caused by operating at a too low frequency, or damage caused by excessive speed.
- If the output frequency upper limit setting is 50Hz and the frequency setting is 60Hz, the maximum output frequency is 50 Hz.
- If the output frequency lower limit setting is 10Hz and the minimum operation frequency setting (Pr. 01-07) is 1.5 Hz, the drive operates at 10Hz when the frequency command is higher than Pr. 01-07 and less than 10 Hz. If the frequency command is less than Pr. 01-07, the drive stays in ready status with no output.
- If the frequency output upper limit is 60Hz and the frequency setting is also 60Hz, only the frequency command is limited in 60 Hz. The actual frequency output may exceed 60 Hz if the drive starts the slip compensation function.

×	0:-12	Acceleration Time 1
×	0:-:3	Deceleration Time 1
×	0:1-14	Acceleration Time 2
×	0:1-15	Deceleration Time 2
×	8:- 18	Acceleration Time 3
×	0:-:7	Deceleration Time 3
×	0:-:8	Acceleration Time 4
×	0:-19	Deceleration Time 4
×	0:-20	JOG Acceleration Time

# 

Default: 10.00

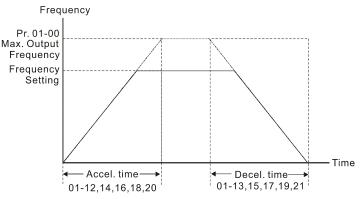
The default of motor drive with 30HP

and above: 60.00 / 60.0

Settings Pr.01-45=0: 0.00-600.00 seconds Pr.01-45=1: 0.00-6000.0 seconds

Use the acceleration time to determine the time required for the AC motor drive to accelerate from 0.00Hz to maximum output frequency (Pr. 01-00).

- The acceleration and deceleration time are invalid when using Pr. 01-44 Auto-acceleration and Auto-deceleration Setting.
- Select the acceleration and deceleration time 1, 2, 3, and 4 with the multi-function input terminals settings. The defaults are acceleration and deceleration time 1.
- With the enabled torque limits and stall prevention functions, the actual acceleration and deceleration time are longer than the above action time.
- Note that setting the acceleration time too short may trigger the protection function (Pr. 06-03 Over-current Stall Prevention during Acceleration or Pr. 06-01 Over-voltage Stall Prevention).
- Note that setting the acceleration time too short may cause motor damage or trigger drive protection due to over-current during acceleration.
- Note that setting the deceleration time too short may cause motor damage or trigger drive protection due to over-current during deceleration or over-voltage.
- Use suitable brake resistor (refer to Chapter 07 Optional Accessories) to decelerate in a short time and prevent over-voltage.
- When you enable Pr. 01-24-Pr.01-27, the actual acceleration and deceleration time are longer than the setting.



Accel./Decel. Time

# 

Default: 6.00

### 0.00-599.00 Hz Settings

- You can use both the external terminal JOG and F1 key on the optional keypad KPC-CC01 to set the JOG function. When the JOG command is ON, the AC motor drive accelerates from 0 Hz to the JOG frequency (Pr. 01-22). When the JOG command is OFF, the AC motor drive decelerates from the JOG frequency to stop. The JOG acceleration and deceleration time (Pr. 01-20, Pr. 01-21) are the time to accelerate from 0.00 Hz to JOG frequency (Pr. 01-22).
- Pou cannot execute the JOG command when the AC motor drive is running. When the JOG command is executing, other operation commands are invalid.



### First / Fourth Acceleration / Deceleration Frequency

Default: 0.00


Settings 0.00-599.00 Hz

This function does not require the external terminal switching function; it switches the acceleration and deceleration time automatically by the Pr.01-23 setting. If you set the external terminal, it is based on the external terminal first, and not on Pr.01-23.

When using this function, set the S-curve acceleration time to 0 if the fourth acceleration time is set too short.

As the usage of Pr. 01-23, for instance, under Pr. 01-00=80 Hz and Pr. 01-23=40 Hz:

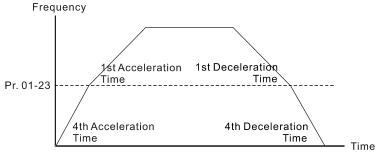- a. If Pr. 01-02=10s, Pr. 01-18=6s, then the 0–40 Hz acceleration time is 3s and 40–80 Hz acceleration time is 5s.
- b. If Pr. 01-13=8s, Pr. 01-19=2s, then 80–40 Hz deceleration time is 4s and 40–0 Hz deceleration time is 1s.



1st/4th Acceleration/Deceleration Frequency Switching

メ 🖟 パークリ S-curve Acceleration Begin Time 1

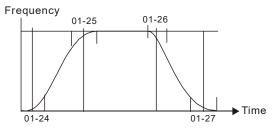
S-curve Acceleration Arrival Time 2

✓ ☐ ! - 2 7
S-curve Deceleration Arrival Time 2

Default: 0.20

Settings Pr.01-45=0: 0.00–25.00 seconds Pr.01-45=1: 0.00–250.0 seconds

- It Sets a slow start when the drive begins to accelerate at the start. The acceleration and deceleration curve adjust the S-curve acceleration and deceleration according to the parameter value. When you enable this function, the drive has a different acceleration and deceleration curve based on the acceleration and deceleration time.
- The S-curve function is disabled when you set the acceleration and deceleration time to 0.
- When Pr. 01-12, Pr. 01-14, Pr. 01-16, Pr. 01-18 ≥ Pr. 01-24 and Pr. 01-25, the actual acceleration time = Pr. 01-12, Pr. 01-14, Pr. 01-16, Pr. 01-18 + (Pr. 01-24 + Pr. 01-25)/2
- When Pr. 01-13, Pr. 01-15, Pr. 01-17, Pr. 01-19 ≥ Pr. 01-26 and Pr. 01-27, the actual deceleration time = Pr. 01-13, Pr. 01-15, Pr. 01-17, Pr. 01-19 + (Pr. 01-26 + Pr. 01-27)/2




Skip Frequency 1 (upper limit)	
Skip Frequency 1 (lower limit)	
Skip Frequency 2 (upper limit)	
Skip Frequency 2 (lower limit)	
<pre>G !- 3 ≥ Skip Frequency 3 (upper limit)</pre>	
Skip Frequency 3 (lower limit)	

Default: 0.00

Settings 0.00~599.00Hz

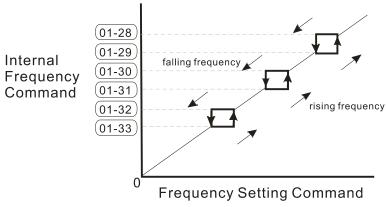- Set the AC motor drive's skip frequency. The drive's frequency setting skips these frequency ranges. However, the frequency output is continuous. There are no limits for these six parameters and you can combine them. Pr.01-28 does not need to be greater than Pr.01-29; Pr.01-30 does not need to be greater than Pr.01-31; Pr.01-32 does not need to be greater than Pr.01-33. Pr.01-28-01-33 can be set as required. There is no size distinction among these six parameters.
- These parameters set the skip frequency ranges for the AC motor drive. You can use this function to avoid frequencies that cause mechanical resonance. The skip frequencies are useful when a motor has resonance vibration at a specific frequency bandwidth. Skipping this frequency avoids the vibration. There are three frequency skip zones available.
- You can set the Frequency command (F) within the range of skip frequencies. Then the output frequency (H) is limited to the lower limit of skip frequency ranges.
- When accelerating and decelerating, the output frequency still passes the skip frequency ranges.



# 

Default: 0


Settings 0: Waiting for output

1: Zero-speed operation


2: Minimum frequency (Refer to Pr. 01-07, Pr. 01-41)

- When the frequency command of drive is less than Fmin (Pr. 01-07 or Pr. 01-41), the drive operates according to the setting value.
- 0: the AC motor drive is in waiting mode without voltage output from terminals U, V, W.
- 1: the drive executes the DC brake by Vmin (Pr. 01-08 and Pr. 01-42) in V/F, FOC Sensorless, and SVC modes. And it executes zero-speed operation in VFPG and FOCPG mode.
- 2: the AC motor drive runs using Fmin (Pr. 01-07, Pr. 01-41) and Vmin (Pr. 01-08, Pr. 01-42) in V/F, VFPG, SVC, FOC Sensorless and FOCPG modes.

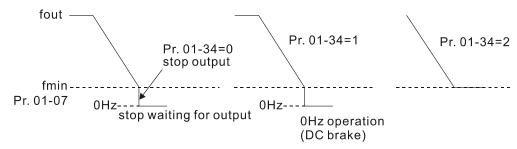In V/F, VFPG, SVC and FOC Sensorless modes



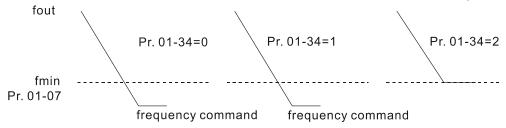In FOCPG mode, when Pr. 01-34 is set to 2, the AC motor drive operates according to the setting.



# 

Default: 0

Settings 0: V/F curve determined by Pr. 01-00-01-08

1: 1.5th V/F curve

2: 2<sup>nd</sup> V/F curve

3: 60Hz, voltage saturation in 50Hz

4: 72Hz, voltage saturation in 60Hz

5: 50Hz, decrease gradually with cube

6: 50Hz, decrease gradually with square

7: 60Hz, decrease gradually with cube

8: 60Hz, decrease gradually with square

9: 50Hz, medium starting torque

10: 50Hz, high starting torque

11: 60Hz, medium starting torque

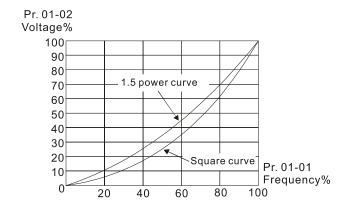
12: 60Hz, high starting torque

13: 90Hz, voltage saturation in 60Hz

14: 120Hz, voltage saturation in 60Hz

15: 180Hz, voltage saturation in 60Hz

- When setting to 0, refer to Pr. 01-01-08 for the motor 1 V/F curve. For motor 2, refer to Pr. 01-35-01-42.
- When setting to 1 or 2, the second and third voltage frequency settings are invalid.
- If the load on the motor is a variable torque load (torque is in direct proportion to rotating speed, such as the load of a fan or a pump), the load torque is low at low rotating speed. Decreasing the input voltage to make the magnetic field of the input current smaller and reduce flux loss and iron loss for the motor to increase efficiency.
- When you set the V/F curve to high power, it has lower torque at low frequency, and the drive is not suitable for rapid acceleration and deceleration. Do NOT use this parameter for rapid acceleration and deceleration.



### Auto-acceleration and Auto-deceleration Setting

Default: 0

Settings 0: Linear acceleration and linear deceleration

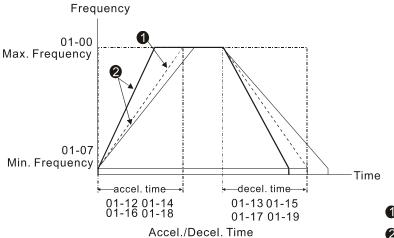
1: Auto-acceleration and linear deceleration

2: Linear acceleration and auto-deceleration

3: Auto-acceleration and auto-deceleration

4: Stall prevention by auto-acceleration and auto-deceleration (limited by Pr. 01-12 to Pr. 01-21)

- 0 (linear acceleration and linear deceleration): the drive accelerates and decelerates according to the setting for Pr. 01-12-01-19.
- 1 or 2 (auto/linear acceleration and auto/linear deceleration): the drive reduces the mechanical vibration and prevents the complicated auto-tuning processes. It does not stall during acceleration and has no need for a brake resistor. It can also improve operation efficiency and save energy.
- 3 (auto-acceleration and deceleration-decelerate by actual load): the drive auto-detects the load torque and accelerates from the fastest acceleration time and smoothest start current to the setting frequency. When decelerating, the drive auto-detects the load re-generation and stops the motor smoothly with the fastest deceleration time.
- 4 (stall prevention by auto-acceleration and deceleration-refer to acceleration and deceleration time): if the acceleration and deceleration is within a reasonable range, the drive accelerates and decelerates according to Pr.01-12-01-19. If the acceleration and deceleration time is too short, the actual acceleration and deceleration time are greater than the acceleration and deceleration time settings.



When Pr. 01-44 is set to 0.

When Pr. 01-44 is set to 3.

	8	- 45 Time Unit for Acceleration / Deceleration and S Curve			
		_			Default: 0
			Settings	0: Unit 0.01 sec.	
				1: Unit 0.1 sec.	
×	8	!-48	CANopen	Quick Stop Time	
					Default: 1.00
			Settings	Pr. 01-45=0: 0.00-600.00 sec.	
				Pr. 01-45=1: 0.0-6000.0 sec.	
		Use this	to set the	time to decelerate from the maximum operation fre	equency (Pr. 01-00) to
		0.00Hz I	by CANope	en control.	
N	$\theta$	!-49	Regenera	tive Energy Restriction Control Method	
					Default: 0
			Settings	0: Disable	
				1: Over voltage energy restriction	
				2: Traction energy control (TEC)	
		Pr.01-49	9=0: the dr	ive decelerates or stops based on original setting o	of deceleration.
		Pr.01-49	9=1: when	decelerating, the motor drive is controlled based o	n Pr. 06-01 setting and the
		DC BUS	S regenera	tive voltage. When the DC BUS voltage reaches Pr	: 06-01 * 95%, the controller
		is activa	ated. Wher	Pr. 06-01=0, the drive is controlled referring to the	working voltage and DC
		BUS reg	generative	voltage. The drive decelerates according to the se	tting of deceleration time,
		and the	actual ma	ximum deceleration time is not less than the decele	eration time setting.
		The actual deceleration time of the motor is greater than the deceleration time setting due to the			ation time setting due to the
		over vol	ltage stall ր	prevention action.	
		When P	Pr.01-49=2	it can auto-tuning the output frequency and output	t voltage based on the
		capabili	ty of the dr	ive, increase consumption of the DC BUS energy,	so the actual deceleration
		time me	ets the pa	rameter setting as possible as it could. When the a	pplication cannot reach the
		expecte	d decelera	tion time and therefore cause over-voltage error, the	nis setting will be suggested
		to use.			

# 02 Digital Input/Output Parameter

✓ This parameter can be set during operation.

## Two-wire / Three-wire Operation Control

Default: 0

Settings 0: Two-wire mode 1, power on for operation control

1: Two -wire mode 2, power on for operation control

2: Three-wire, power on for operation control

This parameter sets the configuration of the terminals (Pr.00-21=1 or Pr.00-31=1) which control the operation. There are three different control modes listed in the following table.

Pr.02-00	Control Circuits of the External Terminal
Settings: 0 2-wire mode 1 FWD/STOP REV/STOP	FWD/STOP  REV/STOP  OO  REV ("OPEN": STOP)  ("CLOSE": FWD)  REV ("OPEN": STOP)  ("CLOSE": REV)  DCM  VFD-C
Settings: 1 2-wire mode 2 RUN/STOP REV/FWD	RUN/STOP FWD ("OPEN": STOP) ("CLOSE": RUN) REV ("OPEN": FWD) ("CLOSE": REV) DCM  VFD-C
Settings: 2 3-wire operation control	FWD ("CLOSE": RUN)  MI1 ("OPEN": STOP)  REV/FWD ("CLOSE": RWD)  ("CLOSE": REV)  DCM  VFD-C

02-01	Multi-function Input Command 1 (MI1)	
		Default: 1
02-02	Multi-function Input Command 2 (MI2)	
		Default: 2
02-03	Multi-function Input Command 3 (MI3)	
		Default: 3
82-84	Multi-function Input Command 4 (MI4)	
		Default: 4
02-05	Multi-function Input Command 5 (MI5)	
80-50	Multi-function Input Command 6 (MI6)	
02-07	Multi-function Input Command 7 (MI7)	
80-50	Multi-function Input Command 8 (MI8)	
85-50	Input terminal of I/O extension card (MI10)	
02-27	Input terminal of I/O extension card (MI11)	
85-58	Input terminal of I/O extension card (MI12)	

Input terminal of I/O extension card (MI13)

Input terminal of I/O extension card (MI14)

Input terminal of I/O extension card (MI15)

Default: 0

### Settings

- 0: No function
- 1: Multi-step speed command 1/ multi-step position command 1
- 2: Multi-step speed command 2/ multi-step position command 2
- 3: Multi-step speed command 3/ multi-step position command 3
- 4: Multi-step speed command 4/ multi-step position command 4
- 5: Reset
- 6: JOG command (By KPC-CC01 or external control)
- 7: Acceleration / deceleration speed inhibit
- 8: The 1st, 2nd acceleration / deceleration time selection
- 9: The 3<sup>rd</sup>, 4<sup>th</sup> acceleration / deceleration time selection
- 10: EF Input (Pr. 07-20)
- 11: Base Block (B.B) input from external
- 12: Output stop
- 13: Cancel the setting of auto-acceleration / auto-deceleration time
- 14: Switch between motor 1 and motor 2
- 15: Rotating speed command from AVI
- 16: Rotating speed command from ACI
- 17: Rotating speed command from AUI
- 18: Forced to stop (Pr. 07-20)
- 19: Digital up command
- 20: Digital down command
- 21: PID function disabled
- 22: Clear the counter
- 23: Input the counter value (MI6)
- 24: FWD JOG command
- 25: REV JOG command
- 26: TQC / FOC mode selection
- 27: ASR1/ ASR2 selection
- 28: Emergency stop (EF1)
- 29: Signal confirmation for Y-connection
- 30: Signal confirmation for ∆-connection
- 31: High torque bias (Pr. 11-30)
- 32: Middle torque bias (Pr. 11-31)
- 33: Low torque bias (Pr. 11-32)
- 34: Switch between multi-step position and multi-step speed control
- 35: Enable single-point position control
- 36: Enable multi-step position learning function (valid at stop)
- 37: Enable full position control pulse command input
- 38: Disable write EEPROM function
- 39: Torque command direction
- 40: Force coasting to stop
- 41: HAND switch
- 42: AUTO switch
- 43: Enable resolution selection (Pr. 02-48)
- 44: Reverse direction homing (NL)
- 45: Forward direction homing (PL)
- 46: Homing (ORG)
- 47: Enable homing function
- 48: Mechanical gear ratio switch
- 49: Enable drive
- 50: Slave dEb action to execute
- 51: Selection for PLC mode bit0

- 52: Selection for PLC mode bit1
- 53: Trigger CANopen quick stop
- 55: Brake release
- 56: Local / Remote Selection
- This parameter selects the functions for each multi-function terminal.
- The terminals of Pr. 02-26~Pr. 02-31 are set as the corresponded parameters of MI10~MI13 when using with optional card EMC-D42A. Pr. 02-30~Pr. 02-31 are virtual terminals.
- When being used as a virtual terminal, it needs to change the status (0/1: ON/OFF) of bit8~15 of Pr. 02-12 by digital keypad KPC-CC01 or communication.
- If Pr. 02-00 is set to three-wire operation control, terminal MI1 is for the STOP contact. The function set previously for this terminal is automatically invalid.

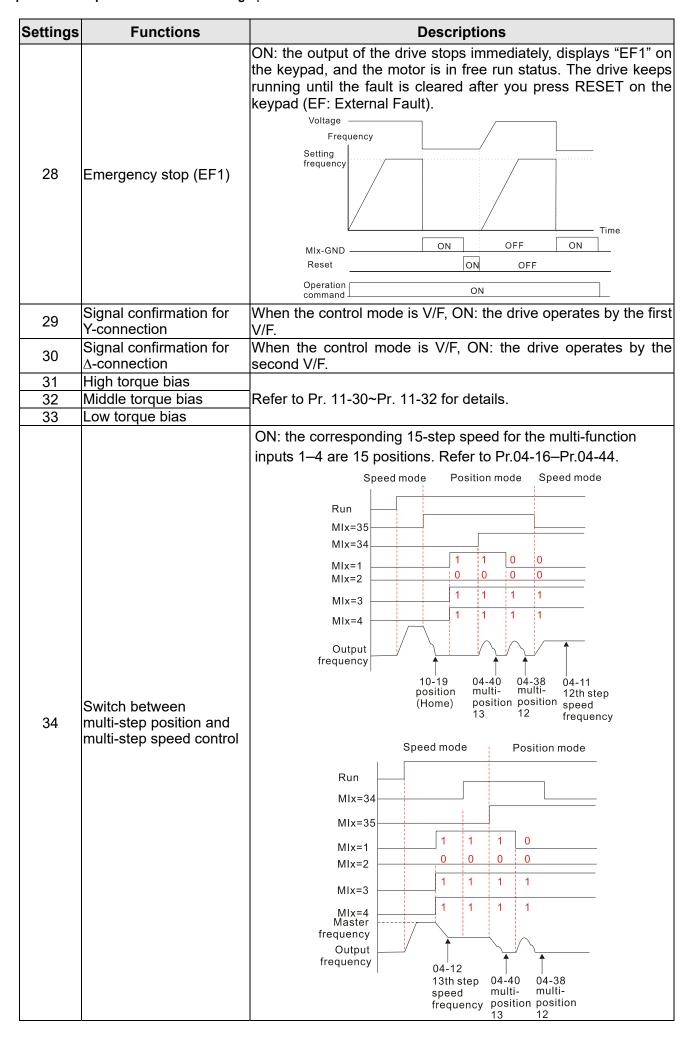
### Summary of function settings

Take the normally opened contact (N.O.) for example, ON: contact is closed, OFF: contact is open

Settings	Functions	Descriptions		
0	No Function			
1	Multi-step speed command 1 / multi-step position command 1			
2	Multi-step speed command 2 / multi-step position command 2	You can set 15 steps of speed or 15 positions with the digital status of these 4 terminals. You can use 16-steps of speed if you		
3	Multi-step speed command 3 / multi-step position command 3	include the master speed when setting as 15 steps of speed (refer to Parameter Group 04 Multi-step Speed Parameters).		
4	Multi-step speed command 4/ multi-step position command 4			
5	Reset	Use this terminal to reset the drive after clearing a drive fault.		
		This function is valid when the source of operation command is external terminals.  Before executing this function, wait for the drive stop completely. You can execute STOP command via the keypad after enabling the function through Pr.00-32. Once the external terminal receives OFF command, the motor stops in the JOG deceleration time. Refer to Pr. 01-20~Pr. 01-22 for details.		
•		JOG frequency		
6	JOG Command	Min. output frequency of motor 1 — 01-20 — 01-21 — JOG accel. time JOG decel. time		
		MIx-GND ON OFF		
		Mlx : External terminal		

Settings	Functions	Descriptions
7	Acceleration/deceleration Speed Inhibit	When you enable this function, the drive stops acceleration or deceleration immediately. After you disable this function, the AC motor drive starts to accelerate or decelerate from the inhibit point.  Frequency  Setting frequency  Accel. inhibit area  Actual operation frequency  Decel. inhibit area  Actual operation frequency  Decel. inhibit area  Actual operation frequency  Time
		MIx-GND ON ON ON OFF
8	The 1 <sup>st</sup> , 2 <sup>nd</sup> acceleration / deceleration time selection	You can select the acceleration and deceleration time of the drive with this function, or from the digital status of the terminals; there
9	The 3 <sup>rd</sup> , 4 <sup>th</sup> acceleration / deceleration time selection	are four acceleration and deceleration selections.
10	EF Input (EF: External Fault)	For external fault input. The drive decelerates according to the Pr.07-20 setting, and the keypad shows "EF" (it shows the fault record when an external fault occurs). The drive keeps running until the fault is cleared (terminal status restored) after RESET.
11	Base block (B.B.) input from external	ON: the output of the drive stops immediately. The motor is in free run and the keypad displays the B.B. signal. Refer to Pr.07-08 for details.
12	Output Stop (Output pause)	When the switch is ON, output of the drive stops immediately and the motor is in free run status. The drive is in output waiting status until the switch is turned to OFF, and then the drive restarts and runs to the current setting frequency.  Voltage  Frequency  Setting frequency  ON  OFF  ON  Time
		MIx-GND Operation command ON
13	Cancel the setting of auto-acceleration / auto-deceleration time	Set Pr.01-44 to one of the 01–04 setting modes before using this function. When this function is enabled, OFF is for auto mode and ON is for linear acceleration / deceleration.
14	Switch between motor 1 and motor 2	When the contact of this function is ON: use motor 2 parameters. OFF: use motor 1 parameters.
15	Rotating speed command form AVI	ON: force the source of the frequency to be AVI. If the rotating speed commands are set to AVI, ACI and AUI at the same time, the priority is AVI > ACI > AUI.

Settings	Functions	Descriptions
16	Rotating speed command form ACI	ON: force the source of the frequency to be ACI. If the rotating speed commands are set to AVI, ACI and AVI at the same time, the priority is AVI > ACI.> AUI
17	Rotating speed command form AUI	ON: force the source of the frequency to be AUI. If the rotating speed commands are set to AVI, ACI and AVI at the same time, the priority is AVI > ACI.> AUI
18	Forced to Stop (Pr. 07-20)	ON: the drive ramps to stop according to the Pr.07-20 setting.
19	Digital up command	ON: the frequency of the drive increases or decreases by one unit. If this function remains ON continuously, the frequency increases or decreases according to Pr.02-09 / Pr.02-10.
20	Digital down command	The Frequency command returns to zero when the drive stops, and the displayed frequency is 0.00 Hz. If you select Pr.11-00, bit 7 = 1, the frequency is not saved.
21	PID function disabled	ON: the PID function is disabled.
22	Clear the counter	ON: the current counter value is cleared and displays 0. The drive counts up when this function is disabled.
23	Input the counter value (MI6)	On: the counter value increases by 1. Use the function with Pr.02-19.
24	FWD JOG command	This function is valid when the source of the operation command is external terminal. ON: the drive executes forward JOG. When executing the JOG command in torque mode, the drive automatically switches to speed mode. The drive returns to torque mode after the JOG command is complete.
25	REV JOG command	This function is valid when the source of the operation command is external terminal. ON: the drive executes reverse JOG. When executing the JOG command in torque mode, the drive automatically switches to speed mode. The drive returns to torque mode after the JOG command is complete.
26	TQC / FOC mode selection	ON: TQC mode.  OFF: FOC mode.  RUN/STOP command Multi-function input terminal is set to 26 (torque/speed mode switch)  03-00~02=1 com mand (AVI/AUI/ACI is frequency command)  03-00~02=2 (AVI/AUI/ACI is torque command)  Control mode  Control mode  Control mode  Switch timing fro torque/speed control (decel. to stop)  Switch timing fro torque/speed control (Pr. 00-10=0/4, multi-function input terminal is set to 26)
27	ASR1/ ASR2 selection	ON: the speed is adjusted by the ASR 2 setting. OFF: the speed is adjusted by the ASR 1 setting. Refer to Pr.11-02 for details.



Settings	Functions	Descriptions
		ON: the AC motor drive executes internal single-point position control according to the setting for Pr.10-19. This function is valid in FOCPG mode only.
		Output frequency
		PG feedback - 10-19 10-02
		RUN MIx=35
		WIIX-33
35	Enable single-point position control	MOx=39Time
		Output frequency
		PG feedback-10-19 10-01 10-02
		RUN RUN RUN
		MIx=35
		MOx=39Time
		'
	Enable multi-step position learning function (valid at stop)	ON/OFF: the drive uses the multi-function inputs 1–4 ON/OFF
		status to find the corresponding multi-step positions and writes the current motor position into the corresponding multi-step
		position.
		Run/Stop Run/Stop
		4044-44 4040-40
		1011 <sub>=</sub> 11 1010 <sub>=</sub> 10 corresponds corresponds to <u>Pr. 04-36</u> to Pr. 04-34
		1 0 0
36		MIx=1
		MIx=2 1 1 1
		MIx=3 0 0 0
		MIx=4 1 1 1
		MIx=36
		Writing the motor position Writing the motor position into the Pr. 04-36 into the Pr. 04-34

Settings	Functions	Descriptions						
		When Pr.00-20 is set to 4 or 5, ON: the input pulse of the PG card is the position command. When using this function, set Pr.11-25 to 0.  Example: refer to the following diagram when using this function with MIx=35 returning to homing position.						
37	Enable full position control pulse command input	RUN  MIx=35  MOx=39  MIx=37  Pulse command  Internal positioning  Output frequency  Time						
38	Disable write EEPROM function (Parameters memory disable)	ON: writing to EEPROM is disabled. Changed parameters are not saved after power off.						
39	Torque command direction	For torque control (Pr.00-10=2), when the torque command is AVI or ACI, ON: negative torque.						
40	Force coasting to stop	ON: during operation, the drive free runs to stop.						
41	HAND switch	<ol> <li>When the MI terminal switches to OFF, it executes a STOP command. Therefore, if the MI terminal switches to OFF during operation, the drive stops.</li> <li>Use the optional keypad KPC-CC01 to switch between HAND and AUTO. The drive stops first, and then switches to HAND or AUTO status.</li> </ol>						
42	AUTO switch	3. The optional digital keypad KPC-CC01 displays the current status of the drive (HAND / OFF / AUTO).    bit1   bit0     OFF   0   0     AUTO   0   1     HAND   1   0     OFF   1   1						
43	Enable resolution selection	Refer to Pr. 02-48 for details.						
44	Reverse direction homing (NL)	Signal input for reverse direction limit switch (NL). ON: the drive uses the settings in Pr.00-40, 00-41, 00-42 to execute homing in a reverse direction (counter-clockwise).  Note: NL means the input terminal detection is negative-edge triggered or is regarded as N.O. (Normally Open).						

Settings	Functions	Descriptions				
45	Forward direction homing (PL)	Signal input for forward direction limit switch (PL). ON: the drive uses the settings in Pr.00-40, 00-41, 00-42 to execute homing in a forward direction (clockwise).  Note: PL means input terminal detection is positive-edge triggered or is regarded as N.C. (Normally Closed)				
46	Homing (ORG)	ORG point input. ON: the drive uses the setting in P 00-41, 00-42 to execute homing.				
47	Enable homing function	Pr.00-10=3 (homing mode), if the external OFF, the drive ignores the HOME command a to-Point position control.				
48	Mechanical gear ratio switch	ON: the mechanical gear ratio switches to Refer to Pr.10-04–Pr.10-07.	the second group.			
49	Enable drive	When the drive is enabled, the RUN command is valid. When the drive is disabled, the RUN command is invalid. When the drive is operating, the motor coasts to stop. This function varies with MOx=45.				
50	Slave dEb action to execute	Slave receives dEb message from Master, avoids low voltage o DC BUS, and coast to stop because of Lv error.				
51	Selection for PLC mode bit0	PLC status Disable PLC function (PLC 0)	bit1 bit0 0 0			
52	Selection for PLC mode bit1	Trigger PLC to operation (PLC 1) Trigger PLC to stop (PLC 2) No function	0 1 1 0 1 1			
53	Trigger CANopen quick stop	When this function is enabled under CANope change to quick stop. Refer to Chapter 15 CA more details.				
55	Brake release	This parameter needs to be used with Pr. 02-56. The main purpose is to make sure if mechanical brake works or not after triggering brake release command.  If the action is right, mechanical brake will give signal to MI terminal.				
56	Local / Remote Selection	Please check time sequence chart for reference.  Use Pr. 00-29 to select for LOCAL/ REMOTE mode (refer to Pr. 00-29).  When Pr. 00-29 is not set to 0, on the digital keypad KPC-CC0 will display LOC/ REM status. (It will display on the KPC-CC01 the firmware version is above version 1.021).				

# 

Default: 0

Settings 0: UP / DOWN by acceleration / deceleration time

1: UP / DOWN constant speed (Pr. 02-10)


✓ ☐ 2 - ☐ Constant speed. The Accel. / Decel. Speed of the UP/ DOWN Key

Default: 0.001


Settings 0.001~1.000Hz/ms

Use when the multi-function input terminals are set to 19, 20 (UP / DOWN command). The frequency increases or decreases according to Pr.02-09 and Pr.02-10.

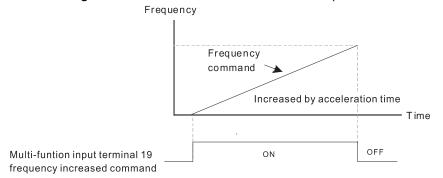- When Pr.11-00 bit 7=1, the frequency is not saved. The Frequency command returns to zero when the drive stops, and the displayed frequency is 0.00 Hz. At this time, the increasing or decreasing frequency command (F) by using the UP or DOWN key is valid only when the drive is running.
- When Pr.02-09 is set to 0: the increasing or decreasing frequency command (F) operates according to the setting for acceleration or deceleration time (refer to Pr.01-12–01-19).



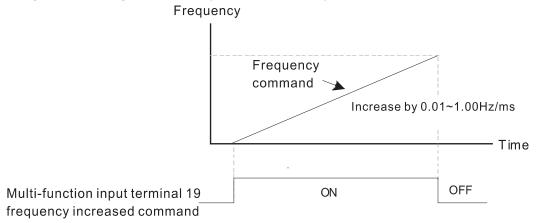When Pr.02-09 is set to 1: the increasing / decreasing frequency command (F) operates according to the setting of Pr.02-10 (0.01–1.00 Hz/ms).



## 

Default: 0.005

Settings 0.000~30.000 sec.

- Use this parameter to set the response time of the digital input terminals FWD, REV, and MI1–MI8.
- This function is to delay and confirm the digital input terminal signal. The time for delay is also the time for confirmation. The confirmation prevents interference that could cause error in the input to the digital terminals. But in the meanwhile, it delays the response time though confirmation improves accuracy.
- When using MI8 as encoder pulse feedback input, this parameter will not be referred.

### 

Default: 0000h

Settings 0000h~FFFFh (0: N.O.; 1: N.C.)

- The setting of this parameter is in hexadecimal.
- This parameter sets the status of the multi-function input signal (0: normally open; 1: normally closed) and it is not affected by the status of SINK / SOURCE.
- bit2−bit15 correspond to MI1−MI14

- The default for bit 0 (MI1) is FWD terminal, and the default for bit 1 (MI2) is REV terminal. You cannot use this parameter to change the input mode when  $Pr.02-00 \neq 0$ .
- Pou can change the terminal ON / OFF status through communications.

For example: MI1 is set to 1 (multi-step speed command 1) and MI2 is set to 2 (multi-step speed command 2). Then the forward + second step speed command =  $1001_2 = 9_{10}$ .

As long as Pr.02-12 = 9 is set through communications, there is no need to wire any multi-function terminal to run forward with the second step speed.

bit15	bit14	bit13	bit12	bit11	bit10	bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
MI14	MI13	MI12	MI11	MI10	MI9	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	$\times$	$\times$

- Use Pr.11-42 bit 1 to select whether the FWD / REV terminal is controlled by Pr.02-12 bit 0 and bit 1.
- ★ # P # Multi-function Output 1 (Relay1)

Default: 11

Default: 1

Multi-function Output 3 (MO1)

Default: 66

- ✓ ☐ 2 ↑ ↑ Multi-function Output 4 (MO2)
- ✓ ☐ P 3 7 Output terminal of I/O extension card (MO11) or (RA11)
- ✓ ☐ 2 3 ☐ Output terminal of I/O extension card (RA12)
- Output terminal of I/O extension card (RA13)
- Output terminal of I/O extension card (RA14)
- ✓ ☐ 2 4 Output terminal of I/O extension card (RA15)
- ✓ ☐ 2 4 2 Output terminal of I/O extension card (MO16 virtual terminal)
- ✓ ☐ ☐ Ч 3 Output terminal of I/O extension card (MO17 virtual terminal)
- ✓ 🔐 ЧЧ Output terminal of I/O extension card (MO18 virtual terminal)
- ✓ ☐ ☐ Ч 5 Output terminal of I/O extension card (MO19 virtual terminal)
- ✓ 📆 🖰 Ч 🚡 Output terminal of I/O extension card (MO20 virtual terminal)

Default: 0

#### Settings

- 0: No function
- 1: Indication during RUN
- 2: Operation speed reached
- 3: Desired frequency reached 1 (Pr. 02-22)
- 4: Desired frequency reached 2 (Pr. 02-24)
- 5: Zero speed (Frequency command)
- 6: zero speed including STOP (Frequency command)
- 7: Over-torque 1 (Pr. 06-06-08)
- 8: Over-torque 2 (Pr. 06-09-06-11)
- 9: Drive is ready

#### Chapter 12 Description of Parameter Settings | C2000

- 10: Low voltage warning (Lv) (Pr. 06-00)
- 11: Malfunction indication
- 12: Mechanical brake release (Pr. 02-32)
- 13: Over-heat warning (Pr. 06-15)
- 14: Software brake signal indication (Pr. 07-00)
- 15: PID feedback error (Pr.08-13, 08-14)
- 16: Slip error (oSL)
- 17: Count value reached, does not return to 0 (Pr. 02-20)
- 18: Count value reached, returns to 0 (Pr. 02-19)
- 19: External interrupt B.B. input (Base Block)
- 20: Warning output
- 21: Over-voltage
- 22: Over-current stall prevention
- 23: Over-voltage stall prevention
- 24: Operation mode
- 25: Forward command
- 26: Reverse command
- 27: Output when current ≥ Pr. 02-33
- 28: Output when current < Pr. 02-33
- 29: Output when frequency ≥ Pr. 02-34
- 30: Output when frequency < Pr. 02-34
- 31: Y-connection for the motor coil
- 32: △ -connection for the motor coil
- 33: Zero speed (actual output frequency)
- 34: Zero speed including stop (actual output frequency)
- 35: Error output selection 1 (Pr. 06-23)
- 36: Error output selection 2 (Pr. 06-24)
- 37: Error output selection 3 (Pr. 06-25)
- 38: Error output selection 4 (Pr. 06-26)
- 39: Position reached (Pr. 10-19)
- 40: Speed reached (including Stop)
- 41: Multi-position reached
- 42: Crane function
- 43: Actual motor speed higher than Pr. 02-47
- 44: Low current output (use with Pr. 06-71~Pr. 06-73)
- 45: UVW output electromagnetic valve switch
- 46: Master dEb output
- 47: Closed brake output
- 49: Homing action complete output
- 50: Output control for CANopen
- 51: Analog output control for RS-485 (InnerCOM / MODBUS)
- 52: Output control for communication cards

- 65: Output for CANopen and RS-485
- 66: SO output logic A
- 67: Analog input signal level reached
- 68: SO output logic B
- 70: FAN warning detection output
- ☐ Use this parameter to set the function of the multi-function terminals.
- Pr. 02-36~Pr. 02-41 requires additional extension cards to display the parameters, the choices of optional cards are EMC-D42A and EMC-R6AA.
- The optional card EMC-D42A provides 2 output terminals and can be used with Pr. 02-36~02-37.
- The optional card EMC-R6AA provides 6 output terminals and can be used with Pr. 02-36~02-41.

Summary of function settings

Take the normally open contact (N.O.) for example, ON: contact is closed, OFF: contact is open

	·	t (N.O.) for example, ON: contact is closed, OFF: contact is open					
Settings		Descriptions					
0	No Function	Output terminal with no function					
1	J -	Active when the drive is not in STOP.					
2	Operation speed reached	Active when output frequency of the drive reaches the setting frequency.					
3	Desired Frequency reached 1 (Pr. 02-22)	Active when the desired frequency (Pr. 02-22) is reached					
4	reached 2 (Pr. 02-24)	Active when the desired frequency (Pr. 02-24) is reached.					
5	command)	Active when frequency command =0. (the drive must be at RUN status)					
6	zero speed including STOP (Frequency command)	Active when frequency command =0 or stopped.					
7	Over-torque 1	Active when the drive detects over-torque. Pr.06-07 sets the over-torque detection level (motor 1), and Pr.06-08 sets the over-torque detection time (motor 1).  Refer to Pr.06-06-08.					
8	Over-torque 2	Active when the drive detects over-torque. Pr.06-10 sets the over-torque detection level (motor 2), and Pr.06-11 sets the over-torque detection time (motor 2).  Refer to Pr.06-09–06-11.					
9	Drive is Ready	Active when the drive is ON and with no error detected.					
10	Low voltage warning (Lv)	Active when the DC BUS voltage is too low. (refer to Pr. 06-00 low voltage level)					
11	Malfunction Indication	Active when fault occurs (except Lv stop).					
12	Mechanical Brake Release (Pr. 02-32)	When drive runs after Pr. 02-32, it will be ON. This function should be used with DC brake and it is recommended to use contact "b" (N.C.).					
13		Active when IGBT or heat sink overheats; to prevent the drive from shutting down due to over-heating (refer to Pr.06-15).					
14	Software Brake Signal Indication	Active when the soft brake function is ON. (refer to Pr. 07-00)					
15	PID Feedback Error	Active when the PID feedback signal error is detected.					
16	Slip Error (oSL)	Active when the slip error is detected.					
17	Count value reached, does not return to 0 (Pr. 02-20)	When the drive executes external counter, this contact is active if the count value is equal to the setting value for Pr.02-20. This contact is not active when the setting value for Pr.02-20 > Pr.02-19.					

Settings	Functions	Descriptions
18	Count value reached, returns to 0 (Pr. 02-19)	When the drive executes the external counter, this contact is active if the count value is equal to the setting value for Pr.02-19.
19	External interrupt B.B. input (Base Block)	Active when external interrupt (B.B.) stop output occurs in the drive.
20	Warning Output	Active when the warning is detected.
21	Over-voltage	Active when the over-voltage is detected.
22	Over-current Stall Prevention	Active when the over-current stall prevention is detected.
23	Over-voltage Stall prevention	Active when the over-voltage stall prevention is detected.
24	Operation Mode	Active when the operation command is controlled by external terminal. (Pr. 00-21≠0)
25	Forward Command	Active when the operation direction is forward.
26	Reverse Command	Active when the operation direction is reverse.
27	Output when Current ≥ Pr. 02-33	Active when current is ≥ Pr. 02-33.
28	Output when Current < Pr. 02-33	Active when current is < Pr. 02-33
29	Output when frequency ≥ Pr. 02-34	Active when frequency is ≥ Pr. 02-34.
30	Output when Frequency < Pr. 02-34	Active when frequency is < Pr. 02-34.
31	Y-connection for the Motor Coil	Active when Pr. 05-24=1, when frequency output is lower than Pr. 05-23 minus 2Hz, and lasts longer than Pr. 05-25.
32	△ -connection for the Motor Coil	Active when Pr. 05-24=1, when frequency output is higher than Pr. 05-23 plus 2Hz, and lasts longer than Pr. 05-25.
33	Zero Speed (actual output frequency)	Active when the actual output frequency is 0. (the drive is in RUN mode)
	Zero speed including stop (actual output frequency)	Active when the actual output frequency is 0 or stopped.
35	Error Output Selection 1 (Pr. 06-23)	Active when Pr. 06-23 is ON.
36	Error Output Selection 2 (Pr. 06-24)	Active when Pr. 06-24 is ON.
37	Error Output Selection 3 (Pr. 06-25)	Active when Pr. 06-25 is ON.
38	Error Output Selection 4 (Pr. 06-26)	Active when Pr. 06-26 is ON.
39	Position reached (Pr. 10-19)	Active when the PG position control point reaches Pr. 10-19.
40	Speed reached (including speed)	Active when the output frequency reaches frequency setting or stop.

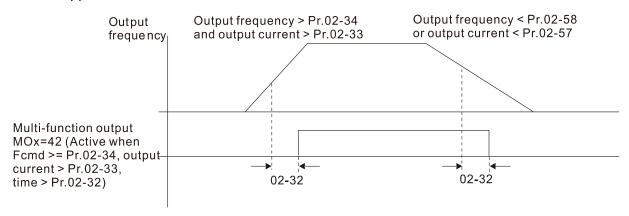
Settings	Functions			Description	ns					
		User can set any three multi-function input terminals to 41. The current position action status of these three terminals will be outputted. Example: if setting Pr. 02-36~02-38 to 41 and only the multi-position of the second point has been done. Then, the current status is RA (ON), RA (OFF) and MO1 (OFF). In this way, their status is 010. bit0 is RA and so on.								
41	Multi-position reached	Pr. 04-16 Pr. 04-18 Pr. 04-20 Pr. 04-22 Pr. 04-24 Pr. 04-26 Pr. 04-30 Pr. 04-32 Pr. 04-34 Pr. 04-36 Pr. 04-38 Pr. 04-40 Pr. 04-40 Pr. 04-42	MO2 Pr.02-17=41 0 0 0 0 0 0 0 1 1 1 1 1 1	MO1 Pr.02-16=41 0 0 0 1 1 1 1 0 0 0 0 1 1 1 1	RY2 Pr.02-14=41 0 1 1 0 0 1 1 1 0 0 1 1 1 0 0	RY1 Pr.02-13=41  1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0				
42	Crane Function	Use this function with Pr. 02-32, Pr. 02-33, Pr. 02-34, Pr. 02-57 and Pr. 02-58.  The example of the crane application is in the following for your reference.								
43	Actual motor speed higher than Pr. 02-47	Active when motor actual speed is higher than Pr. 02-47.								
44	Low Current Output	Use this fu	nction with Pr	. 06-71–Pr. 06	6-73					
45	UVW output electromagnetic valve switch	Use this function with Pr. 06-71–Pr. 06-73  Use this function with external terminal input = 49 (drive enabled and external terminal output = 45 (electromagnetic valve enabled), and then the electromagnetic valve is ON or OFF according to the status of the drive.  Enable  Contactor  ON  AC Drive  MC  Motor  W/T2  Motor  MMC  MMC  MMC  MMC  MMC  MMC  MMC  M								

Settings	Functions	Descriptions						
46	Master dEb output	When dEb rises at the master, MO sends a dEb signal to the slave. Output the message when the master triggers dEb. This ensures that the slave also triggers dEb. Then slave follows the deceleration time of the master to stop simultaneously with the master.						
47	Closed brake output	When drive stops, the corresponding multi-function terminal be ON if the frequency is less than Pr. 02-34. After it is ON, it be OFF when brake delay time exceeds Pr. 02-32.  Output Frequency  Output Frequence  Output Frequence						
49	Homing Action Complete output	Output when	homing action is	s complete.				
		To control R	Y2, set Pr. 02-14 table of the CAI Setting of	= 50. Nopen DO				
		terminal	related parameters	Attribute	Corresponding Index			
		RY1	Pr. 02-13 = 50	RW	The bit0 at 2026-41			
		RY2	Pr. 02-14 = 50	RW	The bit1 at 2026-41			
		MO1	Pr. 02-16 = 50	RW	The bit3 at 2026-41			
50	Output control for	MO2	Pr. 02-17 = 50	RW	The bit4 at 2026-41			
50	CANopen	MO10	Pr. 02-36 = 50	RW	The bit5 at 2026-41			
		RY10		1.00	The bit5 at 2026-41			
		MO11	Pr. 02-37 = 50	RW	The bit6 at 2026-41			
		RY11			The bit6 at 2026-41			
		RY12	Pr. 02-38 = 50	RW	The bit7 at 2026-41			
		RY13	Pr. 02-39 = 50	RW	The bit8 at 2026-41			
		RY14	Pr. 02-40 = 50	RW	The bit9 at 2026-41			
		RY15	Pr. 02-41 = 50	RW	The bit10 at 2026-41			
		Refer to sect	ion 15-3-5 for mo	ore informa	tion.			


Settings	Functions	Descriptions					
		Fo	or RS-485 i	nterfac	e (InnerCo	OM/ MODBL	JS) output.
			Physical terminal	re	tting of elated ameters	Attribute	Corresponding Index
			RY1	Pr. 0	2-13 = 51	RW	bit0 at 2640H
			RY2	Pr. 0	2-14 = 51	RW	bit1 at 2640H
	Analog output control for	╽	MO1		2-16 = 51	RW	bit3 at 2640H
51	RS-485 (InnerCOM /			2-17 = 51	RW	bit4 at 2640H	
	MODBUS)		MO10 or RA10	Pr. 0	2-36 = 51	RW	bit5 at 2640H
			MO11 or RA11	Pr. 0	2-37 = 51	RW	bit6 at 2640H
			RA12		2-38 = 51	RW	bit7 at 2640H
		╽	RA13		2-39 = 51	RW	bit8 at 2640H
		<b> </b>	RA14	_	2-40 = 51	RW	bit9 at 2640H
		╽┕	RA15	Pr. 0	2-41 = 51	RW	bit10 at 2640H
				01, CM0 Set re	C-EİP01, 0 ting of lated	communicat CMC-PN01 a	ion cards and CMC-DN01) Corresponding Address
	Output control for		RY1	parameters Pr. 02-13 = 52		RW	The bit0 of 2640H
		RY2 Pr. 02-		-14 = 52	RW	The bit1 of 2640H	
				Pr. 02	-16 = 52	RW	The bit3 of 2640H
52				Pr. 02	-17 = 52	RW	The bit4 of 2640H
32	communication cards		MO10 or				
			RA10	Pr. 02-36 = 5		RW	The bit5 of 2640H
			MO11 or				
			RA11		-37 = 51	RW	The bit6 of 2640H
			RA12		-38 = 51	RW	The bit7 of 2640H
		_	RA13	Pr. 02	-39 = 51	RW	The bit8 of 2640H
			RA14		-40 = 51	RW	The bit9 of 2640H
			RA15	Pr. 02	2-41= 51	RW	The bit10 of 2640H
65	Output for CANopen and RS-485	То	control ou	tput of	CANopen	& RS-485.	
66	SO output logic A		Status of	drive	N.O. (I	Status of sa	afety output N.C. (MOx=68)
			Norm	al	Broke (O	n circuit pen)	Short circuit (Close)
			STC	)	(C	t circuit lose)	Broken circuit (Open)
68	SO output logic B		STL1~STL			t circuit lose)	Broken circuit (Open)
		Th	ne multi-fur	nction o	utput term	ninals operat	e when the analog input
	Analog input signal level	le	vel is betwe	een the	high leve	el and the lov	v level.
67	Analog input signal level reached				•		hannels (AVI, ACI) to be
			cor	npared			

Settings	Functions	Descriptions
		Pr.03-45: The high level for the analog input, default is 50%.
		Pr.03-46: The low level for the analog input, default is 10%.
		If analog input > Pr.03-45, the multi-function output terminal
		operates. If analog input < 03-46, the multi-function output
		terminal stops output.
70	Fan warning detection output	The terminal works when the internal fan warning activates

**Example: Crane Application** 



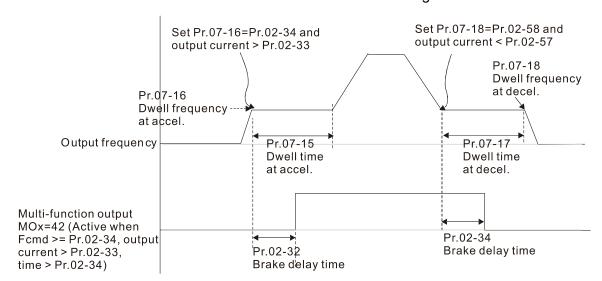It is recommended to be used with Dwell function as shown in the following:



- For crane application, when the MO is set to 42, the setting of Pr. 02-34 must be greater than Pr. 02-58; Pr. 02-33 must be greater than Pr. 02-57.
- To directly control drive's AO/DO and read current AI/DI status via the standard MODBUS, by adding the Remote IO function, the corresponding index of 26xx is as following:

	bit15	bit14	bit13	bit12	bit11	bit10	bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
2600h	MI15	MI14	MI13	MI12	MI11	MI10	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	REV	FWD
2640h	-	-	-	-	-	MO15	MO14	MO13	MO12	MO11	MO10	MO2	MO1	-	RY2	RY1
2660h	A	VI	-	-	-	-	-	-	-	-	-	-	-	-	-	-
2661h	Α	CI	-	-	-	-	-	-	-	-	-	-	-	-	-	-
2662h	Α	UI	-	-	-	-	-	-	-	-	-	-	-	-	-	-
266Ah	Al	10	-	-	-	-	-	-	-	-	-	-	-	-	-	-
266Bh	Al	11	-	-	-	-	-	-	-	-	-	-	-	-	-	-
26A0h		AFM1		-	-	-	-	-	-	-	-	-	-	-	-	-
26A1h		AFM2		-	-	-	-	-	-	-	-	ı	-	ı	-	-
26AAh		AO10		-	-	-	-	-		-		•	-	•	-	-
26ABh		AO11		-	-	-	-	-	-	-	-	-	-	-	-	-

In addition, the AI and DI value can be read directly, while DO and AO must select MODBUS control under the corresponding parameter function. The related parameter definition is as following:

DO

Terminal	Pr. Setting	Indexes of MODBUS direct control
RY1	Pr. 02-13 = 51	The bit0 of 2640h
RY2	Pr. 02-14 = 51	The bit1 of 2640h
MO1	Pr. 02-16 = 51	The bit3 of 2640h
MO2	Pr. 02-17 = 51	The bit4 of 2640h
MO10	Pr. 02-36 = 51	The bit5 of 2640h
MO11	Pr. 02-37 = 51	The bit6 of 2640h
MO12	Pr. 02-38 = 51	The bit7 of 2640h
MO13	Pr. 02-39 = 51	The bit8 of 2640h
MO14	Pr. 02-40 = 51	The bit9 of 2640h
MO15	Pr. 02-41 = 51	The bit10 of 2640h

ΑO

Terminal	Pr. Setting	Indexes of MODBUS direct control
AFM1	Pr. 03-20=21	The value of 26A0h
AFM2	Pr. 03-23=21	The value of 26A1h
AFM10	Pr. 14-12=21	The value of 26AAh
AFM11	Pr. 14-13=21	The value of 26ABh

## Multi-function Output Setting Multi-function Output Setting

Default Setting: 0000h

Settings 0000h~FFFFh (0: N.O.; 1:N.C.)

- This parameter is in hexadecimal.
- This parameter is set by a bit. If a bit is 1, the corresponding multi-function output acts in an opposite way.

Example:

If Pr. 02-13=1 and Pr. 02-18=0, Relay 1 is ON when the drive runs and is open when the drive is stopped.

If Pr. 02-13=1 and Pr. 02-18=1, Relay 1 is open when the drive runs and is closed when the drive is stopped.

#### bit setting

bit15	bit14	bit13	bit12	bit11	bit10	bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
MO20	MO19	MO18	MO17	MO16	MO15	MO14	MO13	MO12	MO11	MO10	MO2	MO1	Reserved	RY2	RY1

### ✓ ☐☐ - ☐☐ Terminal Counting Value Reached (returns to 0)

Default Setting: 0

Settings 0~65500

- The counter trigger can be set by the multi-function terminal MI6 (set Pr. 02-06 to 23). Upon completion of counting, the specified multi-function output terminal will be activated (Pr. 02-13, Pr. 02-14, Pr. 02-36, Pr. 02-37 is set to 18). Pr. 02-19 cannot be set to 0.
- When the display shows c5555, the drive has counted 5,555 times. If display shows c5555•, it means that real counter value is between 55,550 to 55,559.

Chapter 12 Description of Parameter Settings | C2000 Preliminary Counting Value Reached (does not return to 0) Default Setting: 0 Settings 0~65500 When the counter value counts from 1 and reaches this value, the corresponding multi-function output terminal will be activated, provided one of Pr. 02-13, Pr. 02-14, Pr. 02-36, Pr. 02-37 set to 17 (Preliminary Count Value Setting). This parameter can be used for the end of the counting to make the drive runs from the low speed to stop. 1.0msec Display value ្បួយជួ c000 t 50005 c0003 c0004 c0005 c2007) c0002 [00-04=01] TRG [02-06=23] Counter Trigger -0000 1.0msec The width of trigger signal (output signal) Preliminary Counter Value 02-20=3 RY1 Pr.02-13=17 02-13, 02-14, 02-36, 02-37 02-19=5 **Terminal Counter Value** 02-14=17 RY2 Pr.02-14=18 Default: 1 Settings 1~166 🕮 It is used to set the signal for the digital output terminals (DFM-DCM) and digital frequency output (pulse X work period=50%). Output pulse per second = output frequency X Pr. 02-21. **Desired Frequency Reached 1** Default: 60.00/50.00 Settinas 0.00~599.00Hz The Width of the Desired Frequency Attained 1 Default: 2.00 Settings 0.00~599.00Hz

Desired Frequency Reached 2

Default:: 60.00/50.00

Settings 0.00~599.00Hz


The Width of the Desired Frequency Reached 2

Default: 2.00

Settings 0.00~599.00Hz

Once output frequency reaches desired frequency and the corresponding multi-function output terminal is set to 3 or 4 (Pr. 02-13, Pr. 02-14, Pr. 02-36 and Pr. 02-37), this multi-function output terminal will be ON.

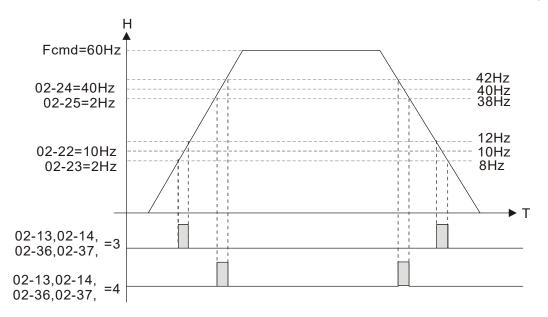
Default: 0.000




# Brake Delay Time

Settings 0.000~65.000 sec.

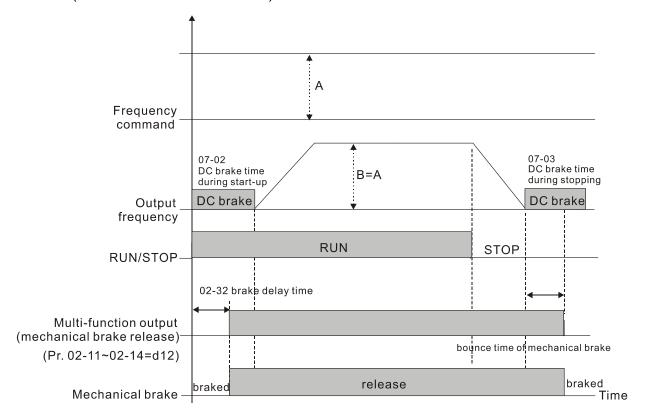When the AC motor drive runs after Pr. 02-32 delay time, the corresponding multi-function output terminal (12: mechanical brake release) will be ON. It has to use this function with DC brake.



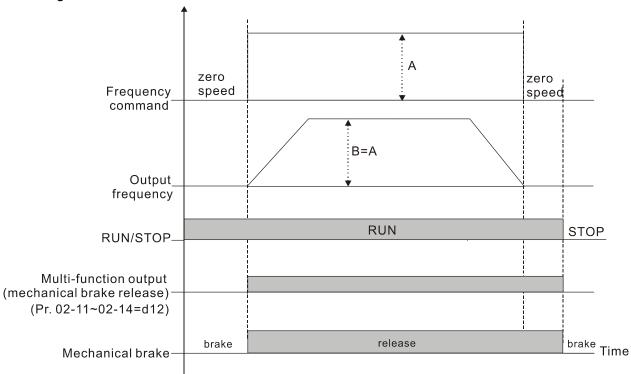If this parameter is used without DC brake, it will be invalid. Refer to the following operation timing.



### ✓ ☐ 2 - 3 3 Output Current Level Setting for Multi-function Output Terminals

Default: 0

#### Settings 0~100%

- When output current is higher or equal to Pr. 02-33, it will activate multi-function output terminal (Pr. 02-13, Pr. 02-14, Pr. 02-16, and Pr. 02-17 is set to 27).
- When output current is lower or equal to Pr. 02-33, it will activate multi-function output terminal (Pr. 02-13, Pr. 02-14, Pr. 02-16, and Pr. 02-17 is set to 28).

### ✓ 🔐 २ - ३ Ч Output Boundary for Multi-function Output Terminals

Default: 3.00

Settings 0.00~599.00Hz (Motor speed when using PG)

- When output frequency is higher or equal to Pr. 02-34 (actual output frequency H ≥ Pr. 02-34), it will activate the multi-function terminal (Pr. 02-13, Pr. 02-14, Pr. 02-16, Pr. 02-17 is set to 29).
- When output frequency is lower or equal to Pr. 02-34 (actual output frequency H < Pr. 02-34), it will activate the multi-function terminal (Pr. 02-13, Pr. 02-14, Pr. 02-16, Pr. 02-17 is set to 30).

### ★ 32 - 35 External Operation Control Selection after Reset and Activate

Default: 0

Settings 0: Disable

1: Drive runs if the run command still exists after reset or re-boots.

Set value as 1:

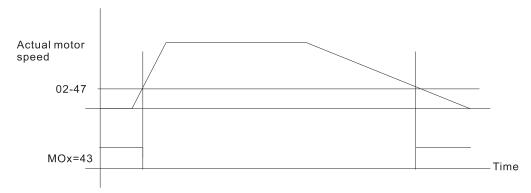
- Status 1: After the drive is powered on and the external terminal for RUN stays ON, the drive runs.
- Status 2: After clearing a fault once a fault is detected and the external terminal for RUN stays ON, you can run the drive by pressing the RESET key.

Motor Zero-speed Level

Default: 0

Settings 0~65535 rpm

- This parameter should be used with the multi-function output terminals (set to 43). It needs to be used with PG card and motor with encoder feedback.
- Use this parameter to set the level of motor at zero-speed. When the speed is lower than this setting, the corresponding multi-function output terminal that is set to 43 is ON, as shown below:



★ B 2 - 48 Maximum Frequency of Resolution Switch

Default: 60.00


Settings 0.00~599.00Hz

Switch delay time of Maximum output frequency

Default: 0.000

Settings 0~65.000 sec.

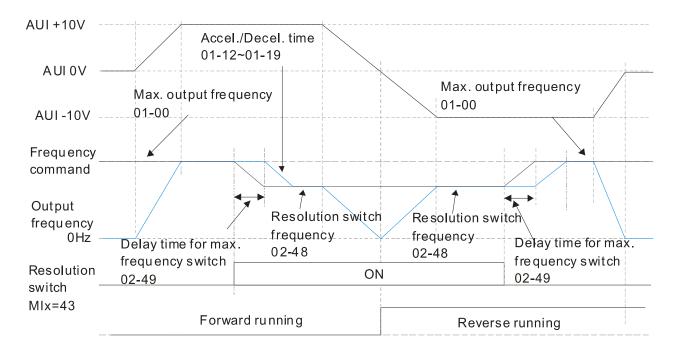Use to improve unstable speed or unstable position due to insufficient analog resolution. Use with the external terminal (setting to 43). After setting this parameter, you also need to adjust the analog output resolution of the controller so as to work with the parameter function.




# ## Display the Status of Multi-function Input Terminal

Default: Read only 2 2 2 26 2 5  $\overset{3}{2}$   $\overset{2}{2}$   $\overset{1}{2}$ 2 Weights bit 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 FWD REV 0=OFF MI1 1=ON MI2 MI3 MI4 MI5 MI6 MI7 MI8 MI10 MI11 MI12 For MI13 option MI14 card MI15

#### For Example:

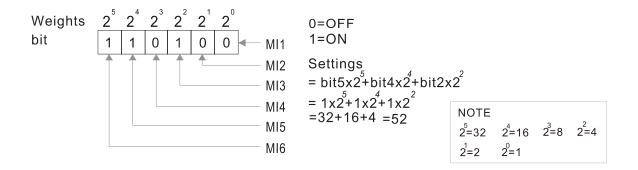When Pr.02-50 displays 0034h (hex) (that is, the value is 52 (decimal) and 110100 (binary)), it means that MI1, MI3 and MI4 are ON.




### RP-5 | Display the status of multi-function output terminal

Default: Read only

#### ☐ For Example:

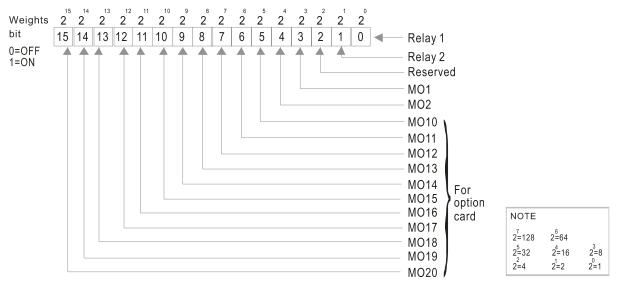
When Pr.02-51 displays 000 Bh (hex) (that is, the value is 11 (decimal) and 1011 (binary)), it means that RY1, RY2, and MO1 are ON.



# ☐ 2 - 5 2 Display the External Output Terminals Used by PLC


Default: Read only
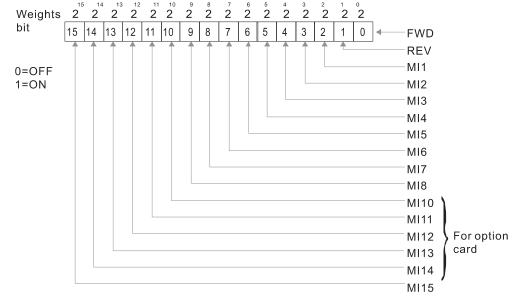
#### Pr.02-52 shows the external multi-function input terminal that used by PLC.



#### For Example:

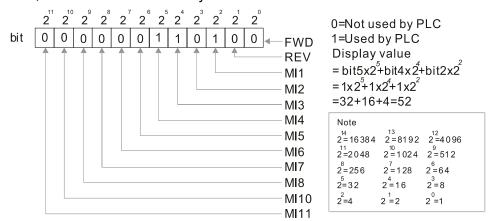
When Pr.02-52 displays 0034h (hex) (that is, the value is 52 (decimal) and 110100 (binary)), it means that MI1, MI3 and MI4 are used by PLC.



### ☐ 2 - 5 3 Display the External Multi-function Output Terminals Used by PLC


Default: Read only

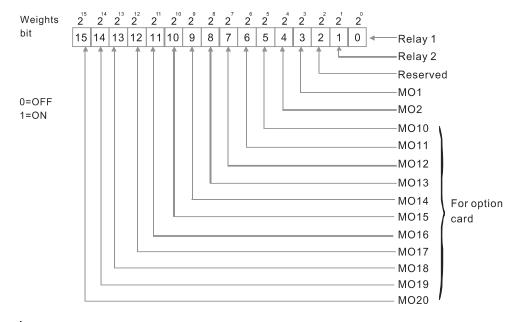Pr. 02-53 shows the external multi-function output terminal that used by PLC.



#### For Example:

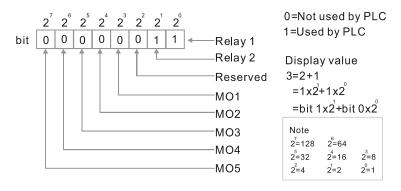When Pr.02-53 displays 0003h (hex) (that is, the value is 3 (decimal) and 0011 (binary)), it means that RY1 and RY2 are used by PLC.



### RP-54 Display the Frequency Command Executed by External Terminal

Default: Read only

Settings 0.00~599.00Hz (Read only)


When you set the source of the Frequency command as the external terminal, if Lv or Fault occurs, the external terminal Frequency command is saved in this parameter.

### Release Brake Check

Default: 0.000 sec.

Settings 0.000~65.000 sec.

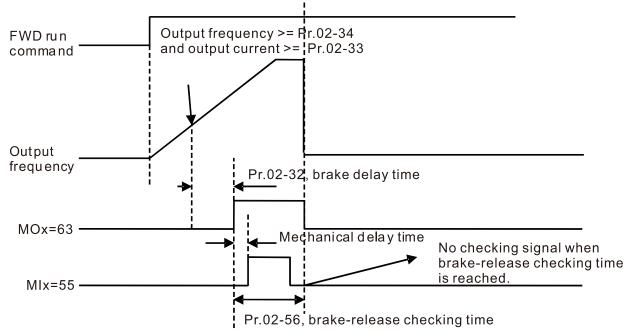The parameter needs to be used with MIx=55. This is to be set for the time difference of mechanical brake delay time and actual brake operation.



Multi-function output terminal: Function 42: Brake Current Check Point

Default: 0

Settings 0~100%

Multi-function output terminal (Function 42): Brake Frequency Check Point

Default: 0.00

Settings 0.00~599.00Hz

- Pr. 02-32, Pr. 02-33, Pr. 02-34, Pr. 02-57 and Pr. 02-58 can be applied on setting up cranes. (Choose crane action #42 to set up multi-function output Pr. 02-13, Pr. 02-14, Pr. 02-16 and Pr. 02-17)
- When output current of a drive is higher than the setting of Pr. 02-33 Pivot Point of the Current (≥ Pr. 02-33) and when output frequency is higher than the setting of Pr. 02-34 Pivot Point of the Frequency (≥ Pr. 02-34), choose #42 to set up Multi-function output Pr. 02-13, Pr. 02-14, Pr. 02-16 and Pr. 02-17 after the delay time set at Pr. 02-32.
- When the Pivot Point of the Current 's setting Pr. 02-57≠0 and when the output current of the drive is lower than the setting of Pr. 02-57 (< Pr. 02-57), or when the output frequency is lower than the setting of Pr.02-58 (< Pr. 02-58), then disable the setting #42 of the multi-function output Pr. 02-13, Pr. 02-14, Pr. 02-16 and Pr. 02-17

#### Chapter 12 Description of Parameter Settings | C2000

- When Pr. 02-57 = 0, the output current is lower than the setting of Pr. 02-33 Pivot Point of the current (< Pr. 02-33) or when output frequency is lower than the setting of Pr. 02-58(< Pr. 02-58), disable the setting of #42 of the multi-function output Pr. 02-13, Pr. 02-14, Pr. 02-16 and Pr. 02-17.
- For crane application, when MOx=42, the setting of Pr. 02-34 must be greater than Pr. 02-58; and Pr. 02-33 must be greater than Pr. 02-57.

### Frequency Reached Detection Amplitude

Default: 0.00

Settings 0.00~599.00Hz

### 

Default: Read only

Settings Read only

1: EMC-BPS01 Card

4: EMC-D611A Card

5: EMC-D42A Card

6: EMC-R6AA Card

11: EMC-A22A

# DFM Output Selection

Default: 0

Settings 0: Use frequency with speed control as DFM output frequency

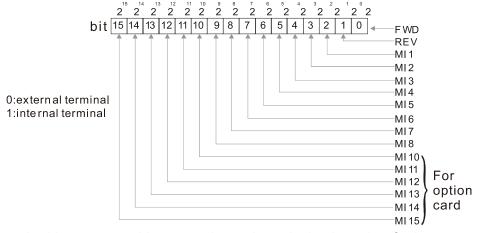
1: Use frequency with system accel./decel. as DFM output frequency

### 

Default: 0000h


Settings 0000~FFFFh

- This parameter is used to select the terminals MI1~MI15 to be internal terminal or external terminal. When the MIx has set as internal terminal, then the corresponding external terminal function will be disabled.
- To activate internal terminals via Pr. 02-75 setting.



The setting method is to convert binary number to hexadecimal number for input.

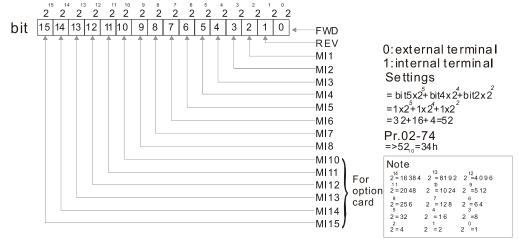For example: if setting MI1, MI3, MI4 to be internal terminals, the setting value should be bit5x2⁵+bit4x2⁴+bit2x2²= 1X2⁵+1X2⁴+1X2²= 32+16+4=52 as shown in the following. The 52₂=32h, Pr. 02-74=34h.




M G2-75 Internal Multi-function Output Terminal Selection


Default: 0000h

#### Settings 0000~FFFFh

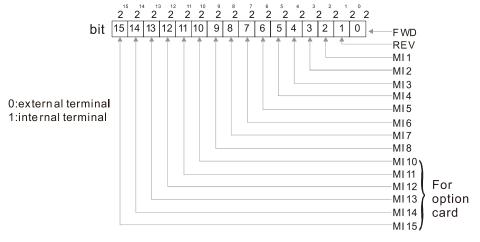This parameter is used to set the internal terminal action via keypad, communication or PLC.



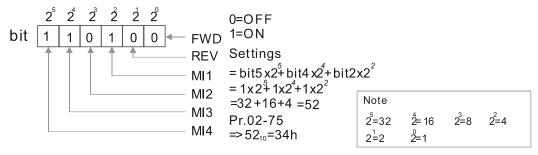
For example, if setting MI1, MI3 and MI4 to be ON, Pr.02-75 should be set to bit5X2<sup>5</sup>+bit4X2<sup>4</sup>+bit2X2<sup>2</sup>= 1X2<sup>5</sup>+1X2<sup>4</sup>+1X2<sup>2</sup>= 32+16+4=522 =34h as shown in the following.



- The Local/Remote of Digital operation panel has the lowest priority.
- When the built-in PLC has use a MIx, the original function of this MIx can still be triggered via virtual terminal.
- Pr. 02-74 and Pr. 02-75 can both do running change.
- Pr. 02-74 and Pr. 02-75 setting value are both memorized before power off.
- The virtual terminal trigger can still be selected by the setting of Pr. 02-12 Digital Input Operation Setting (Pr. 02-12=0 N.O. or Pr. 02-12=1 N.C.)

# **03 Analog Input/Output Parameter** $\varkappa$ This parameter can be set during operation.

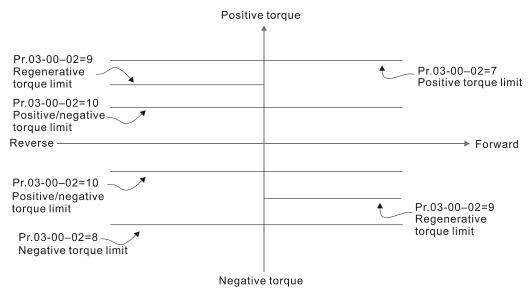N	$B_{i}$	3 - 88	Analog Input Selection (AVI)				
				Default: 1			
N	$\mathbf{g}$	3 - 8 +	Analog Input Selection (ACI)				
				Default: 0			
N	$\mathbf{g}$	3 - 02	Analog Input Selection (AUI)				
				Default: 0			
			Settings				
			0: No function				
			1: Frequency command (speed limit under torque control mode)				
			2: Torque command (torque limit under speed mode)				
			3: Torque compensation command				
			4: PID target value				
			5: PID feedback signal				
			6: Thermistor (PTC / KTY-84) input value				
			7: Positive torque limit				
			8: Negative torque limit				
			9: Regenerative torque limit				
			10: Positive / negative torque limit				
			11: PT100 thermistor input value				
			13: PID compensation value				
		When yo	ou use analog input as the PID reference target value, you must set	Pr. 00-20 to 2 (analog			
		input).					
		Setting r	method 1: Pr. 03-00–03-02 set 1 as PID reference target input.				
		Setting r	method 2: Pr. 03-00–03-02 set 4 as PID reference target input.				
		If the se	f the setting value 1 and setting value 4 exist at the same time, the AVI input has highest pric				
		to becon	ne the PID reference target input value.				
		When yo	ou use analog input as the PID compensation value, you must set	Pr. 08-16 to 1 (source			
		of PID c	ompensation value is analog input). You can see the compensation	n value with Pr. 08-17.			
		When yo	ou use the frequency command or TQC speed limit, the correspond	ling value for 0-±10V /			
			is 0–maximum output frequency (Pr. 01-00).				
		When yo	ou use torque command or torque limit, the corresponding value fo	or 0-±10V / 4-20mA is			
			cimum output torque (Pr. 11-27).				
		-	ou use the torque compensation, the corresponding value for 0–±1	10V / 4–20mA is 0–the			
			ted torque.				
			log input AVI / ACI (use with Switch terminal to switch SW2 to 0–	10V) supports KTY84.			
			does not support this function.				
		•	ou use KTY84, you can only choose either AVI or ACI at the same t	ime. The AVI is prior to			
		ACI.					



When the settings for Pr. 03-00-Pr. 03-02 are the same, the AVI input is selected first.

## ✓ ☐ 3 - ☐ 3 Analog Input Bias (AVI)

Default: 0.0

Settings -100.0-100.0%

Sets the corresponding AVI voltage for the external analog input 0.

✓ ☐ ☐ ☐ ☐ ☐ ☐ Analog Input Bias (ACI)

Default: 0.0

Settings -100.0-100.0%

Sets the corresponding ACI voltage for the external analog input 0.

### ✓ ☐ 3 - ☐ 5 Analog Voltage Input Bias (AUI)

Default: 0.0

Settings -100.0-100.0%

- Sets the corresponding AUI voltage for the external analog input 0.
- The corresponding external input voltage / current signal and the set frequency is 0–10V (4–20mA) corresponds to 0–maximum frequency.
- Positive / Negative Bias Mode (AVI)
- Positive / Negative Bias Mode (ACI)
- Positive / Negative Bias Mode (AUI)


Default: 0

Settings 0: No bias

- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center
- In a noisy environment, use negative bias to provide a noise margin. Do NOT use less than 1V to set the operation frequency.

#### In the diagram below: Black line: Curve with no bias. Gray line: curve with bias

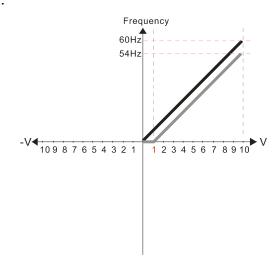1.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

#### 1: Lower than or equal to bias


- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

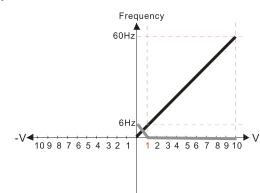2.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

V Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11Analog Input Gain (AVI)=100%

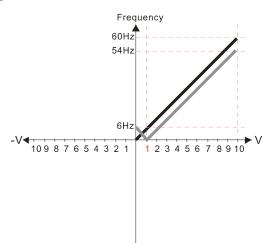3.



Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

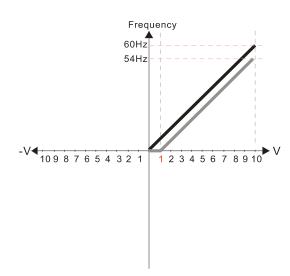Pr.03-11 Analog Input Gain (AVI) = 100%



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

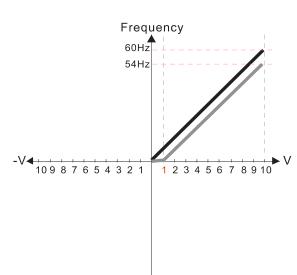5.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

#### 1: Lower than or equal to bias


- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

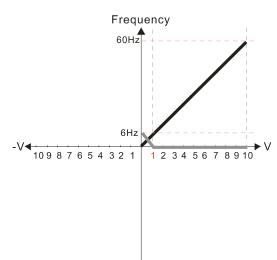6.



Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

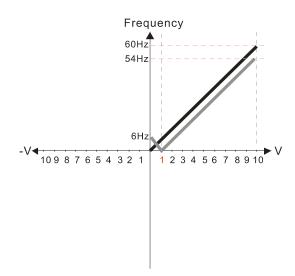Pr.03-11Analog Input Gain (AVI)= 100%



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

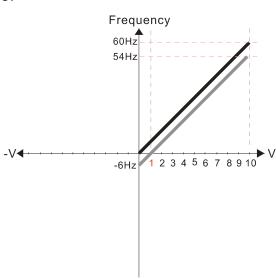8.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

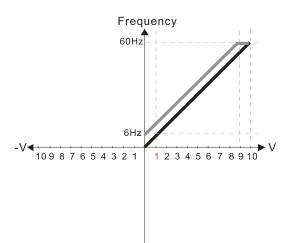9.



Pr.03-03=-10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias


#### 1: Lower than or equal to bias

- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

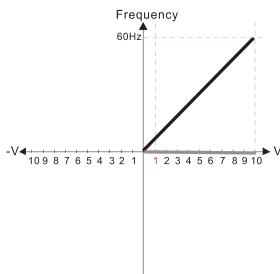Pr.03-11 Analog Input Gain (AVI)= 100%



Pr.03-03=-10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

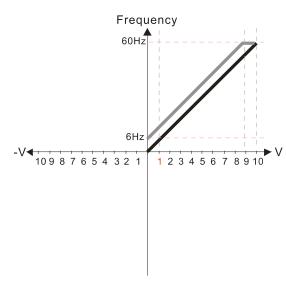11.



Pr.03-03=-10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid.
  Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

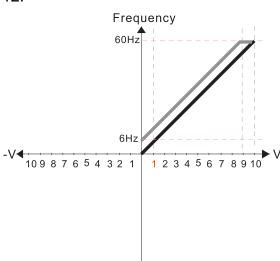12.



Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

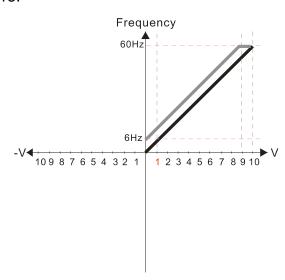Pr.03-11 Analog Input Gain (AVI) = 100%



Pr.03-03=-10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

#### 1: Lower than or equal to bias


- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

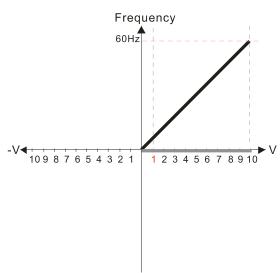14.



Pr.03-03=-10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

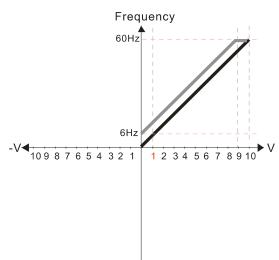15.



Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid.
  Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

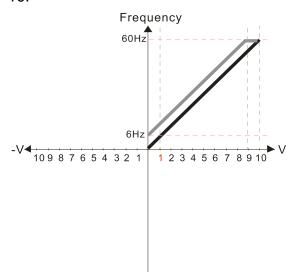Pr.03-11 Analog Input Gain (AVI) = 100%



Pr.03-03=-10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

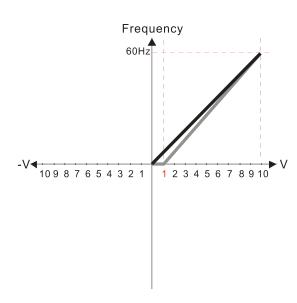17.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

#### 1: Lower than or equal to bias

- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)= 111.1%

10/9=111.1%

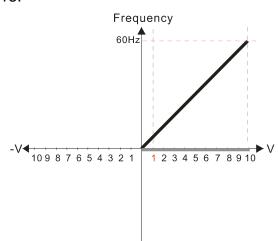18.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

1: Lower than or equal to bias

2: Greater than or equal to bias


- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI)=111.1%

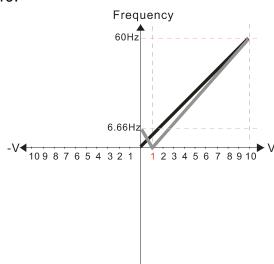10/9 = 111.1%



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 111.1% 10/9 =111.1%

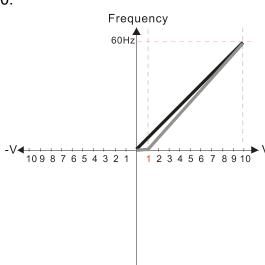20.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 111.1% 10/9 = 111.1%

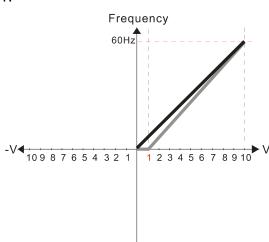21.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias


1: Lower than or equal to bias

- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

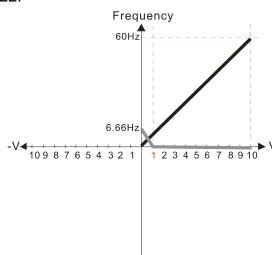Pr.03-11 Analog Input Gain (AVI) = 111.1% 10/9 = 111.1%



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

1: Lower than or equal to bias

2: Greater than or equal to bias

- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid.
  Forward and reverse run is controlled by digital keypad or external terminal.
  1: Neagtive frequency is valid. Positive
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr03-11Analog Input Gain (AVI) = 111.1%

10/9 = 111.1%

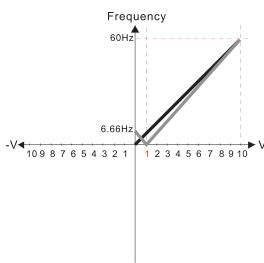23.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

1: Lower than or equal to bias

- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 111.1%

10/9 = 111.1%

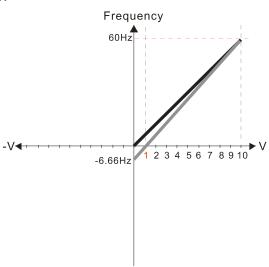24.



Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.03-11 Analog Input Gain (AVI) = 100% 10/9 = 111.1% -V-10987654321

Frequency

60Hz

25.

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

#### 1: Lower than or equal to bias

- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center

4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

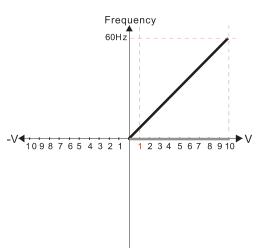
- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Calculate the bias:

$$\frac{60-6Hz}{10V} = \frac{6-0Hz}{(0-xV)} \quad xV = \frac{10}{-9} = -1.11V \quad \therefore 03-03 = \frac{-1.11}{10} \times 100\%$$

Calculate the gain:  $03-11 = \frac{10V}{11.1} \text{V} \times 100\% = 90.0\%$ 

26.



Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
   Neagtive frequency is valid. Positive
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

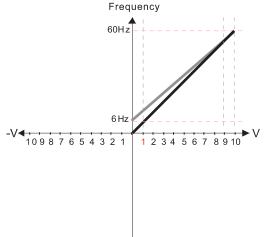
Calculate the bias:

$$\frac{-60-6\text{Hz}}{10\text{V}} = \frac{-6-0\text{Hz}}{(0-x\text{V})} \quad x\text{V} = \frac{-10}{-9} = -1.11\text{V} \quad \therefore 03-03 = \frac{-1.11}{10} \times 100\%$$

=-11.1%

Calculate the gain: 03-11=  $\frac{10V}{11.1}$ V×100%=90.0%

27.



Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled
   by digital keypad or external terminal.
- by digital keypad or external terminal.

  1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Calculate the bias:

$$\frac{60-6Hz}{10V} = \frac{6-0Hz}{(0-xV)} \quad xV = \frac{10}{-9} = -1.11V \quad \text{``03-03} = \frac{-1.11}{10} \times 100\%$$

Calculate the gain:  $03-11 = \frac{10V}{11.1V} \times 100\% = 90.0\%$ 

Frequency
60Hz
10 9 8 7 6 5 4 3 2 1 1 2 3 4 5 6 7 8 9 10

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage
- while serving as the center

4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled
   by digital keypad or external terminal.
- by digital keypad or external terminal.

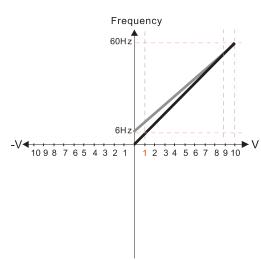
  1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Calculate the bias:

$$\frac{60-6Hz}{10V} = \frac{6-0Hz}{(0-xV)} \quad xV = \frac{10}{-9} = -1.11V \quad \therefore 03-03 = \frac{-1.11}{10} \times 100\%$$

Calculate the gain:  $03-11 = \frac{10V}{11.1V} \times 100\% = 90.0\%$ 

29.



Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

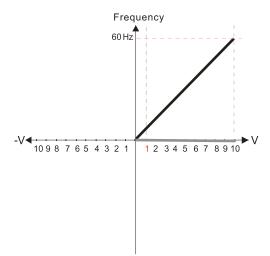
- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Calculate the bias:

$$\frac{60-6Hz}{10V} = \frac{6-0Hz}{(0-xV)} \quad xV = \frac{10}{-9} = 1.11V \quad \therefore 03-03 = \frac{-1.11}{10} \times 100\%$$

Calculate the gain: 03-11 =  $\frac{10 \text{ V}}{11.1 \text{ V}} \times 100 \% = 90.0\%$ 

30.



Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- Negative frequency is not valid.
   Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Calculate the bias

$$\frac{-60-6Hz}{10V} = \frac{-6-0Hz}{(0-xV)} \quad xV = \frac{-10}{-9} = -1.11V \quad \therefore 03-03 = \frac{-1.11}{10} \times 100\%$$

Calculate the gain: 03-11=  $\frac{10V}{11.1V} \times 100\% = 90.0\%$  = -11.1%

Frequency 60Hz -V-10987654321

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

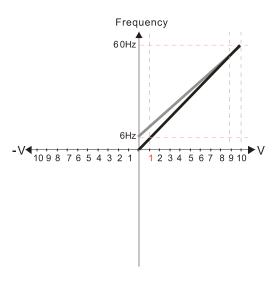
- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control

Calculate the bias:

$$\frac{60-6Hz}{10V} = \frac{6-0Hz}{(0-xV)} \quad xV = \frac{10}{-9} = 1.11V \quad ...03-03 = \frac{-1.11}{10} \times 100\%$$
$$= -11.1\%$$

Calculate the gain: 03-11=  $\frac{10V}{11.1V} \times 100\% = 90.0\%$ 

32.



Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage
- while serving as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control

$$\frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{(0-x\text{V})} \quad x\text{V} = \frac{10}{-9} = 1.11\text{V} \quad \therefore 03-03 = \frac{-1.11}{10} \times 100\%$$

Calculate the gain: 03-11=  $\frac{10 \text{ V}}{11.1 \text{ V}} \times 100\% = 90.0\%$ 

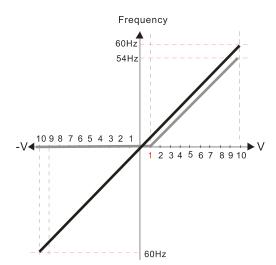33.



Pr.00-21=0 (Digital keypad control and run in FWD direction)

Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

#### 1: Lower than or equal to bias

- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center 4: Serve bias as the center

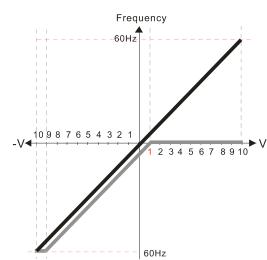Pr.03-13 Analog Positive Input Gain (AUI) = 100% Pr.03-14 Analog Positive Input Gain (AUI) = 100%




Pr.00-21=0 (Digital keypad control and run in FWD direction) Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10% Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-13 Analog Positive Input Gain (AUI) = 100% Pr.03-14 Analog Positive Input Gain (AUI) = 100%

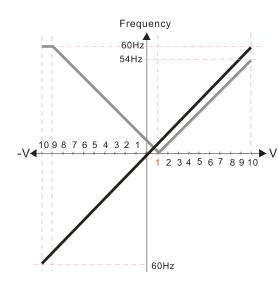35.




Pr.00-21=0 (Digital keypad control and run in FWD direction) Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10% Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage
- while serving as the center
  4: Serve bias as the center

Pr.03-13 Analog Positive Input Gain (AUI) = 100% Pr.03-14 Analog Positive Input Gain (AUI) = 100%

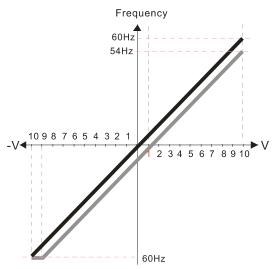
36.



Pr.00-21=0 (Digital keypad control and run in FWD direction) Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10% Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center Serve bias as the center

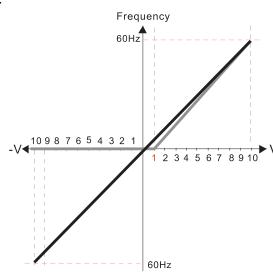Pr.03-13 Analog Positive Input Gain (AUI) = 100% Pr.03-14 Analog Positive Input Gain (AUI) = 100% 37.



Pr.00-21=0 (Digital keypad control and run in FWD direction) Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10% Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias


- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage
- while serving as the center

4: Serve bias as the center

Pr.03-13 Analog Positive Input Gain (AUI) = 111.1% (10/9)\*100% = 111.1%

Pr.03-14 Analog Positive Input Gain (AUI) = 100%

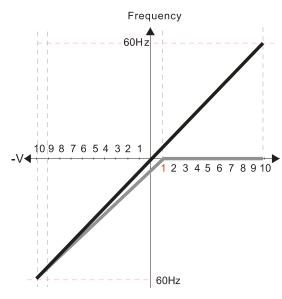38.




Pr.00-21=0 (Digital keypad control and run in FWD direction) Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-13 Analog Positive Input Gain (AUI) = 100% Pr.03-14 Analog Positive Input Gain (AUI) = 90.0% (10/11)\*100% = 90.9%

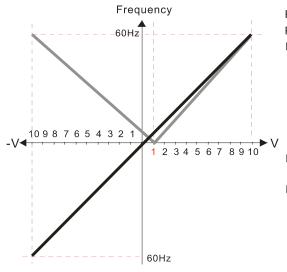39.



Pr.00-21=0 (Digital keypad control and run in FWD direction) Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-13 Analog Positive Input Gain (AUI) = 111.1% (10/9)\*100% = 111.1%

Pr.03-14 Analog Positive Input Gain (AUI) = 90.0%

(10/11)\*100% = 90.9%

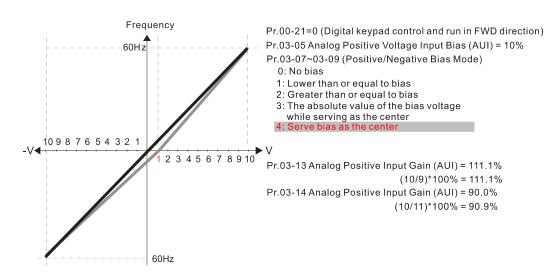40.



Reverse Setting when Analog Signal Input is Negative Frequency

Default: 0

- Settings 0: Negative frequency is not allowed. The digital keypad or external terminal controls the forward and reverse direction.
  - 1: Negative frequency is allowed. Positive frequency = run in forward direction; negative frequency = run in reverse direction. The digital keypad or external terminal control cannot switch the running direction.
- Use Pr.03-10 to enable running in the reverse direction command when a negative frequency (negative bias and gain) is input to the AVI or ACI analog signal input (except AUI).
- Condition for negative frequency (reverse)
  - 1. Pr. 03-10 = 1
  - 2. Bias mode = Serve bias as the center
  - 3. Corresponded analog input gain < 0 (negative); this makes the input frequency negative.
- In using the additional analog input function (Pr. 03-18 = 1), when analog signal is negative after the addition, you can set this parameter to allow or not allow the reverse direction. The result after adding is restricted by the "Condition for negative frequency (reverse)".
- Analog Input Gain (AVI)

  Analog Input Gain (ACI)

  Analog Positive Input Gain (AUI)
- Analog Negative Input Gain (AUI)

Default: 100.0

Settings -500.0-500.0 %

Use Pr. 03-03–Pr. 03-14 when the frequency command source is the analog voltage or current signal.

- ★ \$\frac{1}{3} = \frac{1}{5}\$ Analog Input Filter Time (AVI)
- Analog Input Filter Time (ACI)
- Analog Input Filter Time (AUI)

Default: 0.01

Settings 0.00-20.00 sec.

#### Chapter 12 Description of Parameter Settings | C2000

- There is often noisy in the analog signal from AVI, ACI and AUI, which affects the stability of the control. Use these input delays to filter a noisy analog signal.
- When the time constant setting is too large, the control is stable but the control response is slow. When the time constant setting is too small, the control response is faster but the control may be unstable. For optimal setting, adjust the setting based on the control stability or the control response.

## ★ 3 - ‡ Analog Input Addition Function

Default: 0

Settings 0: Disable (AVI, ACI, AUI)

1: Enable

When Pr. 03-18 is set to 1:


EX1: Pr. 03-00 = Pr. 03-01=1, Frequency command= AVI+ACI

EX2: Pr. 03-00 = Pr. 03-01 = Pr. 03-02 = 1, Frequency command = AVI+ACI+AUI

EX3: Pr. 03-00 = Pr. 03-02=1, Frequency command = AVI+AUI

EX4: Pr. 03-01 = Pr. 03-02=1, Frequency command = ACI+AUI

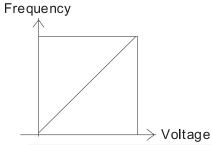When Pr. 03-18 is set to 0 and the analog input setting is the same, the priority for AVI, ACI and AUI are AVI > ACI > AUI.



Fcmd=[(ay $\pm$ bias)\*gain]\*  $\frac{\text{Fmax}(01-00)}{10\text{V or }16\text{mA or }20\text{mA}}$ 

Fcmd: the corresponding frequency of 10V or 20mA

ay: 0~10V, 4~20mA, 0~20mA bias: Pr.03-03, Pr. 03-04, Pr.03-05

gain: Pr.03-11, Pr.03-12, Pr.03-13, Pr.03-14

## ★ 3 - 19 Signal Loss Selection for Analog Input 4–20 mA

Default: 0

Settings 0: Disable

1: Continue operation at the last frequency

2: Decelerate to 0 Hz

3: Stop immediately and display ACE

- Determines the response when the 4–20mA signal is lost, when AVIc (Pr. 03-28 = 2) or ACIc (Pr. 03-29 = 0).
- When Pr. 03-28 is not set to 2, the voltage input to AVI terminal is 0–10V or 0–20mA, and the Pr. 03-19 is invalid.
- When Pr. 03-29 is not set to 0, the voltage input to ACI terminal is 0–10V or 0–20mA, and the Pr. 03-19 is invalid.
- When the setting is 1 or 2, the keypad displays the warning code "ANL". It keeps blinking until the ACI signal is recovered.
- When the motor drive stops, the warning condition does not continue to exist, so the warning disappears.

★ B 3 - 2 B Multi-function Output 1 (AFM1)

Default: 0

Multi-function Output 2 (AFM2)

Default: 0

Settings 0-25

#### **Function Chart**

Settings	Functions	Descriptions
0	Output frequency (Hz)	Maximum frequency Pr. 01-00 is regarded as 100%.
1	Frequency command (Hz)	Maximum frequency Pr. 01-00 is regarded as 100%.
2	Motor speed (Hz)	Maximum frequency Pr. 01-00 is regarded as 100%.
3	Output current (rms)	(2.5 X rated current) is regarded as 100%
4	Output voltage	(2 X rated voltage) is regarded as 100%
5	DC BUS Voltage	450 V (900 V)=100%
6	Power factor	-1.000-1.000=100%
7	Power	(2 X rated power) is regarded as 100%
8	Output torque	Full-load torque is regarded as 100%
9	AVI	0–10V = 0–100%
10	ACI	4–20mA = 0–100%
11	AUI	-10-10V=0-100%
12	Iq current command	(2.5 X rated current) is regarded as 100%
13	lq feedback value	(2.5 X rated current) is regarded as 100%
14	Id current command	(2.5 X rated current) is regarded as 100%
15	ld feedback value	(2.5 X rated current) is regarded as 100%
18	Torque command	Rated torque is regarded as 100%
19	PG2 frequency command	Maximum frequency Pr. 01-00 is regarded as 100%.
20	CANopen analog output	CANopen communication analog output
21	RS-485 analog output	For RS-485 (InnerCOM / MODBUS) control output
22	Communication card analog	Communication analog output (CMC-MOD01,
22	output	CMC-EIP01, CMC-PN01, CMC-DN01)
23	Constant voltage output	Pr. 03-32 and Pr. 03-33 control voltage output level.
23	Constant voltage output	0–100 % of Pr. 03-32 corresponds to 0–10 V of AFM1.
25	CANopen and RS-485 analog output	For CANopen and InnerCOM control output

✓ ☐ 3 - 2 / Analog Output Gain 1 (AFM1)

Default: 100.0

Malog Output Gain 2 (AFM2)

Default: 100.0

Settings 0.0–500.0 %

Adjusts the voltage level outputted to the analog meter from the analog signal (Pr.03-20) output terminal AFM of the drive.

R - - - Analog Output 1 in REV Direction (AFM1)

Default: 0


★ R 3 - 2 5 Analog Output 2 in REV Direction (AFM2)

Default: 0

Settings 0: Absolute value of output voltage

1: Reverse output 0 V; forward output 0–10 V

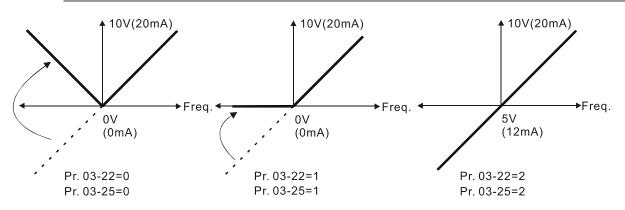2: Reverse output 5-0 V; forward output 5-10 V



Selections for the analog output direction

# 

Default: 0.00

Settings -100.00-100.00 %

- Example 1, AFM2 0–10V is set to the output frequency, the output equation is: 10V \* (output frequency / Pr. 01-00) \* Pr. 03-24 + 10V \* Pr. 03-27
- Example 2, AFM2 0–20mA is set to the output frequency, the output equation is: 20mA \* (output frequency / Pr. 01-00) \* Pr. 03-24 + 20mA \* Pr. 03-27
- Example 3, AFM2 4–20mA is set to the output frequency, the output equation is: 4mA + 16mA \* (output frequency / Pr. 01-00) \* Pr. 03-24 + 16mA \* Pr. 03-27
- This parameter sets the corresponding voltage for the analog output 0.

## 

Default: 0

Settings 0: 0-10V

1: 0-20mA

2: 4-20mA

## ★ H 3 - 2 3 ACI Terminal Input Selection

Default: 0

Settings 0: 4-20mA

1: 0-10V

2: 0-20mA


When you change the input mode, verify that the external terminal switch (SW3, SW4) corresponds to the setting for Pr. 03-28-Pr. 03-29.

## PLC Analog Output Terminal Status

Default: Read only


Settings Monitor the status of PLC analog output terminals

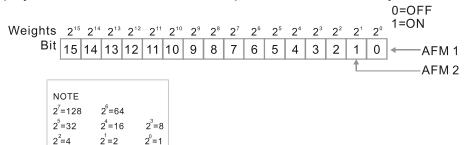Pr. 03-30 displays the external multi-function output terminal that used by PLC.



For Example:

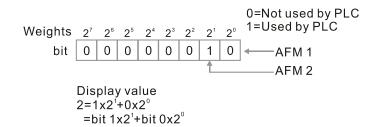When Pr. 03-30 displays 0002h (hex), it means that AFM2 is used by PLC.



★ 3 - 3 | AFM2 Output Selection

Default: 0

Settings 0: 0–20mA output 1: 4–20mA output

AFM1 DC Output Setting Level

AFM2 DC Output Setting Level

Default: 0.00

Settings 0.00-100.00 %

Default: 0.01

Settings 0.00-20.00 sec.

Multi-function MO Output by Al Level Source

Default: 0

Settings 0: AVI

1: ACI

2: AUI

★ B 3 - 45 Al Upper Level

Default: 50.00

Settings -100.00-100.00 %

# Chapter 12 Description of Parameter Settings | C2000 Al Lower Level Default: 10.00 Settings -100.00-100.00 % Multi-function output terminal 67 must work with Pr.03-44 to select input channels. When analog input level is higher than Pr.03-45, multi-function output acts; when analog input level is lower than Pr.03-46, multi-function output terminals stop outputting. When setting levels, Al upper level must be higher than Al lower level. Analog Input Curve Selection Default: 0 Settings 0: Regular Curve 1: Three-point curve of AVI 2: Three-point curve of ACI 3: Three-point curve of AVI & ACI 4: Three-point curve of AUI 5: Three-point curve of AVI & AUI 6: Three-point curve of ACI & AUI 7: Three-point curve of AVI & ACI & AUI Sets the calculation method for analog input. When Pr. 03-50 = 0, all analog input signal is calculated by bias and gain. When Pr. 03-50 = 1, AVI calculates by frequency and voltage / current (Pr. 03-51–03-56), other analog input signal calculates by bias and gain. When Pr. 03-50 = 2, ACI consulates by frequency and voltage / current (Pr. 03-57–03-62), other analog input signal calculates by bias and gain. When Pr. 03-50 = 3, AVI and ACI calculate by frequency and voltage/ current (Pr. 03-51-03-62), other analog input signal calculates by bias and gain. When Pr. 03-50 = 4, AVI calculates by frequency and voltage / current (Pr. 03-63–03-74), other analog input signal calculates by bias and gain. When Pr. 03-50 = 5, AVI and AUI calculate by frequency and voltage / current (Pr. 03-51–03-56 and 03-63-03-74), other analog input signal calculates by bias and gain. When Pr. 03-50 = 6, ACI and AVI calculate by frequency and voltage / current (Pr. 03-57–03-74), other analog input signal calculates by bias and gain.

## RR R - S AVI Lowest Point

03-51-03-74).

Default:

0.00 / 0.00 / 4.00

Settings Pr. 03-28 = 0, 0.00–10.00V

Pr. 03-28 = 1, 0.00-20.00mA

Pr. 03-28 = 2, 0.00-20.00mA

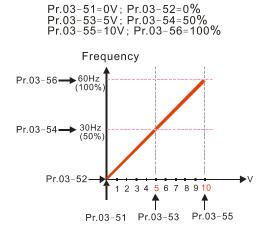
When Pr. 03-50 = 7, all analog input signal calculate by frequency and voltage / current (Pr.

AVI Proportional Lowest Point Default: 0.00 -100.00-100.00 % Settings ✓ 


☐ AVI Mid-Point Default: 5.00 / 10.00 / 12.00 Settings Pr. 03-28 = 0, 0.00–10.00 V Pr. 03-28 = 1, 0.00-20.00 mA Pr. 03-28 = 2, 0.00-20.00 mA ★ H = - 5 H AVI Proportional Mid-Point Default: 50.00 Settings -100.00-100.00 % R3-55 AVI Highest Point Default: 10.00 / 20.00 / 20.00 Settings Pr. 03-28 = 0, 0.00-10.00 V Pr. 03-28 = 1, 0.00-20.00 mA Pr. 03-28 = 2, 0.00-20.00 mA ✓ ☐ ☐ ☐ AVI Proportional High Point Default: 100.00

Settings -100.00-100.00 %


- When Pr. 03-28 = 0, AVI setting is 0-10 V and the unit is in voltage (V).
- When Pr. 03-28  $\neq$  0, AVI setting is 0–20 mA or 4–20 mA and the unit is in current (mA).
- When you set the analog input AVI to frequency command, 100% corresponds to Fmax (Pr. 01-00 maximum operation frequency).
- The requirement for these three parameters (Pr. 03-51, Pr. 03-53 and Pr. 03-55) is Pr. 03-51 < Pr. 03-53 < Pr. 03-55. The values for three proportional points (Pr. 03-52, Pr. 03-54 and Pr. 03-56) have no limits. Values between two points are calculated by a linear equation. The ACI and AUI are same as AVI.
- The output percentage 0% when the AVI input value is lower than the lowest point setting. Example: Pr. 03-51 = 1 V; Pr. 03-52 = 10 %. The output is 0 % when AVI input is lower than 1V. If the AVI input varies between 1V and 1.1V, the drive's output frequency is between 0% and 10%.



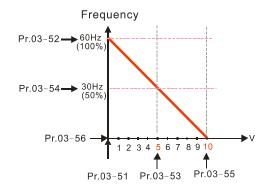 $\begin{array}{l} Pr.03-51=0V;\ Pr.03-52=100\% \\ Pr.03-53=5V;\ Pr.03-54=50\% \\ Pr.03-55=10V;\ Pr.03-56=0\% \end{array}$ 



#### Chapter 12 Description of Parameter Settings | C2000

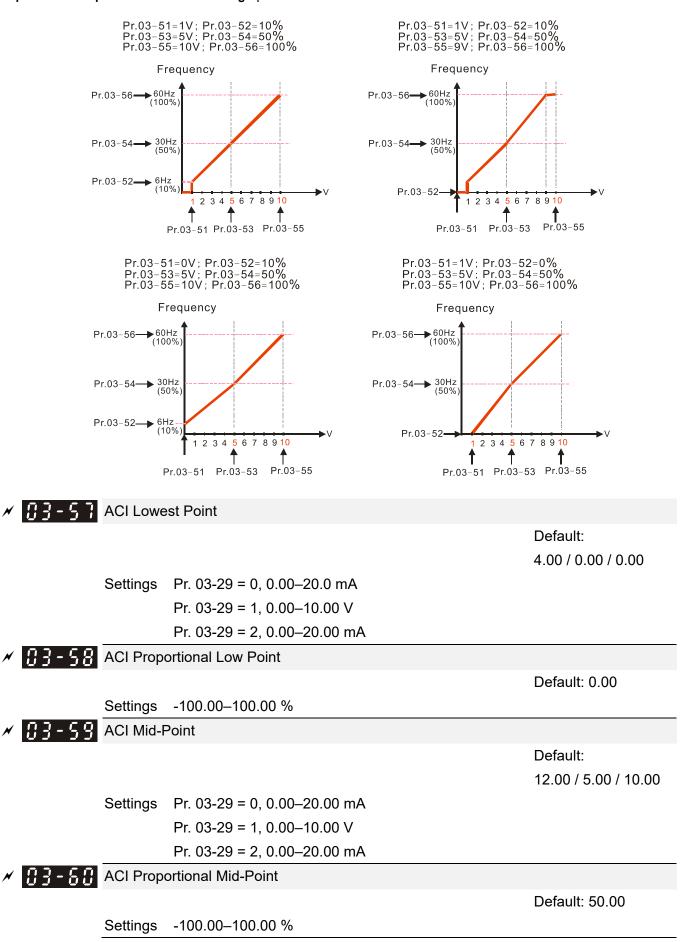

v 03-C-	A CALLIèmbre et Deint	
" US-5	ACI Highest Point	D ( "
		Default:
	O. W	20.00 / 10.00 / 20.00
	Settings Pr. 03-29 = 0, 0.00–20.00mA	
	Pr. 03-29 = 1, 0.00–10.00V	
403 63	Pr. 03-29 = 2, 0.00–20.00mA	
<u>~ 83-66</u>	ACI Proportional Highest Point	D 6 1/4 100 00
	0	Default: 100.00
	Settings -100.00–100.00%	
	Pr. $03-29 = 1$ , ACI setting is 0–10V and the unit is in voltage (V).	When Pr. 03-29 ≠ 1, ACI
•	is 0–20mA or 4–20mA and the unit is in current (mA).	
	you set the analog input ACI to frequency command, 100% o	corresponds to Fmax (Pr.
	maximum operation frequency).	
	quirement for these three parameters (Pr. 03-57, Pr. 03-59 and P	,
	< Pr. 03-61. The values for three proportional points (Pr. 03-58,	•
	o limits. Values between two points are calculated by a linear eq	
	tput percentage is 0% when the ACI input value is lower than the	e lowest point setting.
Examp		
	57 = 2 mA; Pr. 03-58 = 10 %. The output becomes 0 % when AV	•
	CI input varies between 2 mA and 2.1 mA, the drive's output fred	quency oscillates between
0 % an	d 10%.	
× 83-83	Positive AUI Voltage Lowest Point	
		Default: 0.00
	Settings 0.00–10.00 V	
× 83-84	Positive AUI Voltage Proportional Lowest Point	
		Default: 0.00
	Settings -100.00-100.00 %	
× 83-85	Positive AUI Voltage Mid-Point	
		Default: 5.00
	Settings 0.00–10.00 V	
× 83-88	Positive AUI Voltage Proportional Mid-Point	
<del></del>		Default: 50.00
	Settings -100.00-100.00 %	
× 83-63		
		Default: 10.00
	Settings 0.00–10.00 V	Doiadit. 10.00
w 00.co	Positive AUI Voltage Proportional Highest Point	
~ UJ UU	r colare / totage i roportional riighest i oint	Default: 100.00
	Settings -100.00–100.00 %	Doladit. 100.00
M \A/bon	you set the positive voltage AUI to the frequency command, 10	0% corresponds to Emay
WW VVIICII	you set the positive voltage Aor to the hequelity confinditu, To	0 /0 Corresponds to Finax


(Pr. 01-00 maximum operation frequency) and the motor runs in the forward direction.

- The requirement for these three parameters (Pr. 03-63, Pr. 03-65 and Pr. 03-67) is Pr. 03-63 < Pr. 03-65 < Pr. 03-67. The values for three proportional points (Pr. 03-64, Pr. 03-66 and Pr. 03-68) have no limits. Values between two points are calculated by a linear equation.
- Positive AUI input voltage is lower than Low Point, output proportional is 0%.

For example:

Pr. 03-63 = 1V; Pr. 03-64 = 10%. The output will become 0% when the input is lower than 1V. If the AUI input varies between 1V and 1.1V, the drive's output frequency oscillates between 0% and 10%.

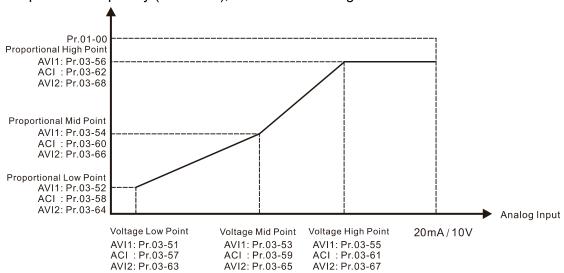Pr. 03-51~03-68 is able to set the open circuit corresponding function of analog input value and max. operation frequency (Pr. 01-00), as shown in the figure below:



<b>~</b> 83-89	Negative AUI Voltage Highest Point	
		Default: 0.00
	Settings -10.00-0.00 V	
<b>~</b> 83 - 78	Negative AUI Voltage Proportional Highest Point	
		Default: 0.00
	Settings -100.00-100.00 %	
✓ 83-7:	Negative AUI Voltage Mid-Point	
		Default: -5.00
	Settings -10.00–0.00 V	
× 03-72	Negative AUI Voltage Proportional Mid-Point	
		Default: -50.00
	Settings -100.00-100.00 %	
<b>~</b> 03-73	Negative AUI Voltage Lowest Point	
		Default: -10.00
	Settings -10.00–0.00 V	
	Negative AUI Voltage Proportional Lowest Point	
		Default: -100.00
	Settings -100.00-100.00 %	

01-00 maximum operation frequency) and the motor runs in the reverse direction.

When you set the negative voltage AUI to frequency command, 100% corresponds to Fmax (Pr.

- The requirement for these three parameters (Pr. 03-69, Pr. 03-71 and Pr. 03-73) is Pr. 03-69 < Pr. 03-71 < Pr. 03-73. The values for three proportional points (Pr. 03-70, Pr. 03-72 and Pr. 03-74) have not limits. Values between two points are calculated by a linear calculation.
- The output % becomes 0% when the negative AUI input value is lower than the lowest point setting. For example:

Pr. 03-69 = -1V; Pr. 03-70 = 10%, then the output becomes 0% when the AUI input is  $\geq$  -1V. If the AUI input varies between -1 V and -1.1 V, the drive's output frequency oscillates between 0% and 10%.

### **04 Multi-step Speed Parameters**

✓ This parameter can be set during operation.

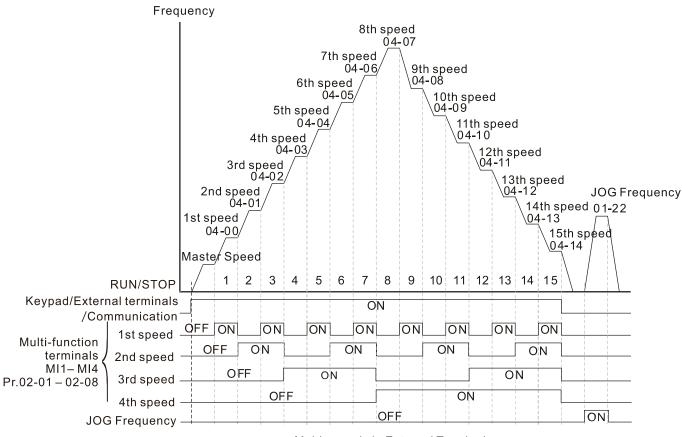
×	00-20	1st Step Speed Frequency	
×	04-01	2nd Step Speed Frequency	
×	04-02	3rd Step Speed Frequency	
×	04-03	4th Step Speed Frequency	
×	04-04	5th Step Speed Frequency	
×	04-05	6th Step Speed Frequency	
×	04-08	7th Step Speed Frequency	
×	04-07	8th Step Speed Frequency	
×	80-20	9th Step Speed Frequency	
×	04-09	10th Step Speed Frequency	
×	84-18	11th Step Speed Frequency	
×	84-11	12th Step Speed Frequency	
×	04-15	13th Step Speed Frequency	
×	04-13	14th Step Speed Frequency	
×	84-14	15th Step Speed Frequency	
			Default: 0.00

### Settings 0.00-599.00 Hz

- Use the multi-function input terminals (refer to settings 1–4 of Pr. 02-01–02-08 and Pr. 02-26–02-31 Multi-function Input Command) to select the multi-step speed command (the maximum is 15<sup>th</sup> step speed). Pr. 04-00 to Pr. 04-14 set the multi-step speed frequency as shown in the following diagram.
- The external terminal/digital keypad/communication controls the RUN and STOP commands with Pr.00-21.
- You can set each multi-step speed between 0.00–599.00 Hz during operation.
- Explanation for the timing diagram of the multi-step speed and external terminals

  The related parameter settings are:
  - 1. Pr. 04-00–04-14: sets the 1<sup>st</sup> to 15<sup>th</sup> multi-step speed (to set the frequency of each step speed)
  - 2. Pr. 02-01–02-08 and Pr. 02-26–02-31: sets the multi-function input terminals (multi-step speed command 1–4)
- Related parameters:
  - Pr. 01-22 JOG Frequency
  - Pr. 02-01 Multi-function Input Command 1 (MI1)
  - Pr. 02-02 Multi-function Input Command 2 (MI2)
  - Pr. 02-03 Multi-function Input Command 3 (MI3)
  - Pr. 02-04 Multi-function Input Command 4 (MI4)

Default: 0



Multi-speed via External Terminals

×	84-15	Position Command 1 (Rotation)
N	84-17	Position Command 2 (Rotation)
×	84-19	Position Command 3 (Rotation)
×	04-51	Position Command 4 (Rotation)
×	04-23	Position Command 5 (Rotation)
N	04-25	Position Command 6 (Rotation)
×	04-57	Position Command 7 (Rotation)
N	04-29	Position Command 8 (Rotation)
×	84-31	Position Command 9 (Rotation)
×	84-33	Position Command 10 (Rotation)
N	84-35	Position Command 11 (Rotation)
N	84-37	Position Command 12 (Rotation)
N	04-39	Position Command 13 (Rotation)
×	04-41	Position Command 14 (Rotation)
N	04-43	Position Command 15 (Rotation)

Settings -30000-30000

- To switch the target position for the external terminal, set the multi-function input command Pr.02-01 = 1, Pr.02-02 = 2, Pr.02-03 = 3, Pr.02-04 = 4 by selecting the P2P target position with the multi-step speed.
- ☐ Setting: Target Position = Pr. 04-15 × (Pr. 10-01\*4) + Pr. 04-16

Multi-step Speed Status	Target Po	osition of P	Maximum S	Speed of P2P	
0000		0		11-00 bit8=0	11-00 bit8=1
0001	Position 1	04-15	04-16	11-43	04-00
0010	Position 2	04-17	04-18		04-01
0011	Position 3	04-19	04-20		04-02
0100	Position 4	04-21	04-22		04-03
0101	Position 5	04-23	04-24		04-04
0110	Position 6	04-25	04-26		04-05
0111	Position 7	04-27	04-28		04-06
1000	Position 8	04-29	04-30	11-43	04-07
1001	Position 9	04-31	04-32		04-08
1010	Position 10	04-33	04-34		04-09
1011	Position 11	04-35	04-36		04-10
1100	Position 12	04-37	04-38		04-11
1101	Position 13	04-39	04-40		04-12
1110	Position 14	04-41	04-42		04-13
1111	Position 15	04-43	04-44		04-14

×	84 - 18	Position Command 1 (Pulse)	
×	81 - 20	Position Command 2 (Pulse)	
×	84-58	Position Command 3 (Pulse)	
×	84-88	Position Command 4 (Pulse)	
×	04-54	Position Command 5 (Pulse)	
×	89-28	Position Command 6 (Pulse)	
×	85-20	Position Command 7 (Pulse)	
×	84-38	Position Command 8 (Pulse)	
×	04-32	Position Command 9 (Pulse)	
×	84-34	Position Command 10 (Pulse)	
×	84-38	Position Command 11 (Pulse)	
×	86-28	Position Command 12 (Pulse)	
×	04-40	Position Command 13 (Pulse)	
×	04-45	Position Command 14 (Pulse)	
×	04-44	Position Command 15 (Pulse)	
			Dafault. O


Default: 0

#### Settings -32767-32767

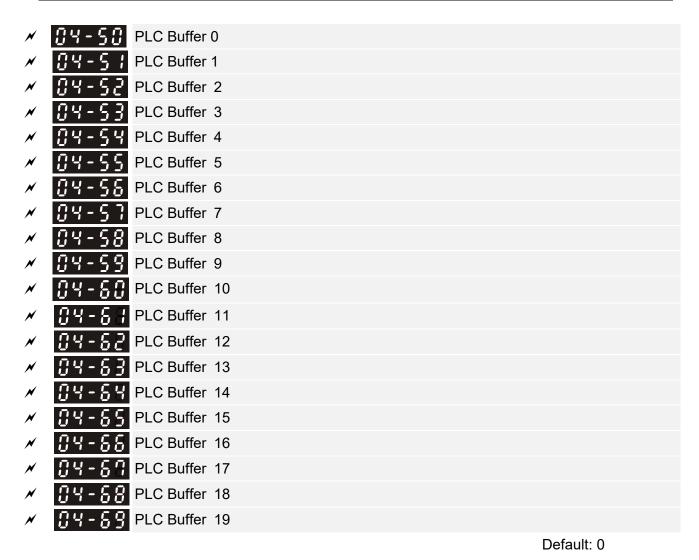- Refer to Pr. 02-01–02-08 (Multi-function Input Command) for the description on setting 34 (Switch between multi-step position and multi-step speed control), setting 36 (Enable multi-step position learning function) and setting 35 (Enable single-point position control).
- Multi-function input 35 (Enable single-point position control) switches between multi-step speed and multi-step position with multi-function input 34 (when enabled). You can select 16 positions.

Multi-step position corresponding	MI4	MI3	MI2	MI1	Multi-step speed corresponding
10-19	0	0	0	0	Positioning for Encoder Position
04-16 Position command 1 (pulse)	0	0	0	1	04-00 1 <sup>st</sup> step speed frequency
04-18 Position command 2 (pulse)	0	0	1	0	04-01 2 <sup>nd</sup> step speed frequency
04-20 Position command 3 (pulse)	0	0	1	1	04-02 3 <sup>rd</sup> step speed frequency

Multi-step position corresponding	MI4	MI3	MI2	MI1	Multi-step speed corresponding
04-22 Position command 4 (pulse)	0	1	0	0	04-03 4 <sup>th</sup> step speed frequency
04-24 Position command 5 (pulse)	0	1	0	1	04-04 5 <sup>th</sup> step speed frequency
04-26 Position command 6 (pulse)	0	1	1	0	04-05 6 <sup>th</sup> step speed frequency
04-28 Position command 7 (pulse)	0	1	1	1	04-06 7 <sup>th</sup> step speed frequency
04-30 Position command 8 (pulse)	1	0	0	0	04-07 8 <sup>th</sup> step speed frequency
04-32 Position command 9 (pulse)	1	0	0	1	04-08 9 <sup>th</sup> step speed frequency
04-34 Position command 10 (pulse)	1	0	1	0	04-09 10 <sup>th</sup> step speed frequency
04-36 Position command 11 (pulse)	1	0	1	1	04-10 11 <sup>th</sup> step speed frequency
04-38 Position command 12 (pulse)	1	1	0	0	04-11 12 <sup>th</sup> step speed frequency
04-40 Position command 13 (pulse)	1	1	0	1	04-12 13 <sup>th</sup> step speed frequency
04-42 Position command 14 (pulse)	1	1	1	0	04-13 14 <sup>th</sup> step speed frequency
04-44 Position command 15 (pulse)	1	1	1	1	04-14 15 <sup>th</sup> step speed frequency



You can combine the PLC buffer with the built-in PLC function for a variety of applications.

Settings 0-65535

×	84-78	PLC Application Parameter 0
×	04-71	PLC Application Parameter 1
×	04-72	PLC Application Parameter 2
×	04-73	PLC Application Parameter 3
×	84-34	PLC Application Parameter 4
×	84-75	PLC Application Parameter 5
×	84-78	PLC Application Parameter 6
×	84-77	PLC Application Parameter 7
×	87-78	PLC Application Parameter 8
×	84-79	PLC Application Parameter 9
×	88-28	PLC Application Parameter 10
×	8-28	PLC Application Parameter 11
×	88-P0	PLC Application Parameter 12
×	04-83	PLC Application Parameter 13
×	04-84	PLC Application Parameter 14
	04-85	PLC Application Parameter 15
	<u>88-88</u>	PLC Application Parameter 16
		PLC Application Parameter 17
		PLC Application Parameter 18
		PLC Application Parameter 19
		PLC Application Parameter 20
		PLC Application Parameter 21
		PLC Application Parameter 22
		PLC Application Parameter 23
		PLC Application Parameter 24
		PLC Application Parameter 25
		PLC Application Parameter 26
		PLC Application Parameter 27
		PLC Application Parameter 28
	84-33	PLC Application Parameter 29

Settings 0-65535

Pr. 04-70–Pr. 04-99 are user-defined parameters. You can combine these 30 PLC Application Parameters with the PLC programming for a variety of applications.

Default: 0

#### **05 Motor Parameters**

✓ This parameter can be set during operation.

## ☐ 5 - ☐ ☐ Motor Parameter Auto-Tuning

Default: 0

Settings 0: No function

- 1: Simple rolling auto-tuning for induction motor (IM)
- 2: Static auto-tuning for induction motor
- 4: Dynamic test for PM magnetic pole (with the running in forward direction)
- 5: Rolling auto-tuning for PM (IPM / SPM)
- 6: Advanced rolling auto-tuning for IM flux curve
- 12: FOC Sensorless inertia estimation
- 13: Static auto-tuning for PM (IPM / SPM)
- Refer to Section 12-2 "Adjustment and Application" for more details of motor adjustment process.

# 55-6 Full-load Current for Induction Motor 1 (A)

Default: Depending on

the model power

Settings Depending on the model power

- Sets this value according to the rated current of the motor as indicated on the motor nameplate.
- The default is 90% of the drive's rated current.

Example: The rated current for a 7.5 HP (5.5 kW) is 25 A. The default is 22.5 A.

The setting range is between 40%–120% of the rated current.

(25 \* 40% = 10 A and 25 \* 120% = 30 A)

## Rated Power for Induction Motor 1 (kW)

Default: Depending on

the model power

Settings 0.00–655.35 kW

Sets the rated power for motor 1. The default is the drive's power value.

## ★ # 5 - # 3 Rated Speed for Induction Motor 1 (rpm)

Default: Depending on

the motor pole number

Settings 0-xxxx (Depending on the motor pole number)

- Sets the rated speed for the motor as indicated on the motor nameplate.
- Pr. 01-01 and Pr. 05-04 determine the maximum rotor speed for IM.

For example: Pr. 01-01=20Hz, Pr. 05-04=2, according to the equation 120 x 20 Hz / 2 = 1200 rpm and take integers. Due to the slip of the IM, the maximum setting value for Pr. 05-03 is 1199rpm (1200rpm - 1).

06 00 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
<b>35 - 34</b> Number of Poles for Induction Motor 1	D. C. H. 4
0.41	Default: 4
Settings 2–64	
Sets the number poles for the motor (must be an even number).  Set up Pr. 01-01 and Pr. 05-03 before setting up Pr. 05-04 to r normally. Pr. 01-01 and Pr. 05-03 determine the maximum set up r For example: Pr. 01-01 = 20 Hz and Pr. 05-03 = 39 rpm, according 39rpm = 61.5 and take even number, the number of poles is 60. To the maximum of 60 poles.	number poles for the IM. ng to the equation 120 x 20Hz /
\$\mathcal{B} \overline{5} - \mathcal{B} \overline{5}\$ No-load Current for Induction Motor 1 (A)	
	Default: Depending on the model power
Settings 0.0-Pr. 05-01 default	
☐ For model with 110kW and above, default setting is 20% of motor	rated current.
Stator Resistance (Rs) for Induction Motor 1	
	Default: Depending
	on the model power
Settings 0.000–65.535 Ω	
<b>35-37</b> Rotor Resistance (Rr) for Induction Motor 1	
	Default: 0.000
Settings 0.000–65.535 Ω	
#5 - #8 Magnetizing Inductance (Lm) for Induction Motor 1	
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	
	Default: 0.0
Settings 0.0–6553.5 mH	
## Full-load Current for Induction Motor 2 (A)	
	Default: Depending
	on the model power
Settings Depending on the model power	
Set this value according to the rated current of the motor as indic	cated on the motor nameplate.
The default 90% of the drive's rated current.	
Example: The rated current for a 7.5 HP (5.5 kW) motor is 25 A. The patting range is between 40 % 420 % of rated current	he default is 22.5 A.
The setting range is between 40 %–120 % of rated current.	
25 * 40 % = 10 A and 25 * 120 % = 30 A	

4 OC 111	Data d Davis of a la disation Materia (1981)	
<b>* 85-14</b>	Rated Power for Induction Motor 2 (kW)	Defectly Demandian an
		Default: Depending on
	Cattings 0.00 CEE OF IAM	the model power
	Settings 0.00–655.35 kW	
₩ Set the	rated power for motor 2. The default is the drive's power value.	
<b>85-15</b>	Rated Speed for Induction Motor 2 (rpm)	
		Default: Depending on
		the motor pole number
	Settings 0-xxxx (Depending on the motor pole number)	
Sets the	e rated speed for the motor as indicated on the motor nameplate	
Pr. 01-0	11 and Pr. 05-04 determine the maximum rotor speed of IM.	
For exa	mple: Pr. 01-01 = 20Hz, Pr. 05-04 = 2, according to the equation	n 120 x 20 Hz / 2 = 1200
rpm and	d take integers. Due to the slip of the IM, the maximum setting v	alue for Pr. 05-15 is 1199
rpm (12	00 rpm – 1).	
05-18	Number of poles for Induction Motor 2	
		Default: 4
	Settings 2–64	
Sets the	number of poles for the motor (must be an even number).	
Set up I	Pr. 01-35 and Pr. 05-15 before setting up Pr. 05-16 to make sure	the motor operates
normall	y. Pr. 01-35 and Pr. 05-15 determine the maximum set up numbe	er of poles.
For exa	mple: Pr. 01-35 = 20 Hz and Pr. 05-15 = 39 rpm, according to t	he equation 120 x 20Hz /
39 rpm	= 61.5 and take even number, the number of poles is 60. There	fore, Pr. 05-16 can be set
to the m	naximum of 60 poles.	
09-13	No-load Current for Induction Motor 2 (A)	
0.5	( )	Default: Depending
		on the model power
	Settings 0.00-Pr. 05-13 default	·
For mod	del with 110kW and above, default setting is 20% of motor rated	current.
0.9 - 1.0	Stator Resistance (Rs) for Induction Motor 2	
00 10	Cate. Residence (1.6) for industrial motor 2	Default: Depending
		on the model power
	Settings 0.000–65.535 Ω	2 2 model ponel
	<u> </u>	
05-19	Rotor Resistance (Rr) for Induction Motor 2	
	, ,	Default: 0.000
	Settings $0.000-65.535 \Omega$	

Magnetizing Inductance (Lm) for Induction Motor 2

Stator Inductance (Lx) for Induction Motor 2

Default: 0.0

Settings 0.0-6553.5 mH

☐ 5 - 2 2 Induction Motor 1/ 2 Selection

Default: 1

Settings 1: Motor 1

2: Motor 2

Sets the motor currently operated by the AC motor drive.

Default: 60.00

Settings 0.00-599.00 Hz

# S - 2 4 Y-connection / Δ-connection Switch for Induction Motor

Default: 0

Settings 0: Disable


1: Enable

✓ ☐ 5 - 2 5 Delay Time for Y-connection / Δ-connection Switch for an Induction Motor.

Default: 0.200

Settings 0.000-60.000 sec.

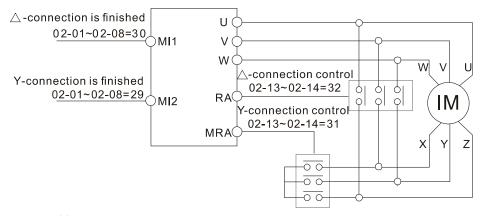
- You can apply Pr. 05-23–Pr. 05-25 in a wide range of motors, and the motor coil executes the Y-connection / Δ-connection switch as required. The wide range motors are related to the motor design. In general, the motor has higher torque with low speed Y-connection, and has higher speed with high speed Δ-connection).
- $\square$  Pr. 05-24 enables and disables the switch of Y-connection /  $\Delta$ -connection.
- When you set Pr. 05-24 as 1, the drive uses the Pr. 05-23 setting and current motor frequency, and switches the current motor to Y-connection or Δ-connection. You can switch the relevant motor parameter settings simultaneously.
- $\square$  Pr. 05-25 sets the switch delay time of Y-connection /  $\Delta$ -connection.
- When the output frequency reaches Y-connection /  $\Delta$ -connection switch frequency, the drive delays according to Pr. 05-25 before activating the multi-function output terminals.




Y- $\triangle$  connection switch: can be used for wide range motor

Y-connection for low speed: higher torque can be used for rigid tapping

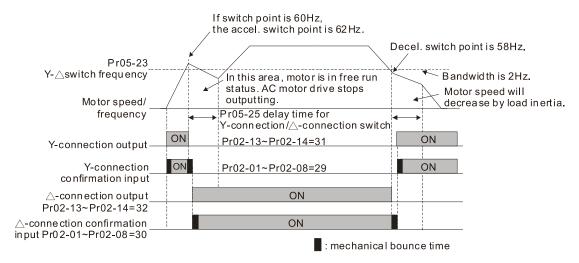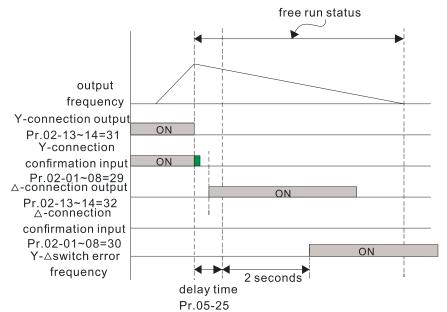 $\triangle$ -connection for high speed: higher torque can be used for high-speed drilling





## ## Accumulated Watt-hour for a Motor (W-hour)

Default: 0.0

Settings Read only

R5-29 Accumulated Watt-hour for a Motor in Low Word (kW-hour)

Default: 0.0

Settings Read only

Default: 0

#### Settings Read only

- Pr.05-28–05-30 records the amount of power consumed by the motors. The accumulation begins when the drive is activated and the record is saved when the drive stops or turns OFF. The amount of consumed watts continues to accumulate when the drive is activated again. To clear the accumulation, set Pr. 00-02 as 5 to return the accumulation record to 0.
- The accumulated total watts of the motor per hour = Pr. 05-30 x 1000000 + Pr. 05-29 x 1000 + Pr. 05-28 Wh

Example: When Pr. 05-30 = 76 MWh and Pr. 05-29 = 150 kWh, Pr. 05-28 = 400 Wh (or 0.4kWh), the accumulated total kilowatts of the motor per hour =  $76 \times 1000000 + 150 \times 1000 + 40 = 76150400$ Wh = 76150.4kWh

05-31	Accumula	stad Matan On anation Times (Min)	
	Accumula	ated Motor Operation Time (Min)	
			Default: 0
	Settings	0–1439	
05-32	Accumula	ated Motor Operation Time (Day)	
			Default: 0
	Settings	0–65535	
		Pr. 05-32 to record the motor operation time. To clease as 00. An operation time shorter than 60 seconds	<u>.</u>
05-33	Induction	Motor (IM) or Permanent Magnet Synchronous Mot	or Selection
			Default: 0
	Settings	0: IM (Induction Motor)	
		1: SPM (Surface permanent magnet motor)	
		2: IPM (Interior permanent magnet motor)	
05-34	Full-load	current for a Permanent Magnet Motor	
		· ·	Default: Depending
			on the model power
	Settings	Depending on the model power	
☐ Sets the		current for the motor according to motor's nameplate	The default is 90% of the
	ated currer	•	. The deladit is 50% of the
		rated current of a 7.5 HP (5.5 kW) is 25 A. The defa	ult is 22.5∆
	-	is between 40%–120% of rated current.	ait 10 22.07 t.
	•	and 25 * 120 % = 30 A	
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
05-35	Rated Po	war for a Darmanant Magnet Mater	
		wer for a Permanent Magnet Motor	
		wer for a Permanent Magnet Motor	Default: Depending on
		wer for a Permanent Magnet Motor	Default: Depending on the model power
	Settings	0.00–655.35 kW	
Sets the	Settings		the model power
Sets the power value	Settings rated pow	0.00–655.35 kW	the model power
power va	Settings rated pow	0.00–655.35 kW ver for the permanent magnet synchronous motor. T	the model power
power va	Settings rated pow	0.00–655.35 kW	the model power he default is the drive's
power va	Settings rated pow alue. Rated spe	0.00–655.35 kW ver for the permanent magnet synchronous motor. T eed for a Permanent Magnet Motor	the model power
power va	Settings rated pow alue. Rated spe	0.00–655.35 kW ver for the permanent magnet synchronous motor. T eed for a Permanent Magnet Motor  0–65535 rpm	the model power he default is the drive's
power va	Settings rated pow alue. Rated spe	0.00–655.35 kW ver for the permanent magnet synchronous motor. T eed for a Permanent Magnet Motor	the model power  he default is the drive's  Default: 2000
power va	Settings rated powers alue. Rated specifications Settings Pole number	0.00–655.35 kW  ver for the permanent magnet synchronous motor. T  eed for a Permanent Magnet Motor  0–65535 rpm  aber for a Permanent Magnet Motor	the model power he default is the drive's
power va	Settings rated powers alue. Rated specific Settings Pole number of Settings	0.00–655.35 kW  ver for the permanent magnet synchronous motor. T  eed for a Permanent Magnet Motor  0–65535 rpm  aber for a Permanent Magnet Motor  0–65535	the model power he default is the drive's  Default: 2000
power va	Settings rated powers alue. Rated specific Settings Pole number of Settings	0.00–655.35 kW  ver for the permanent magnet synchronous motor. T  eed for a Permanent Magnet Motor  0–65535 rpm  aber for a Permanent Magnet Motor	the model power he default is the drive's  Default: 2000
power va	Settings rated powers alue. Rated specific Settings Pole number of Settings	0.00–655.35 kW  ver for the permanent magnet synchronous motor. T  eed for a Permanent Magnet Motor  0–65535 rpm  aber for a Permanent Magnet Motor  0–65535	the model power he default is the drive's  Default: 2000
power va	Settings rated powers alue. Rated specific Settings Pole number of Settings	0.00–655.35 kW  ver for the permanent magnet synchronous motor. T  eed for a Permanent Magnet Motor  0–65535 rpm  aber for a Permanent Magnet Motor  0–65535	the model power  he default is the drive's  Default: 2000  Default: 10
power va	Settings rated powers alue. Rated specifications Settings Pole num Settings System In	0.00–655.35 kW  ver for the permanent magnet synchronous motor. T  eed for a Permanent Magnet Motor  0–65535 rpm  aber for a Permanent Magnet Motor  0–65535	the model power  he default is the drive's  Default: 2000  Default: 10  Default: Depending

#### Chapter 12 Description of Parameter Settings | C2000

Rated Power [kW]	0.4	0.75	1.5	2.2	3.7	5.5	7.5	9.3	11
Rotor inertia [kg-cm <sup>2</sup> ]	1.2	3.0	6.6	15.8	25.7	49.6	82.0	121.6	177.0

Rated Power [kW]	14.1	18.2	27	33	40	46	54	54 and above
Rotor inertia [kg-cm²]	211.0	265.0	308.0	527.0	866.0	1082.0	1267.6	1515.0

Default: 0.000

Settings  $0.000-65.535 \Omega$ 

Permanent Magnet Motor Ld

Default: 0.00

Settings 0.00-655.35 mH

## Permanent Magnet Motor Lq

Default: 0.00

Settings 0.00-655.35 mH

Default: 0

Settings 0.0-360.0°

When you set Pr. 05-00 as 4, the drive detects the offset angle and writes it into Pr. 05-42.

★ 35 - 43 Ke Parameter of a Permanent Magnet Motor

Default: 0

Settings 0–65535 V / krpm

- Permanent magnet motor parameter Ke (V<sub>phase, rms</sub> / krpm)
- When Pr. 05-00 = 5, parameter Ke is calculated according to the motor's actual operation.
- When Pr. 05-00 = 13, parameter Ke is automatically calculated according to the motor power, current and rotor speed.

#### **06 Protection Parameters**

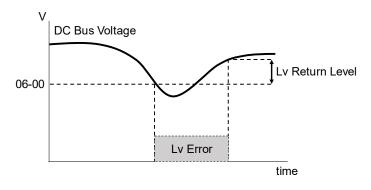
★ This parameter can be set during operation.

# ✓ \$\frac{1}{2} \frac{1}{2} \frac{1} \frac{1}{2} \frac{1}{2} \frac{1}{2} \frac{1}{2} \frac{1}{2} \f

		Default:
Settings	230V series:	
	Frame A–D (including D0): 150.0–220.0 V <sub>DC</sub>	180.0
	Frame E and above: 190.0–220.0 V <sub>DC</sub>	200.0
	460V series:	
	Frame A–D (including D0): 300.0–440.0 V <sub>DC</sub>	360.0
	Frame E and above: 380.0–440.0 V <sub>DC</sub>	400.0
	575V series: 420.0–520.0 V <sub>DC</sub>	470.0
	690V series: 450.0–660.0 V <sub>DC</sub>	480.0

- Sets the Low Voltage (Lv) level. When the DC BUS voltage is lower than Pr. 06-00, the drive stops output and the motor free runs to a stop.
- If the Lv fault is triggered during operation, the drive stops output and the motor free runs to a stop. There are three Lv faults: LvA (Lv during acceleration), Lvd (Lv during deceleration), and Lvn (Lv in constant speed) that are triggered according to the status of acceleration or deceleration. You must press RESET to clear the Lv fault. The drive automatically restarts if you set to restart after momentary power loss (refer to Pr.07-06 Restart after Momentary Power Loss and Pr.07-07 Allowed Power Loss Duration for details).
- If the Lv fault is triggered when the drive is in STOP status, the drive displays LvS (Lv during stop), which is not recorded, and the drive restarts automatically when the input voltage is higher than Pr. 06-00 + Lv return level (as listed below).

Lv Return Level	230V	460V	575V	690V
Frame A–D	30V <sub>DC</sub>	60V <sub>DC</sub>	100V <sub>DC</sub>	100V <sub>DC</sub>
Frame E-H	40V <sub>DC</sub>	80V <sub>DC</sub>	TOOVDC	120V <sub>DC</sub>



## 

Default:

380.0/760.0/920.0/1087.0

Settings 230V series: 0.0–450.0 V<sub>DC</sub>

460V series:  $0.0-900.0V_{DC}$ 575V series:  $0.0-920.0~V_{DC}$ 690V series:  $0.0-1087.0~V_{DC}$ 

0: Disabled

- Setting Pr. 06-01 to 0.0 disables the over-voltage stall prevention function (connected with braking unit or braking resistor). Use this setting when braking units or resistors are connected to the drive.
- Setting Pr.06-01 to a value > 0 enables the over-voltage stall prevention. This setting refers to the power supply system and loading. If the setting is too low, then over-voltage stall prevention is easily activated, which may increase the deceleration time.
- Related parameters:
  - Pr. 01-13, Pr. 01-15, Pr. 01-17, Pr. 01-19 Deceleration Time 1–4
  - Pr. 02-13–Pr. 02-14 Multiple-function Output (Relay 1 and 2)
  - Pr. 02-16–Pr. 02-17 Multiple-function output (MO 1 and 2)
  - Pr. 06-02 Selection for Over-voltage Stall Prevention.


## Selection for Over-voltage Stall Prevention

Default: 0


Settings 0: Traditional over-voltage stall prevention

1: Smart over-voltage stall prevention

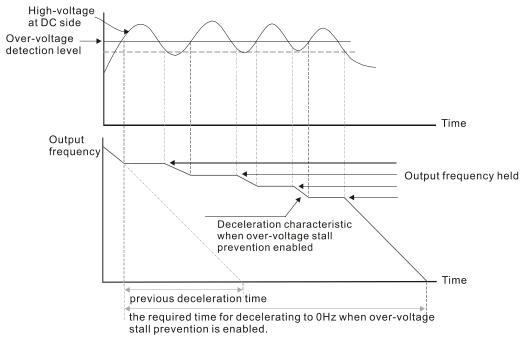- Use this function when you are unsure about the load inertia. When stopping under normal load, the over-voltage does not occur during deceleration and meet the deceleration time setting. Sometimes it may not stop due to over-voltage during decelerating to STOP when the load regenerative inertia increases. In this case, the AC motor drive extends the deceleration time automatically until the drive stops.
- When you set Pr.06-02 to 0, during deceleration the motor exceeds the synchronous speed due to load inertia. In this case, the motor becomes an electrical generator. The DC BUS voltage may exceed its maximum allowable value due to motor regeneration in some situations, such as loading inertia being too high or deceleration time being set too short. When you enable traditional over-voltage stall prevention and the DC BUS voltage detected is too high, the drive stops decelerating (output frequency remains unchanged) until the DC BUS voltage drops below the setting value.



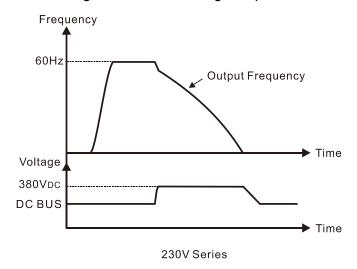When you set Pr. 06-02 to 1, to use smart over-voltage stall prevention during deceleration, the drive maintains the DC BUS voltage when decelerating and prevents the drive from ov.




- When you enable the over-voltage stall prevention, the drive's deceleration time is longer than the setting.
- If you encounter any problem with deceleration time, refer to the following guides for troubleshooting.
  - 1. Increase the deceleration time to a suitable value.
  - 2. Install a brake resistor (refer to Section 7-1 All Brake Resistors and Brake Units Used in AC motor Drives for details) to dissipate the electrical energy that is regenerated from the motor.
- Related parameters:
  - Pr. 01-13, Pr. 01-15, Pr. 01-17, Pr. 01-19 Deceleration Time 1–4
  - Pr. 02-13–Pr. 02-14 Multiple-function Output (Relay 1 and 2)
  - Pr. 02-16–Pr. 02-17 Multiple-function Output (MO1 and 2)
  - Pr. 06-01 Over-voltage Stall Prevention.

## ✓ ☐ ☐ ☐ ☐ ☐ ☐ Over-current Stall Prevention during Acceleration

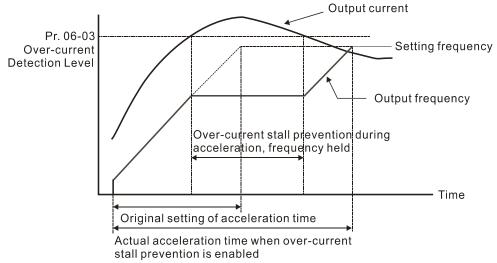Settings	230V/460V series	
	Normal duty: 0-160% (100%: drive's rated current)	Default: 120
	Heavy duty: 0-180% (100%: drive's rated current)	Default: 120
	575V/690V series	
	Light duty: 0-125% (100%: drive's rated current)	Default: 120
	Normal duty: 0-150% (100%: drive's rated current)	Default: 120
	Heavy duty: 0-180% (100%: drive's rated current)	Default: 150

- This parameter only works in VF, VFPG, and SVC control mode.
- If the motor load is too large or the drive's acceleration time is too short, the output current of the drive may be too high during acceleration, and it may cause motor damage or trigger protection functions (oL or oc). Use this parameter to prevent these situations.
- During acceleration, the output current of the drive may increase abruptly and exceed the value of Pr. 06-03. In this case, the drive stops accelerating and keeps the output frequency constant, and then continues to accelerate until the output current decreases.


- When you enable the over-current stall prevention, the drive's acceleration time is longer than the setting.
- When the over-current stall prevention occurs because the motor capacity is too small or operates in the default, decrease the Pr.06-03 setting value.
- When you encounter any problem with the acceleration time, refer to the following guides for troubleshooting.
  - Increase the acceleration time to a suitable value.
  - 2. Set Pr. 01-44 Auto Acceleration / Deceleration Setting to 1, 3 or 4 (auto-acceleration).
- Related parameters:
  - Pr. 01-12, Pr. 01-14, Pr. 01-16, Pr. 01-18 Acceleration Time 1–4
  - Pr. 01-44 Auto Acceleration / Deceleration Setting
  - Pr. 02-13–02-14 Multi-function Output 1 (RY1 and RY2)
  - Pr. 02-16–02-17 Multi-function Output (MO1 and 2)



## ✓ # Over-current Stall Prevention during Operation

Settings	230V/460V series		
	Normal duty: 0–160% (100%: drive's rated current)	Default: 120	
	Heavy duty: 0-180% (100%: drive's rated current)	Default: 120	
	575V/690V series		
	Light duty: 0-125% (100%: drive's rated current)	Default: 120	
	Normal duty: 0-150% (100%: drive's rated current)	Default: 120	
	Heavy duty: 0-180% (100%: drive's rated current)	Default: 150	

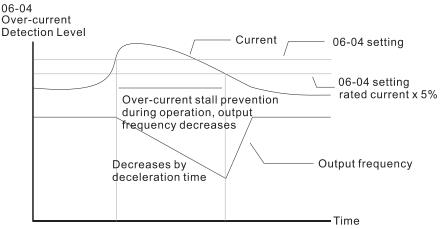- This parameter only works in VF, VFPG, and SVC control modes.
- ☐ This is a protection for the drive to decrease output frequency automatically when the motor over-loads abruptly during constant motor operation.
- If the output current exceeds the setting value for Pr. 06-04 when the drive is operating, the drive decreases output frequency (according to Pr. 06-05) to prevent the motor from stalling. If the output current is lower than the setting value for Pr. 06-04, the drive accelerates (according to Pr. 06-05) again to the setting frequency.



Over-current stall prevention during operation

## ★ G - G 5 Acceleration / Deceleration Time Selection of Stall Prevention at Constant Speed

Default: 0

Settings 0: By current acceleration / deceleration time

1: By the 1st acceleration / deceleration time

2: By the 2<sup>nd</sup> acceleration / deceleration time

3: By the 3<sup>rd</sup> acceleration / deceleration time

4: By the 4th acceleration / deceleration time

5: By automatic acceleration / deceleration

Sets the acceleration / deceleration time selection when stall prevention occurs at constant speed.

## ✓ ☐ F - ☐ F Over-torque Detection Selection (OT1)

Default: 0

Settings 0: No function

- 1: Continue operation after over-torque detection during constant speed operation
- 2: Stop after over-torque detection during constant speed operation
- 3: Continue operation after over-torque detection during RUN
- 4: Stop after over-torque detection during RUN

## Over-torque Detection Selection (OT2)

Default: 0

Settings 0: No function

- 1: Continue operation after over-torque detection during constant speed operation
- 2: Stop after over-torque detection during constant speed operation
- 3: Continue operation after over-torque detection during RUN
- 4: Stop after over-torque detection during RUN
- When you set Pr. 06-06 and Pr. 06-09 to 1 or 3, a warning message displays, but there is no error record.
- When you set Pr. 06-06 and Pr. 06-09 to 2 or 4, a warning message displays and there is an error record.

✓ ☐ ☐ ☐ ☐ ☐ Over-torque Detection Level (OT1)

Default: 120

Settings 10–250% (100% corresponds to the rated current of the drive)

✓ ☐ ☐ ☐ Over-torque Detection Level (OT1)

Default: 0.1

Settings 0.0-60.0 sec.

✓ ☐ 6 - ☐ Over-torque Detection Level (OT2)


Default: 120

Settings 10–250% (100% corresponds to the rated current of the drive)


Default: 0.1


Settings 0.0-60.0 sec.

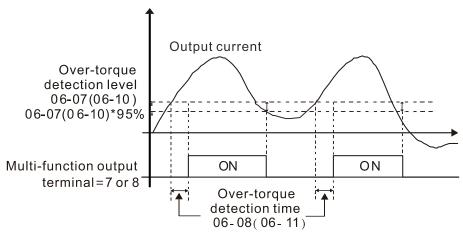
- When the output current exceeds the over-torque detection level (Pr. 06-07 or Pr. 06-10) and exceeds the over-torque detection time (Pr. 06-08 or Pr. 06-11), the over-torque detection follows the setting of Pr. 06-06 and Pr. 06-09.
- When you set Pr. 06-06 or Pr. 06-09 to 1 or 3, an ot1 / ot2 warning displays while the drive keeps running. The warning remains on until the output current is smaller than 5% of the over-torque detection level.




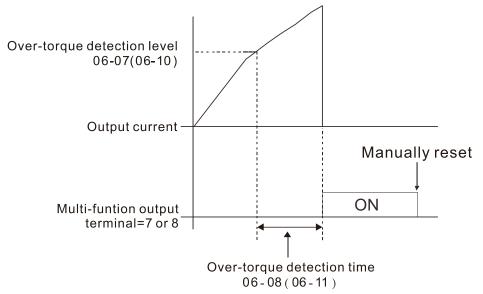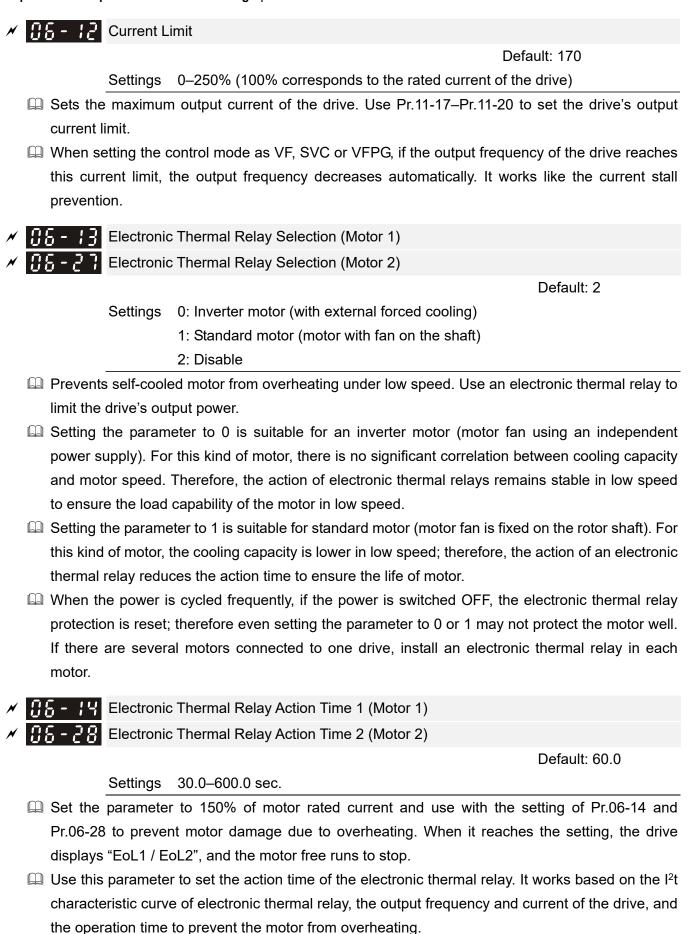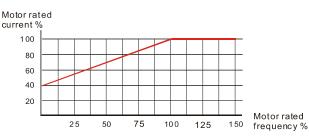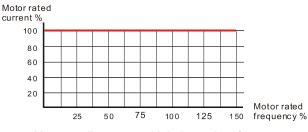When you set Pr. 06-06 or Pr. 06-09 to 2 or 4, an ot1 / ot2 warning displays and the drive stops running after over-torque detection. The drive keeps running after you manually reset it.










Motor cooling curve with shaft-fixed fan Motor cooling curve with independent fan

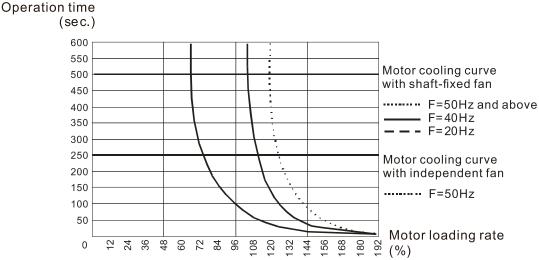- The action of electronic thermal relay depends on the setting for Pr. 06-13 and Pr. 06-27.
  - Pr. 06-13 or Pr. 06-27 set to 0 (using inverter motor):
     When the output current of motor drive is higher than 150% of motor rated current (refer to the motor cooling curve with independent fan), motor drive starts to count the time. The electronic thermal relay acts when the accumulated time exceeds Pr. 06-14 or Pr. 06-28.
  - 2. Pr. 06-13 or Pr. 06-27 is set to 1 (using standard motor): When the output current of the drive is higher than 150% of the motor rated current (refer to the motor cooling curve with shaft-fixed fan), the drive starts to count the time. The electronic thermal relay acts when the accumulated time exceeds Pr. 06-14 or Pr. 06-28.
  - 3. If the motor's rated current (Pr. 05-01) is not set, then set 90% of the drive's rated current (Pr. 00-01) as the default value of this parameter.
- The actual electronic thermal relay action time adjusts according to the drive output current (shown as the motor loading rate %). The action time is short when the current is high, and the action time is long when the current is low. Refer to the following chart: (The motor cooling curve with shaft-fixed fan and motor cooling curve with independent fan F = 50 Hz are the same one.)





Default: 105.0

Settings 0.0-110.0°C

- If Pr. 06-15 is set to 110°C, when the temperature reaches 110°C, the drive stops with an IGBT over-heat fault.
- For Frame C and above, when IGBT temperature is above Pr. 06-15 minus 15°C, the cooling fan enhances performance to 100%; however, when IGBT temperature is below 35°C of Pr. 06-15 and the temperature of CAP is below 10°C of capacitor oH warning level (Pr. 06-51), the cooling fan resets. The temperature 35°C is the criterion if Pr. 06-15 is set below 35°C.

Stall Prevention Limit Level (Weak Magnetic Area Current Stall Prevention Level)

Default: 100

Settings 0–100% (Refer to Pr. 06-03, Pr. 06-04)

- Sets the over-current stall prevention level when operation frequency is larger than Pr.01-01. This parameter only works during acceleration.
- Example: Pr. 06-03 = 150%, Pr. 06-04 = 100% and Pr. 06-16 = 80%, when the operation frequency is larger than Pr. 01-01, the over-current stall prevention Level during acceleration is: Pr. 06-03 × Pr. 06-16 = 150 × 80% = 120%.
- Pr. 06-16 is invalid when the over-current stall prevention activates according to Pr. 06-04 at constant speed.

#### Settings

- 0: No fault record
- 1: Over-current during acceleration (ocA)
- 2: Over-current during deceleration (ocd)
- 3: Over-current during constant speed(ocn)
- 4: Ground fault (GFF)
- 5: IGBT short-circuit (occ)
- 6: Over-current at stop (ocS)
- 7: Over-voltage during acceleration (ovA)
- 8: Over-voltage during deceleration (ovd)
- 9: Over-voltage during constant speed (ovn)
- 10: Over-voltage at stop (ovS)
- 11: Low-voltage during acceleration (LvA)
- 12: Low-voltage during deceleration (Lvd)
- 13: Low-voltage during constant speed (Lvn)
- 14: Low-voltage at stop (LvS)
- 15: Phase loss protection (OrP)
- 16: IGBT over-heat (oH1)
- 17: Capacitance over-heat (oH2)
- 18: tH1o (TH1 open: IGBT over-heat protection error)
- 19: tH2o (TH2 open: capacitance over-heat protection error)
- 21: Drive over-load (oL)
- 22: Electronics thermal relay protection 1 (EoL1)
- 23: Electronics thermal relay protection 2 (EoL2)
- 24: Motor PTC overheat (oH3) (PTC / PT100)

- 26: Over-torque 1 (ot1)
- 27: Over-torque 2 (ot2)
- 28: Low current (uC)
- 29: Home limit error (LMIT)
- 30: Memory write-in error (cF1)
- 31: Memory read-out error (cF2)
- 33: U-phase current detection error (cd1)
- 34: V-phase current detection error (cd2)
- 35: W-phase current detection error (cd3)
- 36: Clamp current detection error (Hd0)
- 37: Over-current detection error (Hd1)
- 38: Over-voltage detection error (Hd2)
- 39: IGBT short-circuit detection error (Hd3)
- 40: Auto-tuning error (AUE)
- 41: PID feedback loss (AFE)
- 42: PG feedback error (PGF1)
- 43: PG feedback loss (PGF2)
- 44: PG feedback stall (PGF3)
- 45: PG slip error (PGF4)
- 48: Analog current input loss (ACE)
- 49: External fault input (EF)
- 50: Emergency stop (EF1)
- 51: External Base Block (bb)
- 52: Password error (PcodE)
- 54: Communication error (CE1)
- 55: Communication error (CE2)
- 56: Communication error (CE3)
- 57: Communication error (CE4)
- 58: Communication Time-out (CE10)
- 60: Brake transistor error (bF)
- 61: Y-connection /  $\Delta$ -connection switch error (ydc)
- 62: Deceleration Energy Backup error (dEb)
- 63: Slip error (oSL)
- 64: Electromagnet switch error (ryF)
- 65: PG Card Error (PGF5)
- 68: Sensorless estimated speed have wrong direction
- 69: Sensorless estimated speed is over speed
- 70: Sensorless estimated speed deviated
- 71: Watchdog
- 72: Channel 1 (STO1–SCM1) safety loop error (STL1)
- 73: External safety gate (S1)
- 75: External brake error

76: Safe Torque Off (STO) 77: Channel 2 (STO2–SCM2) safety loop error (STL2) 78: Internal loop error (STL3) 82: U phase output phase loss (OPHL) 83: V phase output phase loss (OPHL) 84: W phase output phase loss (OPHL) 85: PG-02U ABZ hardware disconnection 86: PG-02U UVW hardware disconnection 87: oL3 Low frequency overload protection 89: RoPd initial rotor position detection error 90: Inner PLC function is forced to stop 93: CPU error 101: CANopen software disconnect 1 (CGdE) 102: CANopen software disconnect 2 (CHbE) 104: CANopen hardware disconnect (CbFE) 105: CANopen index setting error (CldE) 106: CANopen slave station number setting error (CAdE) 107: CANopen index setting exceed limit (CFrE) 111: Internal communication overtime error (ictE) 112: PM sensorless shaft Lock error 142: Auto-tuning error 1 (no feedback current error) (AUE1) 143: Auto-tuning error 2 (motor phase loss error) (AUE2) 144: Auto-tuning error 3 (no-load current I<sub>0</sub> measuring error) (AUE3) 148: Auto-tuning error (leakage inductance Lsigma measuring error) (AUE4) When the fault occurs and forces stopping, the fault is recorded in this parameter. During stop with low voltage Lv (LvS warning), there is no error record. During operation with mid-low voltage Lv (LvA, Lvd, Lvn error), there is a record. When dEb function is valid and enabled, the drive executes dEb and records fault code 62 to Pr. 06-17-Pr. 06-22 simultaneously. ✓ HH - Z - Fault Output Option 1 ★ III - III Fault Output Option 2 ## Fault Output Option 3 Fault Output Option 4 Default: 0 Settings 0–65535 sec. (refer to bit table for fault code) ☐ Use these parameters with multi-function output terminal (set to 35–38) for the specific requirement. When the fault occurs, the corresponding terminals activate. Convert the binary

value to decimal value before you enter the value for Pr. 06-23-Pr. 06-26.

Fault Code	bit0	bit1	bit2	bit3	bit4	bit5	bit6
1 aut Code	current	Volt.	OL	SYS	FBK	EXI	CE
0: No fault record							
1: Over-current during acceleration (ocA)	•						
2: Over-current during deceleration (ocd)	•						
3: Over-current during constant speed(ocn)	•						
4: Ground fault (GFF)	•						
5: IGBT short-circuit (occ)	•						
6: Over-current at stop (ocS)	•						
7: Over-voltage during acceleration (ovA)		•					
8: Over-voltage during deceleration (ovd)		•					
9: Over-voltage during constant speed (ovn)		•					
10: Over-voltage at stop (ovS)		•					
11: Low-voltage during acceleration (LvA)		•					
12: Low-voltage during deceleration (Lvd)		•					
13: Low-voltage during constant speed (Lvn)		•					
14: Low-voltage at stop (LvS )		•					
15: Phase loss protection (OrP)		•					
16: IGBT over-heat (oH1)			•				
17: Capacitance over-heat (oH2)			•				
18: tH1o (TH1 open)			•				
19: tH2o (TH2 open)			•				
21: Drive over-load (oL)			•				
22: Electronics thermal relay protection 1 (EoL1)			•				
23: Electronics thermal relay 2 protection (EoL2)			•				
24: Motor PTC overheat (oH3) (PTC / PT100)			•				
26: Over-torque 1 (ot1)			•				
27: Over-torque 2 (ot2)			•				
28: Low current (uC)	•						
29: Home limit error (LMIT)						•	
30: Memory write-in error (cF1)				•			
31: Memory read-out error (cF2)				•			
33: U-phase current detection error (cd1)				•			
34: V-phase current detection error (cd2)				•			
35: W-phase current detection error (cd3)				•			
36: Clamp current detection error (Hd0)				•			
37: Over-current detection error (Hd1)				•			
38: Over-voltage detection error (Hd2)				•			
39: IGBT short-circuit detection error (Hd3)				•			
40: Auto-tuning error (AUE)				•			

Fault Code		bit1	bit2	bit3	bit4	bit5	bit6
Taut Code	current	Volt.	OL	SYS	FBK	EXI	CE
41: PID feedback loss (AFE)					•		
42: PG feedback error (PGF1)					•		
43: PG feedback loss (PGF2)					•		
44: PG feedback stall (PGF3)					•		
45: PG slip error (PGF4)					•		
48: Analog current input loss (ACE)					•		
49: External fault input (EF)						•	
50: Emergency stop (EF1)						•	
51: External Base Block (bb)						•	
52: Password error (Pcod)				•			
54: Communication error (CE1)							•
55: Communication error (CE2)							•
56: Communication error (CE3)							•
57: Communication error (CE4)							•
58: Communication time-out (CE10)							•
60: Brake transistor error (bF)						•	
61: Y-connection/∆-connection switch error (ydc)						•	
62: Deceleration Energy Backup error (dEb)		•					
63: Slip error (oSL)						•	
64: Electromagnet switch error (ryF)						•	
65: PG Card Error (PGF5)						•	
68: Sensorless estimated speed have wrong							
direction					•		
69: Sensorless estimated speed is over speed					•		
70: Sensorless estimated speed deviated					•		
72: Channel 1 (STO1–SCM1) safety loop error				_			
(STL1)				•			
73: External safety gate S1				•			
75: external brake error						•	
76: Safe Torque Off (STO)				•			
77: Channel 2 (STO2–SCM2) safety loop error							
(STL2)							
78: Internal loop error (STL3)				•			
82: U phase output phase loss (OPHL)	•						_
83: V phase output phase loss (OPHL)	•						
84: W phase output phase loss (OPHL)	•						
85: PG-02U ABZ hardware disconnection					•		_
86: PG-02U UVW hardware disconnection					•		

Fault Code		bit1	bit2	bit3	bit4	bit5	bit6
		Volt.	OL	SYS	FBK	EXI	CE
89: Initial rotor position detection error					•		
90: Inner PLC function is forced to stop				•			
101: CANopen software disconnect 1 (CGdE)							•
102: CANopen software disconnect 2 (CHbE)							•
104: CANopen hardware disconnect (CbFE)							•
105: CANopen index setting error (CldE)							•
106: CANopen slave station number setting error							
(CAdE)							•
107: CANopen index setting exceed limit (CFrE)							•
111: Internal communication overtime error (ictE)							•
112: PM sensorless shaft Lock error					•		

# ★ # F - 2 B PTC Detection Selection / PT100 Motion Default: 0 Settings 0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning Sets the operation mode of a drive after you set Pr. 06-29 to define PTC / PT100 / KTY84 detection. ✓ ☐ ☐ ☐ PTC Level / KTY84 Level Default: 50.0 Settings 0.0-100.0 % When Pr. 06-86 = 0, the setting range is 0.0-100.0, with unit %, and the default is 50.0%. When Pr. 06-86 = 1, the setting range is 0.0–150.0, with unit °C, and the default is 125.0°C Sets AVI/ACI/AUI analog input function Pr. 03-00-03-02 to 6 [Positive Temperature Coefficient (P.T.C.) thermistor input value]. The AUI terminal does not support KTY84-130. Use this to set the PTC / KTY84 level, the corresponding value for 100% is the analog input maximum value.

# ☐ 6 - 3 | Frequency Command for Malfunction

Default: Read only

Settings 0.00-599.00 Hz

When a malfunction occurs, check the current frequency command. If it happens again, it overwrites the previous record.

When Pr. 06-86 is set as KTY84, Pr. 06-30 setting range and the unit changes automatically.

overwrites the previous record.

☐ 6 - 3 ≥ Output Frequency at Malfunction	
	Default: Read only
Settings 0.00–599.00 Hz	
When a malfunction occurs, check the current output frequency. If it has	appens again, it overwrites
the previous record.	
⊕	
	Default: Read only
Settings 0.0–6553.5 V	
☐ When a malfunction occurs, check the current output voltage. If it happe	ens again, it overwrites the
previous record.	
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	
•	Default: Read only
Settings 0.0–6553.5 V	
When a malfunction occurs, check the current DC voltage. If it happe	ns again, it overwrites the
previous record.	
○	
	Default: Read only
Settings 0.0–6553.5 Amp	
When a malfunction occurs, check the current output current. If it happe	ens again, it overwrites the
previous record.	
## IGBT Temperature at Malfunction	
00 30 lest temperature at manarieue.	Default: Read only
Settings -3276.7–3276.7°C	,
When a malfunction occurs, check the current IGBT temperature	e. If it happens again, it
overwrites the previous record.	
66 3 T Superium Strate at Mananeten	Default: Read only
Settings -3276.7–3276.7°C	,
When a malfunction occurs, check the current capacitance temperate	ure. If it happens again, it
overwrites the previous record.	
The The intotol opeed in this at mailunction	Default: Read only
Settings -32767-32767 rpm	Doladit. Fload offiy

When a malfunction occurs, check the current motor speed in rpm. If it happens again, it

05-39 To	rque Co	mmand at Malfunction	
			Default: Read only
Se	ettings	-32767–32767%	
When a ma	alfunction	occurs, check the current torque command. If it happe	ens again, it overwrites
the previous	s record	•	
OF HOS	otus of th	ne Multi-function Input Terminal at Malfunction	
00-50	สเนร 01 แ	ie Multi-iunction input Terminal at Manunction	Default: Dead only
So	ottingo	0000h EEEEh	Default: Read only
_		0000h-FFFFh	
00-41	สเนร 01 แ	ne Multi-function Output Terminal at Malfunction	Default: Dead only
So	ottingo	0000h FFFFh	Default: Read only
		0000h-FFFFh	autout tomoinale If it
		on occurs, check the status of multi-function input /	output terminais. Ii it
		verwrites the previous record.	
86-45 Dri	ive Statu	us at Malfunction	
			Default: Read only
Se	ettings	0000h-FFFFh	_
	alfunction	n occurs, check the current drive status (communicatio	n address 2101H). If it
happens ag	gain, it o	verwrites the previous record.	
/ 06-44 ST	ΓΟ Latch	Selection	
			Default: 0
Se	ettings	0: STO latch	
		1: STO no latch	
Pr. 06-44 =	= 0: ST0	O Alarm Latch. After you clear the cause of the STG	O Alarm, use a Reset
command to	o clear t	he STO Alarm.	
Pr. 06-44 =	1: STO	Alarm no Latch. After you clear the cause of the STO	Alarm, the STO Alarm
clears autor	matically	<i>1</i> .	
All of STL1-	–STL3 e	errors are "Alarm Latch" mode (in STL1–STL3 mode, the	ne Pr. 06-44 function is
no effective	<del>)</del> ).		
198-45 Tre	eatment	to Output Phase Loss Protection (OPHL)	
00 13		(0)	Default: 3
Se	ettings	0: Warn and continue operation	
	•	1: Warn and ramp to stop	
		2: Warn and coast to stop	
		3: No warning	
☐ The OPHL		unction is active when the setting is not 3.	
		•	
6 6 - 4 6 De	etection	Time of Output Phase Loss	
~		0.000 05 505	Default: 3.000
Se	ettings	0.000-65.535 sec.	

✓ ☐ Current Detection Level for Output Phase Loss

Default: 1.00

Settings 0.00-100.00%


N S - 48 DC Brake Time of Output Phase Loss

Default: 0.000

Settings 0.000-65.535 sec.


- Setting Pr. 06-48 to 0 disables the OPHL detection function.
- Status 1: The drive is in operation

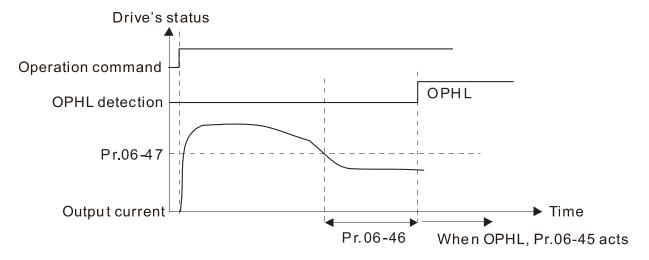When any phase is less than the Pr. 06-47 setting, and exceeds the Pr. 06-46 setting time, the drive executes according to the Pr. 06-45 setting.




☐ Status 2: The drive is in STOP; Pr. 06-48 = 0; Pr. 07-02  $\neq$  0

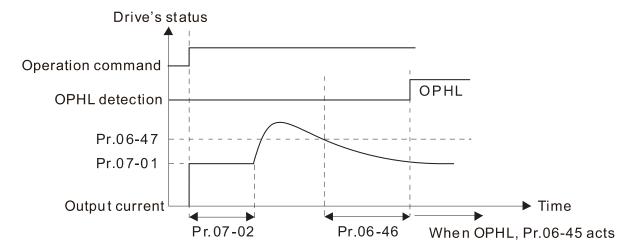After the drive starts, the DC brake operates according to Pr. 07-01 and Pr. 07-02. During this period, OPHL detection is not active. After the DC brake action is completed, the drive starts to run, and enables the OPHL protection as mentioned above for status 1.





 $\square$  Status 3: The drive is in STOP; Pr. 06-48  $\neq$  0; Pr. 07-02  $\neq$  0

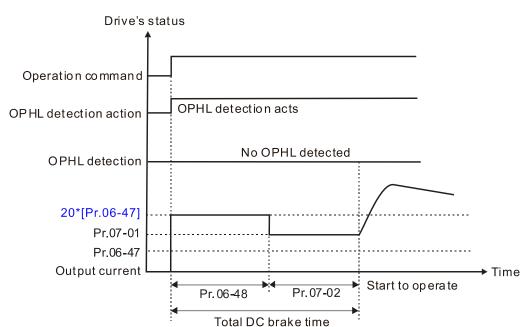When the drive starts, it executes Pr. 06-48 first, and then executes Pr. 07-02 (DC brake). The DC brake current level in this state includes two parts: one is 20 times the Pr. 06-47 setting value in Pr. 06-48 setting time; the other is the Pr. 07-01 setting value in Pr. 07-02 setting time. In this period, if an OPHL happens within the time for Pr. 06-48, the drive executes the Pr. 06-45 setting after the drive starts counting for half the time of Pr. 06-48.




Status 3-1: Pr. 06-48  $\neq$  0, Pr. 07-02  $\neq$  0 (No OPHL detected before operation)




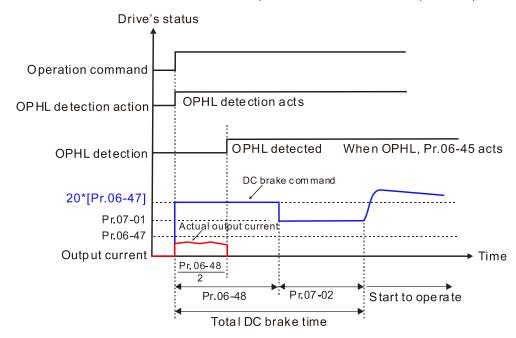


Status 4: The drive is in STOP; Pr. 06-48 ≠ 0; Pr. 07-02 = 0

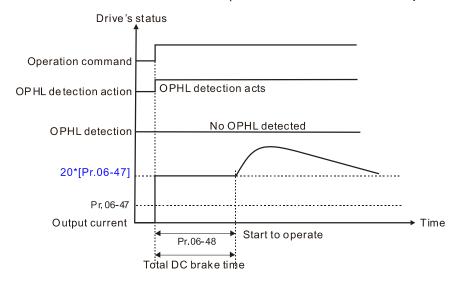When the drive starts, it executes Pr. 06-48 as the DC brake. The DC brake current level is 20 times the Pr. 06-47 setting value. In this period, if an OPHL happens within the time for Pr. 06-48, the drive executes the Pr. 06-45 setting after the drive starts counting for half the time of Pr.06-48.





Status 4-2: Pr. 06-48  $\neq$  0, Pr. 07-02 = 0 (OPHL detected before operation)

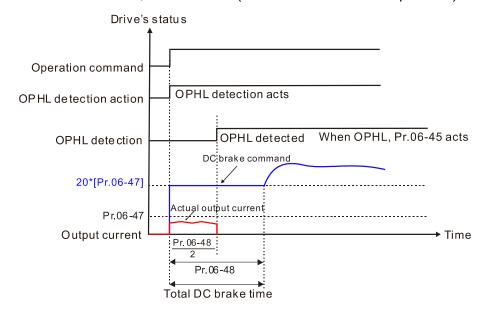

★ BB - 49 LvX Auto-reset

Default: 0

Settings 0: Disable

1: Enable

Time for Input Phase Loss Detection

Default: 0.20

Settings 0.00-600.00 sec.

### 

Default: Depending on the model power

Settings 0.0-110.0 degree

- Sets the over-heat warning level of the drive's internal DCBUS capacitor.
- When the setting is less than 10.0 degree, the drive uses its internal capacitor oH warning level.

### 

Default:

30.0/60.0/75.0/90.0

Settings 230V series: 0.0–160.0 V<sub>DC</sub>

 $460V \ series: 0.0-320.0 \ V_{DC}$   $575V \ series: 0.0-400.0 \ V_{DC}$   $690V \ series: 0.0-480.0 \ V_{DC}$ 

# 

Default: 0

Settings 0: Warn and ramp to stop
1: Warn and coast to stop

- When the drive detects the DC BUS ripple exceeds the setting for Pr. 06-52, and lasts for the time of Pr. 06-50 plus 30 seconds, the drive executes the input phase loss protection according to Pr. 06-53.
- During the time of Pr. 06-50 plus 30 seconds, if the DCBUS ripple drops lower than the setting for Pr. 06-52, the Orp protection recalculates.

### ✓ \$6 - 55 Derating Protection

Default: 0

- Settings 0: Constant rated current and limit carrier wave by load current and temperature
  - 1: Constant carrier frequency and limit load current by setting carrier wave
  - 2: Constant rated current (same as setting 0), but close current limit
- The maximum output frequency and its corresponded carrier frequency lower limit under each control mode:

VF, SVC and VFPG: 600Hz, 6K

FOCPG: 600Hz, 12K

FOC sensorless (IM): 300Hz, 6K
FOC sensorless (PM): 500Hz, 10K

Setting 0:

When the operating point is greater than the derating curve, the rated current is constant, and carrier frequency (Fc) output by the drive decreases automatically according to the ambient temperature, overload output current and overload time. If overloads are not frequent, and the concern is only about the carrier frequency operating with the rated current for a long time, and changes to the carrier wave due to short overload are acceptable, set to 0.

Refer to Section 9-7 "Derating Curve of Ambient Temperature" for the level of carrier frequency. Take VFD007C43A Normal Duty for example: ambient temperature 50°C, UL Open Type, and independent installation. When the carrier frequency is set to 15kHz, it corresponds to 75% of the rated output current. When the output current is higher than this value, it automatically decreases the carrier wave according to the ambient temperature, output current and overload time. At this time, the overload capacity of the drive is still 120% of the rated current.

### Setting 1:

When the operating point exceeds derating curve 1, the carrier frequency is fixed to the set value. Select this mode if the change of carrier wave and motor noise caused by ambient temperature and frequent overload are not acceptable. Refer to Pr.00-17.

Refer to Section 9-7 "Derating Curve of Ambient Temperature" for the derating level of the rated current. Take VFD007C43A Normal Duty for example, when the carrier frequency maintains at 15kHz, the rated current decreases to 72%. The oL protection executes when the current is 120%\*72%=86% for one minute; therefore, it must operate by the curve to keep the carrier frequency.

#### Setting 2:

The protection method and action are the same as setting it to 0, but this disables the current limit when output current is the derating ratio ×180% (default value). The advantage is that this can provide a higher starting output current when the carrier frequency setting is higher than the default. The disadvantage is that the carrier wave derates easily when it overloads.

Example: when Pr. 06-55 = 0 or 1, over-current stall prevention level = ratio \* Pr. 06-03. When Pr. 06-55 = 2, the over-current stall prevention level = Pr. 06-03.

- Use with the settings for Pr. 00-16 and Pr. 00-17.
- The ambient temperature also affects the derating; refer to Section 9-7 "Ambient Temperature Derating Curve". Take VFD007C43A Normal Duty for example, ambient temperature 50°C, UL Open Type, and independent installation. When the carrier frequency is set to 15kHz, it corresponds to 72% of the rated output current. The ambient temperature 60°C corresponds to 72% \* 80% of the rated output current.

<b>~</b> 88-58	PT100 Voltage Level 1	
		Default: 5.000
	Settings 0.000–10.000 V	
<b>₩</b> 88-5	PT100 Voltage Level 2	
		Default: 7.000
	Settings 0.000–10.000V	
Con	dition settings: Pr. 06-57 > Pr. 06-56.	
<b>~</b> 88-58	PT100 Level 1 Frequency Protection	
		Default: 0.00
	Settings 0.00–599.00 Hz	


### ★ S - 5 3 PT100 Activation Level 1 Protection Frequency Delay Time

Default: 60

Settings 0-6000 sec.

#### PT100 operation instructions

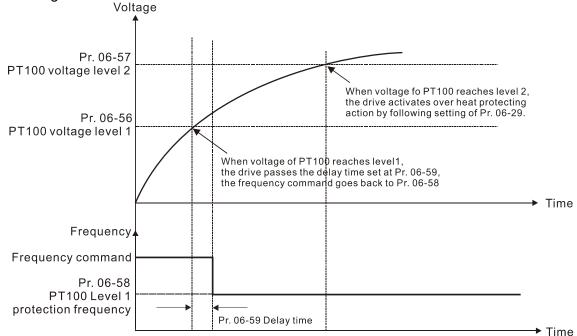- (1) Use voltage type analog input (AVI, AUI, and ACI voltage 0–10 V) and select PT100 mode.
- (2) Select one of the voltage type analog inputs below: (a) AVI (Pr. 03-00=11), (b) AUI (Pr. 03-02=11), or (c) ACI (Pr. 03-01=11 and Pr. 03-29=1).
- (3) When selecting Pr. 03-01 = 11 and Pr. 03-29 = 1, you must switch SW4 to 0–10V for the external I/O board.
- (4) The AFM2 outputs constant voltage or current, then Pr. 03-23 = 23. You must switch AFM2 SW2 to 0–20mA for the external I/O board, and set AFM2 output level to 45% (Pr. 03-33 = 45%) of 20 mA = 9 mA.
- (5) Use Pr. 03-33 to adjust the constant voltage or constant current of the AFM2 output; the setting range is 0–100.00%.
- (6) There are two types of action levels for PT100. The diagram below shows the PT100 protecting action.



(7) PT100 wiring diagram:

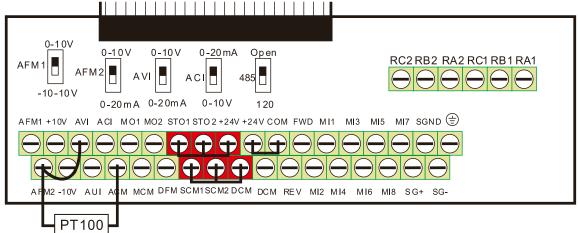


Figure 1

When Pr. 06-58 = 0.00Hz, PT100 function is disabled.

#### Example:

When using PT100, if the motor temperature is higher than 135°C (275°F), the drive starts to count the delay time for auto-deceleration (Pr. 06-59). The drive decreases the motor frequency to the setting for Pr. 06-58 when it reaches the delay time count value. The drive operates at the frequency set for Pr.06-58 until the motor temperature is lower than 135°C (275°F). If the motor temperature is higher than 150°C (302°F), the drive automatically decelerates to STOP and displays the warning "oH3".

### Set up process:

- 1. Switch AFM2 to 0–20mA on the I/O control terminal block. (Refer to Figure 1, PT100 wiring diagram)
- 2. Wiring (Refer to Figure 1, PT100 wiring diagram):

Connect external terminal AFM2 to (+)

Connect external terminal ACM to (-)

Connect external terminals AFM2 and AVI to "short-circuit"

- 3. Set Pr. 03-00 = 11, Pr. 03-23 = 23 or Pr. 03-33 = 45% (9mA)
- 4. Refer to the RTD temperature and resistance comparison table

Temperature =  $135^{\circ}$ C, resistance =  $151.71\Omega$ ; input current: 9mA, voltage: about  $1.37V_{DC}$ Temperature =  $150^{\circ}$ C, resistance =  $157.33\Omega$ ; input current: 9mA, voltage: about  $1.42V_{DC}$ 

- 5. When the RTD temperature > 135°C, the drive decelerates to the specified operation frequency automatically. Then, Pr. 06-56 = 1.37 and Pr. 06-58 = 10 Hz. When Pr. 06-58 = 0, it disables the specified operation frequency.
- 6. When the RTD temperature > 150°C, the drive outputs a fault, decelerates to STOP, and displays the warning "oH3". Then, Pr. 06-57 = 1.42 and Pr. 06-29 = 1 (warn and ramp to stop).

# Software Detection GFF Current Level

Default: 60.0

Settings 0.0-6553.5 %

Software Detection GFF Filter Time

Default: 0.10

Settings 0.00-655.35 sec.

When the drive detects that the unbalanced three-phase output current is higher than the setting for Pr. 06-60, GFF protection activates. The drive then stops output.

# dEb Reset Bias Level

Default: 20.0 / 40.0

Settings 230V series:  $0.0-100.0 \text{ V}_{DC}$ 460V series:  $0.0-200.0 \text{ V}_{DC}$ 

Prevents action vibration caused by dEb action level = reset level. dEb active level + Pr. 06-62 = dEb reset bias level.

Default: Read only

☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	
<b>G5</b> - <b>5</b> Operation Time of Fault Record 2 (Day)	
☐ 6 - 6 7 Operation Time of Fault Record 3 (Day)	
\$\frac{17}{12} \text{ G = \frac{1}{2}}\$ Operation Time of Fault Record 4 (Day)	
	Default: Read only

Settings 0-65535 days

G8-84 Operation Time of Fault Record 1 (Min.)
<b>G5</b> - <b>55</b> Operation Time of Fault Record 2 (Min.)
<b>35 - 58</b> Operation Time of Fault Record 3 (Min.)
☐ 6 - ☐ 7 Operation Time of Fault Record 4 (Min.)

Settings 0–1439 min.

If there is any malfunctions when the drive operates, Pr. 06-17–Pr. 06-22 records the malfunctions, and Pr. 06-63–Pr. 06-70 records the operation time for four sequential malfunctions. Check if there is any problem with the drive according to the interval of the recorded fault.

### Example:

The first error: ocA occurs after motor drive operates for 1000 minutes.

The second error: ocd occurs after another 1000 minutes.

The third error: ocn occurs after another 1000 minutes.

The fourth error: ocA occurs after another 1000 minutes.

The fifth error: ocd occurs after another 1000 minutes.

The sixth error: ocn occurs after another 1000 minutes.

Then Pr.06-17-06-22 and Pr.06-63-06-70 are recorded as follows:

	1 <sup>st</sup> fault	2 <sup>nd</sup> fault	3 <sup>rd</sup> fault	4 <sup>th</sup> fault	5 <sup>th</sup> fault	6 <sup>th</sup> fault
Pr.06-17	ocA	ocd	ocn	ocA	ocd	ocn
Pr.06-18	0	ocA	ocd	ocn	ocA	ocd
Pr.06-19	0	0	ocA	ocd	ocn	ocA
Pr.06-20	0	0	0	ocA	ocd	ocn
Pr.06-21	0	0	0	0	ocA	ocd
Pr.06-22	0	0	0	0	0	ocA
Pr.06-63	0	1	2	2	3	4
					_	
Pr.06-64	1000	560	120	1120	680	240
Pr.06-65	0	0	1	2	2	3
Pr.06-66	0	1000	560	120	1120	680
Pr.06-67	0	0	0	1	2	2
Pr.06-68	0	0	1000	560	120	1120
Pr.06-69	0	0	0	0	1	2
Pr.06-70	0	0	0	1000	560	120

<sup>※</sup>By examining the time record, you can see that that the last fault (Pr.06-17) happened after the
drive ran for 4 days and 240 minutes.

Default: 0.0

Settings 0.0–100.0 %

✓ ☐5 - 72 Low Current Detection Time

Default: 0.00

Settings 0.00-360.00 sec.

★ ☐ 5 - 7 3 Low Current Action

Default: 0

Settings 0: No function

1: Warn and coast to stop

2: Warn and ramp to stop by the 2<sup>nd</sup> deceleration time

3: Warn and continue operation

The drive operates according to the setting for Pr. 06-73 when the output current is lower than the setting for Pr. 06-71 and when the time of the low current exceeds the detection time for Pr. 06-72. Use this parameter with the external multi-function output terminal 44 (for low current output).

The low current detection function does not execute when drive is in sleep or standby status.


Sets Pr. 06-71 low current level according to the drive's rated current, the equation is Pr. 00-01 (drive's rated current) x Pr. 06-71 (low current setting level)% = low current detection level (A). The drive changes the setting for Pr. 00-01 (rated current) according to the setting for Pr. 00-16 (load selection).


Default: 0

Settings 0: PTC

1: KTY84-130

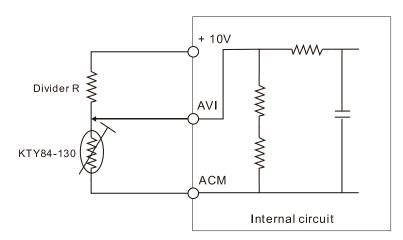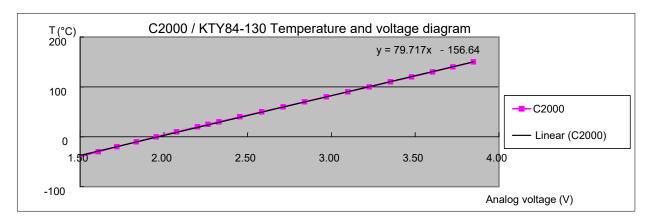- When using KTY84-130, a divider resistance (2kΩ , power > 1/4W, ±0.1%) is needed.
- Wiring diagram is as below:





- When the temperature exceeds the setting level, an oH3 error occurs to the drive. Reset conditions: when the temperature is below the trigger level -5°C, the oH3 error is cleared.
- When the KTY is not connected, or the KTY is burned, the calculated temperature is beyond -40–150°C, the temperature is displayed as its lower limit (-40°C) or upper limit (150°C) without additional error information. At this time, the drive still trips up the oH3 error, check if the installation is correct.
- When the temperature detection warning occurs to the KTY-84, select the action according to Pr. 06-29.

### **07 Special Parameters**

✓ This parameter can be set during operation.

★ ☐ ☐ ☐ ☐ Software Brake Level

Default:

370.0/740.0/895.0/1057.0

Settings 230V series: 350.0–450.0 V<sub>DC</sub>

460V series:  $700.0-900.0 \text{ V}_{DC}$ 575V series:  $850.0-1116.0 \text{ V}_{DC}$ 690V series:  $939.0-1318.0 \text{ V}_{DC}$ 

- Sets the brake transistor level for the DC BUS voltage. Choose a suitable brake resistor to achieve the best deceleration. Refer to Chapter 7 Optional Accessories for information about brake resistors.
- This parameter is only valid for the models below 30kW of 460 series and 22kW of 230 series.

### DC Brake Current Level

Default: 0

Settings 0-100%

- Sets the level of the DC brake current output to the motor during start-up and stop. When you set the DC brake current percentage, the rated current is regarded as 100%. Start with a low DC brake current level, and increase it slowly until the proper brake torque is reached. However, to avoid burning the motor, the DC brake current can NOT exceed the rated current. Therefore, DO NOT use the DC brake for mechanical retention, otherwise injury or accident may occur.
- The PM has the magnetic field itself, using the DC brake may possibly cause the motor run in a reverse direction, therefore, it is not recommended to use DC brake for PM.

### ✓ ☐ ? - ☐ ? DC Brake Time at RUN

Default: 0.0

Settings 0.0–60.0 sec.

- The motor may continue rotating after the drive stops output due to external forces or the inertia of the motor itself. If you use the drive with the motor rotating, it may cause motor damage or trigger drive protection due to over-current. This parameter outputs DC current, generating torque to force the motor stop to get a stable start before motor operation. This parameter determines the duration of the DC brake current output to the motor when the drive starts up. Setting this parameter to 0.0 disables the DC brake at start-up.
- The PM has the magnetic field itself, using the DC brake may possibly cause the motor run in a reverse direction, therefore, it is not recommended to use DC brake for PM. Use Pr. 10-49 zero voltage command to force the motor decelerate or to stop.

# DC Brake Time at STOP

Default: 0.0

Settings 0.0–60.0 sec.

The motor may continue rotating after the drive stops output due to external forces or the inertia of the motor itself. This parameter outputs DC current, generating torque to force the drive stop after the drive stops output to make sure that the motor stops.


- This parameter determines the duration of the DC brake current output to the motor when braking. To enable DC brake at STOP, set Pr. 00-22 (Stop Method) to 0 (ramp to stop). The DC brake is invalid when Pr. 07-03 is set to 0.0.
- Related parameters: Pr. 00-22 Stop Method, Pr. 07-04 DC Brake Frequency at STOP.

### 

Default: 0.00

Settings 0.00-599.00 Hz

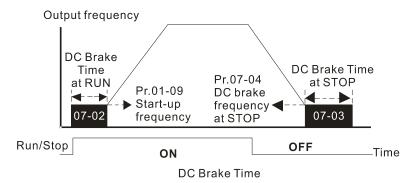This parameter determines the start frequency of the DC brake before the drive ramps to stop. When this setting is less than Pr.01-09 (Start-up Frequency), the start frequency of the DC brake starts from the minimum frequency.



- Use the DC brake before running the motor when the load is movable at stop, such as with fans and pumps. The motor is in free operating status and in unknown rotation direction before the drive starts up. Execute the DC brake before you start the motor.
- Use DC Brake at STOP when you need to brake the motor quickly or to control the positioning, such as with cranes or cutting machines.

# ✓ ☐ ? - ☐ 5 Voltage Increasing Gain

Default: 100

Settings 1-200%

When using speed tracking, adjust Pr. 07-05 to slow down the increasing voltage gain if there are errors such as oL or oc; however, the speed tracking time will be longer.

### Restart after Momentary Power Loss

Default: 0

Settings 0: Stop operation

1: Speed tracking by speed before the power loss

2: Speed tracking by minimum output frequency

- Determines the operation mode when the drive restarts from a momentary power loss.
- The power system connected to the drive may power off momentarily due to many reasons. This function allows the drive to keep outputting after the drive is repowered and does not cause the drive to stop.
- Setting 1: Frequency tracking begins before momentary power loss and accelerates to the master Frequency command after the drive output frequency and motor rotator speed are synchronous. Use this setting when there is a lot of inertia with little resistance on the motor load.

For example, in equipment with a large inertia flywheel, there is NO need to wait until the flywheel stops completely after a restart to execute the operation command; therefore, it saves time

- Setting 2: Frequency tracking starts from the minimum output frequency and accelerates to the master Frequency command after the drive output frequency and motor rotator speed are synchronous. Use this setting when there is little inertia and large resistance.
- In PG control mode, the AC motor drive executes the speed tracking function automatically according to the PG speed when this setting is NOT set to 0.
- This function is only valid when the RUN command is enabled.

### 

Default: 2.0

Settings 0.0-20.0 sec.

- Determines the maximum time of allowable power loss. If the duration of a power loss exceeds this parameter setting, the AC motor drive stops output.
- Pr.07-06 is valid when the maximum allowable power loss time is ≤ 20 seconds and the AC motor drive displays "Lv". If the AC motor drive is powered off due to overload, even if the maximum allowable power loss time is ≤ 20 seconds, the operation mode set in Pr.07-06 does not execute.

# ★ ☐ ☐ ☐ ☐ Base block Time

Default: Depending

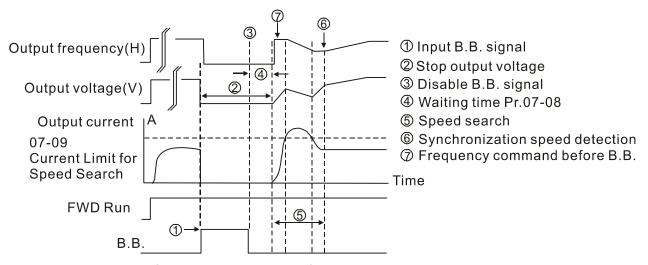
on the model power

#### Settings 0.0–5.0 sec.


- When momentary power loss is detected, the AC motor drive blocks its output and then waits for a specified period of time (determined by Pr. 07-08, called Base Block Time) before resuming operation. Set this parameter to the time that allows the residual voltage at the output side to decrease to 0 V before activating the drive again.
- This parameter is not only for the B.B. time, but also is the re-start delay time after free run.
- The RUN command during a free run operation is memorized, and runs or stops with the last frequency command after the delay time.
- This delay time is only applicable in "Re-start after coast to stop" status, and does not limit ramp to stop. The coast to stop can be caused by various control command source, or by errors.
- Following table is the recommended setting for re-start delay time of each model power. You must set Pr. 07-08 according to this table (the default of each model power is based on this table as well).

kW	007	015	022	037	055	075	110	150	185	220	300	370	450	550	750	900
HP	1	2	3	5	7.5	10	15	20	25	30	40	50	60	75	100	120
Delay time (sec.)	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1	1.1	1.2	1.3	1.4	1.5	1.6	1.7	1.8


kW	1100	1320	1600	1850	2200	2800	3150	3550	4000	5000
HP	150	175	215	250	300	375	425	475	536	650
Delay time (sec.)	1.9	2	2.1	2.2	2.3	2.4	2.5	2.6	2.7	2.8



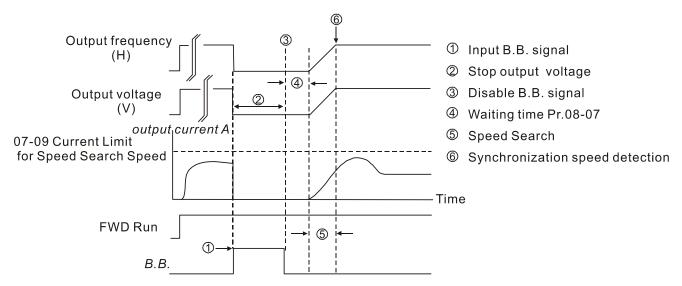B.B. Search with last output frequency downward timing chart



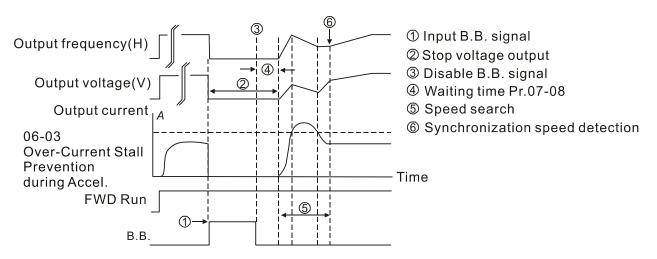B.B. Search with minimum output frequency upward timing chart



B.B. Search with minimum output frequency upward timing chart

	?? - ?? Current	Limit of Speed Tracking	
	0 . 05	Default: 100	
	Settings		
	The AC motor drives set in Pr. 07-09.	ive executes speed tracking only if the output current is greater than the val	ue
	☐ The maximum cu	irrent for speed tracking affects the synchronous time. The larger the parame	ter
	_	ter the synchronization occurs. However, if the parameter setting is too large, toon function may be activated.	:he
×	☐ ☐ ☐ Restart a	after Fault Action	
		Default: 0	
	Settings	0: Stop operation	
		1: Speed tracking by current speed	
		2: Speed tracking by minimum output frequency	
	In PG control me	ode, the AC motor drive executes the speed tracking function automatical	ally
	according to the F	PG speed when this setting is NOT set to 0.	
	☐ Faults include: bb	o, oc, ov and occ. To restart after oc, ov and occ, you can NOT set Pr. 07-11 to	0.
N	[] ] -     Number	of Times of Restart after Fault	
		Default: 0	
	Settings	0–10	
	After fault (oc, ov	and occ) occurs, the AC motor drive can reset and restart automatically up to	10
	times. When Pr. 0	07-11 is set to 0, the auto-reset / restart function is disabled after fault. The dri	i
			ive
	re-starts accordin	ng to the setting for Pr. 07-10.	ive
	If the number of fa	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y	
	If the number of fa	ng to the setting for Pr. 07-10.	
<i>N</i>	If the number of fa	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y	
×	If the number of fa	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.	
N	If the number of fa	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0	
*	☐ If the number of fapress "RESET" m  ☐ 7 - 12 Speed T	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0	
W	☐ If the number of fapress "RESET" m  ☐ 7 - 12 Speed T	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Fracking during Start-up  Default: 0  0: Disable	
*	☐ If the number of fapress "RESET" m  ☐ 7 - 12 Speed T	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y manually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency	
M	If the number of fapress "RESET" m  Speed T  Settings	ng to the setting for Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y manually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start	/ou
M	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast	a : to
N	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions of the stop. If it needs to	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast to be restarted again, the flywheel may take 2–5 minutes or longer to stop. The	a : to
N	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions stop. If it needs to parameter setting	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast to be restarted again, the flywheel may take 2–5 minutes or longer to stop. The gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the flywheel operating again without waiting until the gallows you to start the gallows you to start the flywheel operating again without waiting until the gallows you to start the g	a to
M	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions of the parameter setting flywheel stops continued in	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency  is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast to be restarted again, the flywheel may take 2–5 minutes or longer to stop. The gallows you to start the flywheel operating again without waiting until tompletely. If you can use the speed feedback function (PG + Encoder), the start of the properties of the speed feedback function (PG + Encoder), the speed fee	a to his the
<i>M</i>	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions of the parameter setting flywheel stops of speed tracking full speed tra	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast to be restarted again, the flywheel may take 2–5 minutes or longer to stop. The gallows you to start the flywheel operating again without waiting until the completely. If you can use the speed feedback function (PG + Encoder), the notion will be faster and more accurate. Set Pr. 07-09 as the tartget of the output.	a to his the
N	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions of the parameter setting flywheel stops conspeed tracking functions of the parameter (the maximum of the parameter).	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast to be restarted again, the flywheel may take 2–5 minutes or longer to stop. The gallows you to start the flywheel operating again without waiting until tompletely. If you can use the speed feedback function (PG + Encoder), the notion will be faster and more accurate. Set Pr. 07-09 as the tartget of the output mum current of speed tracking).	a to his the his put
<i>N</i>	If the number of fapress "RESET" m  Speed T  Settings  Speed tracking in mechanical punctions of the parameter setting flywheel stops conspeed tracking functions of the parameter in the maximum of the parameter in the maximum of the parameter in the maximum of the parameter in	aults exceeds the Pr. 07-10.  aults exceeds the Pr. 07-11 setting, the drive does not reset and restart until y nanually and execute the operation command again.  Tracking during Start-up  Default: 0  0: Disable  1: Speed tracking by maximum output frequency  2: Speed tracking by motor frequency at start  3: Speed tracking by minimum output frequency is suitable for punch, fans and other large inertia loads. For example, h usually has a large inertia flywheel, and the general stop method is coast to be restarted again, the flywheel may take 2–5 minutes or longer to stop. The gallows you to start the flywheel operating again without waiting until the completely. If you can use the speed feedback function (PG + Encoder), the notion will be faster and more accurate. Set Pr. 07-09 as the tartget of the output.	a to his the his put


When using PM, Pr. 07-12  $\neq$  0, the speed tracking function is enabled. When Pr. 07-12 = 1, 2 or 3, the output frequency converts to the actual rotor speed from zero-speed. ✓ ☐☐ - ☐☐ dEb Function Selection Default: 0 Settings 0: Disable 1: dEb with auto-acceleration / auto-deceleration, the drive does not output the frequency after the power is restored. 2: dEb with auto acceleration / auto-deceleration, the drive outputs the frequency after the power is restored. 3: dEb low-voltage control, then increase to  $350V_{DC}/700V_{DC}$  and decelerate 4: dEb high-voltage control of 350V<sub>DC</sub> / 700V<sub>DC</sub> and decelerate to stop dEb (Deceleration Energy Backup) lets the motor decelerate to stop when momentary power loss occurs. When the power loss is instantaneous, use this function to let the motor decelerate to zero speed. If the power recovers at this time, the drive restarts the motor after the dEb return time. Lv return level: Default value depends on the drive power model Frame A, B, C, D = Pr. 06-00 + 60V/30V (230V series) Frame E and above = Pr. 06-00 + 80V/40V (230V series)Lv level: Default = Pr. 06-00 During dEb operation, other protection such as ryF, ov, oc, occ and EF may interrupt it, and these error codes are recorded. The STOP (RESET) command does not work during the dEb auto-deceleration, and the drive continues decelerating to stop. To make the drive coast to stop immediately, use another function (EF) instead. The B.B. function does not work when executing dEb. The B.B. function is enabled after the dEb function finishes. Even though the Lv warning does not display during dEb operation, if the DC BUS voltage is lower than the Lv level, MOx = 10 (Low voltage warning) still operates. The following explains the dEb action: When the DC voltage drops below the dEb setting level, the dEb function starts to work (soft start

 Situation 1: Momentary power loss, or power current too low and unstable, or power supply sliding down because of sudden heavy load.

relay remains closed), and the drive executes auto-deceleration.

Pr. 07-13=1, "dEb active, DC BUS voltage returns, output frequency does not return" and power recovers.

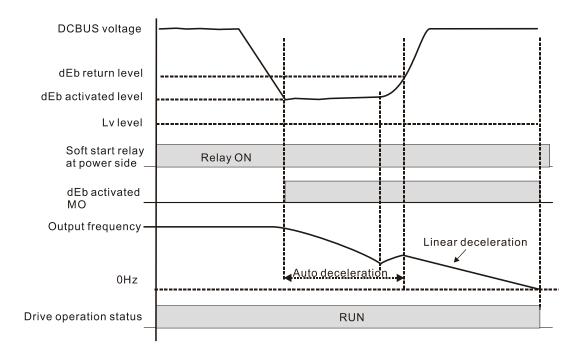
When the power recovers and DC BUS voltage exceeds the dEb return level, the drive linearly decelerates to 0 Hz and stops. The keypad displays the "dEb" warning until you manually reset it, so that you can see the reason for the stop.



 Situation 2: Momentary power loss, or power current too low and unstable, or power supply sliding down because of sudden heavy load.

Pr. 07-13=2 "dEb active, DC BUS voltage returns, output frequency returns" and power recovers.

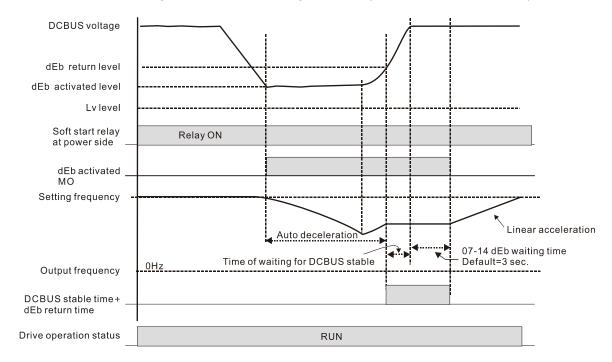
During the dEb deceleration (includes 0 Hz run), if the power recovers higher than dEb return level, the drive maintains the frequency for the set time of Pr. 07-14 (default = 3 sec.) and then accelerates again. The dEb warning on the keypad clears automatically.



### Situation 3: Power supply unexpected shut down or power loss

Pr. 07-13=1 "dEb active, DC BUS voltage returns, the output frequency does not return" and the power does not recover.

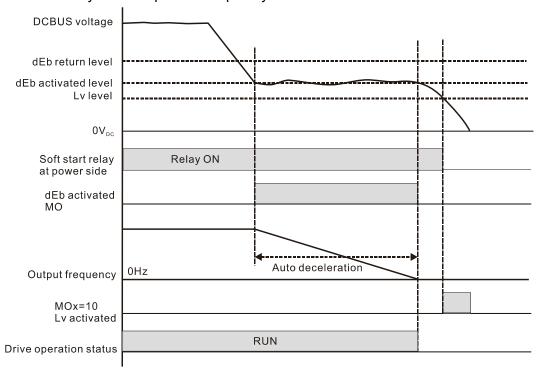The keypad displays the "dEb" warning and stops after decelerating to the lowest running frequency. When the DC BUS voltage is lower than the Lv level, the drive disconnects the soft start relay until the power completely runs out.



#### Situation 4:

Pr. 07-13=2 "dEb active, DCBUS voltage returns, the output frequency returns" and power does not recover.

The drive decelerates to 0 Hz. The DC BUS voltage continues to decrease until the voltage is lower than the Lv level, and then the drive disconnects the soft start relay. The keypad displays "dEb" warning until the drive completely runs out of power.

#### Situation 5:

Pr. 07-13=2 "dEb low voltage control, when the speed is lower than 1/4 rated motor speed, DCBUS voltage rises to  $350V_{DC}$  /  $700V_{DC}$ , the drive ramps to stop.

The drive decelerates to 0 Hz. The DC BUS voltage continues to decrease until the voltage is lower than the Lv level, and then the drive disconnects the soft start relay. The soft start relay closes again after the power recovers and the DC BUS voltage is higher than the Lv return level. When the DC BUS voltage is higher than the dEb return level, the drive maintains the frequency for the set time of Pr. 07-14 (default = 3 sec.) and starts to accelerate linearly, and the dEb warning on the keypad clears automatically.

#### Situation 6:

Pr. 07-13=4, dEb high-voltage control

When dEb occurs, the DC BUS voltage control level rises to  $350V_{DC}/700V_{DC}$  to ramp to stop. Even though the power recovers and the frequency does not return, dEb activates until the motor decelerates to 0Hz.

- (1) When dEb activates, it sends dEb warning. When the output frequency reaches 0Hz, the operation status is STOP and disables the dEb function, the dEb warning continues.
- (2) If power does not recover, the DC BUS voltage drops until reaches the Lv level, the drive LvS error occurs (keypad displays LvS error that covers the dEb display), the Soft Start Relay will be OFF.



Default: 3.0

Settings 0.0–25.0 sec.

dEb (Deceleration Energy Backup) lets the motor decelerate to stop when momentary power loss occurs. When the power loss is instantaneous, use this function to let the motor decelerate to zero speed.

Dwell Time at Acceleration

Default: 0.00

Settings 0.00-600.00 sec.

Dwell Time at Deceleration

Default: 0.00

Settings 0.00-600.00 sec .

Dwell Frequency at Acceleration

Default: 0.00


Settings 0.00-599.00 Hz

Dwell Frequency at Deceleration

Default: 0.00

Settings 0.00–599.00 Hz

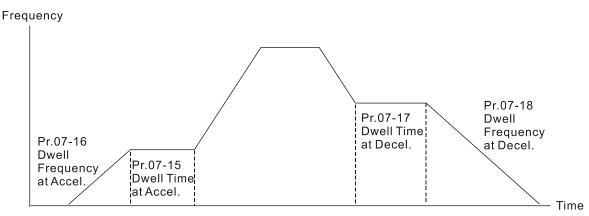- In the heavy load situation, Dwell can make stable output frequency temporarily, such as crane or elevator.
- When the load is heavier, use Pr. 07-15–Pr. 07-18 to avoid ov or oc protection.



Dwell at acceleration / deceleration



Default: 0

Settings 0: Fan always ON

- 1: Fan is OFF after AC motor drive stops for one minute
- 2: Fan is ON when AC motor drive runs; fan is OFF when AC motor drive stops
- 3: Fan turns ON when temperature (IGBT) reaches around 60°C
- 4: Fan always OFF
- Use this parameter to control the fan.
- ① : Fan runs immediately when the drive power is turned ON.
- 1: Fan runs when AC motor drive runs. One minute after AC motor drive stops, the fan is OFF.
- 2: Fan runs when AC motor drive runs and stops immediately when AC motor drive stops.
- 3: When temperature of the IGBT or capacitance is higher than 60°C, the fan runs.

  When temperature of the IGBT and capacitance are both lower than 40°C, the fan stops.
- 4: Fan is always OFF
- The control parameters for the applicable fan of each frame are as below:


Frame	Heat Sink Fan	Capacitor Fan
Α	Pr. 07-19	No capacitor fan
В	Pr. 07-19	Pr. 07-19
С	Pr. 07-19	Pr. 07-19
C	F1. 07-19	230V series: always ON
D0	Pr. 07-19	Pr. 07-19
D	Pr. 07-19	ON
E	Pr. 07-19	Pr. 07-19
F	Pr. 07-19	Pr. 07-19
G	Pr. 07-19	No capacitor fan
Н	Pr. 07-19	No capacitor fan

# Force to Stop Selection

Default: 0

Settings 0: Coast to stop

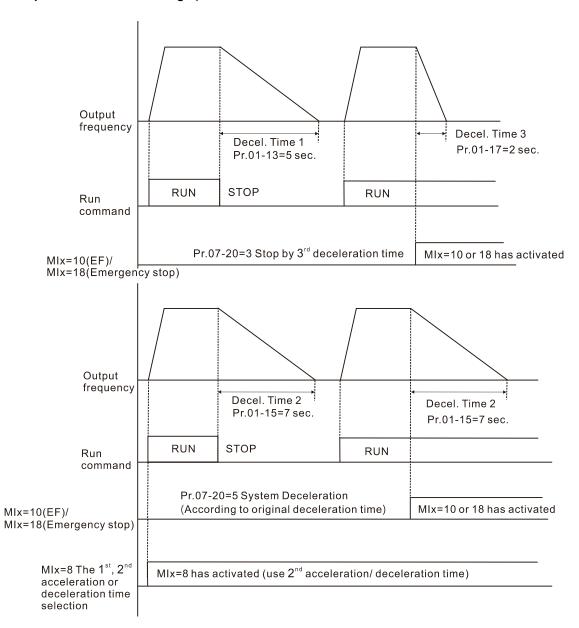- 1: Stop by the 1st deceleration time
- 2: Stop by the 2<sup>nd</sup> deceleration time
- 3: Stop by the 3<sup>rd</sup> deceleration time
- 4: Stop by the 4th deceleration time
- 5: System deceleration
- 6: Automatic deceleration
- When the multi-function input terminal is set to EF input (setting 10) or force to stop (setting 18) and the terminal contact is ON, the drive stops according to the setting of this parameter.



# 

Default: 0


Settings 0: Disable

1: Enable

- When energy-saving is enabled, the motor acceleration operates with full voltage. During constant speed operation, it automatically calculates the best voltage value according to the load power. This function is not suitable for fluctuating loads or loads which are nearly full during operation.
- When the output frequency is constant (that is, constant operation), the output voltage decreases automatically as the load decreases. Therefore, the drive operates with minimum multiplication of voltage and current (electric power).
- FOCPG IM:

Steady-speed: Torque current is lower than rated current for 0.35 times and entry into energy saving mode after 5 seconds.

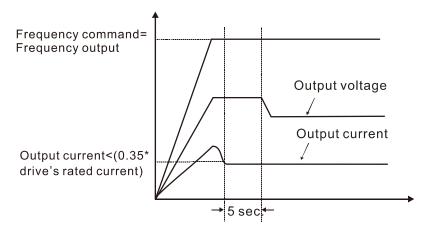Return: Torque current is higher than 0.5 times of rated current.



UF, VFPG, SVC mode:

Steady-speed: When output is light load, entry into energy saving mode after 5 seconds.

Return: When the drive is continuously adding loads, or in non-steady speed status.

POCPM and FOC sensorless control mode, disable.

# ✓ ☐ ? - ? ? Energy-saving Gain

Default: 100

Settings 10-1000%

- When Pr. 07-21 is set to 1, use this parameter to adjust the energy-saving gain. The default is 100%. If the result is not satisfactory, adjust it by decreasing the setting value. If the motor oscillates, then increase the setting value.
- In certain applications such as high speed spindles, the temperature rise in the motor is a major concern. When the motor is not in working state, reduce the motor current to a lower level. Reduce this parameter setting to meet this requirement.

# ✓ ☐ 7 - 2 3 Auto Voltage Regulation (AVR) Function

Default: 0

Settings 0: Enable AVR

1: Disable AVR

2: Disable AVR during deceleration

- The rated voltage of the motor is usually 200V<sub>AC</sub>–240V<sub>AC</sub> (380V<sub>AC</sub>–480V<sub>AC</sub>), 60Hz/50Hz and the input voltage of the AC motor drive may vary between 170V<sub>AC</sub>–264V<sub>AC</sub> (323V<sub>AC</sub>–528V<sub>AC</sub>), 50Hz/60Hz. Therefore, when the AC motor drive is used without the AVR function, the output voltage is the same as the input voltage. When the motor runs at the voltage exceeding 12%–20% of the rated voltage, it causes higher temperature, damaged insulation, and unstable torque output, which result in losses due to shorter motor lifetime.
- The AVR function automatically regulates the output voltage of the AC motor drive to the motor rated voltage. For example, if the V/F curve is set at 200V<sub>AC</sub> / 50Hz and the input voltage is at 200V<sub>AC</sub> to 264V<sub>AC</sub>, then the drive automatically reduces the output voltage to the motor to a maximum of 200V<sub>AC</sub> / 50Hz. If the input voltage is at 170V<sub>AC</sub> to 200V<sub>AC</sub>, the output voltage to motor and input power are in direct proportion.
- © 0: When the AVR function is enabled, the drive calculates the output voltage according to the actual DC BUS voltage. The output voltage does NOT change when the DC BUS voltage changes.

# Chapter 12 Description of Parameter Settings | C2000 1: When the AVR function is disabled, the drive calculates the output voltage according to the actual DC BUS voltage. The DC BUS voltage changes the output voltage, and may cause insufficient or over-current or shock. 2: the drive disables the AVR function when decelerating to stop, and may accelerate to brake. $\square$ When the motor ramps to stop, the deceleration time is shorter when setting this parameter to 2 with auto-acceleration and deceleration, and the deceleration is quicker and more stable. When the control mode is set as FOCPG or TQCPG, it is recommended to set this parameter to 0 (enable AVR). Torque Command Filter Time (V/F and SVC Control Mode) Default: 0.500 Settings 0.001-10.000 sec. When the setting is too long, the control is stable but the control response is delayed. When the setting is too short, the response is quick but the control may be unstable. Adjust the setting according to the stability of the control and response times. Slip Compensation Filter Time (V/F and SVC Control Mode) Default: 0.100 Settings 0.001-10.000 sec. ☐ Change the compensation response time with Pr.07-24 and Pr.07-25. If you set Pr.07-24 and Pr.07-25 to 10 seconds, the compensation response time is the slowest; however, the system may be unstable if you set the time too short. Torque Compensation Gain (V/F and SVC control mode) Default: 0 Settings IM: 0-10 (when Pr. 05-33 = 0) PM: 0–5000 (when Pr. 05-33 = 1 or 2) Only applicable in IMVF and PMSVC control mode. With a large motor load, a part of drive output voltage is absorbed by the stator winding resistor; therefore, the air gap magnetic field is insufficient. This causes insufficient voltage at motor induction and results in excessive output current but insufficient output torque. Auto-torque compensation can automatically adjust the output voltage according to the load and keep the air gap magnetic fields stable to get the optimal operation In the V/F control, the voltage decreases in direct proportion with decreasing frequency. It reduces the torque decrease at low speed due to the AC impedance while the DC resistor is unchanged. The auto-torque compensation function increases the output voltage at low frequency to get a higher starting torque. When the compensation gain is set too large, it may cause motor over-flux and result in a too large output current, overheating the motor or triggering the protection function. This parameter affects the output current when the drive runs. But the effect is smaller at the low-speed area. Set this parameter higher when the no-load current is too large, but the motor may vibrate if the setting is too high. If the motor vibrates when operating, reduce the setting.

✓ ☐ ? - ? ? Slip Con	npensation Gain (V/F and SVC control	mode)
		Default: 0.00
		(1.00 in SVC mode)
Settings	0.00–10.00	
The induction mo	tor needs constant slip to produce ma	ignetic torque. It can be ignored at higher
•	ch as rated speed or 2–3% of slip.	
•		are in reverse proportion to produce the
_	•	tion of synchronous frequency. The motor
• •		s to a specific value. Therefore, the slip
•	he motor speed accuracy at low speed	
	•	with the drive, the slip increases when the
	also affects the motor speed accuracy	cy, and reduce the slip to maintain the
		urrent in order to improve the accuracy of
•		n Pr.05-05 (No-load Current of Induction
	drive compensates the frequency with	,
		0-11 (Speed Control Method) is changed
-	•	ation after load and acceleration. Increase
		add the output frequency with motor rated
•		or is at the rated load. If the actual speed
ratio is slower th	an expected, increase the paramete	r setting value; otherwise, decrease the
setting value.		
V 07.30 Slip Day	iation Level	
2 12 2 3 Sub Dev	auon Levei	Default: 0
Settings	0.0–100.0%	Delault. 0
Coungo	0: No detection	
✓ [] - ] [] Over Slip	Deviation Detection Time	
		Default: 1.0
Settings	0.0-10.0 sec.	
✓ { } - } / Over Slip	o Deviation Treatment	
		Default: 0
Settings	0: Warn and continue operation	
	1: Warn and ramp to stop	
	2: Warn and coast to stop	
	3: No warning	
Pr. 07-29 to Pr. 0	7-31 set the allowable slip level / time	and the over-slip action when the drive is

running.

Ziiapiei 12	bescription of Falc	inleter Settings   C2000		
<b>#</b> 87-	Motor She	ock Compensation Fact	or	
				Default: 1000
	Settings	0–10000		
		0: Disable		
If If	there are curren	wave motions in the r	notor in some spec	ific area, setting this parameter can
ef	fectively improve	this situation. When ru	nning with high freq	uency or PG, set this parameter to 0
W	hen the current v	vave motion occurs in lo	ow frequency and h	igh-power, increase the value for Pr.
07	7-32.			
× 93-	- 3 3 Auto-rest	art Interval of Fault		
				Default: 60.0
	Settings	0.0-6000.0 sec.		
₩ W		tart occurs after a fault,	the drive uses Pr. (	07-33 as a timer and starts counting
th	e numbers of fa	ults within this time peri	od. Within this peri	od, if the number of faults does not
ex	ceed the setting	for Pr. 07-11, the count	ing clears and start	s from 0 when the next fault occurs.
<b>~</b> 00	30 pueve	/altana Faadhaal: Fam.	and Cain	
~ U 1	PIVISVC	oltage Feedback Forw	ard Gain	Default: 1.00
	Settings	0.50-2.00		Default: 1.00
			rward gain, and to	meet the demand of rapid feedback
	application.	vo voltage leedback le	i wara gairi, and to	meet the demand of rapid leedback
	• •	neans forward feedback	= Ke * motor rotor	speed
		12-2 "PMSVC adjustme		
4 = =		·		
<b>*</b>	dEb Gain	(Kp)		
				Default: 8000
	Settings	0–65535		
<b>/</b>	- 🔓 🖁 dEb Gain	(Ki)		
				Default: 150
	Settings	0–65535		
	•	of DC BUS voltage conf		
		•	•	occurs during deceleration after the
		•		ease the Kp setting to accelerate the
	•	•		ig is too large. Use Ki parameter to
	decrease the ste	ady-state error to zero,	increase the setting	g to accelerate the response speed.

### 08 High-function PID Parameters


★ This parameter can be set during operation.

# 

Default:0

Settings 0: No function

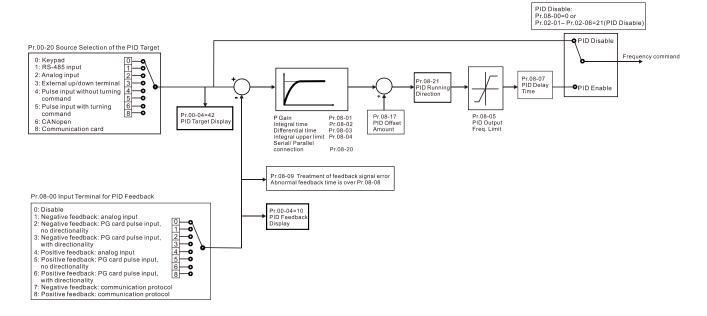- 1: Negative PID feedback: by analog input (Pr. 03-00-03-02)
- 2: Negative PID feedback: by PG card pulse input, without direction (Pr. 10-02)
- 3: Negative PID feedback: by PG card pulse input, with direction (Pr. 10-02)
- 4: Positive PID feedback: by analog input (Pr. 03-00-03-02)
- 5: Positive PID feedback: by PG card pulse input, without direction (Pr. 10-02)
- 6: Positive PID feedback: by PG card pulse input, with direction (Pr. 10-02)
- 7: Negative PID feedback: by communication protocol
- 8: Positive PID feedback: by communication protocol
- $\square$  Pr. 08-00  $\neq$  0 enables the PID function.
- Negative feedback means:
  - +target value feedback. The detection value increases by increasing the output frequency.
- Positive feedback means:
  - -target value + feedback. The detection value decreases by increasing the output frequency.
- When Pr.  $08-00 \neq 7$  neither  $\neq 8$ , the input value is disabled. The value of the setting does not remain the same after the drive is off.
- Related applicable parameters: Pr. 00-20, Pr. 03-00–03-02
  When enable the PID function (Pr. 08-00 ≠ 0), if Pr. 00-20 is set to 2 "External analog input", Pr. 03-00–03-02 need to be set to 4 "PID target value" accordingly.



Master Frequency Command (AUTO) Source / Source Selection of the PID Target

Default: 0

#### Settings

- 0: Digital keypad
- 1: RS-485 serial communication
- 2: External analog input (Refer to Pr. 03-00)
- 3: External UP/DOWN terminal
- 4: Pulse input without direction command (Pr. 10-16 without direction), use with PG card
- 5: Pulse input with direction command (Pr. 10-16), use with PG card
- 6: CANopen communication card
- 8: Communication card (does not include CANopen card)



Analog Input Selection (AVI)



Analog Input Selection (ACI)

Analog Input Selection (AUI)

Default: 0

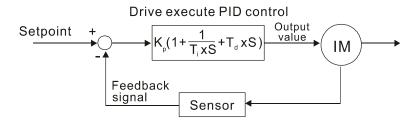
### Settings

4: PID target value

### Common applications for PID control:

- Flow control: Use a flow sensor to feedback the flow data and perform accurate flow control.
- Pressure control: Use a pressure sensor to feedback the pressure data and perform precise pressure control.
- Air volume control: Use an air volume sensor to feedback the air volume data to achieve excellent air volume regulation.
- Temperature control: Use a thermocouple or thermistor to feedback temperature data for comfortable temperature control.
- Speed control: Use a speed sensor or encoder to feedback motor shaft speed or input another machine speed as a target value for closed loop speed control of the master-slave operation. Pr.10-00 sets the PID set point source (target value).

### PID control loop:



 $K_0$ : Proportional gain (P)  $T_i$ : Integral time (I)  $T_d$ : Derivative control (D) S: Operator

#### Concept of PID control

Proportional gain (P):

The output is proportional to input. With only proportional gain control, there is always a steady-state error.

Adjustment: Turn off the Ti and Td, or remain Ti and Td in constant value, then adjust the proportional gain (P).

Increase: Faster status feedback, but excessive adjustment will increase the overshoot.

Decrease: Smaller overshoot, but excessive adjustment will slow down the transient response.

Integral time (I):

The controller output is proportional to the integral of the controller input. To eliminate the steady-state error, add an "integral part" to the controller. The integral time controls the relation between integral part and the error. The integral part increases over time even if the error is small. It gradually increases the controller output to eliminate the error until it is zero. This stabilizes the system without a steady-state error by using proportional gain control and integral time control.

Adjustment: The integral time (I) accumulates from the time difference, if the vibration cycle is longer than the setting for integral time, the integration enhances. Increase the integral time (I) to reduce the vibration.

Increase: Reduce the overshoot, excessive adjustment causes worse transient response.

Decrease: Faster transient response, but the transient time will be longer, and takes more time to achieve the steady state. Excessive adjustment causes larger overshoot.

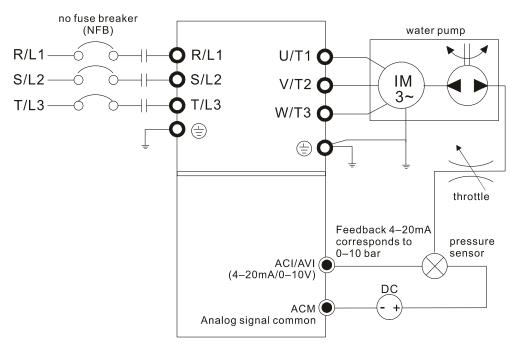
Differential control (D):

The controller output is proportional to the differential of the controller input. During elimination of the error, oscillation or instability may occur. Use the differential control to suppress these effects by acting before the error. That is, when the error is near zero, the differential control should be zero. Use proportional gain (P) and differential control (D) to improve the system state during PID adjustment.

Adjustment: When the vibration cycle is shorter and continuous, it means that the differential time setting is too large, and causes excessive output. Decrease the setting of D gain to reduce the vibration. If the D gain is set to 0, adjust the PID control again.

#### Using PID control in a constant pressure pump feedback application:

Set the application's constant pressure value (bar) to be the set point of PID control. The pressure sensor sends the actual value as the PID feedback value. After comparing the PID set point and PID feedback, an error displays. The PID controller calculates the output by using proportional gain (P), integral time (I) and differential time (D) to control the pump. It controls the drive to use a different pump speed and achieves constant pressure control by using a 4–20mA signal corresponding to 0–10 bar as feedback to the drive.



- Pr. 00-04 = 10 (Display PID feedback (b) (%)).
- Pr. 01-12 Acceleration Time is set as according to actual conditions.
- Pr. 01-13 Deceleration Time is set as according to actual conditions.
- Pr. 00-21 = 0 to operate through the digital keypad.
- Pr. 00-20 = 0, the digital keypad controls the set point.
- Pr. 08-00 = 1 (Negative PID feedback from analog input)
- ACI analog input Pr. 03-01 = 5, PID feedback signal.
- Pr. 08-01–08-03 is set according to actual conditions:

  If there is no vibration in the system, increase Pr. 08-01 (Proportional Gain (P))

  If there is no vibration in the system, decrease Pr. 08-02 (Integral Time (I))

  If there is no vibration in the system, increase Pr. 08-03 (Differential Time(D))
- Refer to Pr. 08-00 to Pr. 08-21 for PID parameter settings.

### 

Default: 1.0

#### Settings 0.0-500.0

- 1.0: Kp gain is 100%; if the setting is 0.5, Kp gain is 50%.
- Determines the deviation response of Proportional gain (P). Eliminates the system error; usually used to decrease the error and get faster response speed. it also reduces the steady-state error. But if you set the value too high, it may cause system oscillation and instability.
- If you set the other two gains (I and D) to zero, proportional control is the only effective parameter.

# ✓ ☐ 8 - ☐ 2 Integral Time (I)

Default: 1.00

Settings 0.00–100.00 sec.

0.00: No integral

Use the integral controller to eliminate the error during stable system operation. The integral control does not stop working until the error is zero. The integral is affected by the integral time.

The smaller the integral time, the stronger integral action. It is helpful to reduce overshoot and oscillation for a stable system. Accordingly, the speed to lower the steady-state error decreases. The integral control is often used with the other two controls for the PI controller or PID controller.

- Sets the integral time of the I controller. When the integral time is long, there is a small I controller gain, with slower response and slow external control. When the integral time is short, there is a large I controller gain, with faster response and rapid external control.
- When the integral time is too short, it may cause system oscillation.
- Set Integral Time to 0.00 to disable Pr. 08-02.

### 

Default: 0.00

### Settings 0.00–1.00 sec.

- Use the differential controller to show the system error change, as well as to preview the change in the error. You can use the differential controller to eliminate the error in order to improve the system state. Using a suitable differential time can reduce overshoot and shorten adjustment time; however, the differential operation increases noise interference. Note that a too large differential causes more noise interference. In addition, the differential shows the change and the output is 0 when there is no change. Note that you cannot use the differential control independently. You must use it with the other two controllers for the PD controller or PID controller.
- Sets the D controller gain to determine the error change response. Using a suitable differential time reduces the P and I controllers overshoot to decrease the oscillation for a stable system. A differential time that is too long may cause system oscillation.
- The differential controller acts on the change in the error and cannot reduce the interference. Do not use this function when there is significant interference.

# 

Default: 100.0

#### Settings 0.0-100.0%

- Defines an upper bound for the integral gain (I) and therefore limits the master frequency. The formula is: Integral upper bound = Maximum Operation Frequency (Pr. 01-00) x Pr. 08-04 %.
- An excessive integral value causes a slow response due to sudden load changes and may cause motor stall or machine damage.

# 

Default: 100.0

### Settings 0.0-110.0%

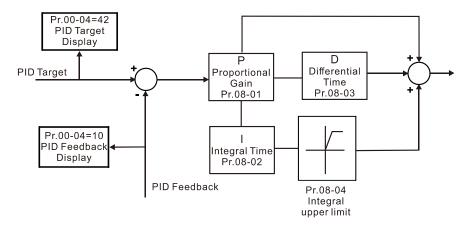
Defines the percentage of the output frequency limit during the PID control. The formula is Output Frequency Limit = Maximum Operation Frequency (Pr. 01-00) x Pr. 08-05 %.

N	88	R - 🖁 🗧 PID Feedback Value by Communication Protocol
		Default: Read only
		Settings -200.00%-200.00%
		Use communication to set the PID feedback value when the PID feedback input is set to
		communication (Pr.08-00 = 7 or 8).
	n c	<b>? - [; 7</b> ] PID Delay Time
~	יינ	Default: 0.0
	$\alpha c$	Settings 0.0–35.0 sec.
	UÜ	PID Mode Selection  Default: 0
		Settings 0: Serial connection
	$\Box$	1: Parallel connection
		0: Serial connection, use conventional PID control structure.
		1: Parallel connection, the proportional gain, integral gain and differential gain are independent.
		You can customize the P, I and D value to fit your application.  Pr. 02 07 determines the primary law page filter time when in PID central. Setting a large time
		Pr. 08-07 determines the primary low pass filter time when in PID control. Setting a large time constant may slow down the drive's response rate.
		PID control output frequency is filtered with a primary low pass function. This function can filter a
		mix frequencies. A long primary low pass time means the filter degree is high and a short
		primary low pass time means the filter degree is low.
		Inappropriate delay time setting may cause system error.
		PI Control:
		Controlled only by the P action, so the deviation cannot be entirely eliminated. In general, to
		eliminate residual deviations, the P + I controls. When you use the PI control, it eliminates the
		deviation caused by the targeted value changes and the constant external interferences.
		However, if the I action is too powerful, it delays the responde when there is rapid variation. You
		can use the P action by itself to control the loading system with the integral components.
		PD Control:
		When deviation occurs, the system immediately generates an operation load that is greater than
		the load generated only by the D action to restrain deviation increment. If the deviation is small,
		the effectiveness of the P action decreases as well. The control objects include applications with
		integral component loads, which are controlled by the P action only. Sometimes, if the integral
		component is functioning, the whole system may vibrate. In this case, use the PD control to
		reduce the P action's vibration and stabilize the system. In other words, this control is useful with
		no brake function's loading over the processes.
		PID Control:
		Use the I action to eliminate the deviation and the D action to reduce vibration; then combine


deviations, high accuracies and a stable system.

this with the P action for the PID control. Use the PID method for a control process with no

#### Serial Connection



#### Parallel Connection

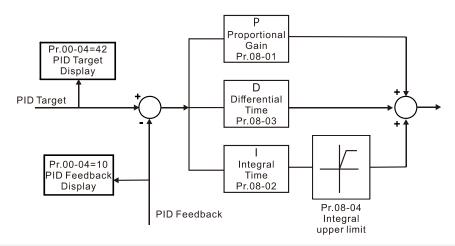

### ★ ☐ B - ☐ B Feedback Signal Detection Time

Default: 0.0

Settings 0.0-3600.0 sec.

- Pr. 08-08 is valid only for ACI 4–20mA.
- This parameter sets the detection time for abnormal PID signal feedback. Setting the detection time to 0.0 disables the detection function.

# 

Default: 0

Settings 0: Warn and continue operation

1: Warn and ramp to stop

2: Warn and coast to stop

3: Warn and operate at last frequency

- This parameter is valid only for ACI 4–20mA.
- AC motor drive acts when the analog PID feedback is abnormal.

### 

Default: 0.00

Settings 0.00-599.00 Hz

Determines the sleep frequency, and if the sleep time and the wake-up frequency are enabled or disabled. Pr. 08-10 = 0: Disabled; Pr. 08-10 ≠ 0: Enabled.

N	88	<b>-    </b> Wake-up F	requency	
			Default: 0.00	
		Settings	0.00–599.00 Hz	
		When Pr. 08-18 =	0, the unit for Pr. 08-10 and that for Pr. 08-11 switch to frequency. The settin	ngs
		are become 0-600	0.00 Hz.	
		When Pr. 08-18=	1, the unit for Pr. 08-10 and that for Pr. 08-11 switch to percentage. T	The
		settings then are to	o 0–200.00%.	
		The percentage is	based on the current command value, not the maximum value. For examp	ple,
		if the maximum va	lue is 100 kg, and the current value is 30kg, then if Pr. 08-11 = 40%, the va	alue
		is 12 kg.		
		Pr. 08-10 uses the	same logic for calculation.	
N	$\Omega S$	- 12 Sleep Time		
	~ ~		Default: 0.0	
		Settings	0.0-6000.0 sec.	
			cy command is smaller than the sleep frequency and less than the sleep tir	me,
		•	nmand is equal to the sleep frequency. However, the frequency comma	
			z until the frequency command becomes equal to or larger than the wake	
		frequency.		•
<b>.</b>	0.0	· ·	ion Loval	
~	UC	PID Deviat	Default: 10.0	
		Settings	1.0–50.0%	
,	0.0			
×	ÜÜ	- ¦닉 PID Deviat		
		<b>.</b>	Default: 5.0	
•	~		0.1–300.0 sec.	
			trol function is normal, it should calculate the value within a period of time t	that
	~~	is close to the targ		
	Ш		control diagram for details. When executing PID feedback control, if	
		•	alue – detection value  > Pr. 08-13 PID Deviation Level and exceeds Pr. 08	
			I as a PID control fault, and the multi-function output MOx = 15 (PID feedba	аск
		error) activates.		
N	88	PID Feedb	ack Filter Time	
			Default: 5.0	
		Settings	0.1–300.0 sec.	
N	88	- 15 PID Comp	ensation Selection	
			Default: 0	
		Settings	0: Parameter setting (Pr. 08-17)	
			1: Analog input	
		0: The setting for F	Pr. 08-17 gives the PID compensation value.	
		1: Set the analog	input (Pr. 03-00-03-02) to 13, then the PID compensation value of ana	alog
		input is displayed	on Pr. 08-17. At this time, Pr. 08-17 is read only).	-

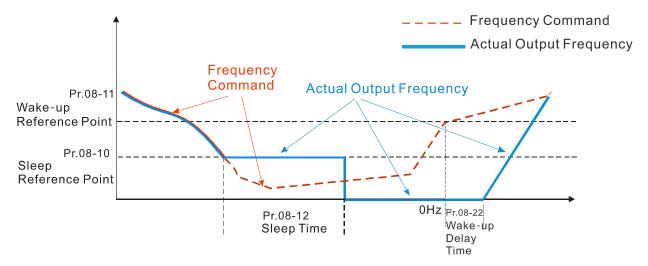
N	88	} - ! 7	PID Com	pensation	
					Default: 0.0
			Settings	-100.0–100.0%	
		The PI	D comper	nsation value = maximum PID target value × Pr. 08-1	7. For example, if the
		maxim	um operait	ton frequency Pr. 01-00 = 60.00 Hz, Pr. 08-17 = 10.0%,	the PID compensation
		value ii	ncreases t	he output frequency 6.00Hz. 60.00Hz × 100.00% × 10.0	% = 6.00Hz
	88	8 - 18	Sleep Mo	de Function Setting	
					Default: 0
			Settings	0: Refer to PID output command	
				1: Refer to PID feedback signal	
		0: The ι 0–599.0		08-10 and that for Pr. 08-11 switch to frequency. The set	tings then are between
				08-10 and that for Pr. 08-11 switch to percentage. The s	ettings then are
		betweer	า 0–200.00	<b>0</b> %.	
N	88	3- 19	Wake-up	Integral Limit	
					Default: 50.0
			Settings	0.0–200.0%	
		The wal	ke-up integ	gral limit for the drive prevents suddenly running at high	speed when the drive
		wakes ι	ıp. The wa	ke-up integral frequency limit = (Pr. 01-00 × Pr. 08-19%	)
		Reduce	s the reac	tion time from sleep to wake-up.	
	88	3-21	Enable P	ID to Change the Operation Direction	
					Default: 0
			Settings	0: Operation direction cannot be changed	
				1: Operation direction can be changed	
N	88	} - 22	Wake-up	Delay Time	
					Default: 0.00
			Settings	0.00-600.00 sec.	
		Refer to	Pr. 08-18	for more information.	
N	88	8-23	PID Conti	rol Flag	
					Default: 0000h
			Settings	bit0 = 1, PID running in reverse follows the setting for F	
				bit0 = 0, PID running in reverse follows PID's calculate	d value
				bit1 = 1, second decimal place of PID Kp	
				bit1 = 0, first decimal place of PID Kp	
				en enables PID running in reverse (Pr. 08-21 = 1).	
				calculated value is positive, the direction is forward. If the	e PID calculated value
		is negat	ive, the di	rection is reverse.	

There are three scenarios for sleep and wake-up frequency. Refer to following explanations:

# 1) Frequency Command (PID is not in use, Pr. 08-00 = 0, only works in VF mode)

When the output frequency ≤ the sleep frequency, and the drive reaches the preset sleep time, then the drive is in sleep mode.


When the frequency command reaches the wake-up frequency, the drive starts to count the wake-up delay time. When the drive reaches the wake-up delay time, the drive begins acceleration time to reach the frequency command value.



# 2) Frequency Command Calculation of the Internal PID (Use PID, Pr. 08-00≠0 and Pr. 08-18=0)

When the PID calculation reaches the sleep frequency, the drive starts to count the sleep time and the output frequency starts to decrease. If the drive exceeds the preset sleep time, it goes directly to sleep mode (0Hz). If the drive does not reach the sleep time, it remains at the lower limit (if there is a preset of lower limit.), or it remains at the lowest output frequency set at Pr. 01-07 and waits to reach the sleep time before it goes into sleep mode (0Hz).

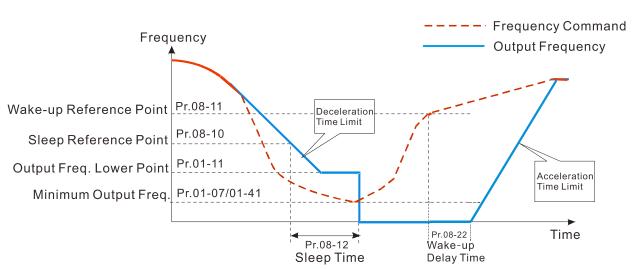When the calculated frequency command reaches the wake-up frequency, the drive starts to count the wake-up delay time. Once it reaches the wake-up delay time, the drive starts the acceleration time to reach the PID frequency command value.



Internal PID Calculation Frequency Command

## 3) PID Feedback Rate Percentage (Use PID, Pr. 08-00 ≠ 0 and Pr. 08-18 = 1)

When the PID feedback rate reaches the sleep level percentage, the drive starts to count the sleep time. The output frequency also decreases. If the drive exceeds the preset sleep time, it goes to sleep mode (0 Hz). If the drive does not reach the sleep time, it remains at the lower limit (if there is a preset of lower limit.), or it remains at the lowest output frequency set for Pr.01-07 and waits to reach the sleep time before going into sleep mode (0 Hz).

When the PID feedback value reaches the wake-up percentage, the drive starts to count the wake-up delay time. Once it reaches the wake-up delay time, the drive starts the acceleration time to reach the PID frequency command value.

### Example 01: PID negative feedback

- Pr. 08-10 must > Pr. 08-11
- 30kg is the reference
- Set the parameter:

Pr. 03-00 = 5 (AVI is PID feedback)

Pr. 08-00 = 1 (PID negative feedback: AVI

simulation input function select)

Pr. 08-10 = 40% (Sleep reference:

12kg = 40%\*30kg


Pr. 08-11 = 20% (Wake-up reference:

6kg = 20%\*30kg

Case 01: If feedback >12kg, frequency decreases.

Case 02: If feedback <6kg, frequency increases.

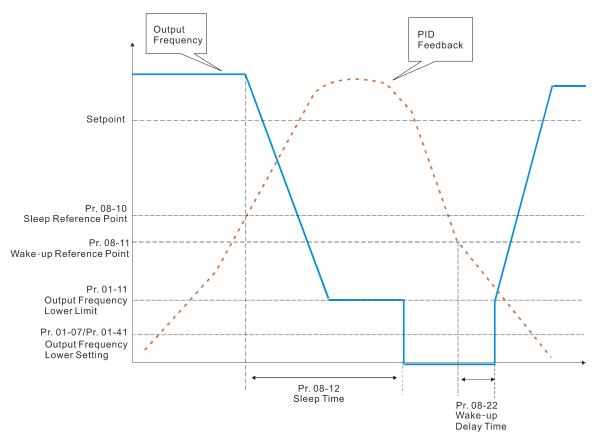A #0.0	PID
Area	Physical quantity
	>12kg, the drive goes
Sleep area	into sleepotor goes
	into sleep
	between 6kg and
Excessive	12kg, the drive
area	remains in current
	state
	<6kg, the drive
Wake-up area	wakes-upmotor
	wakes-up



Example 02: PID positive feedback

- Pr. 08-10 must < Pr. 08-11
- 30kg is the reference
- Set the parameter:

Pr. 03-00 = 5 (AVI is PID feedback)

Pr. 08-00 = 4 (PID positive feedback: AVI

simulation input function select)

Pr. 08-10 = 110% (Sleep reference:

33kg = 110%\*30kg


Pr. 08-11 = 120% (Wake-up reference:

36kg = 120%\*30kg

Case 01: If feedback <33kg, frequency decreases.

Case 02: If feedback >36kg, frequency increases.

Area	PID
	Physical quantity
	>36kg, the drive goes
Sleep area	into sleepmotor goes
	into sleep
Excessive	between 33kg and
	36kg, the drive remains
area	in the current state
Wake-up	<33kg, the drive
area	wakes-up

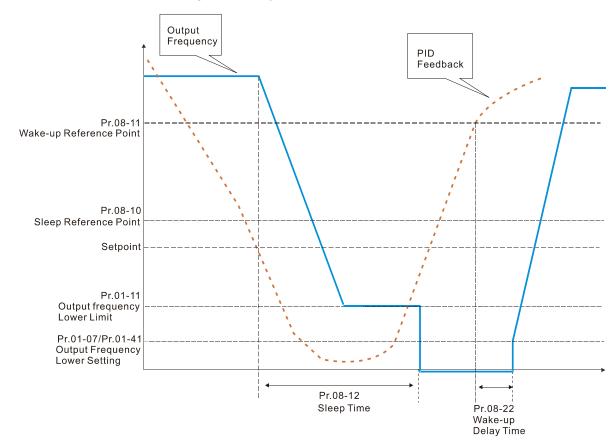

# 09 Communication Parameters

✓ The parameter can be set during the operation.

When using communication devices, connects AC drive with PC by using Delta IFD6530 or IFD6500.



Modbus RS-485

Pin 1~2,7,8: Reserved

Pin 3, 6: GND Pin 4: SG-

Pin 4: SG-Pin 5: SG+

✓ ☐ ☐ ☐ Communication Address

Default: 1

Settings 1-254

If RS-485 serial communication controls the AC motor drive, you must set the communication address for this drive in this parameter. Each AC motor drive's communication address must be different.

✓ ☐ G - ☐ COM1 Transmission Speed

Default: 9.6

Settings 4.8-115.2Kbps

Sets the transmission speed of the computer and the drive.

Options are 4.8Kbps, 9.6Kbps, 19.2Kbps, 38.4Kbps, 57.6Kbps, and 115.2Kbps; otherwise, the transmission speed is set to the default 9.5Kbps.

✓ ☐ ☐ ☐ COM1 Transmission Fault Treatment

Default: 3

Settings 0: Warn and continue operation

1: Warn and ramp to stop

2: Warn and coast to stop

3: No warning and continue operation

Sets the response for Modbus communication errors in with the host. Set the detection time in Pr. 09-03.

Default: 0.0

Settings 0.0–100.0 sec.

Sets the communication transmission time-out.

COM1 Communication Protocol

Default: 1

Settings 1:7, N, 2 (ASCII)

2:7, E, 1 (ASCII)

3:7, O, 1 (ASCII)

4:7, E, 2 (ASCII)

5:7, O, 2 (ASCII)

6:8, N, 1 (ASCII)

7:8, N, 2 (ASCII)

8:8, E, 1 (ASCII)

9:8, O, 1 (ASCII)

10: 8, E, 2 (ASCII)

11: 8, O, 2 (ASCII)

12:8, N, 1 (RTU)

13:8, N, 2 (RTU)

14:8, E, 1 (RTU)

15: 8, O, 1 (RTU)

16: 8, E, 2 (RTU)

17: 8, O, 2 (RTU)

# Control by PC (Computer Link)

When using the RS-485 serial communication interface, you must specify each drive's communication address in Pr. 09-00. The computer then implements control using the drives' individual addresses.

MODBUS ASCII (American Standard Code for Information Interchange): Each byte of data is the combination of two ASCII characters. For example, one byte of data: 64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex).

# 1. Code Description

The communication protocol is in hexadecimal, ASCII: "0"..."9", "A"..."F", every hexadecimal value represents an ASCII code. The following table shows some examples.


Character	'0'	'1'	'2'	'3'	<b>'4'</b>	'5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H

Character	'8'	'9'	'A'	'B'	'C'	'D'	Έ	'F'
ASCII code	38H	39H	41H	42H	43H	44H	45H	46H


### 2. Data Format

10-bit character frame (For ASCII):


(7, N, 2)




(7, E, 1)





(7, O, 1)



11-bit character frame (For RTU):

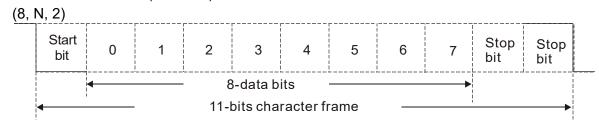

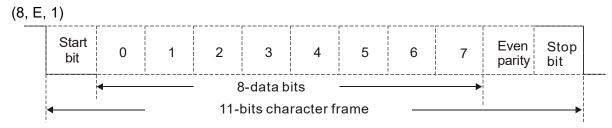

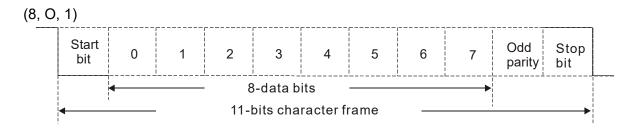

### 3. Communication Protocol

Communication Data Frame:

### **ASCII** mode:

STX	Start character = ':' (3AH)
Address High	Communication address:
Address Low	one 8-bit address consists of 2 ASCII codes
Function High	Command code:
Function Low	one 8-bit command consists of 2 ASCII codes
DATA (n-1)	Contents of data:
	n x 8-bit data consists of 2n ASCII codes
DATA 0	n ≤ 16, maximum of 32 ASCII codes (20 sets of data)
LRC Check High	LRC checksum:
LRC Check Low	one 8-bit checksum consists of 2 ASCII codes
END High	End characters:
END Low	END1= CR (0DH), END0= LF(0AH)

### RTU mode:

START	Defined by a silent interval of more than 10 ms		
Address	Communication address: 8-bit address		
Function	Command code: 8-bit command		
DATA (n-1)	Comtomto of data.		
	Contents of data:		
DATA 0	N × 8-bit data, n ≤ 16		
CRC Check Low	CRC checksum:		
CRC Check High	one 16-bit checksum consists of 2 8-bit characters		
END	Defined by a silent interval of more than 10 ms		

Communication Address (Address)

00H: broadcast to all AC motor drives

01H: AC motor drive of address 01

0FH: AC motor drive of address 15

10H: AC motor drive of address 16

:

FEH: AC motor drive of address 254

Function (Function code) and DATA (data characters)

03H: read data from a register 06H: write to a single register

Example: Reading two continuous data from register address 2102H, AMD address is 01H.

### **ASCII** mode:

# Command Message:

# Response Message

STX		STX	(.,)
Address	'0'	Address	<b>'</b> 0'
Address	'1'	Address	<b>'1'</b>
Function	'0'	Function	<b>'</b> 0'
FullCuon	'3'	Function	<b>'3</b> '
	'2'	Number of register	<b>'</b> 0'
Starting register	'1'	(count by byte)	<b>'4'</b>
Starting register	'0'		<b>'1'</b>
	'2'	Content of starting	<b>'7</b> '
	'0'	register 2102H	<b>'7</b> '
Number of register	'0'		<b>'</b> 0'
(count by word)	'0'		<b>'</b> 0'
	'2'	Content of register 2102H	<b>'</b> 0'
LRC Check	'D'	Content of register 2103H	<b>'</b> 0'
LRC Check	'7'		<b>'</b> 0'
END	CR	LRC Check	<b>'7'</b>
END	LF	LKC Check	<b>'1'</b>
		END	CR
		END	LF

### RTU mode:

### Command Message:

# Response Message

	-
Address	01H
Function	03H
Starting data register	21H
Starting data register	02H
Number of register	00H
(count by word)	02H
CRC Check Low	6FH
CRC Check High	F7H

Address	01H
Function	03H
Number of register (count by byte)	04H
Content of register	17H
address 2102H	70H
Content of register	00H
address 2103H	00H
CRC Check Low	FEH
CRC Check High	5CH

06H: single write, write single data to a register.

Example: Writing data 6000 (1770H) to register 0100H. AMD address is 01H.

### **ASCII** mode:

# Command Message:

# Response Message

STX	6.7	STX	٤.,
	·0'		·0'
Address	'1'	Address	<b>'1'</b>
Function	'0'	Function	'0'
1 diletion	'6'	1 diletion	'6'
	'0'		'0'
Target register	'1'	Target register	'1'
larger register	'0'		'0'
	'0'		'0'
	'1'		'1'
Register content	'7'	Pogistor content	'7'
Register content	'7'	Register content	'7'
	'0'		'0'
LRC Check	'7'	LRC Check	'7'
LIVE CHECK	'1'	LIXC CHECK	'1'
END	CR	END	CR
LIND	LF	LIND	LF

### RTU mode:

### Command Message:

### Response Message

Address	01H	Address	01H
Function	06H	Function	06H
Torget register	01H	Target register	01H
Target register	00H	Target register	00H
Degister centent	17H	Degister centent	17H
Register content	70H	Register content	70H
CRC Check Low	86H	CRC Check Low	86H
CRC Check High	22H	CRC Check High	22H

10H: write multiple registers (write multiple data to registers). The system can write up to 20 sets of data simultaneously.

Example: Set the multi-step speed of an AC motor drive (address is 01H),

Pr. 04-00 = 50.00 (1388H), Pr. 04-01 = 40.00 (0FA0H).

### **ASCII** Mode

# Command Message:

STX	4.5
ADR 1	'0'
ADR 0	'1'
CMD 1	'1'
CMD 0	'0'
	'0'
Target register	<b>'</b> 5'
Target register	'0'
	'0'
	'0'
Number of register	'0'
(count by word)	'0'
,	'2'
Number of register	'2' '0'
(count by byte)	<b>'4'</b>
, , ,	'1'
The first data are to the	'3'
The first data content	'8'
	'8'
	<b>'</b> 0'
The constant	'F'
The second data content	'A'
	<b>'</b> 0'
L DC Charle	<b>'</b> 9'
LRC Check	'A'
END	CR
END	LF

# Response Message

STX	·.,
ADR 1	'0'
ADR 0	'1'
CMD 1	'1'
CMD 0	'0'
	'0'
Torget register	<b>'5'</b>
Target register	'0'
	'0'
	'0'
Number of register	'0'
(count by word)	'0'
	'2'
LRC Check	'E'
LRC Check	'8'
END	CR
END	LF

### RTU mode:

### Command Message:

ADR	01H
CMD	10H
Target register	05H
raiget register	00H
Number of register	00H
(Count by word)	02H
Quantity of data (byte)	04
The first data content	13H
The mst data content	88H
The second data content	0FH
The second data content	A0H
CRC Check Low	<b>'</b> 9'
CRC Check High	'A'

### Response Message:

ADR	01H
CMD	10H
Target register	05H
larger register	00H
Number of register	00H
(Count by word)	02H
CRC Check Low	41H
CRC Check High	04H

# Check sum

### ASCII mode:

LRC (Longitudinal Redundancy Check) is calculated by summing up the values of the bytes from ADR1 to last data character then calculating the hexadecimal representation of the 2's-complement negation of the sum.

# Example:

01H + 03H + 21H + 02H + 00H + 02H = 29H, the 2's-complement negation of 29H is D7H.

RTU mode:

CRC (Cyclical Redundancy Check) is calculated by the following steps:

- Step 1: Load a 16-bit register (called CRC register) with FFFFh.
- **Step 2:** Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.
- Step 3: Examine the LSB of CRC register.
- **Step 4:** If the LSB of CRC register is 0, shift the CRC register one bit to the right, fill MSB with zero, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right, fill MSB with zero, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.
- **Step 5:** Repeat step 3 and 4 until you perform eight shifts. This processes a complete 8-bit byte.
- **Step 6:** Repeat step 2 through 5 for the next 8-bit byte of the command message. Continue doing this until all bytes are processed. The final contents of the CRC register are the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, that is, the lower order byte is transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments:

Unsigned char\* data ← a pointer to the message buffer

Unsigned char length ← the quantity of bytes in the message buffer

The function returns the CRC value as a type of unsigned integer.

Unsigned int crc chk(unsigned char\* data, unsigned char length)

```
{
      int j;
      unsigned int reg crc=0xffff;
      while(length--){
           reg crc ^= *data++;
           for(j=0;j<8;j++){
                if(reg crc \& 0x01){ /* LSB(b0)=1 */
                     reg crc=(reg crc>>1) ^ 0xa001;
                }else{
                     reg crc=reg crc >>1;
                }
           }
      }
      return reg crc;
                                         // return register CRC
}
```

# 4. Address list

# AC motor drive parameters

Modbus address	Function
	GG is the parameter group, nn is the parameter number; for example, the address of Pr. 04-10 is 040AH.

# Control command (20xx)

Modbus address	R/W	Function	
		bit1-0	00B: No function 01B: Stop 10B: Run
		hita a	11B: JOG + RUN Reserved
		bit3–2	00B: No function
			01B: FWD
		bit5–4	10B: REV
			11B: Change direction
			00B: 1st acceleration / deceleration
		bit7 6	01B: 2 <sup>nd</sup> acceleration / deceleration
		bit7–6	10B: 3 <sup>rd</sup> acceleration / deceleration
			11B: 4 <sup>th</sup> acceleration / deceleration
			000B: Master speed
			0001B: 1st Step speed frequency
2000H	RW		0010B: 2 <sup>nd</sup> Step speed frequency
2000.1			0011B: 3 <sup>rd</sup> Step speed frequency
			0100B: 4 <sup>th</sup> Step speed frequency
			0101B: 5 <sup>th</sup> Step speed frequency
			0110B: 6 <sup>th</sup> Step speed frequency
		bit11-8	0111B: 7 <sup>th</sup> Step speed frequency
			1000B: 8 <sup>th</sup> Step speed frequency
			1001B: 9 <sup>th</sup> Step speed frequency
			1010B: 10 <sup>th</sup> Step speed frequency
			1011B: 11 <sup>th</sup> Step speed frequency 1100B: 12 <sup>th</sup> Step speed frequency
			1101B: 13 <sup>th</sup> Step speed frequency
			1110B: 14 <sup>th</sup> Step speed frequency
			1111B: 15 <sup>th</sup> Step speed frequency
		bit12	1: Enable bit06–11 function
		bit15	Reserved
2001H	RW	Frequency	command (XXX.XX Hz)
	RW	bit0	1: E.F. ON
2002H		bit1	1: Reset
200211		bit2	1: Base block (B.B) ON
		bit15-3	Reserved

# Status monitor read only (21xx)

Modbus address	R/W	Function
2100H		High byte: Warn Code Low Byte: Error Code

Modbus address	R/W	Function		
uddiese		bit1–0	AC motor drive operation status 00B: Drive stops 01B: Drive decelerating 10B: Drive standby 11B: Drive operating	
		bit2	1 : JOG Command	
2101H	R	bit4-3	Operation Direction 00B: FWD run 01B: From REV run to FWD run 10B: From FWD run to REV run 11B: REV run	
		bit8	1: Master frequency controlled by communication interface	
		bit9	1: Master frequency controlled by analog/external signal	
		bit10	1: Operation command controlled by communication interface	
		bit11	1: Parameter locked	
		bit12	1: Enable to copy parameters from keypad	
2102H	R	bit15–13	Reserved command (XXX.XX Hz)	
2102H	R	<del></del>	·	
2104H	R	Output frequency (XXX.XX Hz)  Output current (XX.XX A). When current is higher than 655.35, it shifts the decimal as (XXX.X A). The decimal can refer to High byte of 211F.		
2105H	R	DC BUS V	DC BUS Voltage (XXX.X V)	
2106H	R		tage (XXX.X V)	
2107H	R	Current ste	ep number of multi-step speed operation	
2108H	R	Reserved	• • • • • • • • • • • • • • • • • • • •	
2109H	R	Counter va		
210AH	R	Power factor angle (XXX.X)		
210BH	R	Output torque (XXX.X %)		
210CH	R	Actual motor speed (XXXXX rpm)		
210DH 210EH	R R	Number of PG feedback pulses (0–65535)		
210FH	R	Number of PG2 pulse commands (0–65535)  Power output (X.XXX kW)		
2116H	R		ion display (Pr. 00-04)	
211BH	R	Maximum Operation Frequency (Pr. 01-00) or Maximum User-defined Value (Pr. 00-26) When Pr. 00-26 is 0, this value is equal to Pr. 01-00 setting When Pr. 00-26 is not 0, and the command source is keypad, this value = Pr. 00-24 * Pr. 00-26 / Pr. 01-00 When Pr. 00-26 is not 0, and the command source is 485, this value = Pr. 09-10 * Pr. 00-26 / Pr. 01-00		
211FH	R		decimal of current value (display)	

# Status monitor read only (22xx)

		· · · · ·
Modbus address	RW	Function
2200H		Display output current (A). When current is higher than 655.35, it shifts the decimal as (XXX.X A). The decimal can refer to High byte of 211F.
2201H	R	Display counter value (c)
2202H	R	Actual output frequency (XXXXX Hz)
2203H	R	DC BUS voltage (XXX.X V)
2204H	R	Output voltage (XXX.X V)

Modbus	RW	Function
address		
2205H	R	Power angle (XXX.X)
2206H	R	Display actual motor speed kW of U, V, W (XXXXX kW)
2207H	R	Display motor speed in rpm estimated by the drive or encoder feedback (XXXXX rpm)
2208H	R	Display positive/negative output torque in %, estimated by the drive (t0.0: positive torque, -0.0: negative torque) (XXX.X %)
2209H	R	Display PG feedback (see NOTE 1 in Pr. 00-04)
220AH	R	PID feedback value after enabling PID function (XXX.XX %)
220BH	R	Display signal of AVI analog input terminal, 0–10V corresponds to 0.00–100.00% (1.) (see NOTE 2 in Pr. 00-04)
220CH	R	Display signal of ACI analog input terminal, 4–20mA / 0–10V corresponds to 0.00–100.00% (2.) (see NOTE 2 in Pr. 00-04)
220DH	R	Display signal of AUI analog input terminal, -10V-10V corresponds to -100.00-100% (3.) (see NOTE 2 in Pr. 00-04)
220EH	R	IGBT temperature of drive power module (XXX.X °C)
220FH	R	The temperature of capacitance (XXX.X °C)
		The status of digital input (ON/OFF), refer to Pr. 02-12
2210H	R	(see NOTE 3 in Pr. 00-04)
2211H	R	The status of digital output (ON/OFF), refer to Pr. 02-18 (see NOTE 4 in Pr. 00-04)
2212H	R	The multi-step speed that is executing (S)
2213H	R	The corresponding CPU pin status of digital input (d.) (see NOTE 3 in Pr. 00-04)
2214H	R	The corresponding CPU pin status of digital output (O.) (see NOTE 4 in Pr. 00-04)
2215H	R	Number of actual motor revolution (PG1 of PG card) (P.) it starts from 9 when the actual operation direction is changed or the keypad displays at stop is 0. The maximum is 65535
2216H	R	Pulse input frequency (PG2 of PG card) (XXX.XX Hz)
2217H	R	Pulse input position (PG card PG2), the maximum setting is 65535.
2218H	R	Position command tracing error
2219H	R	Display times of counter overload (XXX.XX %)
221AH	R	GFF (XXX.XX %)
221BH	R	DCBUS voltage ripples (XXX.X V)
221CH	R	PLC register D1043 data (C)
221DH	R	Number of poles of a permanent magnet motor
221EH	R	User page displays the value in physical measure
221FH	R	Output Value of Pr. 00-05 (XXX.XX Hz)
		Number of motor turns when drive operates (saves when drive stops, and
2220H	R	resets to zero when operating)
2221H	R	Operating position of the motor (saves when drive stops, and resets to zero
2222H	R	when operating) Fan speed of the drive (XXX %)
2223H	R	Control mode of the drive 0: speed mode 1: torque mode
2224H	R	Carrier frequency of the drive (XX kHz)
2225H	R	Reserve
2226H	R	Drive status 00b: No direction bit1–0 01b: Forward 10b: Reverse bit3–2 01b: Drive ready 10b: Error
		bit4 Ob: Motor drive did not output  1b: Motor drive did output

Modbus address	RW	Function	
		bit5 0b: No alarm	
		1b: Alarm	
2227H	R	Drive's estimated output torque (positive or negative direction) (XXXX Nt-m)	
2228H	R	Torque command (XXX.X %)	
2229H	R	kWh display (XXXX.X)	
222AH	R	PG2 pulse input in Low Word	
222BH	R	PG2 pulse input in High Word	
222CH	R	Motor actual position in Low Word	
222DH	R	Motor actual position in High Word	
222EH	R	PID reference (XXX.XX %)	
222FH	R	PID offset (XXX.XX %)	
2230H	R	PID output frequency (XXX.XX Hz)	
2231H	R	Hardware ID	

# Remote IO (26xx)

Modbus address	RW	Function	
2601H	R	Each bit corresponds to different terminal input contact	
2602H	R	Each bit corresponds to different terminal input contact	
2603H-	R	Reserved	
2640H			
2641H	RW	Each bit corresponds to different terminal output contact	
2642H-	R	Reserved	
2660H	11	reserved	
2661H	R	AVI proportional value	
2662H	R	ACI proportional value	
2663H	R	AUI proportional value	
2664H– 266AH	R	Reserved	
266BH	R	Expansion card Al10, 0.0–100.0 % (EMC-A22A)	
266CH	R	Expansion card Al11, 0.0–100.0 % (EMC-A22A)	
266DH– 26A0H	R	Reserved	
26A1H	RW	AFM1 output proportional value	
26A2H	RW	AFM2 output proportional value	
26A3H-	R	Pacanyad	
26AAH	К	Reserved	
26ABH	RW	Expansion card AO10, 0.0–100.0 % (EMC-A22A)	
26ACH	RW	Expansion card AO11, 0.0–100.0 % (EMC-A22A)	

# 5. Exception response:

When the drive is using the communication connection, if an error occurs, the drive responds to the error code and sets the highest bit (bit 7) of code to 1 (function code AND 80H) then responds to the control system to signal that an error occurred.

If the keypad displays "CE-XX" as a warning message, "XX" is the error code at that time. Refer to the table of error codes for communication error for reference.

# Example:

### ASCII mode:

ASCII Mode:				
STX	(., ·			
Address	'0'			
Address	'1'			
Function	'8'			
Function	<b>'6'</b>			
Evention code	'0'			
Exception code	'2'			
LRC Check	'7'			
LRC Check	'7'			
END	CR			
⊏IND	IF			

### RTU mode:

Address	01H
Function	86H
Exception code	02H
CRC Check Low	C3H
CRC Check High	A1H

The explanation of exception codes:


Error code	Explanation
1	Function code is not supported or unrecognized.
2	Address is not supported or unrecognized.
3	Data is not correct or unrecognized.
4	Fail to execute this function code

# ★ 39 - 39 Communication Response Delay Time

Default: 2.0

Settings 0.0-200.0ms

Sets the response delay time after the AC motor drive receives a communication command as shown in the following.



# ☐ ☐ ☐ Communication Main Frequency

Default: 60.00

Settings 0.00-599.00Hz

When you set Pr. 00-20 to 1 (RS-485 serial communication), the AC motor drive saves the last frequency command into Pr. 09-10 when there is abnormal power off or momentary power loss. After the drive reboots when power is restored, it checks the frequency in Pr. 09-10 if no new frequency command is input. When a frequency command of RS-485 changes (the frequency command source must be set as Modbus), this parameter also changes.

89-11	Block Transfer 1
09-12	Block Transfer 2
09-13	Block Transfer 3
89-14	Block Transfer 4
89-15	Block Transfer 5
89-18	Block Transfer 6
89-17	Block Transfer 7
8: -80	Block Transfer 8
89-19	Block Transfer 9
	89-13

×	09-20	Block Transfer 10
×	89-21	Block Transfer 11
×	89-22	Block Transfer 12
×	89-23	Block Transfer 13
×	89-24	Block Transfer 14
×	88-85	Block Transfer 15
×	89-28	Block Transfer 16
		Default: 0000h

Settings 0000-FFFFh

There is a group of block transfer parameters available in the AC motor drive (Pr. 09-11–Pr. 09-26). Using communication code 03H, you can store the parameters (Pr. 09-11–Pr. 09-26) that you want to read.

For example: according to the Address List (as shown in the table below), Pr. 01-42 is shown as 012A. Set Pr. 09-11 to 012Ah (the minimum voltage of Pr. 01-42 M2 is 2.0V), and use Pr. 09-11 (communication address 090B) to read the communication parameter, the read value is 2.0.

AC motor drive	I GGnnH	GG is the parameter group, nn is the parameter number; for
parameters		example, the address of Pr. 04-10 is 040AH.

# 

Default: 1

Settings 0: Decoding Method 1 (20xx) 1: Decoding Method 2 (60xx)

		Decoding Method 1	Decoding Method 2	
	Digital Keypad	Digital keypad controls the drive action regardless of decoding method 1 or 2.		
Course of	External Terminal	External terminal controls the drive action regardless of decoding method 1 or 2.		
Source of	RS-485	Refer to address: 2000h–20FFh	Refer to address: 6000h–60FFh	
Operation Control	CANopen	Refer to index: 2020-01h-2020-FFh	Refer to index:2060-01h-2060-FFh	
	Communication Card	Refer to address: 2000h–20FFh	Refer to address: 6000h–60FFh	
	PLC	PLC command controls the drive action regardless of decoding method 1 or 2.		

# 

Default: 0

Settings 0: Modbus 485

-1: Internal Communication Slave 1

-2: Internal Communication Slave 2

-3: Internal Communication Slave 3

-4: Internal Communication Slave 4

-5: Internal Communication Slave 5

-6: Internal Communication Slave 6

-7: Internal Communication Slave 7

-8: Internal Communication Slave 8

-10: Internal Communication Master -12: Internal PLC Control When it is defined as internal communication, refer to Section 16-10 for Main Control Terminal of Internal Communication. When it is defined as internal PLC control, refer to Section 16-12 for Remote IO control application (using MODRW). Default: 0 bit0: Before PLC scan, set the PLC target frequency = 0 Setting bit1: Before PLC scan, set the PLC target torque = 0 bit2: Before PLC scan, set the speed limit of torque control mode = 0 Defines whether to clear the frequency command or speed command to 0 before the PLC scan time sequence. ## PLC Address Default: 2 Settings 1–254 CANopen Slave Address Default: 0 Settings 0: Disable 1-127 CANopen Speed Default: 0 Settings 0: 1Mbps 1: 500Kbps 2: 250Kbps 3: 125Kbps 4: 100Kbps (Delta only) 5: 50Kbps ☐ ☐ ☐ CANopen Warning Record Default: Read only Settings bit0: CANopen Guarding Time-out bit1: CANopen Heartbeat Time-out bit2: CANopen SYNC Time-out bit3: CANopen SDO Time-out bit4: CANopen SDO buffer overflow bit5: CANopen hardware disconnection warning (Can Bus OFF) bit6: Error protocol of CANopen bit8: The setting values of CANopen indexes are fail bit9: The setting value of CANopen address is fail bit10: The checksum value of CANopen indexes is fail

유명 - 복유 CANopen Decoding Method Default: 1 0: Disable (Delta-defined decoding method) Settings 1: Enable (CANopen DS402 Standard protocol) **CANopen Communication Status** Default: 0 Settings 0: Node Reset State 1: Com Reset State 2: Boot up State 3: Pre-operation State 4: Operation State 5: Stop State ☐ ☐ ☐ CANopen Control Status Default: Read Only 0: Not ready for use state Settings 1: Inhibit start state 2: Ready to switch on state 3: Switched on state 4: Enable operation state 7: Quick stop active state 13: Error reaction activation state 14: Error state CANopen Master Function Default: 0 Settings 0: Disable 1: Enable CANopen Master Address Default: 100 Settings 0–127 Communication Card Identification Default: Read only Settings 0: No communication card 1: DeviceNet Slave 2: Profibus-DP Slave 3: CANopen Slave / Master 4: MODBUS-TCP Slave 5: EtherNet / IP Slave 6: EtherCAT 12: PROFINET

Firmware Version of Communication Card Default: Read only Settings Read only **Product Code** Default: Read only Settings Read only Error Code Default: Read only Settings Read only Communication Card Address (for DeviceNet and PROFIBUS) Default: 1 Settings DeviceNet: 0-63 Profibus-DP: 1-125 Communication Card Speed Setting (for DeviceNet) Default: 2 Standard DeviceNet: Settings 0: 125Kbps 1: 250Kbps 2: 500Kbps 3: 1Mbps (Delta only) Non-standard DeviceNet: (Delta only) 0: 10Kbps 1: 20Kbps 2: 50Kbps 3: 100Kbps 4: 125Kbps 5: 250Kbps 6: 500Kbps 7: 800Kbps 8: 1Mbps ✓ ☐ ☐ ☐ ☐ Other Communication Card Speed Setting (for DeviceNet) Default: 0 Settings 0: Standard DeviceNet In this mode, the baud rate can only be 125Kbps, 250Kbps, 500Kbps in standard DeviceNet speed. 1: Non-standard DeviceNet In this mode, the baud rate of DeviceNet can be the same as that for CANopen (0-8). Use with Pr. 09-71.

12.1-09-16

Setting 0: The baud rate can only be set to 125Kbps, 250Kbps and 500Kbps.

		Setting 0–8).	1: The DeviceNet communication rate can be the same as that	for CANopen (setting
×	89	1-75	Communication Card IP Configuration (for MODBUS TCP)	
				Default: 0
			Settings 0: Static IP	
			1: Dynamic IP (DHCP)	
		Setting	0: Set the IP address manually.	
		Setting	1: IP address is automatically set by the host controller.	
×	89	! - 78	Communication Card IP Address 1 (for MODBUS TCP)	
×	89	- 77	Communication Card IP Address 2 (for MODBUS TCP)	
×	89	1-78	Communication Card IP Address 3 (for MODBUS TCP)	
×	89	1-79	Communication Card IP Address 4 (for MODBUS TCP)	
				Default: 0
			Settings 0-65535	
		Use Pr	. 09-76–09-79 with a communication card.	
N	89	8 - 80	Communication Card Address Mask 1 (for MODBUS TCP)	
×	89	! - 8 :	Communication Card Address Mask 2 (for MODBUS TCP)	
×	89	3-82	Communication Card Address Mask 3 (for MODBUS TCP)	
N	89	! - 8 3	Communication Card Address Mask 4 (for MODBUS TCP)	
				Default: 0
			Settings 0-65535	
×	89	! - <u>8</u> 4	Communication Card Gateway Address 1 (for MODBUS TCP)	
×	89	8-85	Communication Card Gateway Address 2 (for MODBUS TCP)	
×	89	8-88	Communication Card Gateway Address 3 (for MODBUS TCP)	
×	89	! - 8 ? <u>.</u>	Communication Card Gateway Address 4 (for MODBUS TCP)	
				Default: 0
			<u>Settings</u> 0–65535	
M	89	- 88	Communication Card Password (Low word) (for MODBUS TCP)	
N	89	: - 89	Communication Card Password (High word) (for MODBUS TCP)	
				Default: 0
	0.6		Settings 0–99	
N	8 5	1 - 9 O	Reset Communication Card (for MODBUS TCP)	D ( W )
			Outlines Or Disable	Default: 0
			Settings 0: Disable	
			1: Reset, return to default	

Additional Settings for the Communication Card (for MODBUS TCP)

Default: 1

Settings bit0: Enable IP Filter

bit1: Enable internet parameters (1bit)

When IP address is set, this bit is enabled. After updating the communication card parameters, this bit changes to disabled.

bit2: Enable login password (1bit)

When you enter the login password, this bit is enabled. After updating the communication card parameters, this bit changes to disable.

Communication Card Status (for MODBUS TCP)

Default: 0

Settings bit0: Enable password

> When the communication card is set with a password, this bit is enabled. When the password is cleared, this bit is disabled.

# 10 Speed Feedback Control Parameters

★ This parameter can be set during operation.

In this parameter group, ASR stands for Adjust Speed Regulator and PG stands for Pulse Generator.


- 10	Encoder	Type Selection
		Default: 0
	Settings	0: Disabled
		1: ABZ
		2: ABZ (Delta encoder for Delta Servo motor)
		3: Resolver
		4: ABZ/UVW
		5: MI8 single phase pulse input
	When using PO	G expansion card EMC-PG01L or EMC-PG01O, set Pr.10-00=1. Thes
	expansion cards	are applicable for induction motor (IM) only.
	When using EMO	C-PG01U, set Pr. 10-00=2 (Delta encoder), and make sure SW1 is switched t
	D (Delta type). If	the setting for Pr. 10-00, Pr. 10-01 and Pr. 10-02 has changed, please turn of
	the drive's powe	r and reboot to prevent permanent magnetic motor (PM) stall. This mode
	recommended to	use for PM.
	When using EMO	C-PG01U, set Pr. 10-00=4 (Standard ABZ/UVW Encoder), and make sure SW
	is switched to S (	Standard Type). This mode is applicable for both IM and PM.
	When using EM	C-PG01R, set Pr. 10-00=3, and set Pr. 10-01 to 1024 ppr, then set Pr. 10-3
	after verifying the	pole numbers of the resolver.
	When using MI8	single-phase pulse input as frequency command, the Pr. 10-02 must set to "
	Single-phase inp	out". The drive calculates the MI8 single-phase pulse input speed when th
	control modes ar	e VF, VFPG, SVC, IM/PM FOC Sensorless and IM/PM TQC Sensorless. If yo
	use the MI8 sing	le-phase pulse input for speed feedback in closed-loop control, you can on
	use it in VFPG cl	osed-loop control mode.
<b>;</b> [	Encoder	Pulses per Revolution
		Default: 600
	Settings	1–20000
	This parameter	sets the encoder pulses per revolution (ppr). It is a feedback control signs
	source when usi	ng PG. The encoder sets the number of pulses for the motor rotating throug
	one rotation. The	A/B phase cycle generates the pulse number.
	This setting is a	lso the encoder resolution. The speed control is more accurate with highe
	resolution.	
	If you set this pa	rameter incorrectly, it may cause motor stall, drive over-current, or a magnet
	pole origin detec	ction error for the PM in closed-loop control. When using the PM, you must
		e zero point detection (Pr.05-00 = 4) again if you modify the content of the
	parameter.	

# Encoder Input Type Setting


Default: 0

Settings 0: Disable


1: A/B phase pulse input, run forward if the A-phase leads the B-phase by 90 degrees.




2: A/B phase pulse input, run forward if the B-phase leads the A-phase by 90 degrees.



3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction).



4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction).



5: Single-phase input



- Position control: the PG2 pulse affects the PG1 pulse tracking position.
  - 1. When PG2 is single-pulse, and PG1 is A/B phase pulse, the frequency of position control should be (input pps\*2) / (PG1 ppr \*4) at constant speed.
  - 2. When PG2 and PG1 are either single-pulse (or both A/B phase pulse), the frequency of position control should be (input pps\*2) / (PG1 ppr\*2) at constant speed.
  - 3. Due to the edge trigger of the pulse input, the input of A/B phase pulse should be read as 4 times of the frequency; and the single-phase input should be read as twice of the frequency. For inputs with the same pps, the single-phase tracking frequency will be half of the double-phase frequency.
- Velocity control: PG2 acts according to the setting for Pr. 10-01 (PG1 ppr), and will not be affected by PG1 pulse (single-phase input or A/B phase pulse). When the setting for Pr. 10-00, Pr.

10-01 and Pr. 10-02 are changed, cycle the power of the motor drive.

- 1. The speed formula is (input ppr) / (PG1 ppr), when PG1 ppt = 2500, PG2 is single-phase input, and the input pps is 1000 (1000 pulse per second), the speed should be (1000 / 2500) = 0.40Hz.
- 2. The same pps inputs of A/B phase pulse or single-phase pulse input should get the same frequency command.

# Frequency Division Output Setting (Denominator)

Default: 1

Settings 1-255

Sets the denominator for the frequency division of the PG card feedback and output. When you set it to 2 with feedback 1024 ppr, PG OUT (pulse output) of PG card is 1024 / 2 = 512 ppr.


Electrical Gear at Load Side A1

Fig. - 65
Electrical Gear at Motor Side B1

Default: 100

Settings 1-65535

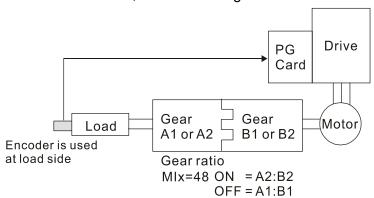Use Pr. 10-04–Pr. 10-07 with the multi-function input terminal (set to 48) to switch to Pr. 10-04–Pr. 10-05 or Pr. 10-06–Pr. 10-07, as the following shows.



# ★ ## Treatment for Encoder / Speed Observer Feedback Fault

Default: 2

Settings 0: Warn and continue operation

1: Warn and ramp to stop

2: Warn and coast to stop

Detection Time of Encoder / Speed Observer Feedback Fault

Default: 1.0

Settings 0.0–10.0 sec.

0: Disable

When there is an encoder loss, an encoder signal error, a pulse signal setting error or a signal error, if the duration exceeds the detection time for the encoder feedback fault (Pr. 10-09), the encoder signal error occurs. Refer to Pr. 10-08 for encoder feedback fault treatment.

# Chapter 12 Description of Parameter Settings | C2000

	•		
	,	Pr. 10-09), the feedback fault occurs. Refer to F	Pr. 10-08 for the encoder
	feedback fault tre	eatment.	
× 1	? - !!! Encoder	/ Speed Observer Stall Level	
, <u> </u>		aposa observer etail 2016.	Default: 115
	Settings	0–120%	Delault. 110
	Settings	0: No function	
	•	etermines the maximum encoder feedback signal al	lowed before a fault occurs.
	i ne maximum op	peration frequency for Pr.01-00 = 100%	
×	-     Detection	Time of Encoder / Speed Observer Stall	
			Default: 0.1
	Settings	0.0-2.0 sec.	
×	Broder	/ Speed Observer Stall Action	
			Default: 2
	Settings	0: Warn and continue operation	
	_	1: Warn and ramp to stop	
		2: Warn and coast to stop	
	When the drive of	output frequency exceeds the encoder/ speed obse	erver stall level (Pr. 10-10).
		count the time. When the error time exceeds the end	•
		r. 10-11), the drive implements the encoder stall trea	•
	(.	,,,	
<b>*</b>	<b>] -   }</b> Encoder	/ Speed Observer Slip Range	
			Default: 50
	Settings	0–50%	
		0: Disable	
×	-   Detection	Time of Encoder/ Speed Observer Slip	
			Default: 0.5
	Settings	0.0-10.0 sec.	
× H	- 15 Encoder	/ Speed Observer Stall and Slip Error Action	
			Default: 2
	Settings	0: Warn and continue operation	
	3	1: Warn and ramp to stop	
		2: Warn and coast to stop	
	This parameter a	cts on the settings for Pr. 10-13–Pr. 10-15:	
	·	of (rotation speed – motor frequency) exceeds the	Pr 10-13 setting and the
		ceeds Pr. 10-14; the drive starts to count the time. If	•
		coder feedback signal error occurs. Refer to Pr.10-1	
		voasi issuuavii aiuliai sitti Ustula. Nelel iU F1. IV=1	a ini ine enconer cian ann
		•	5 for the encoder stall and
	slip error treatme	•	5 for the encoder stall and


When the speed controller signal is abnormal, if time exceeds the detection time for the encoder

# Pulse Input Type Setting


Default: 0

Settings 0: Disable


1: A/B phase pulse input, run forward if the A-phase leads the B-phase by 90 degrees.




2: A/B phase pulse input, run forward if the B-phase leads the A-phase by 90 degrees.



3: Phase A is a pulse input and phase B is a direction input (L = reverse direction, H = forward direction).



4: Phase A is a pulse input and phase B is a direction input (L = forward direction, H = reverse direction).




### 5: MI8 single-phase pulse input

When this setting is different from the Pr. 10-02 setting and the source of the frequency command is pulse input (Pr. 00-20 set to 4 or 5), it causes a four-time frequency problem .

Example:

Assume that Pr. 10-01=1024, Pr. 10-02=1, Pr. 10-16=3, Pr. 00-20=5, MIx = 37 and ON, then the pulse needed to rotate the motor one revolution is 4096 (1024\*4).

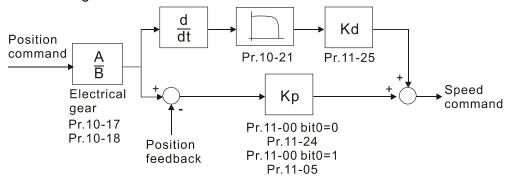- Assume that Pr. 10-01=1024, Pr. 10-02=1, Pr. 10-16=1, Pr. 00-20=5, MIx = 37 and ON, the pulse needed to rotate the motor one revolution is 1024 (1024\*1).
- Position control diagram



# Chapter 12 Description of Parameter Settings | C2000 Setting procedure of MI8 single-phase pulse input: Pr. 00-20=4, Pulse input without direction command Pr.10-01 set as the ppr number of each rotation. Pr.10-16=5, MI8 single-phase pulse input MI8 input and PG2 input could both exist at the same time. But PG card Pr. 10-00 and Pr. 10-16 cannot be set as MI8 at the same time.

Electrical Gear A

Electrical Gear B

Default: 100

Settings 1–65535

Rotation speed = pulse frequency / encoder pulses (Pr. 10-01) \* Electrical Gear A / Electrical Gear B.

✓ ☐ → ☐ Positioning for Encoder Position

Default: 0

Settings -32767-2400

- Determines the internal position in the position mode.
- Use this with the multi-function input terminal setting = 35 (enable position control).
- When set to 0, it is the Z-phase position of the encoder.
- The setting range is affected by Pr. 10-01 and Pr. 10-02.

Example:

When Pr. 10-01 = 2500, Pr. 10-02 = 1 or 2, the setting range for Pr. 10-19 is -32767–10000.

When Pr. 10-01 = 1024, Pr. 10-02 = 1 or 2, the setting range for Pr. 10-19 is -32767–4096.

When Pr. 10-01 = 2500, Pr. 10-02 = 3, 4 or 5, the setting range for Pr. 10-19 is -32767–2500.

# Fror Range for Encoder Position Reached

Default: 10

Settings 0–65535 pulses

This parameter determines the range for the internal positioning position reached.

Example:


When you set the position for Pr.10-19 (Positioning for Encoder Position) and Pr.10-20 to 1000, it reaches the position if the position is between 990–1010 after positioning.

Filter Time (PG2)

Default: 0.100

Settings 0.000-65.535 sec.

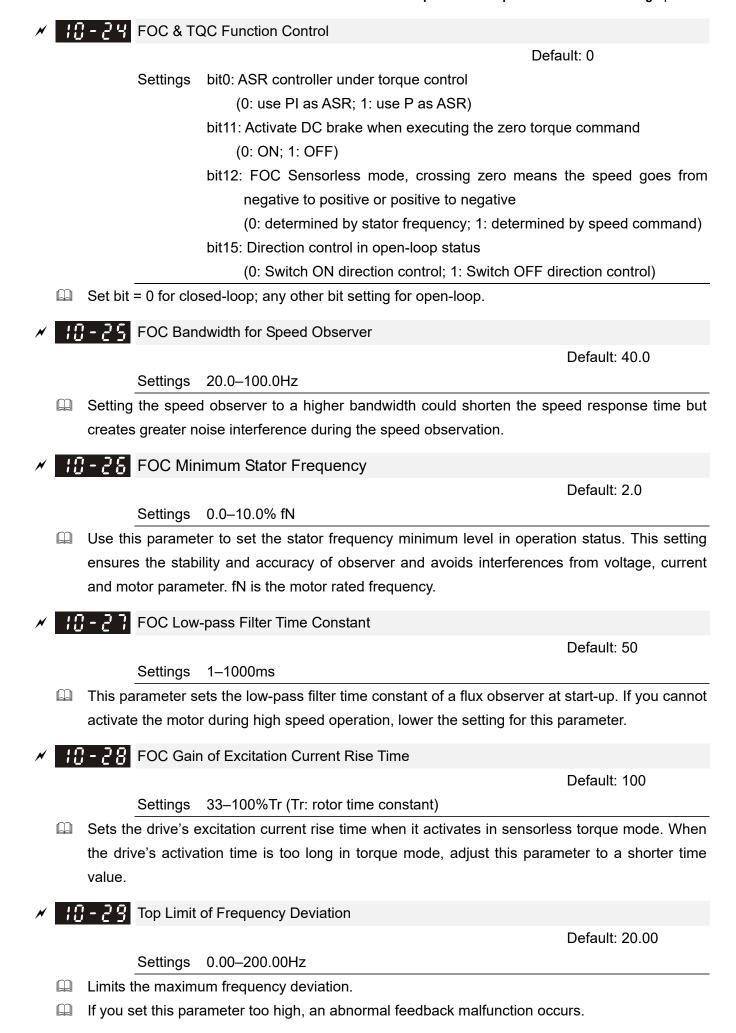When you set Pr. 00-20 to 5 and the multi-function input terminal to 37 (OFF), the system treats the pulse command as a Frequency command. Use this parameter to suppress the speed command jump.



## Chapter 12 Description of Parameter Settings | C2000

motor slip, which causes a PG Error (PGF3, PGF4). In this case, you can set Pr. 10-10 and Pr. 10-13 to 0 to disable PGF3 and PGF4 detection, but you must make sure the PG wiring and application are correct; otherwise, it may lose the instant PG protection. Pr. 10-29 setting too high is not commonly done. Resolver Pole Pair Default: 1 Settings 1–50 To use the Pr. 10-30 function, you must set Pr. 10-00=3 (Resolver Encoder) first. I/F Mode, Current Command Default: 40 Settings 0–150% of motor rated current Sets the current command for the drive in low speed area (low speed area: frequency command < Pr. 10-39). When the motor stalls on heavy-duty start-up or forward/ reverse with load, increase the parameter value. If the inrush current is too high and causes oc stall, then decrease the parameter value. PM FOC Sensorless Speed Estimator Bandwidth Default: 5.00 Settings 0.00-600.00Hz Sets the speed estimator bandwidth. Adjust the parameter to change the stability and the accuracy of the motor speed. If there is low frequency vibration (the waveform is similar to sine wave) during the process, then increase the bandwidth. If there is high frequency vibration (the waveform shows extreme vibration and is like a spur), then decrease the bandwidth. PM Sensorless Speed Estimator Low-pass Filter Gain Default: 1.00 Settings 0.00–655.35 Changes the response speed of the speed estimator. If there is low frequency vibration (the waveform is similar to the sine wave) during the process, then increase the gain. If there is high frequency vibration (the waveform shows extreme vibration and is like a spur), then decrease the gain. ARM (Kp) Gain Default: 1.00 Settings 0.00 - 3.00👯 - 🖁 🔓 ARM (Ki) Gain Default: 0.20 Settings 0.00-3.00 Active Magnetic Regulator Kp / Ki, affects the response of magnetic regulation in the low magnetic area.

If the application needs a higher setting for Pr. 10-29, note that a higher setting results in larger

If entering the low magnetic area and the input voltage (or DC BUS) plummets (e.g. an unstable power net causes instant insufficient voltage, or a sudden load that makes DC BUS drop), which causes the ACR diverge and oc, then increase the gain. If the Id value of a spur creates large noise in high-frequency output current, decrease the gain to reduce the noise. Decrease the gain will slow down the response.

PM Sensorless Control Word

Default: 0000h

### Settings 0000-FFFFh

bit No.	Function	Description
2	Choose a control mode to start.	0: Start in IF mode
	Choose a control mode to start.	1: Start in VF mode
3	Choose a mode to stop.	0: Stop in IF mode
		1: Stop in VF mode
5		0: When lower than Pr. 10-40, coast to stop
	Choose a control mode to stop	1: When lower than Pr. 10-40, ramp to stop

# Frequency Point to Switch from I/F Mode to PM Sensorless Mode

Default: 20.00

Settings 0.00-599.00Hz

- Sets the frequency for the switch point from low frequency to high frequency.
- If the switch point is too low, the motor does not generate enough back-EMF to let the speed estimator measure the rotor right position and speed, and causes stall and oc when running at the switch point frequency
- If the switch point is too high, the active area of I/F is too wide, which generates more current and cannot save energy. If the current value for Pr. 10-31 is too high, the high switch point makes the drive continue to output with the setting value for Pr. 10-31.

# Frequency Point to Switch from PM Sensorless Mode to I/F Mode

Default: 20.00

Settings 0.00-599.00Hz

- Sets the switch point from high frequency to low frequency.
- If the switch point is too low, the motor does not generate enough back-EMF to let the speed estimator measure the rotor right position and speed when running at the switch point frequency.
- cannot save energy. If the current of Pr. 10-31 is too high, the high switch point makes the drive continue to output with the setting value for Pr. 10-31).

# III - 4 I/F Mode, Id Current Low Pass-Filter Time

Default: 0.2

Settings 0.0–6.0 sec.

Sets the filter time for Pr. 10-31. Smoothly increases the magnetic field to the current command setting value under the I/F mode.

# Chapter 12 Description of Parameter Settings | C2000 If you want to slowly increase the size of Id, increase the filter time to avoid a Step phenomenon occurs when starting current output. When decrease the filter time (minimum value is 0), the current rises faster, then a Step phenomenon occurs. Initial Angle Detection Pulse Value Default: 1.0 Settings 0.0–3.0 The angle detection is fixed to 3: Use the pulse injection method to start. The parameter influences the value of the pulse during the angle detection. The larger the pulse, the higher the accuracy of rotator's position. A larger pulse might cause oc. Increase the parameter when the running direction and the command are opposite during start-up. If oc occurs at start-up, then decrease the parameter. Refer to Section 12-2 Adjustment & Application for detailed motor adjustment procedure. PG Card Version Default: Read only Settings 0.00-655.35 Corresponding version reference: PG02U 21.XX PG01U 31.XX PG010 / PG01L 11.XX PG020 / PG02L 14.XX 41.XX PG01R Zero Voltage Time during Start-up Default: 00.000 Settings 00.000-60.000 sec. This parameter is valid only when the setting of Pr. 07-12 (Speed Tracking during Start-up) = 0. When the motor is in static status at start-up, this increases the accuracy when estimating angles. In order to put the motor in static state, set the three-phase drive output to 0 V to the motor. The Pr. 10-49 setting time is the length of time when three-phase output at 0 V. It is possible that even when you apply this parameter, the motor cannot go into the static state because of inertia or some external force. If the motor does not go into the static state in 0.2 seconds, increase this setting value appropriately. If Pr. 10-49 is too high, the start-up time is longer. If it is too low, then the braking performance is weak.

Reverse Angle Limit (Electrical Angle)

Default: 10.00

### Settings 0.00–30.00 degree

- When the drive is running forward, if a sudden reverse run occurs and the reverse angle exceeds the setting for Pr. 10-50, then a ScRv error occurs.
- This parameter is valid only when the setting of Pr. 07-28 =11 (enable textile machine).
- If the estimated tolerance of start-up angle detection is larger, and causes a reverse run of the motor, this parameter can limit the reverse angle.

Chapter 12 Description of Parameter Settings | C2000 Decrease the parameter setting to prevent large reverse angle. If the tolerance is bigger, then increase the parameter setting. If the load is too large at this moment, it may cause oc. Injection Frequency Default: 500 Settings 0–1200Hz This parameter is a high frequency injection command in IPM-HFI-sensorless control mode and usually you do not need to adjust it. If a motor's rated frequency (for example, 400Hz) is too close to the frequency setting for this parameter (that is, the Default of 500Hz), it affects the accuracy of the angle detection. Refer to the setting for Pr. 01-01 before you adjust this parameter. ☐ If the setting value for Pr. 00-17 is lower than Pr. 10-51\*10, then increase the frequency of the carrier wave. Pr. 10-51 is valid only when Pr. 10-53=2. Injection Magnitude Default: 15.0/30.0/30.0/30.0 0.0-200.0V Settings 230V series: 0.0-100.0V 460V series: 0.0-200.0V 575V series: 0.0-200.0V 690V series: 0.0-200.0V The parameter is the magnitude command for the high frequency injection signal in IPM Sensorless control mode. Increasing the parameter can increase the accuracy of the angle estimation, but the electromagnetic noise might be louder if the setting value is too high. The system uses this parameter when the motor's parameter is "Auto". This parameter influences the angle estimation accuracy.

- When the ratio of the salient pole (Lq/Ld) is lower, increase Pr. 10-52 to make the angle detection more accurate.
- Pr. 10-52 is valid only when Pr. 10-53=2.

# PM Initial Rotor Position Detection Method

Default: 0

Settings 0: Disable

1: Internal 1/4 rated current attracting the rotor to zero degrees

2: High frequency injection

3: Pulse injection

Set to 2 for IPM; set to 3 for SPM. If these settings cause problems, then set the parameter to 1.

# 11 Advanced Parameters

★ This parameter can be set during operation.

In this parameter group, ASR stands for Adjust Speed Regulator

Default: 0000h

Settings bit0: Auto-tuning for ASR and APR

bit1: Inertia estimate (only in FOCPG mode)

bit2: Zero servo


bit6: 0Hz linear-cross

bit7: Save or do not save the frequency

bit8: Maximum speed for point-to-point position control

bit0=0: Manual adjustment for ASR and APR gain, Pr. 11-06–Pr. 11-11 are valid and Pr. 11-03–Pr. 11-05 are invalid.

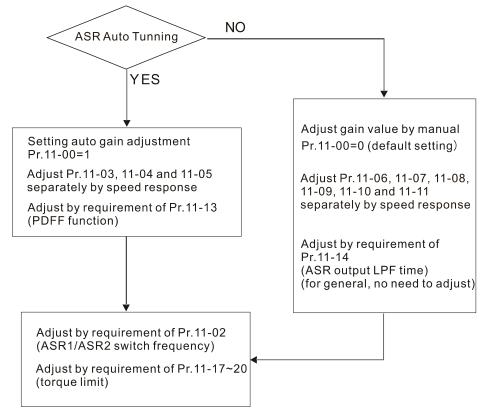
bit0=1: Auto-adjustment for ASR and APR gain, the system automatically generates an ASR setting, Pr. 11-06–Pr. 11-11 are invalid and Pr. 11-03–Pr. 11-05 are valid.



When the drive needs to keep a certain torque at zero-speed, or it needs a steady frequency output at extreme low speed, increase Pr. 11-05 zero-speed bandwidth appropriately. When the speed is in high-speed area, if the output current trembles seriously and makes the drive vibrate, then decrease the high-speed bandwidth.

### For example:

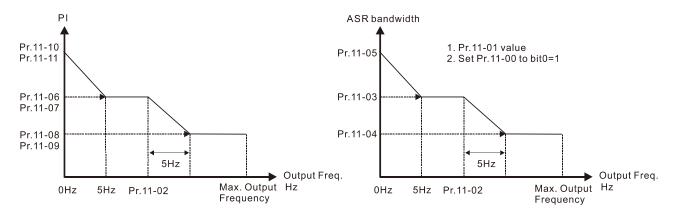Manual gain	Response:
	[Pr. 11-10, Pr. 11-11] > [Pr. 11-06, Pr. 11-07] > [Pr. 11-08, Pr. 11-09]
Auto gain	Pr. 11-05 = 15 Hz, Pr. 11-03 = 10 Hz, Pr. 11-04 = 8 Hz




ASR adjustment- manual gain

ASR adjustment- auto gain

□ bit1=0: no function.

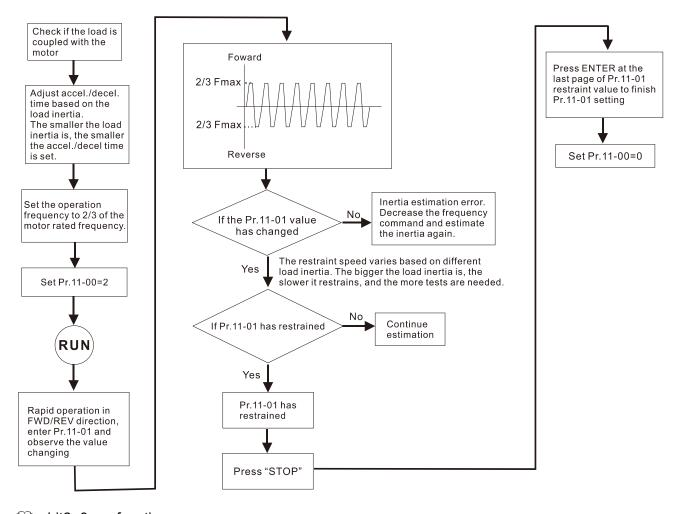bit1=1: Inertia estimation function is enabled. bit1 setting would not activate the estimation process, set Pr. 05-00=12 to begin FOC/TQC Sensorless inertia estimating.



□ bit2=0: no function.

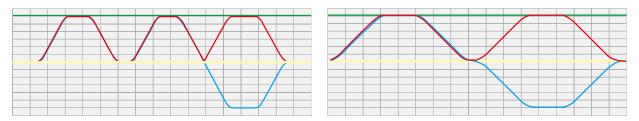
bit2=1: when frequency command is less than Fmin (Pr. 01-07), it will use the zero-servo function as position control.

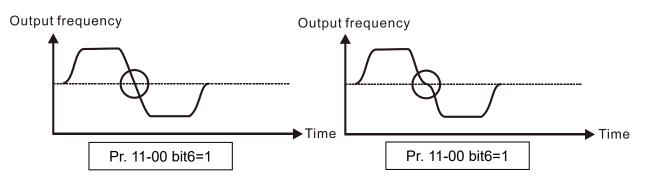
bit6 0Hz linear-cross function: keeps the S-Curve in linear-cross the 0Hz point when the S acceleration/ deceleration curves (Pr. 01-24–Pr. 01-27) are set, and the forward/ reverse run cross 0Hz.

bit6=1: The S acceleration/ deceleration curves (Pr. 01-24-Pr. 01-27) do NOT affect the drive

starts and stops. Forward / reverse rotation crosses the zero point in linear.

bit6=0: The S acceleration / deceleration curves (Pr. 01-24–Pr. 01-27) affect the drive starts and stops. Forward / reverse rotation crosses the zero point after the S-Curve.





- bit 7=0: Save the frequency before power is OFF. When power is ON again, the saved frequency is displayed.
  - bit7=1: Do not save the frequency before power is OFF. When power is ON again, 0.00 Hz is the displayed frequency.
- bit8=0: Pr. 11-43 sets the maximum speed for point-to-point position control bit8=1: The external multi-speed terminal sets the maximum speed for point-to-point position control. When the external multi-speed terminal is 0, Pr. 11-43 sets the maximum speed.

# Per Unit of System Inertia

Default: 256

Settings 1–65535 (256=1PU)

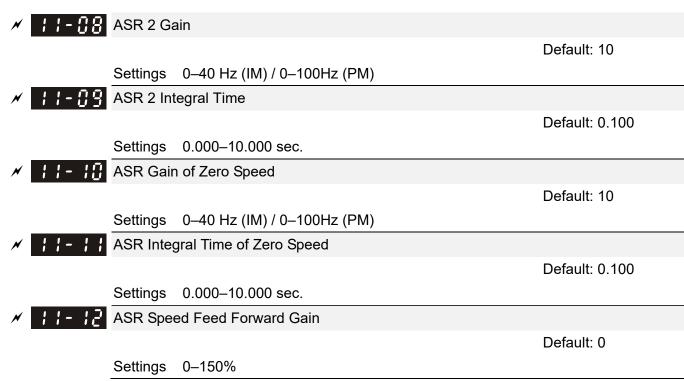
- To get the system inertia from Pr. 11-01, user needs to set Pr. 11-00 to bit1 = 1 and execute continuous forward/reverse running.
- When Pr. 11-01 = 256, it is 1PU. So if you use a 2HP motor, the 2HP motor inertia is 4.3 kg-cm<sup>2</sup> according to the table below. If Pr. 11-01 = 10000 after tuning, the system inertia is (10000 / 256) x 4.3 kg-cm<sup>2</sup>.
- Perform the operation test with load based on the inertia after tuning. Run the motor in acceleration, deceleration, and steady speed and observe the values. If values between speed feedback and speed command are close, steady-state error is small and overshoot is less, then this inertia is a better one.
- If the Iq current command from ASR has high-frequency glitch, then decrease the setting. If the response time of sudden loading is too slow, then increase the setting.
- When using torque mode as the control mode, perform the tuning with speed mode first to see if the tuned inertia can work normally. After verifying with speed mode, change the control mode to torque mode.

Unit of induction motor system inertia is kg-cm<sup>2</sup>:


Power	Setting	Power	Setting	Power	Setting
1HP	2.3	25HP	142.8	175HP	2150.0
2HP	4.3	30HP	176.5	250HP	2800.0
3HP	8.3	40HP	202.5	300HP	3550.0
5HP	14.8	50HP	355.5	375HP	5139.0
7.5HP	26.0	60HP	410.8	425HP	5981.0
10HP	35.8	75HP	494.8	475HP	7053.0
12HP	54.8	100HP	1056.5	600HP	9643.0
15HP	74.3	125HP	1275.3	650HP	10734.0
20HP	95.3	150HP	1900.0	750HP	13000.0

The base value for induction motor system inertia is set by Pr. 05-38 and the unit is in kg-cm<sup>2</sup>.

The base	e value for induction motor system inertia is set by Pr. 05-38 and	the unit is in kg-cm <sup>2</sup> .
× 11-02	ASR1 / ASR2 Switch Frequency	
		Default: 7.00
	Settings 5.00–599.00Hz	
	ie low-speed and high-speed ASR switching point in the FOC a wo needs: in the high-speed region of the estimator switch poin	•
and in	the low-speed region of the estimator switch point it has mended switching point is higher than Pr. 10-39.	
A low s	setting does not cover Pr. 10-39. If the setting is too high, the high	n-speed range is too
× 11-83	ASR1 Low-speed Bandwidth	
		Default: 10
	Settings 1–40Hz (IM) / 1–100Hz (PM)	
	ASR2 High-speed Bandwidth	
		Default: 10
	Settings 1–40Hz (IM) / 1–100Hz (PM)	
<b>/</b> 11-05	Zero-speed Bandwidth	
		Default: 10
	Settings 1–40Hz (IM) / 1–100Hz (PM)	
	stimating inertia and setting Pr. 11-00 bit0=1 (auto-tuning), you	•
	and Pr. 11-05 separately according to the speed response. The la	
	he response. Pr. 11-02 is the switch frequency for the low-speed	•
•	esition control pulse command (MIx=37) and P2P position control	ol Kp gain can adjust Pr.
11-05.	The higher the value, the lower the steady-state error.	
× 11-85	ASR 1 Gain	
		Default: 10
	Settings 0–40 Hz (IM) / 1–100Hz (PM)	
v 11_07	ASR 1 Integral Time	
	ASK Tillegral Tille	
/ <u> </u>	ASK Tillegraf Tille	Default: 0.100



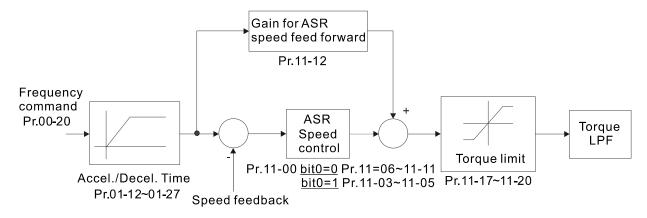- $\square$  This function enables when Pr. 11-00 bit0 = 1.
- Increase the setting for Pr.11-12 to redcue the command tracking difference, and improve the speed response. Use this function for speed tracking applications.
- Set Pr.11-01 correctly to get excellent improvement of the speed response.




# 

Default: 30

#### Settings 0–200%

- This parameter is invalid when Pr. 05-24 = 1.
- $\square$  This parameter is valid only when Pr. 11-00 bit0 = 1.
- After you finish estimating and set Pr. 11-00 bit0=1 (auto-tuning), use Pr. 11-13 to reduce overshoot, but a shift of the curve may occur earlier. Set Pr. 11-13 = 0, when the acceleration time fits the applicable demand, but an overshoot occurs, increase Pr. 11-13 to "the best acceleration without overshoot".
- Increase Pr. 11-13 to improve the overshoot of speed tracking, but an excessive value may reduce the transient response.
- Increase Pr. 11-13 to enhance the system stiffness in high-speed steady state, and reduce the speed transient fluctuation at suddenly loading.

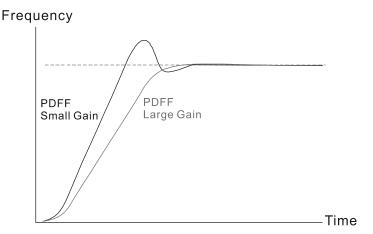Set Pr.11-01 correctly to get excellent improvement of the speed response.



ASR Output Low-pass Filter Time

Default: 0.008

Settings 0.000–0.350 sec.

Use this to set the ASR command filter time.

Notch Filter Depth

Default: 0

Settings 0–20db

Notch Filter Frequency

Default: 0.00

Settings 0.00–200.00Hz

Settings 0.00–200.00Hz

Settings 0.00–200.00Hz

The higher the setting value for Pr. 11-15, the better the mechanical resonance is suppressed.

The notch filter frequency is the mechanical frequency resonance.

Forward Motor Torque Limit Quadrant I

Forward Regenerative Torque Limit Quadrant II

Reverse Motor Torque Limit Quadrant III

Reverse Regenerative Torque Limit Quadrant IV

Default: 500

Settings 0-500%

FOCPG & FOC Sensorless mode:

The drive rated current = 100%. The setting value for Pr. 11-17–Pr. 11-20 is compared with Pr. 03-00 = 7, 8, 9, 10. The minimum of the comparison result is the torque limit. Refer to the torque limit diagram below.

☐ TQCPG and TQC Sensorless mode:

The function of Pr. 11-17–Pr. 11-20 is the same as FOC; however, in this case, the torque command limits the output torque. The minimum value between Pr. 11-17–11-20 and Pr. 06-12 becomes the current output torque limit.


UF, VFPG and SVC mode:

Pr. 11-17–Pr. 11-20 limit the output current, the percentage base value is the drive's rated current (not the motor's rated current). The minimum value between Pr. 11-17–11-20 and Pr.06-12 becomes the current output limit. In acceleration and steady state operation, when the output current reaches the limit, the ocA (over-current during acceleration) protection or over-current stall prevention under steady-state operation acts. The output frequency drops, and recovers when the output current is lower than the limit value.

Calculation equation for the motor rated torque:

Motor rated torque = 
$$T(N.M) = \frac{P(W)}{\omega(rad/s)}$$
; P(W) value = Pr. 05-02 (Pr. 05-14);
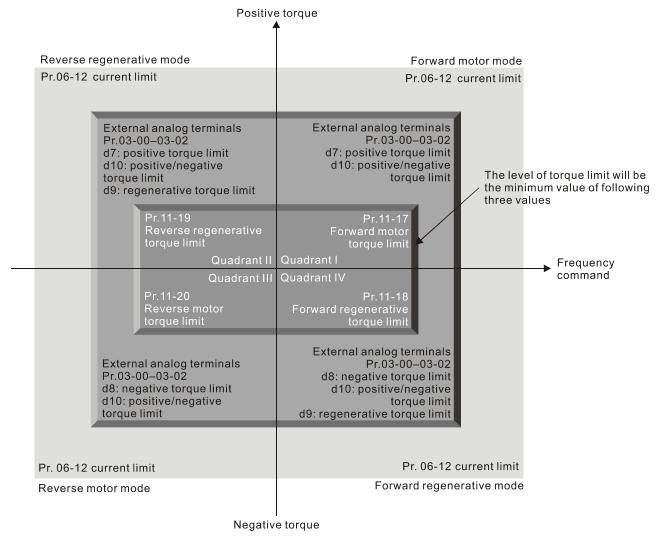
$$ω$$
(rad/s) value = Pr. 05-03 (Pr. 05-15);  $\frac{RPM \times 2\pi}{60} = rad / s$ 



The control mode is based on 100% motor rated current except for these four modes: IM: VF, VFPG, SVC / PM: PMSVC modes.

Flux Weakening Curve for Motor 1 Gain Value

Default: 90


Settings 0–200%

★ ! ! - ? ? Flux Weakening Curve for Motor 2 Gain Value

Default: 90

Settings 0-200%

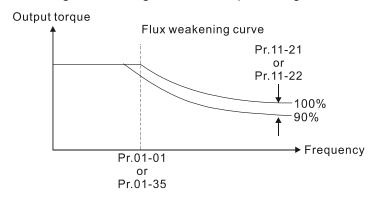- Adjusts the output voltage for the flux-weakening curve.
- For the spindle application, use this adjustment method:
  - 1. Use it to adjust the output voltage when exceeding rated frequency.
  - 2. Monitor the output voltage.
  - 3. Adjust the Pr. 11-21 (motor 1) or Pr. 11-22 (motor 2) setting to make the output voltage reach the motor rated voltage.
  - 4. The larger the setting value, the greater the output voltage.



## ★ 1 - 2 3 Flux Weakening Area Speed Response

Default: 65

Settings 0: Disable 0–150%

Controls the speed in the flux weakening area. The larger the value set for Pr. 11-23, the faster the acceleration/deceleration. In general, you do not need to adjust this parameter.

# ★ | | - 2 4 APR Gain

Default: 10.00

Settings 0.00–40.00 (IM) / 0–100.00Hz (PM)

Sets the Kp gain of the internal position (MIx=35).

## ✓ / / - 25 Gain Value for the APR Feed Forward

Default: 30

Settings 0–100

This applies only to the internal position (MIx = 35) and position control pulse command (MIx = 37). A larger value can shorten the pulse differential and speed up the position response; however, it may cause overshoot.

# APR Curve Time

Default: 3.00

Settings 0.00-655.35 sec.

This is valid when the multi-function input terminal is set to 35 (ON). The larger the setting value, the longer the position time.

Max. Torque Command

Default: 100

Settings 0-500%

- Determines the upper limit of the torque command (motor rated torque is 100%).
- Calculation equation for the motor rated torque:

Motor rated torque: 
$$T(N.M) = \frac{P(W)}{\omega(rad/s)}$$
; P(W) value = Pr. 05-02 (Pr. 05-14);

ω(rad/s) value = Pr. 05-03 (Pr. 05-15); 
$$\frac{RPM \times 2\pi}{60} = rad/s$$

# 

Default: 0

Settings 0: Disable

1: Analog signal input (Pr. 03-00)

2: Pr. 11-29

3: Controlled by external terminal (Pr. 11-30-Pr. 11-32)

- Determines the source for the torque offset.
- When it is set to 3 (external terminal control), the torque offset source follows Pr. 11-30, Pr. 11-31 or Pr. 11-32 as the combination of MI setting as 31, 32 or 33 commands. Refer to the following chart:

Normally open (N.O.) contact: ON= contact closed, OFF= contact open

Pr. 11-32	Pr. 11-31	Pr. 11-30	Torque Offset	
MIx = 33 (Low)	MIx = 32 (Mid)	MIx = 31 (High)	Torque Offset	
OFF	OFF	OFF	None	
OFF	OFF	ON	Pr. 11-30	
OFF	ON	OFF	Pr. 11-31	
OFF	ON	ON	Pr. 11-30 + Pr. 11-31	
ON	OFF	OFF	Pr. 11-32	
ON	OFF	ON	Pr. 11-30 + Pr. 11-32	
ON	ON	OFF	Pr. 11-31 + Pr. 11-32	
ON	ON	ON	Pr. 11-30 + Pr. 11-31 + Pr. 11-32	

# 

Default: 0.0

Settings -100.0%-100.0%

- Determines the torque offset command. The motor rated torque is 100%.
- The calculation equation for the motor rated torque:

Motor rated torque: 
$$T(N.M) = \frac{P(W)}{\omega(rad/s)}$$
; P(W) value = Pr. 05-02 (Pr. 05-14);

$$ω$$
(rad/s) value = Pr. 05-03 (Pr. 05-15);  $\frac{RPM \times 2\pi}{60} = rad/s$ 

Default: 30.0

Settings -100.0%-100.0%

Middle Torque Compensation

Default: 20.0

Settings -100.0%-100.0%

Default: 10.0

Settings -100.0%-100.0%

- When Pr. 11-28 is set to 3, the torque-offset source uses Pr. 11-30, Pr. 11-31 or Pr. 11-32 determined by the multi-function input terminals setting (31, 32 or 33). The motor rated torque is 100%.
- The calculation equation for the motor rated torque:

Motor rated torque:  $T(N.M) = \frac{P(W)}{\omega(rad/s)}$ ; P(W) value = Pr. 05-02 (Pr. 05-14);

ω(rad/s) value = Pr. 05-03 (Pr. 05-15);  $\frac{RPM \times 2\pi}{60} = rad/s$ 

Torque Command Source

Default: 0

Settings 0: Digital Keypad

1: RS-485 communication (Pr. 11-34)

2: Analog signal input (Pr. 03-00)

3: CANopen

5: Communication expansion card

- When you set Pr. 11-33 to 0 or 1, set the torque command in Pr. 11-34.
- When you set Pr. 11-33 to 2, 3 or 5, Pr. 11-34 only displays the torque command.

Default: 0.0

Settings -100.0–100.0% (Pr. 11-27=100%)

- This parameter is for the torque command. When you set Pr. 11-27 to 250% and Pr. 11-34 to 100%, the actual torque command = 250 × 100% = 250% motor rated torque.
- The drive saves the setting before power is OFF.

★ 1 - 35 Torque Command Filter Time

Default: 0.000

Settings 0.000-1.000 sec.

When the setting is too long, the control is stable but the control response is delayed. When the setting is too short, the response is quick but the control may be unstable. Adjust the setting according to the stability of the control and response for the application.

; ; - ∃ Speed Limit Selection

Default: 0

Settings 0: Set by Pr. 11-37 (Forward Speed Limit) and Pr. 11-38 (Reverse Speed Limit)

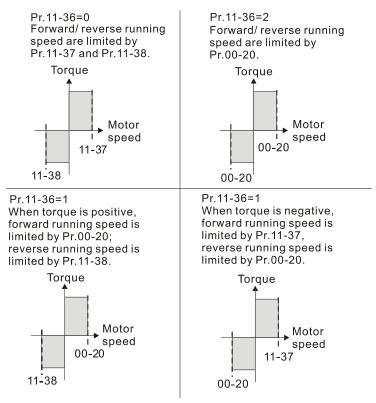
- 1: Set by Pr. 11-37, Pr. 11-38 and Pr. 00-20 (Source of Master Frequency Command)
- 2: Set by Pr. 00-20 (Source of Master Frequency Command).
- Speed limit function: when you use the torque control mode, if the torque command is greater than the load, the motor accelerates until the motor speed equals the speed limit. At this time, it switches to speed control mode to stop acceleration.
- Pr. 11-36=1:

When the torque command is positive, the forward speed limit is Pr. 00-20 and the reverse speed limit is Pr. 11-38.

When the torque command is negative, the forward speed limit is Pr. 11-37 and the reverse speed limit is Pr. 00-20.

For example: In an unwind application, the torque command direction is different from the motor operating direction, and this indicates that the load drives the motor. The speed limit must be Pr. 11-37 or Pr. 11-38. In normal applications, when the motor drives the load and the torque command is in the same direction as the speed limit, only then you can set the speed limit according to Pr. 00-20.

About the keypad display, refer to the LED function descriptions in Chapter10 "Digital Keypad". In torque control, the F page of keypad displays the present speed limit value.



Default: 10

Settings 0-120%

# Reverse Speed Limit (Torque Mode)

Default: 10

Settings 0-120%

These parameters define the speed limit in the forward and reverse directions in torque mode (Pr. 01-00 maximum operation frequency = 100%).

### Image: Installation of the second 
Default: 0

Settings 0: Torque mode

1: Speed mode

- This parameter is only valid in TQCPG IM and TQCPG PM, and it defines the mode when the speed limit is 0% or 0Hz.
- When you set Pr. 11-39 to 0, and the speed limit is 0% or 0Hz, the motor generates an excitation current, and the torque command Pr. 11-34 limits the torque.
- When you set Pr. 11-39 to 1, and the speed limit is 0% or 0Hz, the AC motor drive can generate output torque through the speed controller (the torque limit is Pr. 06-12), and the control mode changes from TQC + PG to FOC + PG mode. The motor has a holding torque. If the speed command is not 0, the drive automatically changes it to 0.

# M : : - 4 : Point-to-Point Position Control Command Source

Default: 0

Settings 0: External terminal

2: RS-485

3: CANopen

5: Communication card

# System Control Flag

Default: 0000h

Settings 0000-FFFFh

bit No.	Function	Description		
		0:	The speed control in torque mode, the maximum	
0	Current limit selection of the		current limit is the torque command.	
	speed control in torque mode	1:	The speed control in torque mode, the maximum	
			current limit is Pr. 06-12.	
4	EMD / DEM action control	0:	FWD/ REV cannot be controlled by Pr. 02-12 bit0 & 1	
1	FWD / REV action control	1:	FWD/ REV can be controlled by Pr. 02-12 bit0 & 1	

## Point- to-Point Position Control Maximum Frequency

Default: 10.00

Settings 0.00-599.00Hz

Point-to-Point Position Control Acceleration Time


Default: 1.00

Settings 0.00-655.35 sec.

### Point-to-Point Position Control Deceleration Time

Default: 3.00

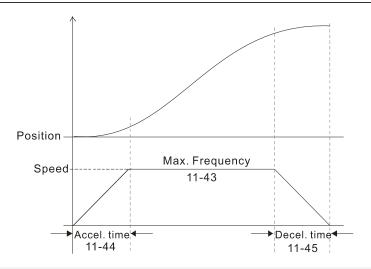Settings 0.00-655.35 sec.



# Torque Output Filter Gain

Default: 0.050

Settings 0.000-65.535

Sets the filter gain of the torque output display (keypad display and communication read), including Pr. 00-04 = 8 displays the output torque (%) that the drive calculates, the output torque (XXX.X %) of communication address 210B and the positive / negative output torque (%) that 2208 drive calculates (XXX.X %).

# 13 Application Parameters by Industry

★ This parameter can be set during operation.

**∤ ∃ − ₿ ₿ ₿** Application Selection

Default: 0

Settings 0: Disabled

1: User-defined Parameter

2: Compressor (IM)

3: Fan

4: Pump

10: Air Handling Unit, AHU

Note: after you select the macro, some of the default values adjust automatically according to the application selection.

Group setting 02: Compressor (IM)

The following table lists the relevant compressor application parameters.

Pr.	Explanation	Settings
00-11	Speed control mode	0 (V/F control)
00-16	Load selection	0 (Normal load)
00-17	Carrier frequency	Default setting
00-20	Master frequency command source (AUTO) / Source selection of the PID target	2 (External analog input)
00-21	Operation command source (AUTO)	1 (External terminals)
00-22	Stop method	0 (Ramp to stop)
00-23	Control of motor direction	1 (Disable reverse)
01-00	Maximum operation frequency	Default setting
01-01	Output frequency of motor 1	Default setting
01-02	Output voltage of motor 1	Default setting
01-03	Mid-point frequency 1 of motor 1	Default setting
01-04	Mid-point voltage 1 of motor 1	Default setting
01-05	Mid-point frequency 2 of motor 1	Default setting
01-06	Mid-point voltage 2 of motor 1	Default setting
01-07	Minimum output frequency of motor 1	Default setting
01-08	Minimum output voltage of motor 1	Default setting
01-11	Output frequency lower limit	20 (Hz)
01-12	Acceleration time 1	20 (s)
01-13	Deceleration time 1	20 (s)
03-00	Analog input selection (AVI)	0 (No function)
03-01	Analog input selection (ACI)	1 (Frequency command)
05-01	Full-load current for induction motor 1 (A)	Default setting
05-03	Rated speed for induction motor 1 (rpm)	Default setting
05-04	Number of poles for induction motor 1	Default setting

### Group setting 03: Fan

The following table lists the relevant fan setting application parameters.

Pr.	Explanation	Settings
00-11	Speed control mode	0 (V/F control)
00-16	Load selection	0 (Normal load)
00-17	Carrier frequency	Default setting
00-20	Master frequency command source (AUTO) / Source selection of the PID target	2 (External analog input)
00-21	Operation command source (AUTO)	1 (External terminals)
00-22	Stop method	1 (Coast to stop)
00-23	Control of motor direction	1 (Disable reverse)
00-30	Master frequency command (HAND) source	0 (Digital keypad)
00-31	Operation Command (HAND) source	0 (Digital keypad)
01-00	Maximum operation frequency	Default setting
01-01	Output frequency of motor 1	Default setting
01-02	Output voltage of motor 1	Default setting
01-03	Mid-point frequency 1 of motor 1	Default setting
01-04	Mid-point voltage 1 of motor 1	Default setting
01-05	Mid-point frequency 2 of motor 1	Default setting
01-06	Mid-point voltage 2 of motor 1	Default setting
01-07	Minimum output frequency of motor 1	Default setting
01-08	Minimum output voltage of motor 1	Default setting
01-10	Output frequency upper limit	50 (Hz)
01-11	Output frequency lower limit	35 (Hz)
01-12	Acceleration time 1	15 (s)
01-13	Deceleration time 1	15 (s)
01-43	V/F curve selection	2 (Second V/F curve)
02-05	Multi-function input command 5 (MI5)	16 (Rotating speed command from ACI)
03-00	Analog input selection (AVI)	1 (Frequency command)
03-01	Analog input selection (ACI)	1 (Frequency command)
03-28	AVI terminal input selection	0 (0–10 V)
03-29	ACI terminal input selection	1 (0–10 V)
03-31	AFM output selection	0 (0–10 V)
03-50	Analog input curve selection	1 (three-point curve of AVI)
07-06	Restart after momentary power loss	2 (Speed tracking by minimum output frequency)
07-11	Number of times of restart after fault	5 (times)
07-33	Auto-restart interval of fault	60 (s)

### Group setting 04: Pump

The following table lists the relevant pump setting application parameters.

Pr.	Explanation	Settings
00-11	Speed control mode	0 (V/F control)
00-16	Load Selection	0 (Normal load)
00-20	Master frequency command source (AUTO)	2 (External analog input)
00-20	/ Source selection of the PID target	2 (External analog input)
00-21	Operation command source (AUTO)	1 (External terminals)
00-23	Control of motor direction	1 (Disable reverse)
01-00	Maximum operation frequency	Default setting
01-01	Output frequency of motor 1	Default setting
01-02	Output voltage of motor 1	Default setting
01-03	Mid-point frequency 1 of motor 1	Default setting
01-04	Mid-point voltage 1 of motor 1	Default setting
01-05	Mid-point frequency 2 of motor 1	Default setting
01-06	Mid-point voltage 2 of motor 1	Default setting
01-07	Minimum output frequency of motor 1	Default setting
01-08	Minimum output voltage of motor 1	Default setting
01-10	Output frequency upper limit	50 (Hz)
01-11	Output frequency lower limit	35 (Hz)
01-12	Acceleration time 1	15 (s)
01-13	Deceleration time 1	15 (s)
01-43	V/F curve selection	2 (Second V/F curve)
07-06	Doctor of the management of the state of the	2 (Speed tracking by minimum output
07-00	Restart after momentary power loss	frequency)
07-11	Number of times of restart after fault	5
07-33	Auto-restart interval of fault	60 (s)

### Group setting 10: Air Handling Unit, AHU

The following table lists the relevant AHU setting application parameters.

Pr	Explanation	Settings
00-04	Content of multi-function display	2
00-11	Speed control mode	0 (V/F control)
00-16	Load Selection	0 (Normal load)
00-20	Master frequency command source (AUTO)	2 or 0
00-20	/ Source selection of the PID target	2 01 0
00-21	Operation command source (AUTO)	1 or 0
00-22	Stop method	1 (Coast to stop)
00-23	Control of motor direction	1 (Disable reverse)
00-30	Master frequency command (HAND) source	0 (Digital keypad)
00-31	Operation Command (HAND) source	0 (Digital keypad)
01-00	Maximum operation frequency	50
01-01	Output frequency of motor 1	50
01-02	Output voltage of motor 1	380
01-07	Minimum output frequency of motor 1	0.1
01-10	Output frequency upper limit	50
01-11	Output frequency lower limit	35
01-34	Zero-speed mode	2
01-43	V/F curve selection	2
02-05	Multi-function input command 5 (MI5)	16 or 17
02-13	Multi-function output 1 RLY1	11
02-14	Multi-function output 2 RLY2	1
03-00	Analog input selection (AVI)	1
03-01	Analog input selection (ACI)	1
03-02	Analog input selection (AUI)	1
03-28	AVI terminal input selection	0
03-29	ACI terminal input selection	1
03-20	Multi-function output 1 (AFM1)	0
03-23	Multi-function output 2 (AFM2)	0
03-31	AFM2 output selection	0 or 1
03-50	Analog input curve selection	4 (three-point curve of AUI)
07-06	Restart after momentary power loss	2 (Speed tracking by minimum output frequency)
07-11	Number of times of restart after fault	5 (times)
07-33	Auto-restart interval of fault	60 (s)

Default: 0

### 14 Extension Card Parameter

✓ This parameter can be set during operation. Extension Card Input Terminal Selection (Al10) Extension Card Input Terminal Selection (AI11) Default: 0 Settings 0: Disable 1: Frequency command 2: Torque command (torque limit in speed mode) 3: Torque compensation command 4: PID target value 5: PID feedback signal 6: Thermistor (PTC / KTY-84) input value 7: Positive torque limit 8: Negative torque limit 9: Regenerative torque limit 10: Positive / negative torque limit 11: PT100 thermistor input value 13: PID compensation amount When the setting for Pr. 14-00 and Pr. 14-01 are the same, the Al10 is selected first. Default: 0.01 Settings 0.00-20.00 sec. The input analog signal of terminal AI1 and AI2 often includes interferences, which will affect the stability of the control. Use these input delays to filter a noisy analog signal. When the setting for the time constant is too large, the control is stable but the control response is slow. When the setting for time constant is too small, the control response is faster but the control may be unstable. For optimal setting, adjust the setting according to the control stability or the control response. 

 Ч - ∰ Analog Input 4–20mA Signal Loss Selection (Al10)

 Analog Input 4–20mA Signal Loss Selection (AI11)

Settings 0: Disable

1: Continue operation at the last frequency

2: Decelerate to 0Hz

3: Stop immediately and display ACE

This parameter determines the treatment when the 4–20 mA signal is lost, when Pr. 14-18 = 2, Pr. 14-19 = 2.

#### Chapter 12 Description of Parameter Settings | C2000

- When the setting for Pr. 14-18 or Pr. 14-19 are 0 or 1, the voltage input to AVI and ACI terminal is 0–10 V or 4–20 mA. At this moment, Pr. 14-10 and Pr. 14-11 are invalid.
- Setting 1 or 2: Displays the warning code "ANL" on the keypad. It continues blinking until the lost ACI signal is recovered.
- When the motor drive stops, the warning condition does not continue to exist, so the warning disappears.
- Extension Card Output Terminal Selection (AO10)

  Extension Card Output Terminal Selection (AO11)


Default: 0

Settings 0-23

Refer to the function chart below for details setting.

#### **Function Chart**

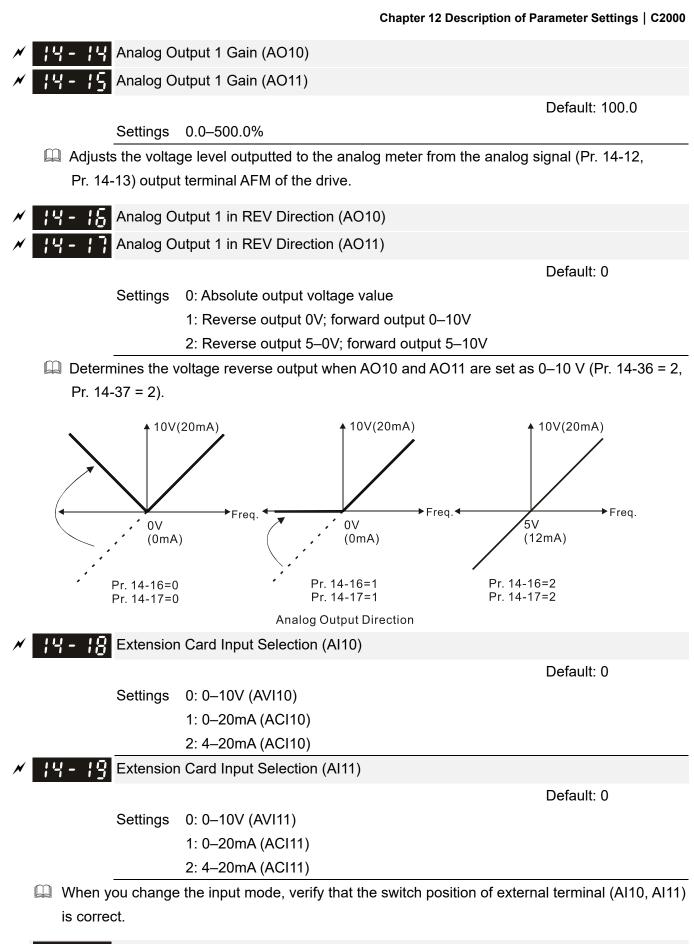	Paradian Chart				
Settings		Descriptions			
0	Output frequency (Hz)	Maximum frequency Pr.01-00 is processed as 100%.			
1	Frequency command (Hz)	Maximum frequency Pr.01-00 is processed as 100%.			
2	Motor speed (Hz)	Maximum frequency Pr.01-00 is processed as 100%.			
3	Output current (rms)	(2.5 × rated current) is processed as 100%			
4	Output voltage	(2 x rated voltage) is processed as 100%			
5	DC BUS voltage	450V (900V)=100%			
6	Power factor	-1.000–1.000=100%			
7	Power	(2 x rated power) is processed as 100%			
8	Torque	Full load torque = 100%			
9	AVI	0–10 V = 0–100%			
10	ACI	4–20 mA = 0–100%			
11	AUI	-10–10V = 0–100%			
12	lq current command	(2.5 x rated current) is processed as 100%			
13	Iq feedback value	(2.5 x rated current) is processed as 100%			
14	ld current command	(2.5 x rated current) is processed as 100%			
15	ld feedback value	(2.5 x rated current) is processed as 100%			
18	Torque command	Rated torque of motor = 100%			
19	PG2 frequency command	Maximum frequency Pr.01-00 is processed as 100%.			
20	CANopen analog output	For CANopen communication analog output			
21	RS-485 analog output	For RS-485 (InnerCOM / MODBUS) analog output			
22	Communication card	For communication analog output (CMC-MOD01, CMC-EIP01,			
22	analog output	CMC-PN01, CMC-DN01)			
23	Constant voltage output	Pr. 03-32 controls the voltage output level.			
	Constant voltage output	0-100% of Pr. 03-32 corresponds to 0-10V of AFM.			
25	CANopen and RS-485	For CANopen and InnerCOM control output			
	analog output	1 S. G. Mapon and Innol Com Control Calput			



AO10 DC Output Setting Level

AO11 DC Output Setting Level

Default: 0.00

Settings 0.00–100.00%

### Chapter 12 Description of Parameter Settings | C2000

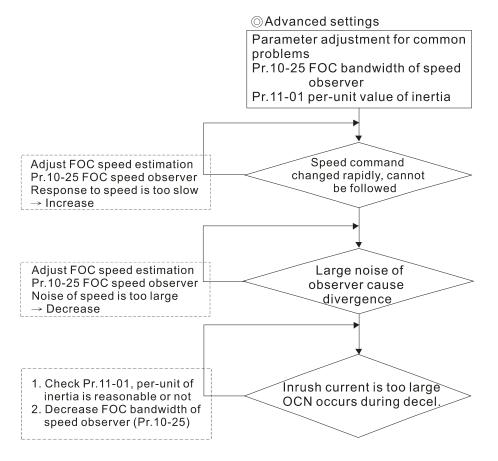
		er Output Time	
× 14-53	AO11 Filt	er Output Time	
			Default: 0.01
	Settings	0.00-20.00 sec.	
√ 14-36	AO10 Ou	tput Selection	
×  4-37	AO11 Ou	tput Selection	
			Default: 0
	Settings	0: 0–10V	
		1: 0–20mA	
		2: 4–20mA	

## 12-2 Adjustment & Application


## 12-2-1 Standard IM Motor Adjustment Procedure

Flow chart Parameter resetting Pr.00-02=9 or 10 Motor parameter setting Pr.01-01 Rated frequency Pr.01-02 Rated voltage Pr.05-01 Full-load current Pr.05-02 Rated power Pr.05-03 Rated speed Pr.05-04 Pole(s) Motor auto tuning Pr.05-00=6 Make sure motor executes IM magnetic flux curve auto tuning under break-away load condition dynamic test Press "RUN" Check if there is motor parameters No motor or not parameter Pr.05-06 Rs, Stator resistance Auto tuning succeed Pr.05-07 Rr, Rotor resistance or not Pr.05-08 Lm, Magnetizing inductance Pr.05-09 Lx, Stator inductance Yes Motor inertia estimation Pr.00-10=2 Torque mode Pr.00-13=2 TQC sensorless Pr.05-00=12 Inertia estimation Press "RUN" Per-unit value of inertia is not reasonable Check if the per-unit value of inertia Ínertia estimation is reasonable (Pr.11-01) succeeds or not Refer to the base value table No for inertia Yes Sensorless FOC mode setting Pr.00-10=0 Speed mode Pr.00-11=5 FOC sensorless Pr.11-00=1 ASR auto tuning Press "RUN" Adjust ASR parameters Pr.11-03 ASR1 low-speed bandwidth Pr.11-04 ASR2 high-speed bandwidth Pr.11-05 zero-speed bandwidth Check accel./decel. running of No-load running Refer to the next page O for the motor with 0~60Hz and no-load is smooth or not advanced settings running is smooth or not Yes IM sensorless FOC

test with load



### FOC sensorless control diagram

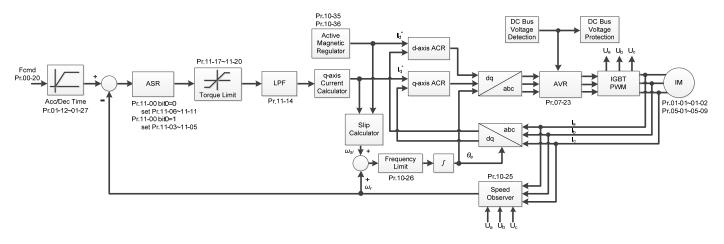

#### Adjustment procedure

- Parameter reset to default, Pr.00-02 = 10 or 9
   (To avoid other parameters that are not related affecting the motor controlling)
- 2. Set up motor parameters according to the nameplate on the motor
  - Pr. 01-01 Output Frequency of Motor 1
  - Pr. 01-02 Output Voltage of Motor 1
  - Pr. 05-01 Full-load Current for Induction Motor 1
  - Pr. 05-02 Rated Power for Induction Motor 1
  - Pr. 05-03 Rated Speed for Induction Motor 1
  - Pr. 05-04 Number of Poles for Induction Motor 1

3. Press "RUN" to start auto-tuning of IM magnetic flux curve dynamic test for Pr.05-00 = 1 or 6 (motor is running). Make sure the motor executes auto-tuning under break-away load condition. Check if there are motor parameters after auto-tuning.

Pr. 05-06 Stator Resistance (Rs) for Induction Motor 1

Pr. 05-07 Rotor Resistance (Rr) for Induction Motor 1

Pr. 05-08 Magnetizing Inductance (Lm) for Induction Motor 1

Pr. 05-09 Stator Inductance (Lx) for Induction Motor 1

4. Execute estimation of the motor inertia (optional). Press "RUN" to start the estimation after finishing the settings for the parameters mentioned below.

Pr. 00-10 = 2, torque mode

Pr. 00-13 = 2, TQC sensorless

Pr. 05-00 = 12, FOC sensorless inertia estimation (motor is running)

After inertia estimation is finished, check if the estimated value for Pr. 11-01 is reasonable, refer to the base value table below. (Unit: kg-cm<sup>2</sup>)

Power	Setting
1HP	2.3
2HP	4.3
3HP	8.3
5HP	14.8
7.5HP	26.0
10HP	35.8
12HP	54.8
15HP	74.3
20HP	95.3

Power	Setting
25HP	142.8
30HP	176.5
40HP	202.5
50HP	355.5
60HP	410.8
75HP	494.8
100HP	1056.5
125HP	1275.3
150HP	1900.0

Power	Setting
175HP	2150.0
250HP	2800.0
300HP	3550.0
375HP	5139.0
425HP	5981.0
475HP	7053.0
600HP	9643.0
650HP	10734.0
750HP	13000.0

5. Execute IM sensorless FOC mode, set up the following parameters:

Pr. 00-10 = 0, set as speed mode

Pr. 00-11 = 5, set as FOC sensorless mode

Pr. 11-00 bit0 =1, use ASR gain auto-tuning

Press "RUN" and start the **Test with no-load**. Accelerate the motor to the rated speed, and then decelerate to stop, check if the motor runs smoothly.

If the motor runs smoothly, then the setting for IM Sensorless FOC is completed. If the motor does not run smoothly, or fails to start at low-frequency, then refer to the following steps for adjustment.

6. Select auto-tuning gain (Pr. 11-00 bit0=1), adjust ASR parameters according to the speed response.

Pr. 11-00 bit0 =1, use auto-tuning for ASR


Pr. 11-03 ASR1 low-speed bandwidth (When the acceleration of low-speed cannot follow the acceleration command, increase the low-speed bandwidth)

Pr. 11-04 ASR2 high-speed bandwidth (When the acceleration in high speed causes vibration or cannot follow the acceleration command, increase high-speed bandwidth)

Pr. 11-05 Zero-speed bandwidth (If the response of start-up is slow or incapable, increase zero-speed bandwidth)

The bigger the setting value for ASR bandwidth, the faster the response.

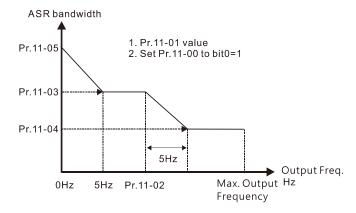The low-speed bandwidth cannot be set too high, or the observer will diverge.



ASR adjustment- auto gain

- 7. Adjust the setting of FOC speed observer and per-unit value of inertia (common problems)
  - Pr. 10-25: Set up FOC bandwidth of speed observer

Situation 1. Speed command changes rapidly, but speed response cannot follow.

(Speed response is too slow→ Increase the setting value)

Situation 2. The noise of the observer is too large, and causes the operation diverged.

(Speed noise is too large→Decrease)

Pr. 11-01: Set up per unit of system inertia

Situation 1. The inrush current is too high at start-up, and causes an oc error.

Situation 2. An ocn error occurs during RUN or STOP, and the motor runs randomly.

- Check Pr. 11-01 whether the JM per-unit of system inertia is too large.
- Decrease Pr. 10-25 FOC bandwidth for speed observer, or Pr. 11-05 zero-speed bandwidth.

#### 8. Related parameters

## Speed Control Mode

Default: 0

Settings 0: IMVF (IM V/F control)

1: IMVFPG (IM V/F control+ Encoder)

2: IM/PM SVC(IM/PM space vector control)

3: IMFOCPG (IM FOC + Encoder)

4: PMFOCPG (PM FOC + Encoder)

5: IMFOC Sensorless (IM FOC sensorless)

6: PM Sensorless (PM FOC sensorless)

7: IPM Sensorless (Interior PM FOC sensorless)

## R I - R I Output Frequency of Motor 1 (Base Frequency and Motor Rated Frequency)

Default: 60.00 / 50.00

#### Settings 0.00-599.00Hz

Set this value according to the motor's rated frequency from the motor's nameplate. If the motor's rated frequency is 60Hz, set the value to 60Hz. If the motor's rated frequency is 50Hz, set the value to 50Hz.

# - - - Output Voltage of Motor 1 (Base Frequency and Motor Rated Frequency) Default: 200.0/ 400.0/ 575.0/ 660.0 Settings 230V series: 0.0–255.0V 460V series: 0.0-510.0V 575V series: 0.0-637.0V 690V series: 0.0-765.0V Set this value according to the motor's rated voltage from the motor's nameplate. If the motor's rated voltage is 220V, set the value to 220.0V. If the motor's rated voltage is 200V, set the value to 200.0V. There is a wide variety of motors, but the power system for each country is difference. The convenient and economical way to solve this problem is to use an AC motor drive, which can deal with different voltages and frequencies, while supporting the original characteristic and life of the motor. H- - HH Motor Parameter Auto-tuning Default: 0 Settings 0: No function 1: Simple rolling auto-tuning for induction motor (IM) 2: Static auto-tuning for induction motor (IM) 4: Dynamic test for PM magnetic pole (with the running in forward direction) 5: Rolling auto-tuning for PM (IPM / SPM) 6: Advanced rolling auto-tuning for IM flux curve 12: FOC Sensorless inertia estimation 13: Static auto-tuning for PM (IPM / SPM) Rated Power for Induction Motor 1 (kW) Default: Depending on the model power Settings 0.00-655.35 kW Sets the rated power for motor 1. The default is the drive's power value. Rated Speed for Induction Motor 1 (rpm) Default: Depending on the motor pole number Settings 0–XXXX (Depending on the motor pole number) Sets the rated speed for the motor as indicated on the motor nameplate. Pr. 01-01 and Pr. 05-04 determine the maximum rotor speed for IM.

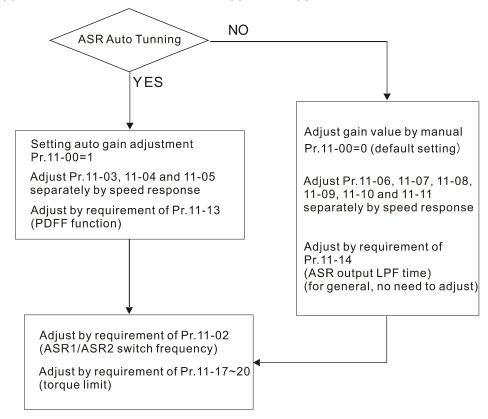
(1200 rpm - 1).

For example: Pr. 01-01=20Hz, Pr. 05-04=2, according to the equation  $120 \times 20 \text{ Hz} / 2 = 1200 \text{ rpm}$  and take integers. Due to the slip of the IM, the maximum setting value for Pr. 05-03 is 1199rpm

## Number	er of Poles for Induction Motor 1	
		Default: 4
Setting	gs 2–64	
Set up Pr. 01-0 normally. Pr. 01 For example: P	ber poles for the motor (must be an even number).  Of and Pr. 05-03 before setting up Pr. 05-04 to maken -01 and Pr. 05-03 determine the maximum set up number.  Of Officer of the number of poles is 60. The proof of 60 poles.	nber poles for the IM. o the equation 120 x 20Hz /
05-05 No-loa	d Current for Induction Motor 1 (A)	
Setting		Default: Depending on the model power
	th 110kW and above, default setting is 20% of motor ra	ated current
	-	atod odiront.
Stator	Resistance(Rs) for Induction Motor 1	
		Default: Depending on
0 111	0.000 05 5050	the model power
Setting Poters		
65-67 Rotor	Resistance(Rr) for Induction Motor 1	Default: 0.000
Setting	gs 0.000–65.535Ω	Delault. 0.000
<b>₿</b> 5 - <b>₿ 8</b> Magne	etizing Inductance (Lm) for Induction Motor 1	
<pre></pre>	inductance (Lx) for Induction Motor 1	
		Default: 0.0
Setting	gs 0.0–6553.5mH	
/ 10 3E		
FOCE	Bandwidth for Speed Observer	D.C. # 40.0
Setting	gs 20.0–100.0Hz	Default:40.0
☐ Setting the sp	peed observer to a higher bandwidth could shorten the er noise interference during the speed observation.	speed response time, but
; ; - [; ] System	m Control	
Setting	gs bit0: Auto-tuning for ASR and APR bit1: Inertia estimate (only in FOCPG mode) bit2: Zero servo bit6: 0Hz linear-cross bit7: Save or do not save the frequency bit8: Maximum speed for point-to-point position co	Default: 0000h ontrol

bit0 = 0: Manual adjustment for ASR and APR gain, Pr. 11-06–Pr. 11-11 are valid and Pr. 11-03–Pr. 11-05 are invalid.


bit0 = 1: Auto-tuning for ASR and APR gain, the system automatically generates an ASR setting, Pr. 11-06–Pr. 11-11 are invalid and Pr. 11-03–Pr. 11-05 are valid.



When the drive needs to keep a certain torque at zero-speed, or it needs a steady frequency output at extreme low speed, increase Pr. 11-05 zero-speed bandwidth appropriately. When the speed is in high-speed area, if the output current trembles seriously and makes the drive vibrate, then decrease the high-speed bandwidth.

For example:

	Manual gain	Response:
Manual gain	[Pr. 11-10, Pr. 11-11] > [Pr. 11-06, Pr. 11-07] > [Pr. 11-08, Pr. 11-09]	
	Auto gain	Pr. 11-05 = 15 Hz, Pr. 11-03 = 10 Hz, Pr. 11-04 = 8 Hz

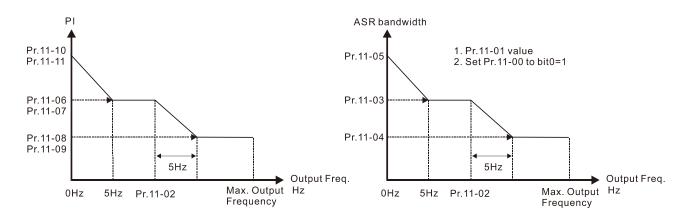


ASR adjustment- manual gain

ASR adjustment- auto gain

 $\square$  bit1 = 0: no function.

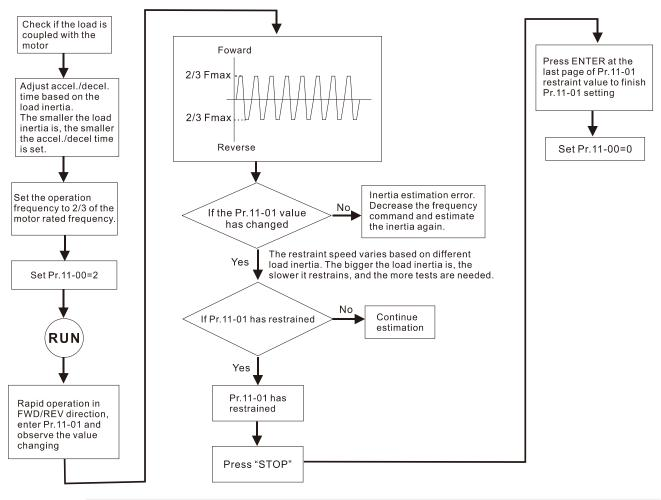bit1 = 1: Inertia estimation function is enabled. bit1 setting would not activate the estimation process, set Pr. 05-00 = 12 to begin FOC / TQC Sensorless inertia estimating.



# 

Settings 1-65535 (256=1PU)

To get the system inertia from Pr.11-01, user needs to set Pr.11-00 to bit1=1 and execute continuous forward / reverse running.

Default: 256

- When Pr. 11-01 = 256, it is 1PU. So if you use a 2HP motor, the 2HP motor inertia is 4.3 kg-cm<sup>2</sup> according to the table below. If Pr. 11-01 = 10000 after tuning, the system inertia is (10000 / 256) x 4.3 kg-cm<sup>2</sup>.
- Perform the operation test with load based on the inertia after tuning. Run the motor in acceleration, deceleration, and steady speed and observe the values. If values between speed feedback and speed command are close, steady-state error is small and overshoot is less, then this inertia is a better one.
- When using torque mode as the control mode, perform the tuning with speed mode first to see if the tuned inertia can work normally. After verifying with speed mode, change the control mode to torque mode.
- If the Iq current command from ASR has high-frequency glitch, then decrease the setting. If the response time of sudden loading is too slow, then increase the setting.

Unit of induction motor system inertia is kg-cm<sup>2</sup>:

	· ·	-			
Power	Setting	Power	Setting	Power	Setting
1HP	2.3	25HP	142.8	175HP	2150.0
2HP	4.3	30HP	176.5	250HP	2800.0
3HP	8.3	40HP	202.5	300HP	3550.0
5HP	14.8	50HP	355.5	375HP	5139.0
7.5HP	26.0	60HP	410.8	425HP	5981.0
10HP	35.8	75HP	494.8	475HP	7053.0
12HP	54.8	100HP	1056.5	600HP	9643.0
15HP	74.3	125HP	1275.3	650HP	10734.0
20HP	95.3	150HP	1900.0	750HP	13000.0

The base value for PM system inertia is set by Pr.05-38 and the unit is in kg-cm<sup>2</sup>.

× 11-02	ASR1 / ASR2 Switch Frequency	
		Default: 7.00
	Settings 5.00-599.00Hz	
meet t	the low-speed and high-speed ASR switching point in the FOC area two needs: in the high-speed region of the estimator switch point in the low-speed region of the estimator switch point it has a	t has a high response,
recom	nmended switching point is higher than Pr. 10-39.	
A low	setting does not cover Pr. 10-39. If the setting is too high, the hi	gh-speed range is too
narrov	N.	
× 11-85	ASR1 Low-speed Bandwidth	
		Default: 10
	Settings 1–40Hz (IM) / 1–100Hz (PM)	
× 11-85	ASR2 High-speed Bandwidth	
		Default: 10
	Settings 1–40Hz (IM) / 1–100Hz (PM)	
× 11-89	Zero-speed Bandwidth	
		Default: 10
	Settings 1–40Hz (IM) / 1–100Hz (PM)	
M Δfter	estimating inertia and setting Pr 11-00 bit0=1 (auto-tuning) you co	an adjust Pr 11-03 Pr

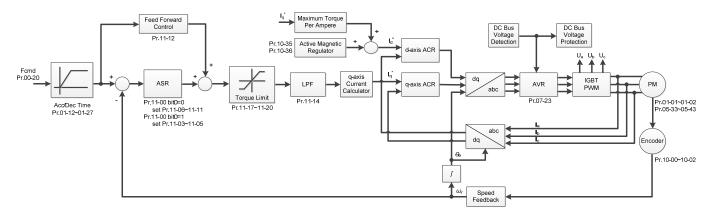
- After estimating inertia and setting Pr.11-00 bit0=1 (auto-tuning), you can adjust Pr.11-03, Pr. 11-04 and Pr. 11-05 separately according to the speed response. The larger the setting value, the faster response you. Pr. 11-02 is the switch frequency for the low-speed / high-speed bandwidth.
- The position control pulse command (MIx=37) and P2P position control Kp gain can adjust Pr. 11-05. The higher the value, the lower the steady-state error.

### 12-2-2 Standard PM Motor Adjustment Procedure


#### 12-2-2-1 Pr.00-11=4 PM FOC+PG

#### 1. Control Diagram


### (A) PM FOC+PG Control Diagram (applicable for C2000 V2.04 and above)




### (B) PM TQC+PG Control Diagram (applicable for C2000 V2.04 and above)

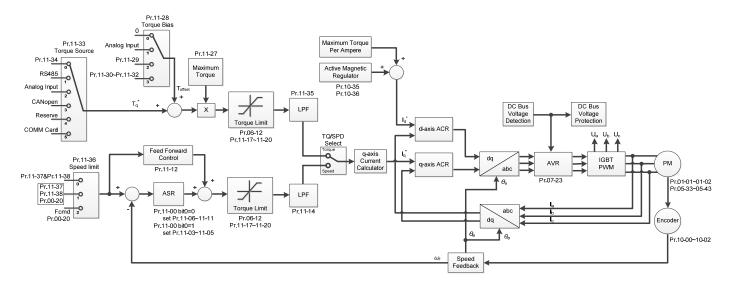

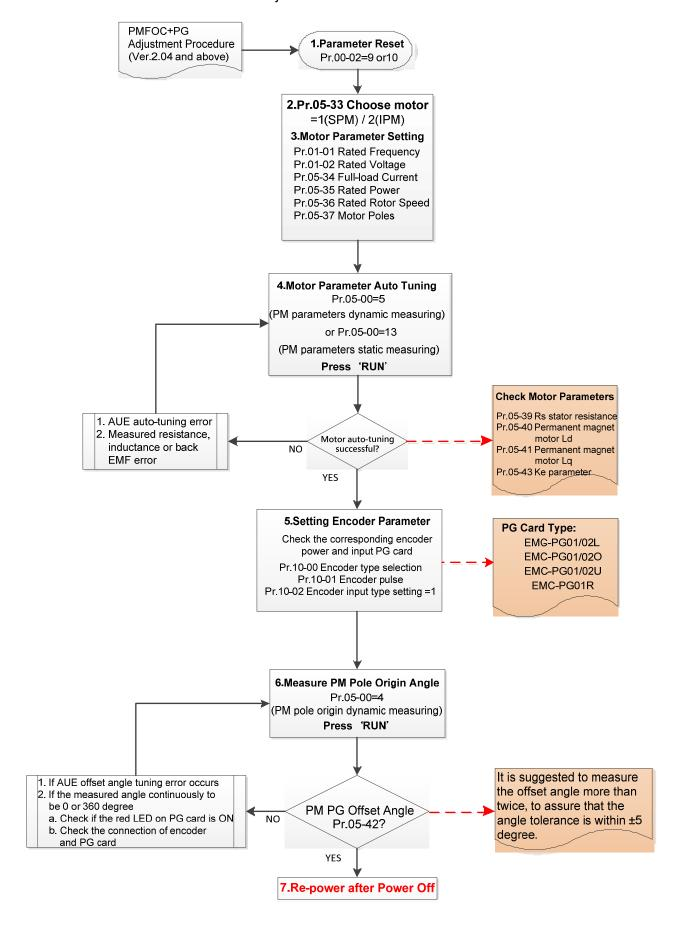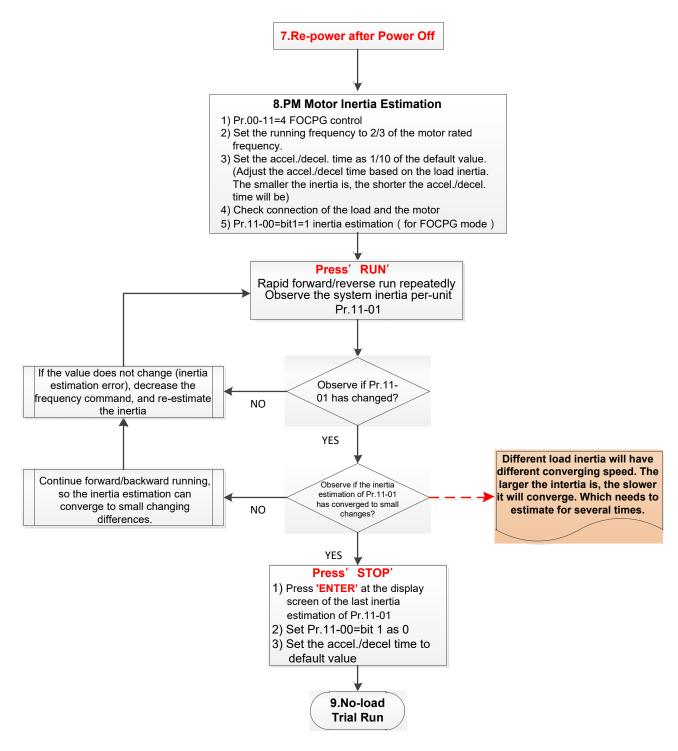- 2. PM FOC+PG Adjustment Procedure (\* the number marked on the procedure corresponds to the number of following adjustment explanations)
  - PM FOC+PG Motor Parameter Adjustment Procedure





### Basic Motor Parameters Adjustment

1. Parameter reset:

Pr.00-02=9 (50Hz) or 10 (60Hz), reset parameter to the default value.

2. Select IPM motor type:

Pr.05-33=1 (SPM) or 2 (IPM)

3. Motor nameplate parameter setting:

Parameter	Description
Pr.01-01	Rated frequency (Hz)
Pr.01-02	Rated voltage (V <sub>AC</sub> )
Pr.05-33	PM motor type (IPM or SPM)
Pr.05-34	Rated current (A)

Parameter	Description
Pr.05-35	Rated power (kW)
Pr.05-36	Rated rotor speed (RPM)
Pr.05-37	Number of poles for the motor (poles)

#### 4. PM parameter auto-tuning:

Rolling auto-tuning for PM (without load) Pr.05-00=5 or static auto-tuning for PM (Pr.05-00=13)

Set Pr.05-00=5 or 13 and press "RUN" key to finish motor auto-tuning, then you will get the following parameters:

Parameter	Description
Pr.05-39	Stator resistance for a permanent magnet motor ( $\Omega$ )
Pr.05-40	Permanent magnet motor Ld (mH)
Pr.05-41	Permanent magnet motor Lq (mH)
Pr.05-43	Ke parameter of a permanent magnet motor (V <sub>phase rms</sub> / krpm) (When Pr.05-00=5, the Ke parameter is measured based on the actual motor rotation.) (When Pr.05-00=13, the Ke parameter is automatically calculated based on the motor power, current and rotor speed.)

If an auto-tuning error (AUE) occurs, refer to Section 14 "Error Codes and Descriptions" for further treatment.

AUE Error (code)	Description
AUE (40)	Auto-tuning error
AUE1 (142)	Auto-tuning error 1 (No feedback current error)
AUE2 (143)	Auto-tuning error 2 (Motor phase loss error)
AUE3 (144)	Auto-tuning error 3 (No-load current I <sub>0</sub> measuring error)
AUE4 (148)	Auto-tuning error 4 (Leakage inductance Lsigma measuring error)

#### 5. Set encoder parameter

Check the encoder power and input type, make sure it is used with correct PG card.

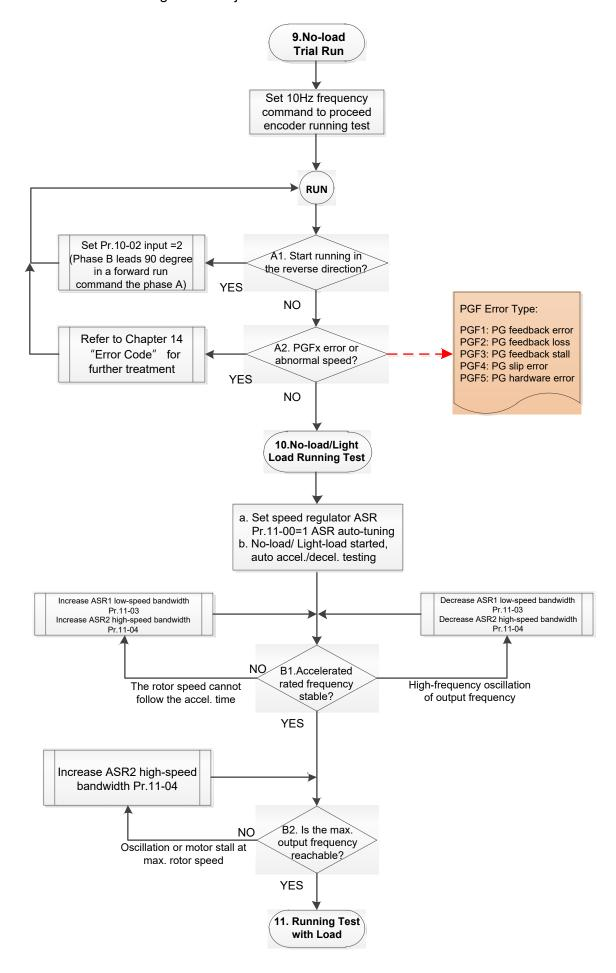
PG Card Type			
EMC-PG01L	EMC-PG010	EMC-PG01U	EMC-PG01R
EMC-PG02L	EMC-PG02O	EMC-PG02U	-

#### Related parameters:

- (1) Pr. 10-00: Encoder type selection
- (2) Pr. 10-01: Encoder pulses per revolution
- (3) Pr. 10-02: Encoder input type setting = 1 (Phases A and B are pulse inputs, forward direction if A-phase leads B-phase by 90 degrees)
- 6. Measure the initial magnetic pole angle of PM
  - (1) Set Pr.05-00=4 (dynamic test for PM magnetic pole)
  - (2) Press "RUN" key to proceed the PM magnetic pole measurement, and to get the offset angle.
  - Note 1: It is suggested to measure the offset angle more than twice, to make sure the angle tolerance is within  $\pm 5$  degree.
  - Note 2: Verify the encoder and PG card are connected in the right order.

- 7. Cycle the power.
- 8. Execute inertia estimation for PM
  - (1) Set Pr. 00-11 = 4 FOCPG control.
  - (2) Set the operation frequency command to 2/3 of the motor's rated frequency.
  - (3) Set the acceleration / deceleration time (Pr. 01-12, Pr. 01-13) to 1/10 of the default time. (Adjust the acceleration / deceleration time according to the load inertia. The smaller the load inertia, the shorter the acceleration / deceleration time is set).
  - (4) Check if the load and the motor is connected.
  - (5) Set Pr. 11-00 bit1 = 1 inertia estimate (only in FOCPG mode).
  - (6) Press "RUN" key to proceed the inertia
    - Quickly run the motor in forward and reverse direction repeatedly, and observe the inertia estimated value of Pr. 11-01 for the keypad.
    - a. If the system inertial estimated value of Pr. 11-01 does not change ( = default 256), it means the inertia estimation is wrong. Reduce the frequency command and estimate the inertia again.
    - b. If the system inertia estimated value of Pr. 11-01 is still a lot different from the estimated value of FWD/REV operation, continue the estimation in forward / reverse operating direction to restraint the estimated inertia to small difference.
  - (7) Press "STOP" key to obtain the estimated inertia value:
    - a. Press "ENTER" to confirm the input value at the displayed page of the last estimated inertia value of Pr. 11-01.
    - b. Set Pr.11-01 bit1 = 0, return the control mode to speed mode.
    - c. Set the acceleration / deceleration time (Pr. 01-12, Pr. 01-13) back to the default value.

### II. PM FOC+PG No-load/ Light-load Adjustment Procedure



#### No-load/ Light duty Running Adjustment

#### 9. No-load trial run

Set the frequency command to 10Hz to proceed the encoder running test:

A1. If the motor starts in a reverse direction.

If the motor starts in a reverse direction, set the encoder input type Pr. 10-02 = 2 (phases A and B are pulse inputs, forward direction if B-phase leads A-phase by 90 degrees.)

A2. Observe if a PGFx error is displayed on the keypad, or the motor runs in an abnormal speed.

If the PGFx error is displayed or the motor runs in an abnormal speed, refer to Section 14 "Fault Codes and Descriptions" or the following table for PGFx error type and further treatment.

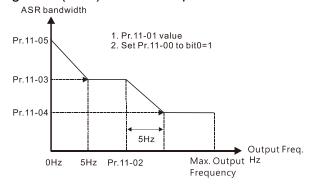
PGF Error (code)	Description	Solution
PGF1 (42)	PG feedback error	Check parameter setting of Pr.10-00–10-02
PGF2 (43)	PG feedback loss	Check the wiring of encoder and PG card
PGF3 (44)	PG feedback stall	Check the wiring of encoder and PG card
PGF4 (45)	PG slip error	Check the pulse setting of Pr.10-01 Check the wiring of encoder and PG card
PGF5 (65)	PG hardware error	Check if the PG card is installed on the correct slot position Check the setting parameter of the encoder

#### 10. No-load / light duty running test

- a. Set the speed regulator (ASR) as Pr.11-00=1, and set the ASR gain as auto-tuning.
- b. Start the motor with no-load / light duty and proceed acceleration / deceleration test.
- B1. Accelerate to the rated frequency and observe if the motor runs stably.
  - If the output rotor speed cannot follow the acceleration time, increase Pr.11-04 (ASR2 high-speed bandwidth) or Pr.11-03 (ASR1 low-speed bandwidth).
  - If a high-frequency oscillation occurs in the output frequency, decrease Pr.11-04 (ASR2 high-speed bandwidth) or Pr.11-03 (ASR1 low-speed bandwidth).
- B2. Accelerate the motor to the maximum frequency and observe if it runs stably.

  If an oscillation occurs or motor stalls at maximum rotor speed during operation, increase Pr.11-04 (ASR2 high-speed bandwidth) or Pr.00-17 (Carrier frequency).


Setting curve of speed regulator (ASR) and related parameter:



ASR adjustment- auto gain

Parameter	Description	Default
Pr.11-00	System control	0
Pr.11-01	Per unit of system inertia	256
Pr.11-02	ASR1/ASR2 switch frequency (it is suggested to set the switch frequency higher than Pr.10-39)	7Hz
Pr.11-03	ASR1 low-speed bandwidth	10Hz
Pr.11-04	ASR2 high-speed bandwidth	10Hz
Pr.11-05	ASR zero-speed bandwidth	10Hz

#### PM FOC+PG With-load starting adjustment procedure

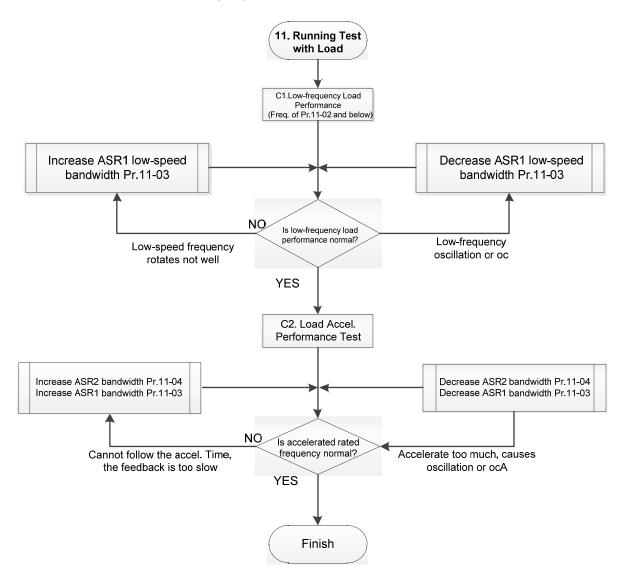

#### With-load Operation Adjustment:

- C1. Low-frequency load performance, when the drive operates under ASR1/ASR2 switch frequency (Pr.11-02):
  - a. If the low-speed frequency cannot start-up with load or the rotor speed is not smooth, increase Pr.11-03 (ASR1 low-speed bandwidth), or increase Pr.11-01 (Per-unit system inertia).
  - b. If an oscillation or over current (oc) error occurs at low-speed frequency, decrease Pr.11-(ASR1 low-speed bandwidth) or decrease Pr.11-01 (Per-unit system inertia).

- C2. With-load accelerating performance testing in heavy-load status, accelerate the motor to the rated rotor speed according to the acceleration time.
  - a. If the motor rotor speed cannot follow the acceleration time, and the response is too slow, increase Pr.11-04 (ASR2 high-speed bandwidth) and Pr.11-03 (ASR1 low-speed bandwidth); if the response speed is still not enough, increase 10% of the per-unit system inertia for Pr.11-01 each time.
  - b. If an excessive acceleration causes an oscillation or ocA error, decrease Pr.11-04 (ASR2 high-speed bandwidth) and Pr.11-03 (ASR1 low-speed bandwidth).

# 12-2-2-2 PM FOC+PG Adjustment Parameters

Refer to Section 12-1 "Description of Parameter Settings" for detailed information.

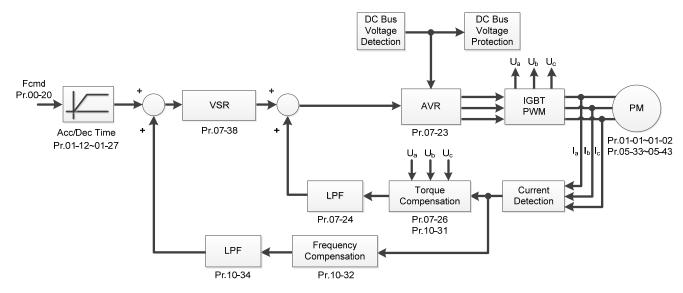
Parameter	Description	Unit	Default	Setting Range
	Encoder Setting Parameters			
Pr.10-00	Encoder type selection	N/A	0	0–5
Pr.10-01	Encoder pulses per revolution	ppr	600	1–20000
Pr.10-02	Encoder input type setting	N/A	0	0–5
Motor Performance Control Parameters				
Pr.11-00	System control		0	0–8
Pr.11-01	Per-unit of system inertia		256	1–65535
Pr.11-02	ASR1 / ASR2 switch frequency		7	5.00–599
Pr.11-03	ASR1 low-speed bandwidth		10	1–100 (PM) 1–40 (IM)
Pr.11-04	Pr.11-04 ASR2 high-speed bandwidth		10	1–100 (PM) 1–40 (IM)
Pr.11-05	205 Zero-speed bandwidth		10	1–100 (PM) 1–40 (iM)

# 12-2-3 PM Motor Adjustment (PM SVC)


# 12-2-3-1 Permanent magnet motor space vector control (PM SVC) Pr. 00-11 = 2

# 1. Control Diagram

PM SVC control diagram (applicable for C2000 V2.04 and above)



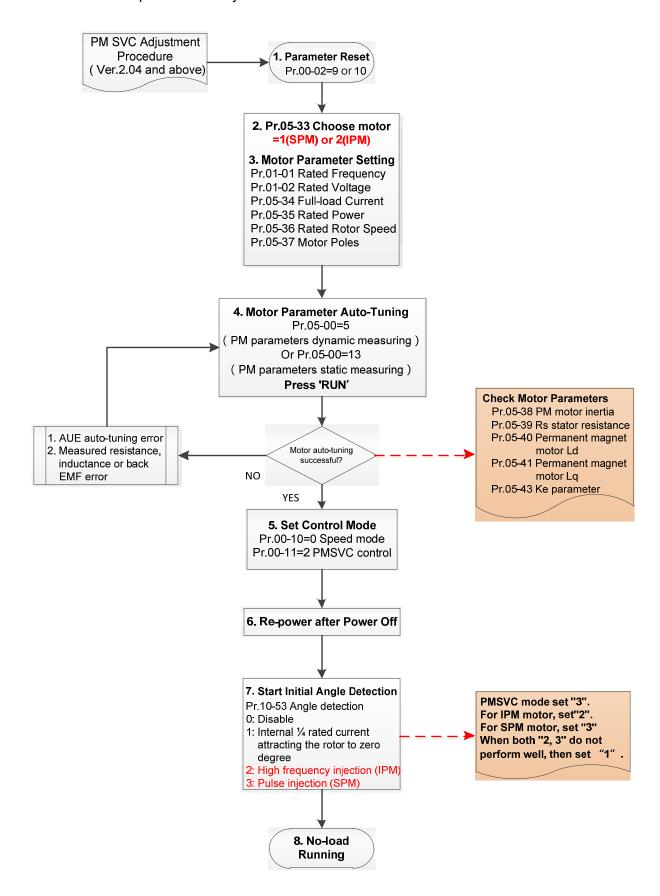- 2. PM SVC Adjustment Procedure (\* the number marked on the procedure corresponds to the number of following adjustment explanations)
  - I. PM SVC motor parameters adjustment



# Basic Motor Parameters Adjustment

#### 1. Parameter reset:

Pr.00-02=9 (50Hz) or 10 (60Hz), reset parameter to the default value.

#### 2. Select PM motor type:

Pr.05-33=1 (SPM) or 2 (IPM)

#### 3. Motor nameplate parameter setting:

Parameter	Description		
Pr.01-01	Rated frequency (Hz)		
Pr.01-02	Rated voltage (V <sub>AC</sub> )		
Pr.05-33	PM motor type (IPM or SPM)		
Pr.05-34	Rated current (A)		
Pr.05-35	Rated power (kW)		
Pr.05-36	Rated rotor speed (RPM)		
Pr.05-37	Number of poles for the motor (poles)		

#### 4. PM parameter auto-tuning:

Rolling auto-tuning for PM (without load) Pr.05-00=5 or static auto-tuning for PM (Pr.05-00=13) Set Pr.05-00=5 or 13 and press "RUN" key to finish motor auto-tuning, then you will get the following parameters:

Parameter	Description
Pr.05-38	System inertia for a permanent magnet motor (kg-cm²)
Pr.05-39	Stator resistance for a permanent magnet motor ( $\Omega$ )
Pr.05-40	Permanent magnet motor Ld (mH)
Pr.05-41	Permanent magnet motor Lq (mH)
Pr.05-43	Ke parameter of a permanent magnet motor (V <sub>phase · rms</sub> / krpm) (When Pr.05-00=5, the Ke parameter is measured based on the actual motor rotation.) (When Pr.05-00=13, the Ke parameter is automatically calculated based on the motor power, current and rotor speed.)

If an auto-tuning error (AUE) occurs, refer to Section 14 "Error Codes and Descriptions" for further treatment.

AUE Error (code)	Description	
AUE (40)	Auto-tuning error	
AUE1 (142)	Auto-tuning error 1 (No feedback current error)	
AUE2 (143)	Auto-tuning error 2 (Motor phase loss error)	
AUE3 (144)	Auto-tuning error 3 (No-load current I <sub>0</sub> measuring error)	
AUE4 (148)	Auto-tuning error 4 (Leakage inductance Lsigma measuring error)	

#### 5. Set control mode

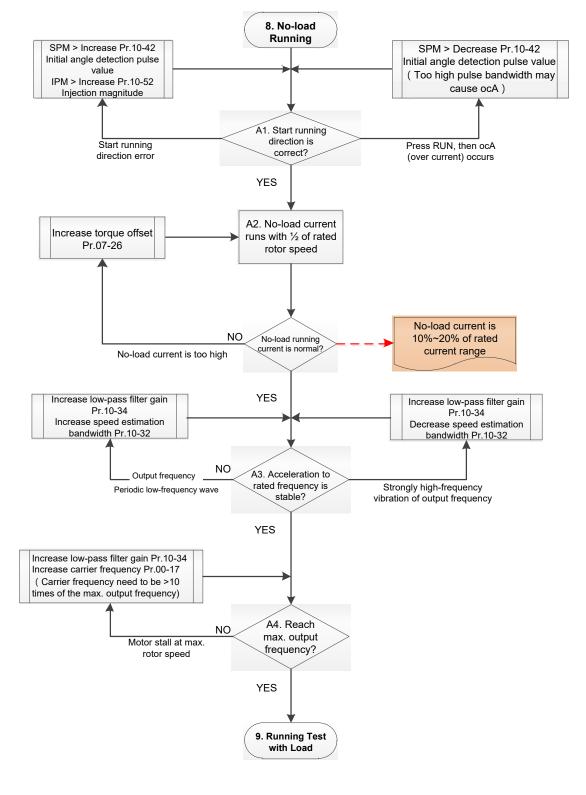
Control mode for the drive: Pr. 00-10 = 0: Speed mode Control mode for the motor: Pr. 00-11 = 2: PM SVC mode

6. After setting the control mode, cycle the power.

- 7. Measure the initial magnetic pole angle of PM
  - Set Pr.10-53 PM initial rotor position detection method
  - 0: Disable
  - 1: Internal 1/4 rated current attracting the rotor to zero degrees
  - 2: High frequency injection
  - 3: Pulse injection

(Set to 2 for IPM; set to 3 for SPM. If these settings cause problems, then set the parameter to 1.)

# II. PMSVC Adjustment for Operation without Load / with Light duty




- Adjustment for Operation with Light duty
  - 8. Start the motor with no-duty / light-duty, and operates to 1/2 of the rated rotor speed A1. Start operation direction:
    - a. If the start operation direction is wrong
       SPM: increase the current proportion for Pr. 10-42 (Initial angle detection pulse value) to improve the accuracy of the angle detection.
       IPM: Increase the voltage for Pr. 10-52 (Injection magnitude) to improve the accuracy of the angle detection.
    - b. If an ocA error occurs when pressing RUN to start the motor, decrease the current proportion for Pr. 10-42 (Initial angle detection pulse value). An excessive pulse current may cause ocA error easily.
    - A2. Operates the motor in 1/2 of the rated rotor speed, adjust the no-load operating current If the no-load operating current exceeds 20% of the rated current, increase Pr. 07-26 (Torque compensation gain) and observe the no-load operating current.
    - A3. Accelerate to rated frequency and observe if the motor operates stably.
      - a. If the motor output rotor speed presents periodic low-frequency wave, increase Pr. 10-34 (PM sensorless speed estimator low-pass filter gain), or increase Pr. 10-32 (PM FOC sensorless speed estimator bandwidth).
      - b. If the output frequency reflects high-frequency vibration, decrease Pr. 10-34 or decrease Pr. 10-32.
    - A4. Accelerate the motor to the maximum rotor speed, and observe if it operates stably.

      If the motor stalls when accelerating to the maximum rotor speed, then increase Pr. 10-34

      PM Sensorless Speed Estimator Low-pass Filter Gain, or increase Pr. 00-17 Carrier

      Frequency (you must set the carrier frequency larger than 10 times of the maximum output frequency)

# III. PM SVC Carrier Start-up Adjustment

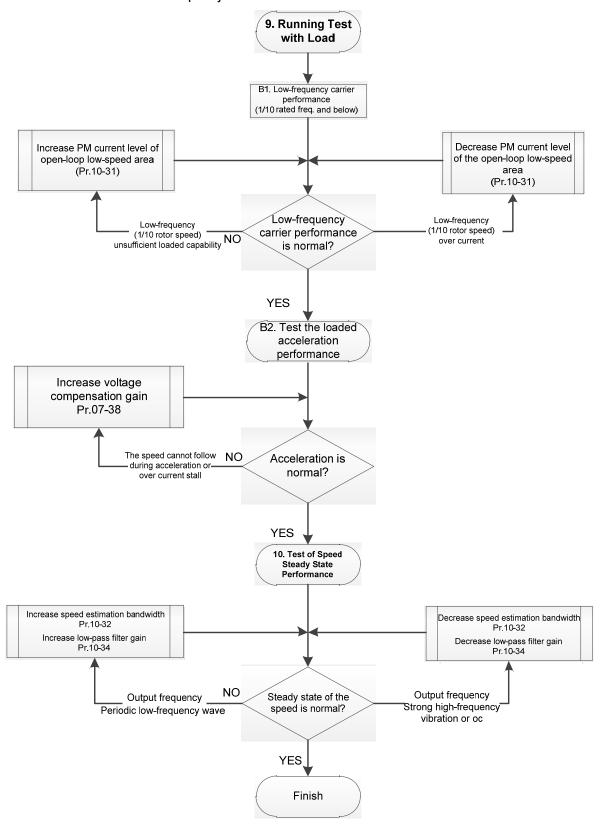

- Heavy Load Operation Adjustment
  - 9. Load operating test
    - B1. Low-frequency loading performance is below 1/10 of rated frequency:
      - a. If the low-frequency loading performance is insufficient, or the rotor speed is not smooth, increase Pr. 10-31 (Current command of I/F mode).
    - b. If the low-frequency current is large, decrease Pr. 10-31 (Current command of I/F mode).
    - B2. Test the with-load accelerating performance:
      - When the motor operates in 1/10 of rotor speed and above, if the speed cannot follow the acceleration time during accelerating, or the current stalls, increase Pr. 07-38 (PMSVC voltage feedback forward gain).
  - 10. Stability test at constant speed operation: if the motor operates stably at constant speed
    - a. If the motor output rotor speed presents periodic low-frequency wave, increase Pr. 10-34 (PM sensorless speed estimator low-pass filter gain), or increase Pr. 10-32 (PM FOC sensorless speed estimator bandwidth).
    - b. If the output frequency reflects high-frequency vibration, decrease Pr. 10-34 or decrease Pr. 10-32.

#### 12-2-3-2 PMSVC Related Parameters

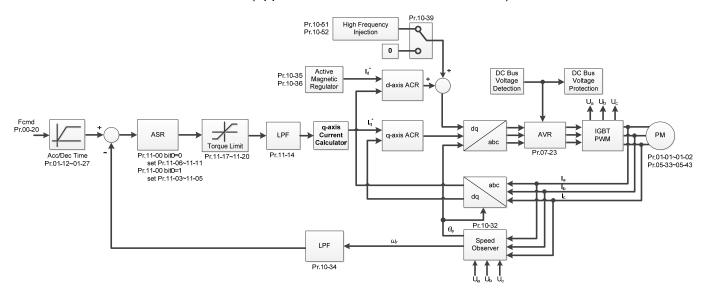
Refer to Section 12-1 Description of Parameter Settings for more details.

Parameter	Description		Default	Setting Range
Pr.07-24	Torque command filter time	sec.	0.5	0.001–10
Pr.07-26	Torque compensation gain	N/A	0	0–5000
Pr.07-38	PMSVC voltage feedback forward gain	N/A	1.0	0.5–2.0
Pr.10-31	I/F mode, current command	%	40	0–150
Pr.10-32	PM FOC sensorless speed estimator bandwidth	Hz	5.00	0.00–600
Pr.10-34	PM sensorless speed estimator low-pass filter gain	N/A	1.00	0.00-655.35
Pr.10-39	Frequency point to switch from I/F mode to PM sensorless mode	Hz	20.00	0.00–599.00
Pr.10-40	Frequency point to switch from PM sensorless mode to V/F mode	Hz	20.00	0.00–599.00
Initial Angle Estimating Parameters				
Pr.10-42	Initial angle detection pulse value	N/A	1.0	0.0 –3.0
Pr.10-51	Injection frequency	Hz	500	0–1200
Pr.10-52	Injection magnitude	٧	15.0 / 30.0	0.0–200.0
Pr.10-53	PM initial rotor position detection method 0: Disable 1: Internal 1/4 rated current attracting the rotor to zero degrees 2: High frequency injection 3: Pulse injection	N/A	0	0–3

# 12-2-4 IPM Adjustment


#### 12-2-4-1 Pr.00-11=7 Interior PM FOC sensorless vector control (IPM sensorless)

Control Diagram
 IPM sensorless FOC mode (applicable for C2000 V2.04 and above)



PM Sensorless FOC control is the control method dedicated for IPM, it uses the high salient pole characteristic (Lq > Ld) of IPM to detect the positions of NS magnetic poles. By doing this, it calculates the motor's rotor position at low-speed frequency.

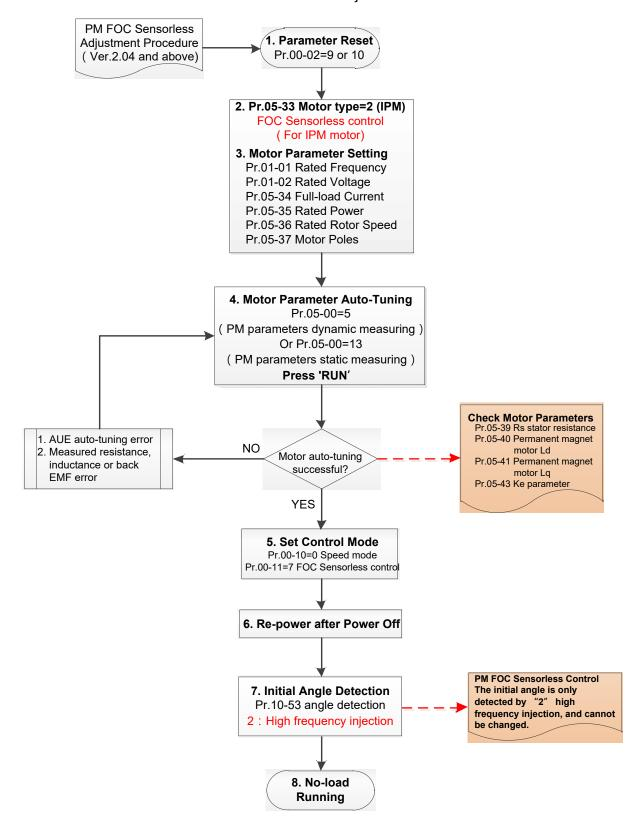- 2. IPM Sensorless FOC Control Adjustment Procedure (\* the number marked on the procedure corresponds the number of following adjustment explanations)
  - I. IPM Sensoress FOC Mode Motor Parameters Adjustment



# Basic Motor Parameters Adjustment

1. Parameter reset:

Pr.00-02=9 (50Hz) or 10 (60Hz), reset parameter to the default value.

2. Select IPM motor type:

Pr.05-33=2 (IPM)

3. Motor nameplate parameter setting:

Parameter	Description		
Pr.01-01	Rated frequency (Hz)		
Pr.01-02	Rated voltage (V <sub>AC</sub> )		
Pr.05-33	PM motor type (IPM or SPM)		
Pr.05-34	Rated current (A)		
Pr.05-35	Rated power (kW)		
Pr.05-36	Rated rotor speed (RPM)		
Pr.05-37	Number of poles for the motor (poles)		

#### 4. PM parameter auto-tuning:

Rolling auto-tuning for PM (without load) Pr.05-00=5 or static auto-tuning for PM (Pr.05-00=13)

Set Pr.05-00=5 or 13 and press "RUN" key to finish motor auto-tuning, then you will get the following parameters:

Parameter	Description		
Pr.05-39	Stator resistance for a permanent magnet motor (Ω)		
Pr.05-40	Permanent magnet motor Ld (mH)		
Pr.05-41	Permanent magnet motor Lq (mH)		
Pr.05-43	Ke parameter of a permanent magnet motor (V <sub>phase · rms</sub> / krpm) (When Pr.05-00=5, the Ke parameter is measured based on the actual motor rotation.) (When Pr.05-00=13, the Ke parameter is automatically calculated based on the motor power, current and rotor speed.)		

If an auto-tuning error (AUE) occurs, refer to Section 14 "Error Codes and Descriptions" for further treatment.

AUE Error (code)	Description	
AUE (40)	Auto-tuning error	
AUE1 (142)	Auto-tuning error 1 (No feedback current error)	
AUE2 (143)	Auto-tuning error 2 (Motor phase loss error)	
AUE3 (144)	Auto-tuning error 3 (No-load current I <sub>0</sub> measuring error)	
AUE4 (148)	Auto-tuning error 4 (Leakage inductance Lsigma measuring error)	

#### 5. Set control mode

Control mode for the drive: Pr. 00-10 = 0: Speed mode

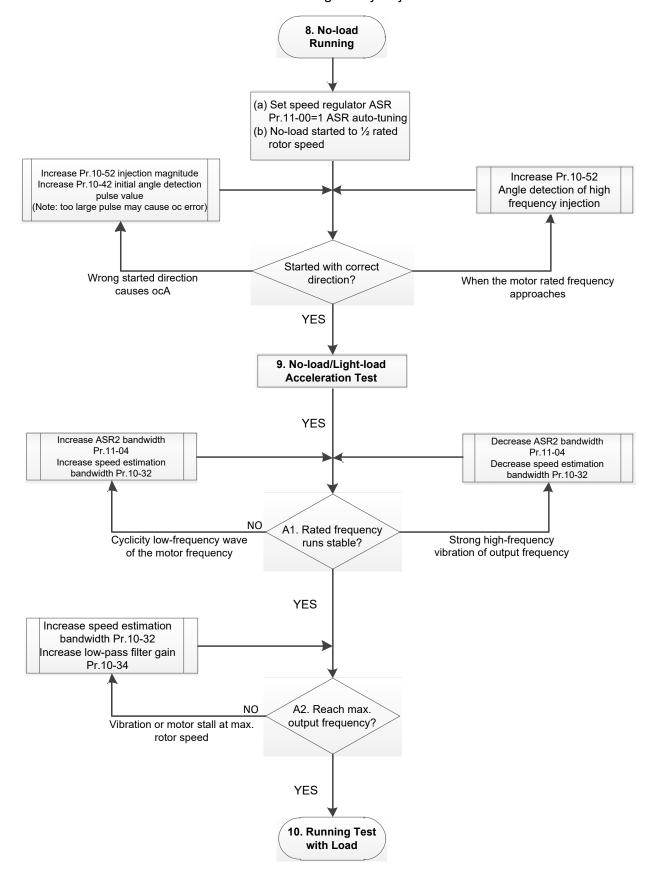
Control mode for the motor: Pr. 00-11 = 7: Interior PM FOC Sensorless

6. After auto-tuning, cycle the power.


7. Measure the initial magnetic pole angle of PM

When Pr.00-11=7 PM FOC Sensoreless mode, the initial magnetic pole angle detection method is high frequency injection.

# II. IPM Sensorless FOC Mode - No-load / Light-duty Adjustment




- No-load / Light-duty Operation Adjustment
  - 8. Start the motor with no-duty
  - (a) Set Pr.11-00 = 1 Auto-tuning for ASR and APR
  - (b) Start the motor without load, and operates the motor to 1/2 of rated rotor speed
  - a. If the start direction is wrong, starting rotation is not smooth (ocA) or the motor salient ratio (Lq / Ld) is low, increase Pr. 10-52 (Injection Magnitude) and Pr. 10-42 (Initial Angel Detection Pulse Value) to improve the accuracy of the angle detection.
  - b. If Pr. 10-51 (Injection frequency) is close to the rated motor frequency (Pr. 01-01), then increase Pr.10-51 to avoid the angle detection difference caused by motor rated frequency.
  - 9. Acceleration test with no-duty / light-duty
    - A1. Accelerate to rated frequency and observe if the motor operates stably.
      - a. If the motor output rotor speed presents periodic low-frequency wave, increase Pr. 11-04 (ASR2 high-speed bandwidth), or increase Pr. 10-32 (PM FOC sensorless speed estimator bandwidth).
      - b. If the output frequency reflects high-frequency vibration, decrease Pr.11-04 or decrease Pr.10-32.
    - A2. Accelerate the motor to the maximum frequency, and observe if it operates stably. If the motor stalls when accelerating to the maximum rotor speed, increase Pr.10-32 (PM FOC sensoress speed estimator bandwidth) and Pr.10-34 (PM sensorless speed estimator low-pass filter gain).
    - Setting curve of speed regulator (ASR) and related parameters:

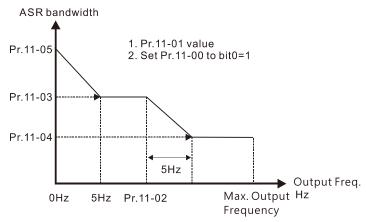

ASR adjustment- auto gain

Parameter	Description	Default
Pr.11-00	System control	0
Pr.11-01	Per unit of system inertia	256
Pr.11-02	ASR1 / ASR2 switch frequency (it is suggested to set the switch frequency higher than Pr.10-39)	7Hz
Pr.11-03	ASR1 low-speed bandwidth	10Hz
Pr.11-04	ASR2 high-speed bandwidth	10Hz
Pr.11-05	Zero-speed bandwidth	10Hz

# III. IPM Sensoress FOC Mode - Load Starting Adjustment

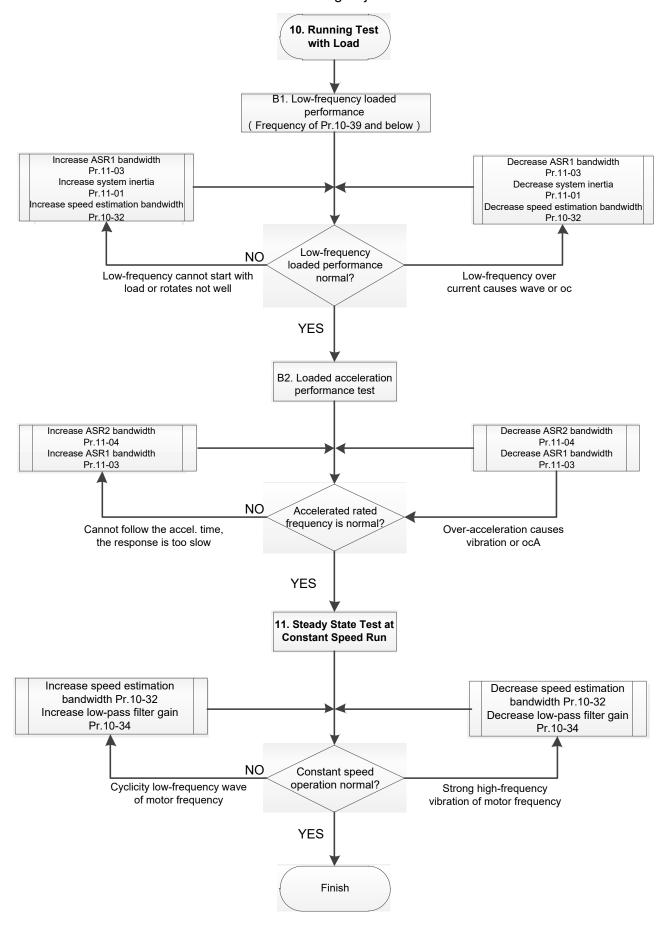

#### ■ Load Operation Adjustment

#### 10. Load operating test

- B1. Low-frequency loading performance, when the switch frequency is below Pr.10-39:
  - a. When the low-frequency cannot start the motor with load, or the rotor speed is not smooth, increase Pr.11-03 (ASR1 low-speed bandwidth) or Pr.11-01 (Per-unit of system inertia); if the above adjustment cannot meet the requirement, then increase Pr.10-32 (PM FOC sensorless speed estimator bandwidth).
  - b. When frequency outputs, low-frequency operating current is large or an oc error occurs, decrease Pr.11-03 and Pr.11-01; or decrease Pr.10-32.
- B2. Acceleration performance test under heavy-duty status, accelerate the motor to rated rotor speed according to the acceleration time:
  - a. If the motor cannot follow the acceleration time, and the response is too slow, increase Pr.11-04 (ASR2 high-speed bandwidth) and Pr.11-03 (ASR1 low-speed bandwidth).
  - b. If an excessive acceleration causes vibration or ocA error, decrease Pr.11-04 and Pr.11-03.
- 11. Stability test at constant speed operation: if the motor operates stably at constant speed
  - a. If the motor output rotor speed presents periodic low-frequency wave, increase Pr. 10-34 (PM sensorless speed estimator low-pass filter gain), or increase Pr. 10-32 (PM FOC sensorless speed estimator bandwidth).
  - b. If the output frequency reflects high-frequency vibration, decrease Pr. 10-34 or decrease Pr. 10-32.

#### 12-2-4-2 IPM sensorless FOC Mode Related Parameters:

Refer to Section 12-1 Description of Parameter Settings for more details.

Parameter	Description		Default	Setting Range	
Pr.10-32	PM FOC sensorless speed estimator bandwidth		5.00	0.00–600	
Pr.10-34	PM sensorless speed estimator bandwidth	N/A	1.00	0.00-655.35	
Pr.10-35	AMR (Kp) gain	N/A	1.00	0.00-3.00	
Pr.10-36	AMR (Ki) gain	N/A	0.20	0.00-3.00	
Pr.10-39	Frequency point to switch from I/F mode to PM sensorless mode	Hz	20.00	0.00–599	
Pr.10-40	Frequency point to switch from PM sensorless mode to V/F mode	Hz	20.00	0.00–599	
Pr.10-42	Initial angle detection pulse value	N/A	1.0	0.0–3.0	
	Initial Angle Estimating Parameters				
Pr.10-51	Injection frequency (for IPM)	Hz	500	0–1200	
Pr.10-52	Injection magnitude (for IPM)		15.0 / 30.0	0.0–200.0	
Pr.10-53	PM initial rotor position detection method		0	0–3	
Motor Performance Control Parameters					
Pr.11-00	System control	bit	0	0–8	
Pr.11-02	ASR1 / ASR2 switch frequency	Hz	7	5.00-599	
Pr.11-03	ASR1 low-speed bandwidth	Hz	10	1–100 (PM) 1–40 (IM)	
Pr.11-04	ASR2 high-speed bandwidth	Hz	10	1–100 (PM) 1–40 (IM)	
Pr.11-05	Zero-speed bandwidth		10	1–100 (PM) 1–40 (IM)	

- HANDWarningCE01Comm. Error 1
- ① Display error signal
- ② Abbreviate error code
- 3 Display error description

ID No.	Display on LCM Keypad	Warning Name	Description	
1	Warning CE1 Comm. Error 1	Communication error 1 (CE1)	RS-485 Modbus illegal function code	
		Action and	Reset	
	Action level	When the function code	is not 03, 06, 10 and 63	
	Action time	Immediately act		
War	ning setting parameter	N/A		
Reset method		"Warning" occurs when Pr. 09-02=0 and the motor drive keeps running. The drive resets automatically when receiving the correct function code.		
Reset condition		Immediately reset		
Record		N/A		
Cause			Corrective Actions	
Incorrect communication command from upper unit		Check if the communication command is correct.		
Malfunction caused by interference		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.		
Different communication setting from the upper unit  Check if the setting for Pr. 09-02 is the same as the setting for the upper			Pr. 09-02 is the same as the setting for the upper unit.	
Disconnection or bad connection of the cable		Check the cable and replace it if necessary.		

ID No.	Display on LCM Keypad	Warning Name	Description	
2	Warning CE2 Comm. Error 2	Communication error 2 (CE2)	RS-485 Modbus illegal data address	
		Action and	d Reset	
	Action level	When the input data add	dress is incorrect	
	Action time	Immediately act		
Warr	ning setting parameter	N/A		
Reset method		"Warning" occurs when Pr. 09-02=0 and the motor drive keeps running. The drive resets automatically when receiving the correct data address.		
Reset condition		Immediately reset		
Record		N/A		
Cause			Corrective Actions	
Incorrect communication command from upper unit		Check if the communication command is correct.		
Malfunction caused by interference		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.		
	Different communication setting from the upper unit  Check if the setting for Pr. 09-02 is the same as the setting for the upper		Pr. 09-02 is the same as the setting for the upper unit.	
Disconnection or bad connection of the cable		Check the cable and replace it if necessary.		

ID No.	Display on LCM Keypad	Warning Name	Description		
3	Warning CE3 Comm. Error 3	Communication error 3 (CE3)	RS-485 Modbus illegal data value		
		Action and	Reset		
	Action level	When the length of com	munication data is too long		
	Action time	Immediately act			
War	ning setting parameter	N/A			
	Reset method	"Warning" occurs when Pr. 09-02=0 and the motor drive keeps running. The drive resets automatically when receiving the correct communication data value.			
	Reset condition	Immediately reset			
	Record	N/A			
	Cause		Corrective Actions		
	t communication nd from upper unit	Check if the communication	ation command is correct.		
Malfunc		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.			
Different communication setting from the upper unit  Check if the setting for Pr. 09-02 is the same as the setting for the upper unit.					
Disconnection or bad connection of the cable  Check the cable and replace it if necessary.					

ID No.	Display on LCM Keypad	Warning Name	Description	
4	Warning CE4 Comm. Error 4	Communication error 4 (CE4)	RS-485 Modbus data is written to read-only address	
		Action and	Reset	
	Action level	When the data is writter	n to read-only address	
	Action time	Immediately act		
War	ning setting parameter	N/A		
Reset method		"Warning" occurs when Pr. 09-02=0 and the motor drive keeps running. The drive resets automatically when receiving the correct written address of communication data.		
	Reset condition	Immediately reset		
	Record	N/A		
	Cause	Corrective Actions		
	t communication nd from upper unit	Check if the communication command is correct.		
Malfunct	tion caused by interference	Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.		
Different communication setting from the upper unit  Check if the setting for Pr. 09-02 is the same as the setting for the upper				
Disconnection or bad connection of the cable  Check the cable and replace it if is necessary.				

ID No.	Display on LCM Keypad	Warning Name	Description		
5	Warning CE10 Comm. Error 10	Communication error 10 (CE10)	RS-485 Modbus transmission time-out		
		Action and	d Reset		
	ACTION IEVEL	When the communica communication time-ou	tion time exceeds the detection time of Pr. 09-03 t		
	Action time	Setting for Pr. 09-03			
War	ning setting parameter	N/A			
	Reset method	"Warning" occurs when Pr. 09-02=0 and the motor drive keeps running. The drive resets automatically when receiving the next communication packet.			
	Reset condition	Immediately reset	-		
Record		N/A			
	Cause		Corrective Actions		
The upper unit does not transmit the communication command within Pr. 09-03 setting time		Check if the upper unit t time for Pr. 09-03.	ransmits the communication command within the setting		
Malfunction caused by interference to separate the c			ounding of the communication circuit. It is recommended nication circuit from the main circuit, or wire in 90 degree ence performance.		
Different communication setting from the upper unit  Check if the setting for Pr.09-02 is the same as the setting for the upper					
Disconnection or bad connection of the cable  Check the cable and replace it if necessary.					

ID No.	Display on LCM Keypad	Warning Name	Description			
7	Warning SE1 Save Error 1	Save error 1 (SE1)	Keypad COPY error 1: Keypad copy time-out			
		Action and	d Reset			
Action level		"SE1" warning occurs when the keypad does not transmit the COPY command to the drive, and does not transmit any data to the drive again in 10 ms at the time you copy the parameters to the drive.				
	Action time	10 ms				
War	ning setting parameter	N/A				
	Reset method	Manual reset				
	Reset condition	Immediately reset				
	Record	N/A				
	Cause	Corrective Actions				
Commun	nication connection error	SE1: The causes of error are mostly communication problems between the keypad and control board. Potential causes include communication signal				
Keypad	error	interference and the unacceptable communication command to the Slave. Check if the error occurs randomly, or only occurs when copying certain				
Control I	board error	splays on the upper right corner of the copy page). If you lease contact Delta.				

ID No.	Display on LCM Keypad	Warning Name	Description			
8	Warning SE2 Save Error 2	Save error 2 (SE2)	Keypad COPY error 2: parameter writing error			
		Action and	Reset			
	Action level	copy parameters to the	when writing the parameters incorrectly at the time you drive. For example, you copy the new firmware version to the drive with old firmware version.			
	Action time	N/A				
War	ning setting parameter	N/A				
	Reset method	Manual reset				
	Reset condition	Immediately reset				
	Record	N/A				
	Cause		Corrective Actions			
	v parameters to the new e version.	SE2: In this stage, the copied data has been transmitted to the Slave. The Slave compares and processes the copied data, and then saves the data to the Data ROM. During the process, the data error (should be attribution error) may occur, or the data cannot be saved to EEPROM. At this time, the warning occurs.  It is suggested to check the status of Data ROM and remove the error causes first.  If you cannot clear the error, please contact Delta.				
Malfunc	tion caused by interference	Verify the wiring and	grounding of the main circuit, control circuit and the ti-interference performance.			

ID No.	Display on LCM Keypad	Warning Name	Description			
9	Warning  oH1  Over heat 1 warn	IGBT over-heating warning (oH1)	The AC motor drive detects over-heating of IGBT, and over the protection level of oH1 warning. (When Pr. 06-15 is higher than the IGBT over-heating level, the drive shows oH1 error without displaying oH1 warning.)			
		Action and	Reset			
	Action level	Pr. 06-15				
	Action time	value.	when IGBT temperature is higher than Pr. 06-15 setting			
War	ning setting parameter	N/A				
	Reset method	Auto-reset				
	Reset condition	The drive auto-resets w	when IGBT temperature is lower than oH1 warning level			
	Reset condition	minus (–) 5°C				
	Record	N/A				
Cause			Corrective Actions			
Check if the ambient temperature or temperature inside the cabinet is too high, or if there is obstruction in the ventilation hole of the control cabinet.		<ol> <li>Check the ambient temperature.</li> <li>Regularly inspect the ventilation hole of the control cabinet.</li> <li>Change the installed place if there are heating objects, such as braking resistors, in the surroundings.</li> <li>Install/ add cooling fan or air conditioner to lower the temperature inside the cabinet.</li> </ol>				
Check if there is any obstruction on the heat sink or if the fan is running						
Insufficient ventilation space		Increase ventilation space of the drive.				
	the drive matches the onded loading	<ol> <li>Decrease loading.</li> <li>Decrease the carrier.</li> <li>Replace with a drive with larger capacity.</li> </ol>				
	e has run 100% or more of d output for a long time	Replace with a drive wit	th larger capacity.			

ID No. Display on LCM Keypad	Warning Name	Description			
Warning  oH2 Over heat 2 warn	Capacitor over-heat warning (oH2)	The drive has detected over heat of the capacitor			
	Action and	Reset			
Action level	oH2 error level minus (-	-) 5°C			
Action time	The oH2 warning occu warning level	rs when the capacitor temperature is higher than oH2			
Warning setting parameter	N/A				
Reset method	Auto-reset				
Reset condition	The drive auto-resets when the capacitor temperature is lower than oH2 error level minus (–) 10°C				
Record	N/A				
Cause	Corrective Actions				
Check if the ambient temperature or temperature inside the cabinet is too high, or if there is obstruction in the ventilation hole of the control cabinet.	<ol> <li>Check the ambient temperature.</li> <li>Regularly inspect the ventilation hole of the control cabinet.</li> <li>Change the installed place if there are heating objects, such as braking resistors, in the surroundings.</li> <li>Install/ add cooling fan or air conditioner to lower the temperature inside the cabinet.</li> </ol>				
Check if there is any obstruction on the heat sink or if the fan is running					
Insufficient ventilation space	Increase ventilation spa	ce of the drive.			
Check if the drive matches the corresponded loading	<ol> <li>Decrease loading.</li> <li>Decrease the carrier.</li> <li>Replace with a drive with larger capacity.</li> </ol>				
The drive has run 100% or more of the rated output for a long time	Replace with a drive with larger capacity.				
Unstable power	Install reactor(s).				
The load changes frequently	Reduce the changes of	the load.			

oH1/ oH2 warning level

Model	oH1	oH2	oH warning oH1 warning = (Pr.06-15)
VFD007C23A			
VFD015C23A		95	
VFD022C23A			
VFD037C23A		100	7
VFD055C23A			7
VFD075C23A		80	
VFD110C23A			
VFD150C23A	440		oH1 Warning = oH1 – 5
VFD185C23A	110	75	oH2 Warning = oH2 – 5
VFD220C23A			_
VFD300C23A/E		65	
VFD370C23A/E			
VFD450C23A/E			
VFD550C23A/E			
VFD750C23A/E			
VFD900C23A/E			
VFD007C43A/E		0.5	
VFD015C43A/E		95	
VFD022C43A/E		100	114 100
VFD037C43A/E	110	105	oH1 Warning = oH1 – 5
VFD040C43A/E			oH2 Warning = oH2 – 5
VFD055C43A/E		100	
VFD075C43A/E		80	

Model	oH1	oH2	oH warning oH1 warning = (Pr.06-15)
VFD110C43A/E		80	, ,
VFD150C43A/E		00	
VFD185C43A/E			
VFD220C43A/E		85	
VFD300C43A/E			
VFD370C43S/U			
VFD450C43S/U			
VFD550C43A/E			
VFD750C43A/E		65	oH1 Warning = oH1 – 5
VFD900C43A/E	110	0.5	oH2 Warning = oH2 - 5
VFD1100C43A/E			oriz warring – oriz – 5
VFD1320C43A/E			
VFD1600C43A/E			
VFD1850C43A/E			
VFD2200C43A/E			
VFD2800C43A/E		70	
VFD3150C43A/E		70	
VFD3550C43A/E			
VFD4500C43A/E			
VFD015C53A	100 105	85	old Marning = old = 5
VFD022C53A			
VFD037C53A			
VFD055C53A			oH1 Warning = oH1 – 5 oH2 Warning = oH2 – 5
VFD075C53A	100	70	oriz warring – oriz – 5
VFD110C53A		70	
VFD150C53A			
VFD185C63B			
VFD220C63B	00	0.5	
VFD300C63B	90	85	
VFD370C63B			
VFD450C63B	100		
VFD550C63B	100		
VFD750C63B			
VFD900C63B		65	
VFD1100C63B		00	oH1 Warning = oH1 – 5
VFD1320C63B			oH2 Warning = oH2 – 5
VFD1600C63B			
VFD2000C63B	110		
VFD2500C63B	110		
VFD3150C63B			
VFD4000C63B		70	
VFD4500C63B		'0	
VFD5600C63B			
VFD6300C63B			

ID No.	Display on LCM Keypad	Warning Name	Description		
11	Warning PID PID FBK Error	PID feedback error (PID)	PID feedback loss (warning for analog feedback signal; works only when PID enables)		
		Action an	d Reset		
	Action level	When the analog input	is lower than 4mA (only detects analog input of 4–20mA)		
	Action time	Pr. 08-08			
Warning setting parameter		Pr. 08-09 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: Warn and operate at last frequency			
Reset method		Auto  "Warning" occurs when Pr. 08-09=0 or 3. The "Warning" automatically clears when the feedback signal is larger than 4mA.  Manual "Error" occurs when Pr. 08-09=1 or 2. You must reset manually.			
	Reset condition	Immediately reset	,		
	Record	Records when Pr. 08-09=1 or 2 ("Error").  Does not record when Pr. 08-09=3 ("Warning").			
	Cause	Corrective Actions			
Loose o wiring	.oose or broken PID feedback Tighten the terminals again. viring Replace with a new cable.				
Feedbad	ck device malfunction	Replace with a new feedback device.			
Hardware error If the PID error still occurs after checking all the wiring, return to the repair.			curs after checking all the wiring, return to the factory for		

	<u> </u>				
ID No.	D No. Display on LCM Keypad		ing Name	Description	
12	Warning AC ANL Analog loss		og signal loss (AnL)	Analog input current loss (including all analog 4–20mA signals)	
			Action and	d Reset	
	Action level	When the	analog input	is lower than 4mA (only detects analog input 4–20mA)	
	Action time	Immediat	ely act		
Warning setting parameter		Pr. 03-19 0: Disable 1: Continue operation at the last frequency (warning, keypad displays ANL) 2: Decelerate to 0Hz (warning, keypad displays ANL) 3: Stop immediately and display ACE			
	Reset method	Auto "Warning" occurs when Pr. 03-19=1 or 2. The "Warning automatically clears when the analog input signal is larger than 4mA.  Manual "Error" occurs when Pr. 03-19=3. You must reset manually.			
	Reset condition	Immediately reset			
	Record			Pr 03_10=1 or 2 ("\Marning")	
	Cause	Does not record when Pr. 03-19=1 or 2 ("Warning").  Corrective Actions			
Loose or broken ACI wiring		Tighten the terminals again. Replace with a new cable.			
External device error Replace new device.					
Hardwar	re error	If the AnL error still occurs after checking all the wiring, return to the factory for repair.			

ID No.	Display on LCM Keypad	Warr	ning Name	Description
13	Warning  uC  Under Current	Under current (uC)		Low current
			Action and	Reset
	Action level	Pr. 06-71		
	Action time	Pr. 06-72	) 	
Warning setting parameter		Pr. 06-73 0: No function 1: Warn and coast to stop 2: Warn and ramp to stop by 2 <sup>nd</sup> deceleration time 3: Warn and operation continue		
Reset method		Auto "Warning" occurs when Pr. 06-73=3. The "Warning" automatically clears when the output current is > (Pr. 06-71+0.1A).  Manual "Error" occurs when Pr. 06-73=1 and 2. You must reset manually.		
	Reset condition	Immediately reset		
	Record	Does not record when Pr. 06-73=3 and uC displays "Warning".		
	Cause	Corrective Actions		
Broken motor cable		Exclude the connection issue of the motor and its load.		
Imprope protection	r setting for the low current on	Set the proper settings for Pr. 06-71, Pr. 06-72 and Pr. 06-73.		
Low load	d	Check the loading status.  Make sure the loading matches the motor capacity.		

ID No.	Display on LCM Keypad	Warning Name	Description
15	Warning PGFB PG FBK Warn	PG feedback warning (PGFb)	PG feedback error warning
		Action and	d Reset
	Action level	Motor runs in a reverse	direction to the direction of frequency command
	Action time	Pr. 10-09	
Warning setting parameter		Pr. 10-08=0 0: Warn and operation continue 1: Warn and ramp to stop 2: Warn and coast to stop	
	Reset method	Auto-reset	
	Reset condition	"Warning" automatically	clears when the drive stops
	Record	N/A	
	Cause		Corrective Actions
Incorrect encoder parameter setting		Reset encoder parameter (Pr. 10-02).	
Check if the connection of encoder is loss		Wiring again.	
Broken PG card or PG encoder		Replace with a new PG	card or encoder.
Malfunc	tion caused by interference	Verify wiring of the corprevent interference.	ntrol circuit, and wiring/grounding of the main circuit to

ID No.	Display on LCM Keypad	Warning Name	Description	
17	Warning oSPD Over Speed Warn	Over speed warning (oSPd)	Over speed warning	
		Action and	d Reset	
	Action level	The encoder feedback	speed > Pr. 10-10	
	Action time	Pr. 10-11		
\\/or	ning setting parameter	Pr. 10-12=0		
vvai	filing setting parameter	0: Warn and keep operation		
	Reset method	"Warning" automatically	clears when the drive stops	
	Reset condition	"Warning" automatically	clears when the drive stops	
Record		N/A		
Cause			Corrective Actions	
	r setting for Pr. 10-25 FOC lth of speed observer	Decrease setting value	for Pr. 10-25.	
Improper bandwidth setting for ASR speed controller		Increase the bandwidth setting for ASR speed controller.		
Incorrec	Incorrect motor parameter setting Reset motor parameter and run parameter tuning.		and run parameter tuning.	
Malfunct	iian calleed ny interterencel	Verify wiring of the cor prevent interference.	ntrol circuit, and wiring/grounding of the main circuit to	

ID No.	Display on LCM Keypad	Warning Name	Description	
18	Warning  dAvE  Deviation Warn	Deviation Warning (dAvE)	Over speed deviation warning	
		Action and	Reset	
	Action level	Pr. 10-13		
	Action time	Pr. 10-14		
Warı	ning setting parameter	Pr. 10-15=0		
vvaii		0: Warn and keep opera		
	Reset method		clears when the drive stops	
	Reset condition	After the drive stops		
	Record	N/A		
Cause			Corrective Actions	
Improper parameter setting for the slip error		Reset proper value for Pr. 10-13 and Pr. 10-14.		
Improper setting for ASR parameter and acceleration/ deceleration		Reset ASR parameters. Set proper accel./ decel. time.		
Accel./ D	ecel. time is too short	Reset proper accel./ decel. time.		
Motor loc	cked	Remove the causes of motor locked.		
Mechanical brake is not released		Check the active timing of the system.		
torque lir	Incorrect parameter setting of torque limit (Pr. 06-12, Pr. 11-17–20)  Adjust to proper setting value.		value.	
Malfunct	ion caused by interference	Verify wiring of the corprevent interference.	ntrol circuit, and wiring/grounding of the main circuit to	

ID No.	Display on LCM Keypad	Warning Name	Description	
19	Warning PHL Phase Loss	Phase loss (PHL)	Input phase loss warning	
		Action and	Reset	
	Action level	One of the phases outputs less than Pr. 06-47		
	Action time	Pr. 06-46		
War	ning setting parameter	Pr. 06-45=0 0: Warn and keep opera	ation	
	Reset method		clears when the drive stops	
	Reset condition	After the drive stops		
	Record	N/A		
	Cause		Corrective Actions	
Phase loss of the input power		Verify wiring of the main circuit.		
Single phase power input on a three-phase model		Use the model with voltage that matches the power.		
The power voltage has changed		broken.	rcuit works well, check if the MC of the main circuit is erifying the power is normal. If PHL still occurs, return to	
Loose wiring terminal of input power		Tighten the terminal screws with the torque listed in the user manual.		
Check if the input cable of 3-phase power is broken		Make sure the wiring is correct. Replace the broken part of the cable.		
The volt	age of input power has			
Unbalar input po	ice three-phase of the wer	Check the status of 3-phase power.		

ID No.	Display on LCM Keypad	Warning Name	Description
20	Warning ot 1 Over Torque 1	Over-torque 1 (ot1)	Over-torque 1 warning
		Action and	d Reset
	Action level	Pr. 06-07	
	Action time	Pr. 06-08	
Warning setting parameter		<ul> <li>Pr. 06-06=1 or 3</li> <li>0: No function</li> <li>1: Continue operation after over-torque detection during constant speed operation</li> <li>2: Stop after over-torque detection during constant speed operation</li> <li>3: Continue operation after over-torque detection during RUN</li> <li>4: Stop after over-torque detection during RUN</li> </ul>	
	Reset method		Pr. 06-07 – 5%), the Ot1 warning automatically clears
	Reset condition		Pr. 06-07 – 5%), the Ot1 warning automatically clears
	Record	N/A	
	Cause		Corrective Actions
	parameter setting	Configure the settings for	or Pr. 06-07 and Pr. 06-08 again.
	cal error (e.g. mechanical to over-torque)	Remove the causes of	malfunction.
The load	is too large	Decrease the loading. Replace with a motor with larger capacity.	
Accel./ E	Decel. time and working too short	Increase the setting values for Pr. 01-12–01-19 (accel./ decel. time)	
V/F volta	Adjust the settings for Pr. 01-01–01-08 (V/F curve), especially the setting for the mid-point voltage (if the mid-point voltage is set too small, the capacity decreases at low-speed).		ge (if the mid-point voltage is set too small, the load
The mot	or capacity is too small	Replace with a motor w	ith larger capacity.
operation		Decrease the loading during low-speed operation. Increase the motor capacity.	
large .	ue compensation is too		pensation value (Pr. 07-26 torque compensation gain) decreases and the motor does not stall.
the spee	Improper parameter settings for the speed tracking function (including restart after momentary power loss and restart after fault)  Improper parameter settings for speed tracking.  Correct the parameter settings for speed tracking.  Start the speed tracking function.  Adjust the maximum current for Pr. 07-09 speed tracking.		function.

ID No.	Display on LCM Keypad	Warning Name	Description	
21	Warning ot2 Over Torque 2	Over-torque (ot2)	Over-torque 2 warning	
		Action and	d Reset	
	Action level	Pr. 06-10		
	Action time	Pr. 06-11		
Warning setting parameter		Pr. 06-09=1 or 3 0: No function 1: Continue operation after over-torque detection during constant speed operation 2: Stop after over-torque detection during constant speed operation 3: Continue operation after over-torque detection during RUN 4: Stop after over-torque detection during RUN		
	Reset method	When output current < (Pr. 06-10 – 5%), the Ot2 warning automatically clears		
	Reset condition	When output current < (Pr. 06-10 – 5%), the Ot2 warning automatically clears		
	Record	N/A		
Cause			Corrective Actions	
Incorrect parameter setting		Configure the settings f	or Pr. 06-10 and Pr. 06-11	
Mechanical error (e.g. mechanical lock due to over-torque)		Remove the causes of malfunction.		
The load	d is too large	Decrease the loading. Replace with a motor with larger capacity.		
	Decel. time and working too short	_	ues for Pr. 01-12–01-19 (accel./ decel. time)	
V/F volta	age is too high		lotor 2, Pr. 01-35–01-42), especially the setting value for the mid-point voltage is set too small, the load capacity l).	
The mot	tor capacity is too small	Replace with a motor w	ith larger capacity.	
operation The toron	ue compensation is too	Decrease the loading during low-speed operation. Increase the motor capacity.  Adjust the torque compensation value (Pr. 07-26 torque compensation gain) until the output current decreases and the motor does not stall.		
the spec	er parameter settings for ed tracking function ng restart after momentary loss and restart after fault)	Start speed tracking fun	settings for speed tracking. action. rrent for Pr. 07-09 speed tracking.	

ID No. Display on LCM Keypad	Warning Name	Description
Warning oH3 Motor Over Heat	Motor over-heating (oH3) PTC	Motor over-heating warning. The AC motor drive detects the temperature inside the motor is too high
	Action and	
Action level		C input level > Pr. 06-30 (default=50%)
Action time	Immediately act	00
Warning setting parameter	Error treatment: Pr. 06-0: Warn and keep opera 1: Warn and ramp to sto 2: Warn and coast to sto 3: No warning	ating op op
	When Pr. 06-29=0 and	d when the temperature is $\leq$ Pr. 06-30 level, the oH3
	warning automatically c When Pr. 06-29=0 ("Wa	lears. rning"), it automatically resets.
Reset method		d3 displays "Warning". When the temperature is $\leq$ Pr. arning automatically clears.
Reset condition	When the temperature clears.	e is $\leq$ Pr. 06-30 level, the oH3 warning automatically
Record	N/A	
Cause		Corrective Actions
Motor locked	Clear the motor lock status.	
The load is too large	Decrease the loading. Replace with a motor with larger capacity.	
Ambien temperature is too high	Change the installed place if there are heating devices in the surroundings.  Install/ add cooling fan or air conditioner to lower the ambient temperature.	
Motor cooling system error	Check the cooling syste	em to make it work normally.
Motor fan error	Replace the fan.	
Operates at low-speed too long	Decrease low-speed op Change to dedicated m Increase the motor capa	otor for the drive.
Accel./ Decel. time and working cycle is too short	Increase setting values	for Pr. 01-12-01-19 (accel./ decel. time).
V/F voltage is too high	Adjust settings for Pr. 01-01–01-08 (V/F curve), especially the setting value for the mid-point voltage (if the mid-point voltage is set too small, the load capacity decreases at low-speed).	
Check if the motor rated current matches the motor nameplate	Configure the correct rated current value of the motor again.	
Check if the PTC is properly set and wired	Check the connection between PTC thermistor resistor and the heat protection.	
Check if the setting for stall prevention is correct	Set the stall prevention to the proper value.	
	Replace the motor.	
Unbalance three-phase impedance of the motor	Replace the motor.	

ID No. Display on LCM Keypad	Warning Name	Description	
22_2 Warning oH3 Motor Over Heat	Motor over-heating (oH3) PT100	Motor over-heating warning. The AC motor drive detects the temperature inside the motor is too high.	
A otion lovel	Action and		
Action level Action time	Immediately act	PT100 input level > Pr. 06-57 (default=7V)	
Warning setting parameter	Error treatment: Pr. 06-: 0: Warn and keep opera 1: Warn and ramp to sto 2: Warn and coast to sto 3: No warning	ating op op	
	warning automatically of the temperature is be	d when the temperature is < Pr. 06-56 level, the oH3 elears.  etween Pr. 06-56 and Pr. 06-57, the frequency outputs ing frequency setting for Pr. 06-58.	
Reset method	•	d3 displays "Warning". When the temperature is < Pr. arning automatically clears.	
Reset condition	When the temperature clears.	e is < Pr. 06-56 level, the oH3 warning automatically	
Record	N/A		
Cause		Corrective Actions	
Motor locked	Clear the motor lock sta	atus.	
The load is too large	Decrease loading. Replace with a motor w		
Ambien temperature is too high		ace if there are heating devices in the surroundings. or air conditioner to lower the ambient temperature.	
Motor cooling system error	Check the cooling syste	em to make it work normally.	
Motor fan error	Replace the fan.		
Operates at low-speed too long	Decrease low-speed op Change to dedicated m Increase the motor capa	otor for the drive.	
Accel./ Decel. time and working cycle is too short	Increase the setting val	ues for Pr. 01-12–01-19 (accel./ decel. time).	
V/F voltage is too high	Adjust the settings for Pr. 01-01-08 (V/F curve), especially the setting		
Check if the motor rated current matches the motor nameplate			
Check if the PT100 is properly set and wired Check the connection between PT100 thermistor resistor and the protection.		n between PT100 thermistor resistor and the heat	
Check if the setting for stall prevention is correct  Set the stall prevention to the proper value.		to the proper value.	
Unbalance three-phase impedance of the motor Replace the motor.			
Harmonics is too high	Use remedies to reduce	harmonics	

ID No.	Display on LCM Keypad	Warning Name	Description
24	Warning  oSL  Over Slip Warn	Over slip warning (oSL)	Over slip warning. By using the maximum slip (Pr. 10-29) as the base, when the drive outputs at constant speed, and the F>H or F <h 07-29="Pr." 07-30="" 10-29.<="" 100%="" and="" exceeds="" level="" pr.="" setting="" td="" time,=""></h>
		Action and	
	Action level	When the drive output 07-29 level	s at constant speed, and F>H or F <h exceeds="" pr.<="" td="" the=""></h>
	Action time	Pr. 07-30	
Warning setting parameter		Pr. 07-31=0 Warning 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning	
Reset method		When Pr. 07-31=0 and when the drive outputs at constant speed, and F>H or F <h 07-29="" automatically="" clears.<="" exceeds="" level,="" longer="" no="" osl="" pr.="" td="" the="" warning=""></h>	
	Reset condition	N/A	
	Record	N/A	
	Cause	Corrective Actions	
Check if the motor parameter is correct		Check the motor parameter.	
The load	l is too large	Decrease the loading.	
	k if the settings for Pr. 07-29, 7-30 and Pr. 10-29 are Check the parameter settings for oSL protection.		ettings for oSL protection.

ID No.	Display on LCM Keypad	Warning Name	Description	
25	Warning tUn Auto tuning	Auto tuning (tUn)	Parameter auto-tuning is processing. When running auto-tuning, the keypad displays "tUn".	
Action and Reset			Reset	
Action level		When running Pr. 05-00 motor parameter auto-tuning, the keypad displays "tUn".		
Action time		N/A		
War	ning setting parameter	N/A		
Reset method		When auto-tuning is find clears.	nished and no error occurs, the warning automatically	
Reset condition		When auto-tuning is finished and no error occurs.		
Record		N/A		
Cause			Corrective Actions	
The motor parameter is running auto-tuning		When the auto-tuning is	s finished, the warning automatically clears.	

ID No.	Display on LCM Keypad	Warning Name	Description	
28	Warning OPHL Output PHL Warn	Output phase loss (OPHL)	Output phase loss	
		Action and	Reset	
	Action level	Pr. 06-47		
	Action time	N/A		
Warning setting parameter		Pr. 06-45 0: Warn and keep operating 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning		
	Reset method	If Pr. 06-45 is set to 0, the OPHL warning automatically clears after the drive stops.		
	Reset condition	N/A		
	Record	N/A		
	Cause		Corrective Actions	
Unbalanced three-phase impedance of the motor Replace the motor.				
Check if	the wiring is incorrect	Check the cable. Replace the cable.		
_	the motor is a hase motor	Choose a three-phase motor.		
Check if broken	the current sensor is	Check if the control board cable is loose. If yes, reconnect the cable and run the drive to test. If the error still occurs, return to the factory for repair. Check if the three-phase current is balanced with a current clamp meter. If the current is balanced and the OPHL error still shows on the display, return to the factory for repair.		
If capaci than the	ity of the drive is larger motor	Choose the matches ca	pacity of the drive and motor.	

ID No.	Display on LCM Keypad	Warning Name	Description	
30	Warning SE3 Copy Model Err 3	Copy model error 3 (SE3)	Keypad COPY error 3: copy model error	
		Action and	Reset	
		"SE3" warning occurs when different drive identity codes are found during copying parameters.		
	Action time	Immediately act when t	he error is detected	
War	rning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	N/A		
Record		N/A		
Cause			Corrective Actions	
Keypad copy between different power range drives		It is mainly to prevent p	arameter copies between different HP/models.	

ID No.	Display on LCM Keypad	Warning Name	Description	
36	Warning CGdn Guarding T-out	CANopen guarding time-out (CGdn)	CANopen guarding time-out 1	
		Action and	d Reset	
		When CANopen Node	e Guarding detects that one of the slaves does not	
	Action level	response, the CGdn err		
		The upper unit sets factor and time during configuration.		
	Action time	The time that upper unit sets during configuration		
Warning setting parameter		N/A		
Reset method		Manual reset		
Reset condition		The upper unit sends a	reset package to clear this fault.	
	Record	N/A		
	Cause	Corrective Actions		
The guarding time is too short, or less detection times		Increase the guarding ti	ime (Index 100C) and detection times.	
1. Verify the wiring and grounding of the communication circuit recommended to separate the communication circuit from the main or wire in 90 degree for effective anti-interference performance.  2. Make sure the communication circuit is wired in series.  3. Use CANopen cable or add terminating resistance.		eparate the communication circuit from the main circuit, e for effective anti-interference performance. munication circuit is wired in series.		

ID No.	Display on LCM Keypad	Warning Name	Description	
37	Warning CHbn Heartbeat T-out	CANopen heartbeat error (CHbn)	CANopen heartbeat error	
		Action and	Reset	
Action level		CHbn error shows. The upper unit sets the configuration.	eat detects that one of the slaves does not response, the ne confirming time of producer and consumer during	
	Action time	The upper unit sets the confirming time of producer and consumer during configuration.		
Warning setting parameter		N/A		
Reset method		Manual reset		
	Reset condition		reset package to clear this fault	
	Record	When Pr. 00-21≠3, CHb	on is a "Warning", and the warning is not recorded	
	Cause		Corrective Actions	
The hear	rtbeat time is too short	Increase heartbeat time (Index 1016)		
1. Verify the wiring and grounding of the communication circuit recommended to separate the communication circuit from the ma or wire in 90 degree for effective anti-interference performance.  2. Make sure the communication circuit is wired in series.  3. Use CANopen cable or add terminating resistance.		eparate the communication circuit from the main circuit, e for effective anti-interference performance. munication circuit is wired in series.		
	Communication cable is broken or bad connected  Check or replace the communication cable.			

ID No.	Display on LCM Keypad	Warning Name	Description	
39	Warning CbFn Can Bus Off	CANopen bus off error (CbFn)	CANopen BUS off error	
		Action and	Reset	
			pen card is not installed, CbFn fault will occur.	
Action level		When the master received wrong communication package, CbFn fault will occur.  Software Too much interference on BUS When the CAN_H and CAN_L communication cable is short, the master receives wrong package, and CbFn fault occurs.		
Action time		Immediately act when the fault is detected		
Warning setting parameter		N/A		
Reset method		Manual Reset		
Reset condition		Cycle the power		
Record		When Pr. 00-21≠3, CbFn is a "Warning", and the warning is not recorded		
	Cause		Corrective Actions	
Check if installed	the CANopen card is	Make sure the CANope	n card is installed.	
Check if the CANopen speed is correct Reset CANopen speed (Pr. 09-37)		(Pr. 09-37)		
1. Verify the wiring and grounding of the communication circuit recommended to separate the communication circuit from the main or wire in 90 degree for effective anti-interference performance.  2. Make sure the communication circuit is wired in series.  3. Use CANopen cable or add terminating resistance.		eparate the communication circuit from the main circuit, for effective anti-interference performance. munication circuit is wired in series.		
Communication cable is broken or		Check or replace the co		

ID No.	Display on LCM Keypad	Warning Name	Description	
40	Warning Cldn CAN/S ldx exceed	CANopen index error (Cldn)	CANopen Index error	
		Action and	Reset	
Action level		CANopen communication Index error		
Action time		Immediately act when the fault is detected		
Warning setting parameter		N/A		
	Reset method	Manual Reset		
	Reset condition	Upper unit sends a reset package to clear this fault		
	Record	When Pr. 00-21≠3, Cldn is a "Warning", and the warning is not recorded		
Cause		Corrective Actions		
Incorrect setting of CANopen index		Reset CANopen Index (Pr. 00-02=7)		

ID No.	Display on LCM Keypad	Warning Name	Description	
41	Warning CAdn CAN/S Addres set	CANopen station address error (CAdn)	CANopen station address error (only supports 1–127)	
		Action and	d Reset	
Action level		CANopen station address error		
Action time		Immediately act when the fault is detected		
Warning setting parameter		N/A		
	Reset method	Manual Reset		
	Reset condition	Pr. 00-02=7		
	Record	When Pr. 00-21≠3, CAdn is a "Warning", and the warning is not recorded		
Cause		Corrective Actions		
Incorrect setting of CANopen station address		<ol> <li>Disable CANopen (Pr. 09-36=0)</li> <li>Reset CANopen (Pr. 00-02=7)</li> <li>Reset CANopen station address (Pr. 09-36)</li> </ol>		

ID No.	Display on LCM Keypad	Warning Name	Description	
42	Warning  CFrn  CAN/S FRAM fail	CANopen memory error (CFrn)	CANopen memory error	
Action and Reset			d Reset	
Action level		When the user update firmware version of the control board, the FRAM internal data will not be changed, then CFrn fault will occur.		
Action time		Immediately act when the fault is detected		
Warning setting parameter		N/A		
	Reset method	Manual Reset		
	Reset condition	Pr. 00-02=7		
	Record	When Pr. 00-21≠3, CFrn is a "Warning", and the warning is not recorded		
Cause		Corrective Actions		
CANopen internal memory error		<ol> <li>Disable CANopen (</li> <li>Reset CANopen (P</li> <li>Reset CANopen sta</li> </ol>		

ID No.	Display on LCM Keypad	Warning Name	Description	
43	Warning CSdn SDO T-out	CANopen SDO time-out (CSdn)	SDO transmission time-out (only shows on master station)	
		Action and	Reset	
	Action level	When the CANopen master transmits SDO command, and the Slave response "time-out", CSdn warning will occur.		
	Action time	Immediately act when the	ne fault is detected	
War	ning setting parameter	N/A		
	Reset method	When the master resends a SDO command and receives the response, the warning automatically clears.		
Reset condition		N/A		
Record		N/A		
Cause			Corrective Actions	
Slave is not connected		Connect slave and CAN	lopen BUS.	
The synchronize cycle is set too short		Increase the synchronization time (Index 1006)		
Malfunction caused by interference		recommended to so or wire in 90 degree 2. Make sure the com	and grounding of the communication circuit. It is eparate the communication circuit from the main circuit, e for effective anti-interference performance. munication circuit is wired in series. e or add terminating resistance.	
Disconnection or bad connection of the communication cable		Check the status of the	cable, or replace the cable.	

ID No.	Display on LCM Keypad	Warning Name	Description	
44	Warning CSbn Buf Overflow	CANopen SDO receives register overflow (CSbn)	CANopen SDO receives register overflow	
		Action and	d Reset	
	Action level	The upper unit sends too much SDO and causes buffer overflow		
Action time		Immediately act when the fault is detected		
Warning setting parameter		N/A		
	Reset method	The upper unit sends a reset package to clear the warning.		
	Reset condition	N/A	-	
	Record	N/A		
Cause		Corrective Actions		
Too mud	ch SDO from the upper unit	Check if the master se sends SDO command a	ends too much SDO command. Make sure the master according to the command format.	

ID No.	Display on LCM Keypad	Warning Name	Description	
46	Warning CPtn Error Protocol	CANopen format error (CPtn)	CANopen protocol format error	
		Action and	d Reset	
Action level		The slave detects that data from the upper unit cannot be recognized, and then shows CPtn warning		
Action time		Immediately displays w	hen the fault is detected	
War	ning setting parameter	N/A		
	Reset method	The upper unit sends a reset packet to clear the warning		
	Reset condition	N/A		
Record		N/A		
	Cause		Corrective Actions	
The upper unit sends incorrect communication packet		Make sure the master command format.	sends the packet based on CANopen DS301 standard	

ID No.	Display on LCM Keypad	Warning Name	Description	
47	Warning PLrA RTC Adjust	RTC adjust (PLrA)	PLC (RTC) is not adjusted	
		Action and	d Reset	
	Action level	When using RTC function for PLC program, and PLC detects unreasonable RTC time, PLrA warning displays.		
	Action time	Immediately displays when the second	hen the fault is detected	
Warr	ning setting parameter	N/A		
	Reset method	Auto Stops the PLC and runs again, the warning automatically clears		
	Reset method	Manual Manual reset to clear this warning		
Reset condition		Cycle the power		
Record		N/A		
Cause		Corrective Actions		
program, over 7 da not conn time, the the interr	sing RTC function for PLC, and the drive is power off ays or KPC-CC01 does ect to the drive for a long. RTC time is different with hal calculated time when ect the keypad to the drive.	1. Stop the PLC program and restart it. 2. Adjust the RTC time and cycle the power.		
KPC-CC RTC time	01 does not adjust the	Adjust the RTC time and cycle the power.		
PLC dete	ects unreasonable RTC	<ol> <li>Stop the PLC program and restart it.</li> <li>Cycle the power.</li> </ol>		
Replace with a new KPC-CC01		<ol> <li>Stop the PLC program and restart it.</li> <li>Cycle the power.</li> </ol>		

ID No.	Display on LCM Keypad	Warning Name	Description	
48	Warning PLiC InnerCOM error	InnerCOM error (PLiC)	InnerCOM error	
		Action and	d Reset	
	Action level	N/A		
	Action time	N/A		
War	ning setting parameter	N/A		
	Reset method	N/A		
	Reset condition	When InnerCOM is back to normal condition, the warning automatically clears		
	Record	N/A		
	Cause		Corrective Actions	
Communication cable is loose		Check the connection o	f the communication cable	
Verify the wiring and grounding of the communication circuit. It is rect to separate the communication circuit from the main circuit, or wire in Malfunction caused by interference for effective anti-interference performance. It recommended to install terminal resistor(s) on the first and the last communication circuit.		nication circuit from the main circuit, or wire in 90 degree ence performance.		

			<b>5</b>	
ID No.	Display on LCM Keypad	Warning Name	Description	
49	Warning PIrt Keypad RTC T-out	Keypad RTC time-out (PLrt)	PLC (RTC) error	
		Action and	d Reset	
	Action level	N/A		
	Action time	N/A		
War	ning setting parameter	N/A		
	Reset method	N/A		
	Reset condition	Cycle the power		
Record		N/A		
Cause		Corrective Actions		
KPC-CC01 is not connected to the control board while using the RTC function		Do not remove the KPC	C-CC01 keypad while using RTC function.	

ID No.	Display on LCM Keypad	Warning Name	Description
50	Warning PLod Opposite Defect	PLC opposite defect (PLod)	PLC download error warning
		Action and	d Reset
	Action level	During PLC downloading, the program source code detects incorrect address (e.g. the address exceeds the range), then the PLod warning shows.	
Action time		Immediately displays when the fault is detected	
Warning setting parameter		N/A	
	Reset method	Check if the program is not exist, the warning a	s correct and re-download the program. If the fault does utomatically clears.
	Reset condition	N/A	
Record		N/A	
Cause		Corrective Actions	
Incorrect component number is found when downloading the PLC program		Use the correct compor	nent number.

ID No.	Display on LCM Keypad	Warning Name	Description	
51	Warning PLSv Save mem defect	PLC save memory error (PLSv)	Data error during PLC operation	
		Action and	d Reset	
Action level		The program detects incorrect written address (e.g. the address has exceeds the range) during PLC operation, then the PLSv warning shows.		
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	N/A		
Reset method		Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.		
	Reset condition	N/A		
Record		N/A		
Cause		Corrective Actions		
An incorrect written address is detected during PLC operation		Make sure the write-in a	address is correct and re-download the program.	

ID No.	Display on LCM Keypad	Warning Name	Description
52	Warning PLdA Data defect	Data defect (PLdA)	Data error during PLC operation
		Action and	d Reset
	Action level	The program detects incorrect write-in address when translating the program source code, then PLSv warning acts.	
	Action time	Immediately displays when the fault is detected	
War	ning setting parameter	N/A	
	Reset method	Check if the program is not exist, the warning as	correct and re-download the program. If the fault does utomatically clears.
	Reset condition	N/A	
Record		N/A	
Cause		Corrective Actions	
During PLC operation, the external Modbus has written/read incorrect data to internal PLC program			transmits the correct command

ID No.	Display on LCM Keypad	Warning Name	Description	
53	Warning PLFn Function defect	Function defect (PLFn)	PLC download function code error	
		Action and	d Reset	
	Action level	The program detects incorrect command (unsupported command) during PLC downloading, then PLFn warning acts.		
Action time		Immediately displays when the fault is detected		
Warning setting parameter		N/A		
Reset method		Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.		
Reset condition		N/A		
Record		N/A		
Cause		Corrective Actions		
Unsupported command has used while downloading the program		Check if the firmware of	f the drive is the old version. If yes, please contact Delta.	

ID No.	Display on LCM Keypad	Warning Name	Description
54	Warning PLor Buf overflow	PLC buffer overflow (PLor)	PLC register overflow
		Action and	d Reset
	Action level		st command and the command exceeds the maximum , the PLor warning shows.
	Action time	Immediately displays when the fault is detected	
War	ning setting parameter	N/A	
	Reset method	Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.	
	Reset condition	N/A	
	Record	N/A	
Cause			Corrective Actions
	gram detects source code ring PLC operation	<ol> <li>Disable PLC</li> <li>Delete PLC prograr</li> <li>Enable PLC</li> <li>Re-download PLC  </li> </ol>	,

ID No.	Display on LCM Keypad	Warning Name	Description	
וט ויוט.	Display on Low Reypau	vvairiing ivaine	Description	
55	Warning PLFF Function defect	Function defect (PLFF)	Function code error during PLC operation	
		Action and	Reset	
Action level		The program detects incorrect command (unsupported command) during PLC operation, then PLFF warning shows.		
	Action time	Immediately displays w	hen the fault is detected	
War	rning setting parameter	NA		
Reset method		Check if the program is not exist, the warning a	s correct and re-download the program. If the fault does utomatically clears.	
	Reset condition	N/A		
Record		N/A		
Cause		Corrective Actions		
The PLC runs an incorrect command during operation			function and there is no program in the PLC, the PLFF a normal warning, please download the program.	

ID No.	Display on LCM Keypad	Warning Name	Description	
56	Warning PLSn Check sum error	Checksum error (PLSn)	PLC checksum error	
		Action and	d Reset	
	Action level	PLC checksum error is	detected after power on, then PLSn warning shows	
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	NA		
	Reset method	Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.		
	Reset condition	N/A	-	
	Record	N/A		
Cause			Corrective Actions	
The program detects checksum error during PLC operation		<ol> <li>Disable PLC</li> <li>Remove PLC programmer</li> <li>Enable PLC</li> <li>Re-download PLC programmer</li> </ol>	,	

ID No.	Display on LCM Keypad	Warning Name	Description	
57	Warning PLEd No end command	No end command (PLEd)	PLC end command is missing	
		Action and	d Reset	
	Action level	The "End" command is missing until the last command is executed, the PLEd warning shows		
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	NA		
	Reset method	Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.		
	Reset condition	N/A	į	
	Record	N/A		
Cause		Corrective Actions		
There is no "END" command during PLC operation		<ol> <li>Disable PLC</li> <li>Remove PLC progr</li> <li>Enable PLC</li> <li>Re-download PLC</li> </ol>	,	

ID No.	Display on LCM Keypad	Warning Name	Description	
58	Warning PLCr PLC MCR error	PLC MCR error (PLCr)	PLC MCR command error	
		Action and	d Reset	
	Action level		s detected during PLC operation, but there is no numand, then the PLCr warning shows.	
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	NA		
Reset method		Check if the program is not exist, the warning a	s correct and re-download the program. If the fault does utomatically clears.	
	Reset condition	N/A		
Record		N/A		
Cause			Corrective Actions	
		The MC command canr program, then re-downle	not be used continuously for 9 times. Check and reset the oad the program.	

ID No	Display on LCM Koynad	Marning Name	Description
ID No.	Display on LCM Keypad	Warning Name	Description
59	Warning PLdF Download fail	PLC download fail (PLdF)	PLC download fail
		Action and	d Reset
Action level		PLC download fail due to momentary power loss during the downloading, when power is ON again, PLdF warning shows.	
	Action time	Immediately displays w	hen the fault is detected
War	rning setting parameter	NA	
	Reset method	Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.	
	Reset condition	N/A	
Record		N/A	
Cause		Corrective Actions	
PLC dov	wnload is forced to stop, so gram write-in is incompleted	Check if there is any er	ror in the program and re-download the PLC program

ID No.	Display on LCM Keypad	Warning Name	Description	
60	Warning PLSF Scan time fail	PLC scan time fail (PLSF)	PLC scan time exceeds the maximum allowable time	
		Action and	d Reset	
	Action level	When the PLC scan time exceeds the maximum allowable time (400ms), PLSF warning shows.		
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	NA		
Reset method		Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.		
Reset condition		N/A		
Record		N/A		
Cause		Corrective Actions		
The PLC scan time exceeds the maximum allowable time (400ms)		Check if the source code is correct and re-download the program		

ID No.	Display on LCM Keypad	Warning Name	Description	
61	Warning PCGd CAN/M Guard err	CAN/M guarding error (PCGd)	CANopen Master guarding error	
		Action and	Reset	
	Action level	When CANopen Master response, the PCGd wa	r Node Guarding detects that one of the Slaves does not arning will display	
	Action time	Immediately displays wl	hen the fault is detected	
War	ning setting parameter	NA		
Reset method		Check if the program is correct and re-download the program. If the fault does not exist, the warning automatically clears.		
Reset condition		N/A		
Record		N/A		
Cause			Corrective Actions	
Slave is not connected or CANopen BUS cable is not connected		Connect the Slave and	CANopen BUS	
Malfunction caused by interference		separate the commodegree for effective  2. Make sure the commodern the c	ding of the communication circuit. It is recommended to nunication circuit from the main circuit, or wire in 90 anti-interference performance. munication circuit is wired in series. e or add terminating resistance.	
Communication cable is broken or bad connected		Check or replace the co	ommunication cable.	

ID No.	Display on LCM Keypad	Warning Name	Description	
62	Warning PCbF CAN/M bus off	CAN/M BUS off (PCbF)	CANopen Master BUS off	
		Action and	Reset	
Action level		off detection, or when displays.	ster detects error packets more than 255 during the BUS the CANopen card is not installed, the PCbF warning connected, the drive will not receive issues packet, and not display.	
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	NA		
	Reset method	Cycle the power		
	Reset condition	N/A		
	Record	N/A		
	Cause		Corrective Actions	
Malfunction caused by interference		separate the comr degree for effective 2. Make sure the com	ding of the communication circuit. It is recommended to nunication circuit from the main circuit, or wire in 90 anti-interference performance. munication circuit is wired in series. e or add terminating resistance.	
Communication cable is broken or bad connected  Check or replace the communication cable.		ommunication cable.		

ID No.	Display on LCM Keypad	Warning Name	Description
63	Warning PCnL CAN/M Node Lack	CAN/M node lack (PCnL)	CANopen Master node error
		Action and	d Reset
Action level		When the CANopen master configures different setting nodes from the actual nodes, the PCnL warning displays.	
	Action time	Immediately displays when the fault is detected	
Warning setting parameter		N/A	
Reset method		When connect BUS to the original slave, or change the configured node numbers to meet the actual node quantity, the warning automatically clears.	
	Reset condition	N/A	
	Record	N/A	
Cause		Corrective Actions	
		Connect BUS to the or meet the actual node qu	iginal slave, or change the configured node numbers to uantity
Communication cable is broken or bad connected		Check or replace the co	ommunication cable.

ID No.	Display on LCM Keypad	Warning Name	Description	
64	Warning PCCt CAN/M Cycle Time	CAN/M cycle time-out (PCCt)	CANopen Master cycle time-out	
		Action and	d Reset	
Action level		When the transmitted packet from CANopen master exceeds the maximum allowable quantity in a certain time, the PCCt warning displays.		
Action time		Immediately displays when the fault is detected		
Warning setting parameter		N/A		
Reset method		The warning automatically clears when changing the configuration and re-executing the program.		
	Reset condition	N/A		
	Record	N/A		
Cause		Corrective Actions		
When the transmitted packet from CANopen master exceeds the maximum allowable quantity in a certain time		Increase the time setting	g of D1090 synchronization cycle	

ID No.	Display on LCM Keypad	Warning Name	Description	
65	Warning PCSF CAN/M SDO over	CAN/M SDO over (PCSF)	CANopen Master SDO overflow	
		Action and	d Reset	
Action level		When the CANopen master transmits too much SDO that causes buffer overflow, the PCSF warning displays		
Action time		Immediately displays when the fault is detected		
War	ning setting parameter	N/A		
	Reset method	Cycle the power, or stop the PLC and run the PLC again		
Reset condition		N/A		
Record		N/A		
Cause		Corrective Actions		
Internal PLC transmits too much		The PLC program needs to confirm receiving the SDO feedback data before		
SDO at once		sending another SDO command.		

ID No.	Display on LCM Keypad	Warning Name	Description	
66	Warning PCSd CAN/M Sdo Tout	CAN/M SDO time-out (PCSd)	CANopen Master SDO time-out	
		Action and	d Reset	
Action level		When the CANopen master sends a SDO command, and the BUS is too busy to transmit the command, PCSd warning displays.		
	Action time	Immediately displays when the fault is detected		
Warning setting parameter		N/A		
	Reset method	The warning automatically clears when the SDO transmits normally.		
	Reset condition	N/A		
	Record	N/A		
Cause		Corrective Actions		
When the CANopen master transmits a SDO command, and does not receive feedback from the Slave within 1 sec.		Check if the Slave resp	onds within 1 second.	

ID No.	Display on LCM Keypad	Warning Name	Description	
67	Warning PCAd CAN/M Addres set	CAN/M address error (PCAd)	CANopen Master station address error	
		Action and	d Reset	
	Action level	When the CANopen master detects an incorrect or repeated station address from the Slave, the PCAd warning displays.		
	Action time	Immediately displays when the fault is detected		
War	ning setting parameter	N/A		
	Reset method	The warning automatic program again.	ally clears when reset the station address and run the	
	Reset condition	N/A		
	Record	N/A		
Cause		Corrective Actions		
When the CANopen master detects an incorrect or repeated station address from the Slave		Set the correct slave sta	ation address.	

ID No.	Display on LCM Keypad	Warning Name	Description	
68	Warning PCTo CAN/MT-Out		When the drive receives an incorrect packet, it means that there is interference or the command from the upper unit does not meet the CANopen command format.	
		Action and	Reset	
	Action level	N/A		
	Action time	Immediately acts when	receiving the command	
War	ning setting parameter	N/A		
Reset method		The warning automatically clears after receives another normal packet		
Reset condition		N/A		
	Record	N/A		
	Cause		Corrective Actions	
Malfunction caused by interference		<ol> <li>Verify wiring/grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.</li> <li>Make sure the communication circuit is wired in series.</li> <li>Use CANopen cable or add terminating resistance.</li> </ol>		
The command from the upper unit		Please contact Delta for	further confirmation.	

ID No.	Display on LCM Keypad	Warning Name	Description	
70	Warning  ECid  ExCom ID failed	ExCom ID fail (ECid)	Duplicate MAC ID error Node address setting error	
		Action and	d Reset	
	Action level	Duplicate setting of MAC ID  Node address setting error		
	Action time	N/A		
Warning setting parameter		N/A		
Reset method		Correct the setting and	cycle the power	
Reset condition		N/A		
	Record	N/A		
	Cause	Corrective Actions		
The setting address exceeds the range (0–63)		Check the address setting of the communication card (Pr. 09-70)		
The speed setting exceeds the range		Standard: 0–2, non-standard: 0–7		
	ress is duplicated with odes on the BUS	Reset the address		

ID No.	Display on LCM Keypad	Warning Name	Description	
71	Warning  ECLv  ExCom pwr loss	ExCom power loss (ECLv)	Low voltage of communication card	
		Action and	d Reset	
	Action level	The 5V power that drive	provides to communication card is to low	
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Re-power		
	Reset condition	N/A		
	Record	N/A		
	Cause		Corrective Actions	
The 5V power that drive provides to communication card is to low		<ol> <li>Switch the communication card to other C2000 drives and observe if there is ECLv warning shown. If yes, replace with a new communication card; if not, replace the drive.</li> <li>Use another communication card to test if the ECLv warning has shown as well. If not, replace the card; if yes, replace the drive.</li> </ol>		
The card is loose Make sure the communication card is well inserted.			ication card is well inserted.	

ID No.	Display on LCM Keypad	Warning Name	Description	
72	Warning  ECtt  ExCom Test Mode	ExCom test mode (ECtt)	Communication card is in the test mode	
Action and Reset				
Action level		Communication card is in the test mode		
Action time		Immediately acts		
War	rning setting parameter	N/A		
	Reset method	Cycle the power and enter the normal mode		
Reset condition		N/A		
Record		N/A		
Cause		Corrective Actions		
Communication command error		Cycle the power		

ID No.	Display on LCM Keypad	Warning Name	Description		
73	Warning  ECbF  ExCom Bus off	ExCom Bus off (ECbF)	The communication card detects too much errors in the BUS, then enters the BUS-OFF status and stop communicating		
		Action and	d Reset		
	Action level	When the drive detects	hen the drive detects BUS-off (for DeviceNet)		
	Action time	Immediately acts			
War	ning setting parameter	N/A			
	Reset method	Cycle the power			
	Reset condition	N/A			
	Record	N/A			
Cause		Corrective Actions			
Poor cor	nnection of the cable	Re-connect the cable			
Bad qua	lity of the cable	Replace the cable			

ID No.	Display on LCM Keypad	Warning Name Description				
74	Warning ECnP ExCom No power	ExCom no power (ECnP)	There is no power supply on the DeviceNet			
		Action and	d Reset			
	Action level	There is no power supply on the DeviceNet				
	Action time	Immediately acts				
War	ning setting parameter	N/A				
	Reset method	Re-power				
	Reset condition	N/A				
	Record	N/A				
Cause		Corrective Actions				
The drive detects that DeviceNet has no power		Check if the cable and power is normal. If yes, return to the factory for repair.				

ID No.	Display on LCM Keypad	Warning Name	Description		
75	Warning  ECFF  ExCom Facty def	ExCom factory defect (ECFF)	Factory default setting error		
		Action and	Reset		
	Action level	Factory default setting e	error		
	Action time	Immediately acts			
War	ning setting parameter	N/A			
	Reset method	Cycle the power			
	Reset condition	N/A			
Record		N/A			
	Cause	Corrective Actions			
Factory default setting error		Use DCISoft to reset to the default value.			

ID No.	Display on LCM Keypad	Warning Name	Description				
76	Warning ECiF ExCom Inner err	ExCom inner error (ECiF)	Serious internal error				
		Action and	d Reset				
	Action level	Internal memory saving error					
	Action time	Immediately acts					
War	ning setting parameter	N/A					
	Reset method	Cycle the power					
	Reset condition	N/A					
	Record	N/A					
	Cause	Corrective Actions					
Noise in	terference	Verify wiring of the control circuit, and wiring/grounding of the main circuit to prevent interference.  Cycle the power.					
The memory is broken  Reset to the default value and check if the error still exists. If yes, rep communication card.							

ID No.	Display on LCM Keypad	Warning Name Description					
77	Warning  ECio  ExCom IONet brk	ExCom IO Net break (ECio)	lO connection break off				
		Action and	d Reset				
	Action level	IO connection between the communication card and the master is broken off					
	Action time	Immediately acts					
War	ning setting parameter	N/A					
	Reset method	Manual reset					
	Reset condition	Immediately reset					
	Record	N/A					
·	Cause	Corrective Actions					
The cab	le is loose	Re-install the cable					
	t parameter setting for communication	Check the setting for master communication parameter					

ID No.	Display on LCM Keypad	Warning Name	Description		
78	Warning  ECPP  ExCom Pr data	ExCom Parameter data error (ECPP)	Profibus parameter data error		
		Action and	d Reset		
	Action level	N/A			
	Action time	N/A			
War	ning setting parameter	N/A			
	Reset method	Manual reset			
	Reset condition	Immediately reset			
	Record	N/A			
	Cause	Corrective Actions			
The GSI	D file is incorrect	Get the correct GSD file from the software			

ID No.	Display on LCM Keypad	Warning Name Description				
79	Warning  ECPi  ExCom Conf data	ExCom configuration data error (ECPi)	Profibus configuration data error			
		Action and	d Reset			
	Action level	N/A				
	Action time	N/A				
War	ning setting parameter	N/A				
	Reset method	Manual reset				
	Reset condition	Immediately reset				
	Record	N/A				
·	Cause	Corrective Actions				
The GSD file is incorrect		Get the correct GSD file from the software				

ID No.	Display on LCM Keypad	Warning Name Description					
80	Warning  ECEF  ExCom Link fail	Ethernet link fail (ECEF)  Ethernet cable is not connected					
		Action and	Reset				
	Action level	Hardware detection					
	Action time	Immediately acts					
War	ning setting parameter	N/A					
	Reset method	Manual reset					
	Reset condition	N/A					
	Record	N/A					
Cause			Corrective Actions				
Ethernet cable is loose		Re-connect the cable					
Bad quality of Ethernet cable		Replace the cable					

ID No.	Display on LCM Keypad	Warning Name	Varning Name Description				
81	Warning  ECto  ExCom Inr T-out	Communication time-out (ECto)	Communication time-out for communication card at the upper unit				
		Action and	d Reset				
	Action level	N/A					
	Action time	N/A					
War	ning setting parameter	N/A					
	Reset method	N/A					
	Reset condition	CMC-EC01: auto resets normal	s when the communication with the upper unit is back to				
	Record	N/A					
	Cause	Corrective Actions					
	nication card is not ed with the upper unit	Check if the connection	Check if the connection of the communication cable is correct				
Communication error of the upper unit Check if the communication of the upper unit is normal							

ID No.	Display on LCM Keypad	Warning Name	Description			
82	Warning  ECCS  ExCom Inr CRC	Checksum error (ECCS)	Checksum error for communication card and the drive			
		Action and	d Reset			
	Action level	Software detection				
	Action time	N/A				
War	ning setting parameter	N/A				
	Reset method	Manual reset				
	Reset condition	Immediately resets				
	Record	N/A				
Cause		Corrective Actions				
Noise interference		Verify wiring of the cor prevent interference.	ntrol circuit, and wiring/grounding of the main circuit to			

ID No.	Display on LCM Keypad	Warning Name	Description		
83	Warning  ECrF  ExCom Rtn def	Return defect (ECrF)	Communication card returns to the default setting		
		Action and	Reset		
	Action level	Communication card returns to the default setting			
	Action time	N/A			
War	ning setting parameter	N/A			
	Reset method	Manual reset			
	Reset condition	Immediately resets			
	Record	N/A			
	Cause	Corrective Actions			
Communication card is returning to default setting		No actions.			

ID No.	Display on LCM Keypad	Warning Name			Desc	ription	
84	Warning  ECo0  ExCom MTCP over	Modbus TCP over (Eco0)	MODBUS value	TCP	exceeds	maximum	communication
		Action and	d Reset				
	Action level	Hardware detection					
	Action time	Immediately acts					
War	ning setting parameter	N/A					
	Reset method	Manual reset					
	Reset condition	Immediately resets					
	Record	N/A					
	Cause	Corrective Actions					
is more	ster communication value than the allowable quantity ommunication card	Reduce Master commu	nication val	ue			
commur break of	over unit is online without inicating, and does not fit the MODBUS TCP link, occupy connection  Revise program of upper unit, the communication should be break off whe not used for a long time			eak off when it is			
A new M is built e unit is commur	IODBUS TCP connection	Revise program of upper unit: use the same MODBUS TCP connection wher connected to the same communication card					

ID No.	Display on LCM Keypad	Warning Name	Description		
85	Warning ECo1 ExCom EIP over	EtherNet/IP over (ECo1)	Ethernet/IP exceeds maximum communication value		
		Action and	Reset		
	Action level	Hardware detection			
	Action time	Immediately acts			
War	ning setting parameter	N/A			
	Reset method	Manual reset	Manual reset		
	Reset condition	Immediately resets			
	Record	N/A			
Cause			Corrective Actions		
is more	ster communication value than the allowable quantity ommunication card	Reduce Master commu	nication value		
The upper unit is online without communicating, and does not break off the MODBUS TCP link, causes occupy connection		Revise program of upper unit, the communication should be break off when it is not used for a long time			
is built e unit is co commur	MODBUS TCP connection every time when the upper connected to the nication card, which occupy connection	Revise program of upp connected to the same	er unit: use the same MODBUS TCP connection when communication card		

ID No.	Display on LCM Keypad	Warning Name	Description	
86	Warning  ECiP  ExCom IP fail	IP fail (ECiP)	IP setting error	
•		Action and	d Reset	
	Action level	Software detection		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediate reset		
	Record	N/A		
Cause		Corrective Actions		
IP conflict		Reset IP		
DHCP IP configuration error		MIS check if DHCP Server works normally		

ID No.	Display on LCM Keypad	Warning Name	Description	
87	Warning  EC3F  ExCom Mail fail	Mail fail (EC3F)	Mail warning: Alarm mail will be sent when the communication card establishes alarm conditions	
		Action and	d Reset	
	Action level	Communication card establishes alarm conditions		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately resets		
	Record	N/A		
Cause			Corrective Actions	
Communication card establishes alarm conditions		No actions		

ID No.	Display on LCM Keypad	Warning Name	Description		
ID NO.	Display on Low Reypau	vvairiing maine	Description		
88	Warning  Ecby  ExCom Busy	ExCom busy (ECbY)	Communication card busy: too much packets are received		
		Action and	d Reset		
	Action level	Software detection			
	Action time	N/A			
War	ning setting parameter	N/A			
	Reset method	Manual reset			
	Reset condition	N/A			
	Record	N/A			
Cause		Corrective Actions			
Communication packets are too much for the communication card to process		Reduce communication	ı packets		

ID No.	Display on LCM Keypad	Warning Name	Description	
89	Warning  ECCb  ExCom Card break	ExCom card break (ECCb)	Communication card break off warning	
		Action and	Reset	
	Action level	Communication card br	eak off	
Action time		The time between communication card break off and ECCb displays:  1. EtherNet/IP: 3 sec.  2. Modbus TCP: 3 sec.  3. DeviceNet: 1 sec.  4. PROFIBUS: 1 sec.  5. EtherCAT: 0.1 sec.		
War	ning setting parameter	N/A		
	Reset method	Auto resets after communication card is re-installed		
	Reset condition	Immediately resets		
	Record	N/A		
	Cause		Corrective Actions	
Commun	nication card break off	Re-install communication card		

ID No.	Display on LCM Keypad	Warning Name	Description	
90	Warning  CPLP  Copy PLC Pass Wd	Copy PLC: password error (CPLP)	Copy PLC password error. When KPC-CC01 is processing PLC copy and the PLC password is incorrect, the CPLP warning shows.	
		Action and	d Reset	
	Action level	PLC password is incorre	ect	
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
Reset condition		Directly resets		
Record		N/A		
Cause			Corrective Actions	
PLC password is incorrect		Reset and enter correct PLC password		

ID No.	Display on LCM Keypad	Warning Name	Description	
91	Warning CPL0 Copy PLC Mode Rd	Copy PLC: Read mode error (CPL0)	Copy PLC Read mode error	
		Action and	Reset	
	Action level	When copy PLC read mode with incorrect process		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Directly resets		
Record		N/A		
Cause		Corrective Actions		
When copy PLC read mode and the process is incorrect		Cycle the power and copy PLC read mode again		

ID No.	Display on LCM Keypad	Warning Name	Description	
92	Warning CPL1 Copy PLC Mode Wt	Copy PLC: Write mode (CPL1)	Copy PLC write mode error	
		Action and	Reset	
	Action level	Copy PLC write mode with incorrect process		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Directly resets		
Record		N/A		
Cause		Corrective Actions		
When copy PLC write mode and the process is incorrect		Cycle the power and copy PLC read mode again		

ID No.	Display on LCM Keypad	Warning Name	Description	
93	Warning CPLv Copy PLC Version	Copy PLC: version error (CPLv)	Copy PLC version error. When non-C2000 built-in PLC is copied to C2000 drive, the CPLv warning shows	
		Action and	d Reset	
	Action level	Software detection		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Directly resets		
	Record	N/A		
Cause		Corrective Actions		
Non-C2000 PLC program is copied		Check if the copied PLC program is for C2000.		
to C2000		Use the correct C2000 PLC program.		

ID No.	Display on LCM Keypad	Warning Name	Description	
94	Warning  CPLS  Copy PLC Size	Copy PLC: size error (CPLS)	Copy PLC Capacity size error	
		Action and	d Reset	
	Action level	Software detection		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Directly resets		
Record		N/A		
Cause		Corrective Actions		
The PLC copied to C2000 exceeds		Check if the copied PLC program is for C2000		
the allowable capacity		Use C2000 PLC program with correct capacity		

ID No.	Display on LCM Keypad	Warning Name	Description	
95	Warning  CPLF  Copy PLC Func	Copy PLC: PLC function (CPLF)	KPC-CC01 Copy PLC function should be executed when PLC is off	
		Action and	Reset	
Action level		Software detection		
Action time		Immediately acts		
War	rning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Directly resets		
Record		N/A		
Cause		Corrective Actions		
PLC function is enabled when KPC-CC01 is running copy PLC		Disable PLC function first, then run the PLC copy function again		

ID No.	Display on LCM Keypad	Warning Name	Description	
96	Warning CPLt Copy PLC Time Out	Copy PLC: time-out (CPLt)	Copy PLC time out	
		Action and	d Reset	
Action level		Software detection		
	Action time	Immediately acts		
War	ning setting parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Directly resets		
Record		N/A		
Cause		Corrective Actions		
KPC-CC01 is removed while copying PLC program		The KPC-CC01 cannot be removed during the PLC copy process		

ID No.	Display on LCM Keypad	Warning Name	Description	
101	Warning ictn InrCOM Time Out	InrCOM time-out (ictn)	Internal communication time-out	
		Action and		
	Action level		(-10) (no -9) and the internal communication between normal, the ictn warning shows.	
	Action time	Immediately acts		
Warning setting parameter		N/A		
Reset method		Auto-reset		
Reset condition		The warning automatic condition	ally clears when the communication is back to normal	
Record		N/A		
Cause			Corrective Actions	
Malfunction caused by interference se			of the communication circuit. It is recommended to ation circuit from the main circuit, or wire in 90 degree for ce performance.	
Different communication conditions with the upper unit  Check if the setting for Pr. 09-02 is the same as the setting f		Pr. 09-02 is the same as the setting for upper unit		
	nication cable break off or nected well	Check the cable status	or replace the cable	

ID No.	Display on LCM Keypad	Warning Name	Description	
105	Warning SpdR Est-Speed REV	Estimated speed reverse (SpdR)	Estimated speed is in a reverse direction with motor actual running direction	
		Action and	Reset	
	Action level	Software detection		
	Action time	Pr. 10-09		
Warning setting parameter		Pr. 10-08 0: Warn and keep operation 1: Warn and coast to stop 2: Warn and ramp to stop		
	Reset method	Manual reset	•	
	Reset condition	Immediately resets		
Record		N/A		
Cause			Corrective Actions	
The mot at start	tor runs in reverse direction	Check if the motor is hold when started, or start the motor with speed source.		
The diffe	erence between motor	Normally the Rr value of IM is Rs*0.7. If there is much difference of the		
paramet	ter measured Rr and Rs	measured value (e.g. Rr=Rs*0.3), proceed the motor parameter auto-tuning		
	value is too large again.			
Insufficient output torque is dragged to the reverse direction by Increase the current limit of Pr. 06-12, so as to increase the output torque. the load.			it of Pr. 06-12, so as to increase the output torque.	

ID No.	Display on LCM Keypad	Warning Name	Description
123	Warning  dEb  Dec. Energy backup	Deceleration energy backup (dEb)	Deceleration energy backup
		Action and	d Reset
	Action level	Software detection	
	Action time	N/A	
Warning setting parameter		reply. 2: dEb with auto accel./ 3: dEb low-voltage con stop. 4: dEb high-voltage con	/decel., the output frequency will note return after power decel., the output frequency will return after power reply. trol, then increase to $350V_{DC}/700V_{DC}$ and decelerate to trol of $350V_{DC}/700V_{DC}$ and decelerate to stop
Reset method		Manual reset	
	Reset condition	Immediately resets	
Record		N/A	
Cause		Corrective Actions	
Instantaneous power off or low voltage and unstable/ sudden heavy load of the power that cause the voltage drop		Check the power consu	mption
Unexped	cted power off	•	

[This page intentionally left blank]

① Warning

- ② ocA
- ③ Oc at accel
- 1 Display error signal
- 2 Abbreviate error code
- 3 Display error description

\*: Refer to setting of Pr. 06-17-Pr. 06-22

AUTO

*: Refer to setting of Pr. 06-17	-Pr. 06-22.			
ID* Display on LCM Keypad	Fault Name	Fault Descriptions		
Fault ocA Oc at accel	Over-current during acceleration (ocA)	Output current exceeds 2.4 times of rated current during acceleration.  When ocA occurs, the drive closes the gate of the output immediately, the motor runs freely, and the display shows an ocA error.		
	Action and	d Reset		
Action level	240% of rated current			
Action time	Immediately act			
Fault treatment parameter	N/A			
Reset method	Manual reset			
Reset condition	Reset in 5 sec. after the	e fault is cleared		
Record	Yes			
Cause	Corrective Actions			
Acceleration time is too short	<ol> <li>Set auto-acceleration</li> <li>Set over-current state</li> </ol>	eration time eration time of S curve on and auto-deceleration parameter (Pr. 01-44) all prevention function (Pr. 06-03) with a larger capacity model.		
Short circuit at motor output due t	Check the motor cable	and remove causes of the short circuits, or replace the		
poor insulation wiring	cable before turning on			
Check for possible burnout or		Check the motor insulation value with megger. Replace the motor if the		
aging insulation of the motor	insulation is poor.			
The load is too large.				
Impulsive change of the load	Reduce the load or incr	rease the capacity of AC motor drive.		
Use special motor or motor with larger capacity than the drive	•	Check the motor capacity (the rated current on the motor's nameplate should $\leq$ the rated current of the drive)		
Use ON/OFF controller of an electromagnetic contactor at the output (U/V/W) of the drive	Check the action timing when the drive outputs	of the contactor and make sure it is not turned ON/OFF the voltage.		
V/F curve setting error		g and frequency/voltage. When the fault occurs, and the b high, reduce the voltage.		
Torque compensation is too large		pensation (refer to Pr.07-26 torque compensation gain) reduces and the motor does not stall.		
Malfunction caused by interference	Verify the wiring of the prevent interference.	control circuit and wiring/grounding of the main circuit to		
The motor starts when in free run	Enable the speed track	ing during start-up of Pr. 07-12.		
Improper parameter settings for the speed tracking function (including restart after momentary power loss and restart after fault)	Correct the parameter s  1. Start the speed trac  2. Adjust the maximur	settings for speed tracking. cking function. m current for Pr. 07-09 speed tracking.		
Incorrect combination of control mode and used motor	Check the settings for F 1. For IM, Pr. 00-11=0 2. For PM, Pr. 00-11=0	1, 1, 2, 3, 5 4, 6, or 7		
The length of motor cable is too long	Increase AC motor drive Install AC reactor(s) on	e's capacity. the output side (U/V/W).		

Hardware failure	The ocA occurs due to short circuit or ground fault at the output side of the drive. Check for possible short circuits between terminals with the electric meter:  B1 corresponds to U, V, W; DC- corresponds to U, V, W; corresponds to U, V, W.  If short circuit occur, return to the factory for repair.
Check if the setting for stall prevention is correct	Set the stall prevention to the proper value.

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
	АИТО		Output current exceeds 2.4 times of rated current during	
	Fault	Over-current during	deceleration.	
2	ocd	deceleration (ocd)	When ocd occurs, the drive closes the gate of the output immediately, the motor runs freely, and the	
	Oc at decel	(oca)	display shows an ocd error.	
		Action and	d Reset	
	Action level	240% of rated current		
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset Reset in 5 sec. after the	a fault in algorid	
	Reset condition Record	Yes	e lauit is cleared	
	Cause	162	Corrective Actions	
	Cause	Increase the decele		
			eration time of S-curve	
Decelera	ation time too short		on and auto-deceleration parameter (Pr. 01-44)	
			all prevention function (Pr. 06-03)	
		<ol><li>Replace the drive v</li></ol>	vith a larger capacity model	
_	the mechanical brake of or activates too early	Check the action timing	of the mechanical brake	
		Check the motor cable and remove causes of the short circuits, or replace the		
	ulation wiring	cable before turning on	•	
	or possible burnout or		ulation value with megger. Replace the motor if the	
aging insulation of the motor		insulation is poor.		
The load is too large		Check if the output current during the whole working process exceeds the AC motor drive's rated current. If yes, replace the AC motor drive with a larger capacity model.		
Impulsive change of the load		Reduce the load or incr	rease the capacity of AC motor drive.	
Use special motor or motor with larger capacity than the drive		Check the motor capacity (the rated current on the motor's nameplate should $\leq$ the rated current of the drive)		
Use ON/OFF controller of an electromagnetic contactor at the		Check the action timing of the contactor and make sure it is not turned ON/OFF when the drive outputs the voltage.		
output (L	J/V/W) of the drive	•	•	
V/F curv	e setting error	frequency voltage is too	gs and frequency/voltage. When the fault occurs, and the phigh, reduce the voltage.	
Tiomile compensation is too tame 1 -			pensation (refer to Pr.07-26 torque compensation gain) reduces and the motor does not stall.	
Malfunction caused by interference Verify the wiring of the control circuit and wiring/grounding of the prevent interference.		control circuit and wiring/grounding of the main circuit to		
The leng	th of motor cable is too	Increase AC motor drive	e's capacity	
long			the output side (U/V/W)	
		The ocd occurs due to short circuit or ground fault at the output side of the drive.		
		Check for possible short circuits between terminals with the electric meter:		
Hardwar	re error	B1 corresponds to U, V, W; DC- corresponds to U, V, W; (a) corresponds to U,		
		V, W.	eturn to the factory for repair.	
Check if	the setting of stall		•	
		Set the stall prevention	to the proper value.	
prevention is correct  Set the stall prevention to the proper value.				

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
3	Fault ocn Oc at normal SPD	Over-current during steady operation (ocn)	Output current exceeds 2.4 times of the rated current during constant speed. When ocn occurs, the drive closes the gate of the output immediately, the motor runs freely, and the display shows an ocn error.	
		Action and	d Reset	
	Action level	240% of rated current		
	Action time	Immediately act		
Fau	lt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset in 5 sec. after the	e fault is cleared	
	Record	Yes		
	Cause		Corrective Actions	
poor ins	ulation wiring	Check the motor cable cable before turning on	and remove causes of the short circuits, or replace the the power.	
Check for possible shaft lock, burnout or aging insulation of the motor		Troubleshoot the motor shaft lock.  Check the motor insulation value with megger. Replace the motor if the insulation is poor.		
Impulsive change of the load		Reduce the load or incr	ease the capacity of AC motor drive.	
Use special motor or motor with larger capacity than the drive		Check motor capacity (the rated current on the motor's nameplate should $\leq$ the rated current of the drive)		
Use ON/OFF controller of an electromagnetic contactor at the output (U/V/W) of the drive		Check the action timing of the contactor and make sure it is not turned ON/OFF when the drive outputs the voltage.		
V/F curve setting error		Adjust V/F curve settings and frequency/voltage. When the fault occurs, and the frequency voltage is too high, reduce the voltage.		
Over-torque offset value too high		Adjust over-torque offset value (Refer to Pr. 07-26 torque compensation gain), until the output current is reduced and not motor stall.		
Torque compensation is too large.		Adjust the torque compensation (refer to Pr.07-26 torque compensation gain) until the output current reduces and the motor does not stall.		
Malfunction caused by interference		Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.		
long		Increase the AC motor drive's capacity. Install AC reactor(s) on the output side (U/V/W).		
Hardwai	re failure	Check for possible shor B1 corresponds to U, V V, W.	short circuit or ground fault at the output side of the drive. It circuit between terminals with the electric meter:  Y, W; DC- corresponds to U, V, W; Corresponds to U, eturn to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
4	Fault  GFF  Ground fault	Ground fault (GFF)	When (one of) the output terminal(s) is grounded, short circuit current is larger than Pr. 06-60 setting value, and the detection time is longer than Pr. 06-61 time setting, GFF occurs.  NOTE: the short circuit protection is provided for AC motor drive protection, not to protect the user.	
		Action and		
	Action level	Pr. 06-60 (Default = 60°		
	Action time	Pr. 06-61 (Default = 0.1	0 sec.)	
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset in 5 sec. after the fault is cleared		
Record		Yes		
	Cause		Corrective Actions	
Motor bu	urnout or aging insulation I	Check the motor insulation is poor.	lation value with megger. Replace the motor if the	
Short cir	cuit due to broken cable	Troubleshoot the short of Replace the cable.	circuit.	
_	tray capacitance of the	If the motor cable length frequency.	th exceeds 100m, decrease the setting value for carrier	
cable an	d terminal 😇	Take remedies to reduce stray capacitance.		
Malfunction caused by interference to for		Verify the grounding and wiring of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective sufficient anti-interference performance.		
Hardwar	re failure	Cycle the power after of GFF still exists, return to	checking the status of motor, cable and cable length. If o the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
5	Fault occ Short Circuit	IGBT short circuit between upper bridge and lower bridge (occ)	Short-circuit is detected between upper bridge and lower bridge of the IGBT module	
Action ar		Action and	Reset	
Action level		Hardware protection		
Action time		Immediately act		
Fault treatment parameter		N/A		
Reset method		Manual reset		
Reset condition		Reset in 5 sec. after the fault is cleared		
Record		Yes		
Cause		Corrective Actions		
IGBT error		Check the motor wiring.		
Short-circuit detecting circuit error		Cycle the power, if occ	still exists, return to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
6	Fault ocS Oc at stop	Over-current at stop (ocS)	Over-current or hardware failure in current detection at stop. Cycle the power after ocS occurs. If the hardware failure occurs, the display shows cd1, cd2 or cd3.	
		Action and	d Reset	
	Action level	240% of rated current		
Action time		Immediately act		
Fault treatment parameter		N/A		
Reset method		Manual reset		
Reset condition		Reset in 5 sec. after the	e fault is cleared	
Record		Yes		
Cause		Corrective Actions		
		Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.		
		Check if other error coor return to the factory for	le such as cd1–cd3 occur after cycling the power. If yes, repair.	

Action level Action time   Immediately act when DC BUS voltage is higher than the level   Reset condition   Reset only when DC BUS voltage is lower than 90% of the over-voltage level   Record   Yes   Cause   Corrective Actions    Acceleration is too slow (e.g. hen level is smaller than no-load current    Power voltage is too high   ON/OFF switch action of phase-in capacitor in the same power system    Regenerative voltage of motor inertia   ON/OFF switch action of the corrective acceleration time is too short    Motor ground fault   Acceleration fault    Motor ground fault   Action and Reset    Action and sest    Action and Reset    Actio	ID* Display on LCM k	Keypad	Fault Name	Fault Descriptions	
Action level  Action level  Action time  Action time  Action time  Fault treatment parameter  N/A  Reset method  Reset condition  Reset only when DC BUS voltage is lower than 90% of the over-voltage level  Record  Cause  Acceleration is too slow (e.g. hen lifting load decreases acceleration time)  The setting for stall prevention level is smaller than no-load current  Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Acceleration time is too short  Acceleration time is too short  Acceleration time is too short  The setting for stall prevention level should be larger than no-load current and check for possible voltage spikes.  If the phase-in capacitor or active power supply unit acts in the same power system  Regenerative voltage of motor inertia  Receleration time is too short  Acceleration time is too short  Motor ground fault  Action time  Immediately act when DC BUS voltage is higher than the level  Manual reset  Carrective Actions  Corrective Actions  Corrective Actions  Record  Corrective Actions  Power than 90% of the over-voltage level  The setting for stall prevention level should be larger than no-load current or possible voltage spikes.  If the input voltage is within the rated AC motor drive input voltage rang and check for possible voltage spikes.  If the phase-in capacitor or active power supply unit acts in the same power system unit acts in the same power system supply voltage may surge abnormally in a short time. In this case install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01)  Use auto-acceleration and auto-deceleration setting (Pr. 01-44)  Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs after acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and intermal terminals.  Troubleshoot th	7 ovA	АИТО	acceleration	When ovA occurs, the drive closes the gate of the output, the motor runs freely, and the display shows an	
Action level 575V series: 820Vpc 575V series: 1116Vpc 690V series: 1318Vpc  Action time Immediately act when DC BUS voltage is higher than the level N/A Reset method Manual reset Reset condition Reset only when DC BUS voltage is lower than 90% of the over-voltage level Record Yes Cause Corrective Actions  Acceleration is too slow (e.g. hen lifting load decreases acceleration level is smaller than no-load current Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Motor ground fault  Action time 170			Action and	Reset	
Fault treatment parameter Reset method Reset condition Reset condition Record Record Cause Acceleration is too slow (e.g. hen lifting load decreases acceleration time) The setting for stall prevention level is smaller than no-load current Power voltage is too high ON/OFF switch action of phase-in capacitor in the same power system Regenerative voltage of motor linertia  Acceleration time is too short  Motor ground fault  N/A Manual reset Manual reset Reset only when DC BUS voltage is lower than 90% of the over-voltage level Reset only when DC BUS voltage is lower than 90% of the over-voltage level Reset only when DC BUS voltage is lower than 90% of the over-voltage level Reset only when DC BUS voltage is lower than 90% of the over-voltage level Yes Corrective Actions Corrective Actions  Replace the drive with a larger capacity model.  The setting for stall prevention level should be larger than no-load current corrective power supply unit acts in the same power system, the input voltage spikes.  If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this case install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the accele		4 5 6	460V series: 820V <sub>DC</sub> 575V series: 1116V <sub>DC</sub> 590V series: 1318V <sub>DC</sub>		
Reset method Reset condition Record Yes Cause Acceleration is too slow (e.g. hen lifting load decreases acceleration time) The setting for stall prevention level is smaller than no-load current  Power voltage is too high Check if the input voltage is within the rated AC motor drive input voltage range and check for possible voltage spikes.  Regenerative voltage of motor inertia  Regeneration time is too short  Record Yes Corrective Actions  Corrective Actions  Corrective Actions  Decrease the acceleration time Use brake unit or DC BUS Replace the drive with a larger capacity model.  The setting for stall prevention level should be larger than no-load current  Check if the input voltage is within the rated AC motor drive input voltage range and check for possible voltage spikes.  Check if the input voltage may surge abnormally in a short time. In this cast install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the acceleration time acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throut internal terminals.  Troubleshoot the ground fault.				OC BUS voltage is higher than the level	
Reset condition Record Yes Cause Corrective Actions  Acceleration is too slow (e.g. hen lifting load decreases acceleration level is smaller than no-load current  Power voltage is too high Check if the input voltage is within the rated AC motor drive input voltage rang and check for possible voltage spikes.  Check if the phase-in capacitor or active power supply unit acts in the same power system  Regenerative voltage of motor inertia  Regeneration time is too short  Motor ground fault  Reset only when DC BUS voltage is lower than 90% of the over-voltage level Yes Corrective Actions  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current  The s					
Record Cause  Acceleration is too slow (e.g. hen lifting load decreases acceleration time)  The setting for stall prevention level is smaller than no-load current  Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Regenerative voltage of motor inertia  Acceleration time is too short  Motor ground fault  Pixes Cause  Corrective Actions  Decrease the acceleration time  Use brake unit or DC BUS  Check if the input voltage is within the rated AC motor drive input voltage rang and check for possible voltage spikes.  If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this cast install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01)  Use auto-acceleration and auto-deceleration setting (Pr. 01-44)  Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the acceleration time  2. Set Pr. 06-01 over-voltage stall prevention  3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.				IS voltage is lower than 00% of the over voltage level	
Acceleration is too slow (e.g. hen lifting load decreases acceleration time)  The setting for stall prevention level is smaller than no-load current  Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Acceleration time is too short  Motor ground fault  Decrease the acceleration time Use brake unit or DC BUS Replace the drive with a larger capacity model.  The setting for stall prevention level should be larger than no-load current  Check if the input voltage is within the rated AC motor drive input voltage rang and check for possible voltage spikes.  Check if the phase-in capacitor or active power supply unit acts in the same power system  If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this cast install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01) Use auto-acceleration and auto-deceleration setting (Pr. 01-44) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the acceleration time 2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throut the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.			-	55 voltage is lower than 90% or the over-voltage level	
Acceleration is too slow (e.g. hen lifting load decreases acceleration time)  The setting for stall prevention level is smaller than no-load current  Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Acceleration time is too short  Motor ground fault  Decrease the acceleration time Use brake unit or DC BUS Replace the drive with a larger capacity model.  The setting for stall prevention level should be larger than no-load current  Check if the input voltage is within the rated AC motor drive input voltage range and check for possible voltage spikes.  Check if the phase-in capacitor or active power supply unit acts in the same power system  If the phase-in capacitor or active power supply unit acts in the same power system used install an AC reactor.  Use over-voltage may surge abnormally in a short time. In this cast install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01) Use auto-acceleration and auto-deceleration setting (Pr. 01-44) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the acceleration time  2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.			103	Corrective Actions	
The setting for stall prevention level is smaller than no-load current  Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Acceleration time is too short  Motor ground fault  Replace the drive with a larger capacity model.  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current stall prevention level should be larger than no-load current stall prevention level should be larger than no-load current stall prevention level should be larger than no-load current stall prevention level should be larger than no-load current stall prevention function (Pr. 06-01)  Check if the input voltage is within the rated AC motor drive input voltage range and check for possible voltage spikes.  If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this cast install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01)  Use auto-acceleration and auto-deceleration setting (Pr. 01-44)  Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the acceleration time 2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throut the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.	Acceleration is too slow (e.			ion time	
The setting for stall prevention level is smaller than no-load current  Power voltage is too high  ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Acceleration time is too short  Motor ground fault  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current  The setting for stall prevention level should be larger than no-load current stall proved in the same power supply unit acts in the same power system. If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this case in stall an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01)  Use auto-acceleration and auto-deceleration setting (Pr. 01-44)  Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops.  When the warning occurs, do the following:  1. Increase the acceleration time  2. Set Pr. 06-01 over-voltage stall prevention  3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.					
ON/OFF switch action of phase-in capacitor in the same power system  Regenerative voltage of motor inertia  Acceleration time is too short  Motor ground fault  If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this case install an AC reactor.  Use over-voltage stall prevention function (Pr. 06-01) Use auto-acceleration and auto-deceleration setting (Pr. 01-44) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops. When the warning occurs, do the following:  1. Increase the acceleration time 2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.	The setting for stall prevention level is smaller than no-load		The setting for stall prevention level should be larger than no-load current		
capacitor in the same power system system, the input voltage may surge abnormally in a short time. In this case install an AC reactor.  Regenerative voltage of motor inertia Use over-voltage stall prevention function (Pr. 06-01) Use auto-acceleration and auto-deceleration setting (Pr. 01-44) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops. When the warning occurs, do the following:  1. Increase the acceleration time 2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.	Power voltage is too high				
Use auto-acceleration and auto-deceleration setting (Pr. 01-44) Use a brake unit or DC BUS  Check if the over-voltage warning occurs after acceleration stops. When the warning occurs, do the following:  1. Increase the acceleration time 2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.	capacitor in the same power		system, the input voltage may surge abnormally in a short time. In this case, install an AC reactor.		
When the warning occurs, do the following:  1. Increase the acceleration time 2. Set Pr. 06-01 over-voltage stall prevention 3. Increase setting value for Pr. 01-25 S-curve acceleration arrival time 2  The ground short circuit current charges the capacitor in the main circuit throu the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.			Use auto-acceleration and auto-deceleration setting (Pr. 01-44) Use a brake unit or DC BUS		
Motor ground fault the power. Check if there is ground fault on the motor cable, wiring box and internal terminals.  Troubleshoot the ground fault.	Acceleration time is too short		<ul><li>When the warning occurs, do the following:</li><li>1. Increase the acceleration time</li><li>2. Set Pr. 06-01 over-voltage stall prevention</li></ul>		
	Motor ground fault		The ground short circuit current charges the capacitor in the main circuit through the power. Check if there is ground fault on the motor cable, wiring box and its internal terminals.		
Incorrect wiring of brake resistor or brake unit.  Check the wiring of brake resistor and brake unit.	Incorrect wiring of brake resistor or brake unit				
			Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions
8	Fault ovd Ov at decel	Over-voltage during deceleration (ovd)	DC BUS over-voltage during deceleration. When ovd occurs, the drive closes the gate of the output immediately, the motor runs freely, and the display shows an ovd error.
		Action and	Reset
	Action level	230V series: 410V <sub>DC</sub> 460V series: 820V <sub>DC</sub> 575V series: 1116V <sub>DC</sub> 690V series: 1318V <sub>DC</sub>	
	Action time	Immediately act when D	OC BUS voltage is higher than the level
Fau	It treatment parameter	N/A	
	Reset method	Manual reset	
	Reset condition	Reset only when DC Bl	JS voltage is lower than 90% of the over-voltage level
	Record	Yes	
	Cause		Corrective Actions
causing energy o	ation time is too short, too large regenerative of the load	<ol> <li>Increase the setting value of Pr. 01-13, Pr. 01-15, Pr. 01-17 and Pr. 01-19 (deceleration time)</li> <li>Connect brake resistor, brake unit or DC BUS on the drive.</li> <li>Reduce the brake frequency.</li> <li>Replace the drive with a larger capacity model.</li> <li>Use S-curve acceleration/deceleration.</li> <li>Use over-voltage stall prevention (Pr. 06-01).</li> <li>Use auto-acceleration and auto-deceleration (Pr. 01-44).</li> <li>Adjust braking level (Pr. 07-01 or the bolt position of the brake unit).</li> </ol>	
	ing for stall prevention smaller than no-load	The setting for stall prevention level should be larger than no-load current	
Power v	oltage is too high	Check if the input voltage is within the rated AC motor drive input voltage range, and check for possible voltage spikes.	
	switch action of phase-in or in the same power	system, the input voltage may surge abnormally in a short time. In this case, install an AC reactor.	
Motor gr	ound fault	The ground short circuit current charges the capacitor in the main circuit through the power. Check if there is ground fault on the motor cable, wiring box and its internal terminals.  Troubleshoot the ground fault.	
Incorrect brake ur	t wiring of brake resistor or nit		ke resistor or brake unit.
Malfunct	tion caused by interference	Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
9	Fault ovn Ov at normal SPD	Over-voltage at constant speed (ovn)	DC BUS over-voltage at constant speed. When ovn occurs, the drive closes the gate of the output immediately, the motor runs freely, and the display shows an ovn error.		
		Action and	Reset		
Action level		230V series: 410V <sub>DC</sub> 460V series: 820V <sub>DC</sub> 575V series: 1116V <sub>DC</sub> 690V series: 1318V <sub>DC</sub>			
	Action time	Immediately act when [	DC BUS voltage is higher than the level		
Fau	lt treatment parameter	N/A			
	Reset method	Manual reset			
	Reset condition		JS voltage is lower than 90% of over-voltage level		
	Record	Yes			
	Cause	Corrective Actions			
Impulsive change of the load		<ol> <li>Connect brake resistor, brake unit or DC BUS to the drive.</li> <li>Reduce the load.</li> <li>Replace to drive with a larger capacity model.</li> <li>Adjust braking level (Pr. 07-01 or bolt position of the brake unit).</li> </ol>			
The setting for stall prevention level is smaller than no-load current		The setting of stall prevention level should be larger than no-load current			
Regenerative voltage of motor inertia		Use over-voltage stall prevention function (Pr. 06-01) Use a brake unit or DC BUS			
Power vo	oltage is too high	Check if the input voltage is within the rated AC motor drive input voltage range, and check for possible voltage spikes.			
	switch action of phase-in r in the same power	If the phase-in capacitor or active power supply unit acts in the same power system, the input voltage may surge abnormally in a short time. In this case, install an AC reactor.			
Motor gr	The ground short-circuit current charges the capacitor in the main circuit the the power. Check if there is ground fault on the motor cable, wiring box a internal terminals.  Troubleshoot the ground fault.		re is ground fault on the motor cable, wiring box and its		
Incorrect wiring of brake resistor or brake unit.  Check the wiring of brake resistor or brake unit.					
Malfunction caused by interference		Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
10	Fault ovS Ov at stop	Over-voltage at stop (ovS)	Over-voltage at stop	
		Action and	Reset	
Action level		230V series: 410V <sub>DC</sub> 460V series: 820V <sub>DC</sub> 575V series: 1116V <sub>DC</sub> 690V series: 1318V <sub>DC</sub>		
	Action time	Immediately act when D	OC BUS voltage is higher than the level	
Fau		N/A		
	Reset method	Manual reset		
	Reset condition	Reset only when DC BUS voltage is lower than 90% of over-voltage level		
	Record	Yes		
Cause			Corrective Actions	
Power voltage is too high		Check if the input voltage is within the rated AC motor drive input voltage range, and check for possible voltage spikes.		
ON/OFF			r or active power supply unit activates in the same power	
capacitor in the same power system		system, the input voltage may surge abnormally in a short time. In this case, install an AC reactor.		
Incorrect wiring of brake resistor or brake unit		Check the wiring of brake resistor or brake unit.		
Malfunction caused by interference		Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.		
Hardware failure in voltage Check if other error code such as cd1–cd3 occur after cycling the po			le such as cd1-cd3 occur after cycling the power. If yes,	
detection	า	return to the factory for repair.		
Motor gr		The ground short circuit current charges the capacitor in the main circuit through the power. Check if there is ground fault on the motor cable, wiring box and its internal terminals.  Troubleshoot the ground fault.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
11	Fault LvA Lv at accel	Low-voltage during acceleration (LvA)	DC BUS voltage is lower than Pr. 06-00 setting value during acceleration		
		Action and	d Reset		
	Action level	Pr. 06-00 (Default = dep	pending on the model)		
	Action time	Immediately act when D	OC BUS voltage is lower than Pr. 06-00		
Fau	ılt treatment parameter	N/A			
	Reset method	Manual reset			
	Reset condition	Reset when DC BUS voltage is higher than Pr. 06-00 + 30V (Frame A–D) / 40V (Frame E and below)			
Record		Yes			
Cause			Corrective Actions		
Power-o	off	Improve power supply of	condition.		
Power v	oltage changes	Adjust voltage to the po	wer range of the drive		
Start up	the motor with large	Check the power system.			
capacity	'	Increase the capacity of power equipment.			
		Reduce the load.			
The load is too large		Increase the drive capacity.			
		Increase the acceleration time.			
DC BUS Install DC reactor(s).					
Check if there is short-circuit plate or any DC reactor installed between terminal +1 and +2		Connect short circuit plate or DC reactor between terminal +1 and +2.  If the error still exists, return to the factory for repair.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
12	Fault Lvd Lv at decel	Low-voltage during deceleration (Lvd)	DC BUS voltage is lower than Pr. 06-00 setting value during deceleration		
		Action and	d Reset		
	Action level	Pr. 06-00 (Default = dep	pending on the model)		
	Action time	Immediately act when D	OC BUS voltage is lower than Pr. 06-00		
Fau	It treatment parameter	NA			
Reset method		Manual reset			
Reset condition		Reset when DC BUS voltage is higher than Pr. 06-00 + 30V (Frame A–D) / 40V (Frame E and above)			
	Record	Yes			
	Cause	Corrective Actions			
Power-o	off	Improve power supply condition.			
Power voltage changes		Adjust voltage to the power range of the drive.			
Start up the motor with large		Check the power system.			
capacity	-	Increase the capacity of power equipment.			
Suddon	lood	Reduce the load.			
Sudden	IUau	Increase the drive capacity.			
DC BUS Install DC reactor(s).					

ID* Display on LCM Keypad Fault Name		Fault Name	Fault Descriptions		
13	Fault Lvn Lv at normal SPD	Low-voltage at constant speed (Lvn)	DC BUS voltage is lower than Pr. 06-00 setting value at constant speed		
		Action and	d Reset		
	Action level	Pr. 06-00 (Default = dep	pending on the model)		
	Action time	Immediately act when D	OCBUS voltage is lower than Pr. 06-00		
Fau	It treatment parameter	NA			
	Reset method	Manual reset			
Reset condition		Reset when DCBUS voltage is higher than Pr. 06-00 + 30V (Frame A–D) / 40V (Frame E and above)			
Record		Yes			
	Cause	Corrective Actions			
Power-o	ff	Improve power supply condition.			
Power vo	oltage changes	Adjust voltage to the power range of the drive			
Start up the motor with large		Check the power system.			
capacity		Increase the capacity of power equipment.			
Sudden load		Reduce the load.			
Sudden	luau	Increase the drive capacity.			
DC BUS		nstall DC reactor(s).			

ID* Display on LCM Keyp	ad Fault Name	Fault Descriptions			
Fault  LvS  Lv at stop	Low-voltage at stop (LvS)	DC BUS voltage is lower than Pr. 06-00 setting value at stop     Hardware failure in voltage detection			
	Action and	Action and Reset			
Action level	Pr. 06-00 (Default = dep	Pr. 06-00 (Default = depending on the model)			
Action time		OCBUS voltage is lower than Pr. 06-00			
Fault treatment parameter	N/A				
Reset method	Frame E and above 460V series: Frame A-D = Lv lev Frame E and above 575V series: Frame A-D = Pr. 06 Frame E and above 690V series: Frame A-D = Pr. 06	Manual/ auto 230V series:  Frame A-D = Lv level + $30V_{DC}$ + $500ms$ Frame E and above = Lv level + $40V_{DC}$ + $500ms$ 460V series:  Frame A-D = Lv level + $60V_{DC}$ + $500ms$ Frame E and above = Lv level + $80V_{DC}$ + $500ms$ 575V series:  Frame A-D = Pr. $06-00 + 100.0V_{DC}$ Frame E and above = Pr. $06-00 + 120.0V_{DC}$			
Reset condition	500ms	500ms			
Record	Yes	1			
Cause		Corrective Actions			
Power-off		Improve power supply condition.			
Incorrect drive models		cification matches the drive.			
Adjust voltage to the power range of the drive.  Cycle the power after checking the power. If LvS error still exists, reference factory for repair.					
Start up the motor with large	Check the power system.				
capacity	Increase the capacity of power equipment.				
DC BUS	Install DC reactor(s).				

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
15	Fault OrP Phase lacked	Phase loss protection (OrP)	Phase loss of power input	
		Action and	Reset	
	Action level	DC BUS is lower than F	Pr. 07-00, and DC BUS ripple is higher than Pr. 06-52	
	Action time	N/A		
Fau	It treatment parameter	Pr. 06-53		
	Reset method	Manual reset		
	Reset condition	Immediately reset when DCBUS is higher than Pr. 07-00		
	Record	Yes		
Cause			Corrective Actions	
Phase loss of input power		Correctly install the wiri	ng of the main circuit power.	
Single phase power input to three-phase model		Choose the model who	se power matches the voltage.	
Power voltage changes		If the main circuit power works normally, verify the main circuit.  Cycle the power after checking the power, if OrP error still exists, return to the factory for repair.		
Loose wiring terminal of input power		Tighten the terminal screws according to the torque described in the user manual.		
The input cable of three-phase		Wire correctly.		
power is cut off		Replace the cut off cable.		
Input power voltage changes too Werify the setting value for Pr. 06-50 Time for Inmuch Pr. 06-52 Ripple of Input Phase Loss		for Pr. 06-50 Time for Input Phase Loss Detection and it Phase Loss		
Unbalan power	ced three-phase of input	Check the power three-phase status.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
16	Fault oH1	IGBT overheating (oH1)	IGBT temperature exceeds the protection level		
		Action and	Reset		
	Action level	When Pr.06-15 is higher occurs instead of oH1 w	er than the IGBT overheating protection level, oH1 error varning.		
	Action time	IGBT temperature exce occurs.	eds the protection level for more than 100ms, oH1 error		
Fau	It treatment parameter	N/A			
	Reset method	Manual reset			
	Reset condition	Reset only when IGBT temperature is lower than oH1 error level minus (-) 10°C			
	Record	Yes			
	Cause	Corrective Actions			
Check if the ambient temperature or temperature inside the control cabinet is too high, or if there is obstruction in the ventilation hole of the control cabinet.		<ol> <li>Check ambient temperature.</li> <li>Regularly inspect the ventilation hole of the control cabinet.</li> <li>Change the installed place if there are heating objects, such as braking resistors, in the surroundings.</li> <li>Install/ add cooling fan or air conditioner to lower the temperature inside the cabinet.</li> </ol>			
Check if there is any obstruction on the heat sink or if the fan is running.		Remove the obstruction or replace the cooling fan.			
Insufficient ventilation space		Increase ventilation space of the drive.			
_	the drive matches the onding load	<ol> <li>Reduce the load</li> <li>Reduce the carrier</li> <li>Replace the drive with a larger capacity model.</li> </ol>			
The drive has run 100% or more than 100% of the rated output for a long time		Replace the drive with a larger capacity model.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
17	Fault oH2 Heat Sink oH	Heatsink overheating (oH2)	Capacitance temperature exceeds the protection level	
		Action and Reset		
	Action level	Refer to the table below	for oH2 level of each models	
	Action time	When capacitance ten 100ms, oH2 error occur	nperature exceeds the protection level for more than	
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset when capacitance	e temperature is lower than oH2 error level minus (-) 10°C	
	Record	Yes		
	Cause	Corrective Actions		
Check if the ambient temperature or temperature inside the control cabinet is too high, or if there is obstruction in the ventilation hole of the control cabinet.		<ol> <li>Check ambient temperature.</li> <li>Regularly inspect the ventilation hole of the control cabinet.</li> <li>Change the installed place if there are heating objects, such as braking resistors, in the surroundings.</li> <li>Install/ add cooling fan or air conditioner to lower the temperature inside the cabinet.</li> </ol>		
Check if there is any obstruction on the heat sink or if the fan is running.		Remove the obstruction or replace the cooling fan.		
Insufficient ventilation space Increase ventilation			ce of the drive.	
Check if the drive matches the corresponding load		2. Reduce the carrier		
The drive has run 100% or more than 100% of the rated output for a long time		a larger capacity model.		
Unstable	•	Install reactor(s)		
Load cha	anges frequently	Reduce load changes		

# oH1/ oH2 warning level

Of 17 Of 12 Walfilling leve			
Model	oH1	oH2	oH warning oH1 warning = (Pr.06-15)
VFD007C23A		95	
VFD015C23A			
VFD022C23A			
VFD037C23A		100	
VFD055C23A			
VFD075C23A		80	
VFD110C23A			
VFD150C23A	110	75	oH1 Warning = oH1 – 5
VFD185C23A			oH2 Warning = oH2 – 5
VFD220C23A			
VFD300C23A/E			
VFD370C23A/E		65	
VFD450C23A/E			
VFD550C23A/E			
VFD750C23A/E			
VFD900C23A/E			
VFD007C43A/E		0.5	
VFD015C43A/E		95	
VFD022C43A/E		100	
VFD037C43A/E	110	105	oH1 Warning = oH1 – 5
VFD040C43A/E		100	oH2 Warning = oH2 – 5
VFD055C43A/E			
VFD075C43A/E		80	
VFD110C43A/E		ου	

Chapter 14 Fault Codes and Descriptions | C2000

Model	oH1	oH2	oH warning oH1 warning = (Pr.06-15)
VFD150C43A/E		80	,
VFD185C43A/E			
VFD220C43A/E		85	
VFD300C43A/E			
VFD370C43S/U			
VFD450C43S/U			
VFD550C43A/E			
VFD750C43A/E		65	
VFD900C43A/E	110	00	oH1 Warning = oH1 – 5
VFD1100C43A/E	110		oH2 Warning = oH2 – 5
VFD1320C43A/E			
VFD1600C43A/E			
VFD1850C43A/E			
VFD2200C43A/E	_		
VFD2800C43A/E		70	
VFD3150C43A/E		70	
VFD3550C43A/E			
VFD4500C43A/E			
VFD015C53A	100	85	
VFD022C53A	105		
VFD037C53A			oH1 Warning - oH1 5
VFD055C53A			oH1 Warning = oH1 – 5 oH2 Warning = oH2 – 5
VFD075C53A	100	70	0112 Waiting - 0112 - 3
VFD110C53A		70	
VFD150C53A			
VFD185C63B			
VFD220C63B		0.5	
VFD300C63B	90	85	
VFD370C63B			
VFD450C63B	100		
VFD550C63B	100		
VFD750C63B			
VFD900C63B	_	65	
VFD1100C63B		UO	oH1 Warning = oH1 – 5
VFD1320C63B			oH2 Warning = oH2 – 5
VFD1600C63B			
VFD2000C63B	110		
VFD2500C63B			
VFD3150C63B			
VFD4000C63B		70	
VFD4500C63B		10	
VFD5600C63B			
VFD6300C63B			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
18	Fault tH1o Thermo 1 open	IGBT temperature detection failure (tH1o)	IGBT hardware failure in temperature detection	
		Action and	d Reset	
	Action level	NTC broken or wiring failure		
	Action time	When the IGBT temperature is higher than the protection level, and detection time exceeds 100ms, the tH1o protection activates.		
Fau	ılt treatment parameter	N/A	·	
	Reset method	Manual reset		
	Reset condition	Immediately reset		
Record Yes				
	Cause	Corrective Actions		
Hardwa	re failure	Wait for 10 minutes, a exists. If yes, return to t	nd then cycle the power. Check if tH1o protection still he factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
19	Fault tH2o Thermo 2 open	Capacitor hardware error (tH2o)	Hardware failure in capacitor temperature detection	
		Action and	d Reset	
	Action level	NTC broken or wiring failure		
		When the IGBT temperature is higher than the protection level, and detection time exceeds 100ms, the tH2o protection activates.		
Fault treatment parameter		N/A	·	
	Reset method	Manual reset		
	Reset condition	Immediately reset		
Record Ye		Yes		
Cause			Corrective Actions	
		Wait for 10 minutes, a exists. If yes, return to t	nd then cycle the power. Check if tH2o protection still he factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
21	Fault  oL  Over load	Over load (oL)	The AC motor drive detects excessive drive output current. The overload capacity sustains for 1 minute when the drive outputs 120% of the drive's rated output current.	
		Action and	d Reset	
	Action level	Based on over load cur	ve and derating curve.	
	Action time	When the load is higher the oL protection activa	er than the protection level and exceeds allowable time, tes.	
Fau	Ilt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset in 5 sec. after the	e fault is cleared	
	Record	Yes		
	Cause		Corrective Actions	
	d is too large	Reduce the load		
	Decel. time or the working e too short	Increase the setting value for Pr. 01-12–01-19 (accel./decel time)		
V/F voltage is too high		Adjust the settings for Pr.01-01-08 (V/F curve), especially the setting value for the mid-point voltage (if the mid-point voltage is set too low, the load capacity decreases at low speed).  Refer to the V/F curve selection of Pr.01-43.		
The cap	acity of the drive is too	Replace the drive with a	a larger capacity model.	
Overloa operatio	d during low-speed n	Reduce the load during low-speed operation. Increase the drive capacity. Decrease the carrier frequency of Pr. 00-17.		
Torque o	compensation is too large	Adjust the torque compensation (refer to Pr. 07-26 Torque Compensation Gain) until the output current reduces and the motor does not stall.		
	the setting for stall on is correct.	Set the stall prevention to the proper value.		
Output p	phase loss	Check the status of three-phase motor. Check if the cable is broken or the screws are loose.		
the spec	er parameter settings for ed tracking function ng restart after momentary oss and restart after fault)	Correct the parameter settings for speed tracking.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
22	Fault EoL1 Thermal relay 1	Electronics thermal relay 1 protection (EoL1)	Electronics thermal relay 1 protection. The drive coasts to stop once it activates.	
		Action and	d Reset	
	Action level	Start counting when out	put current > 105% of motor 1 rated current	
	Action time	within 60 sec., the coun	current is larger than 105% of motor 1 rated current again ting time reduces and is less than Pr. 06-14)	
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset in 5 sec. after the	e fault is cleared	
	Record	Yes		
	Cause		Corrective Actions	
	l is too large	Reduce the load.		
	ecel. time or the working too short		ues for Pr. 01-12-01-19 (Accel./Decel time)	
Adjust the settings for Pr.01-01-08 (V/F curve), especia for the mid-point voltage (if the mid-point voltage is set too lo decreases at low speed).  Refer to the V/F curve selection of Pr.01-43.		e (if the mid-point voltage is set too low, the load capacity l).		
Overload during low-speed operation.  When using a general motor, even it operates below rated current, an overload may still occur during low-speed operation.  Decrease low-speed operation time.  Replace the drive with a dedicated to VFD model. Increase the motor capacity.		a dedicated to VFD model.		
motors, thermal inverter	,	Pr. 06-13=1 electronic twith fan on the shaft).	thermal relay selection motor 1 = standard motor (motor	
thermal		Reset to the correct mo	tor rated current.	
The max	kimum motor frequency is	Reset to the correct mo		
One driv	re to multiple motors	Set Pr. 06-13=2 electronic thermal relay selection motor 1= disable, and instal thermal relay on each motor.		
	the setting for stall on is correct.	Set the stall prevention	to the proper value.	
Torque o	compensation is too large	Adjust the torque compensation (refer to Pr.07-26 torque compensation gauntil the current reduces and the motor does no stall.		
Motor fan error Check the status of the fan, or replace the fan.		fan, or replace the fan.		
	ced three-phase ace of the motor	Replace the motor.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
23	Fault EoL2 Thermal relay 2	Electronic thermal relay 2 protection (EoL2)	Electronic thermal relay 2 protection. The drive coasts to stop once it activates.	
		Action and	Reset	
	Action level	Start counting when out	put current > 105% of motor 2 rated current	
	Action time	within 60 sec., the coun	current is larger than 105% of motor 2 rated current again ting time reduces and is less than Pr. 06-28)	
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset in 5 sec. after the	e fault is cleared	
	Record	Yes		
<b>T</b> 1 1	Cause	<u> </u>	Corrective Actions	
	l is too large	Reduce the load		
	ecel. time or the working e too short		ues for Pr.01-12–01-19 (accel./decel. time)	
V/F volta	age is too high	Adjust the settings for Pr.01-01-08 (V/F curve), especially the setting value for the mid-point voltage (if the mid-point voltage is set too low, the load capacity decreases at low speed).  Refer to the V/F curve selection setting of Pr.01-43.		
Overload during low-speed operation. When using general motor, even it operates below rated current, an overload may still occur during low-speed operation.		Decrease low-speed operation time. Replace the drive with a dedicated to VFD model. Increase the motor capacity.		
When using VFD dedicated motors, Pr. 06-27=0 (electronic thermal relay selection motor 2 = 0 inverter motor)		Pr. 06-27=1 Electronic with fan on the shaft).	thermal relay selection motor 2 = standard motor (motor	
Incorrect thermal	t value of electronic relay	Reset to the correct mo	tor rated current.	
The max set too lo	kimum motor frequency is	Reset to the correct mo	tor rated frequency.	
One driv	re to multiple motors	motors Set Pr. 06-27=2 Electronic thermal relay selection motor 2 = disable, and inst thermal relay on each motor.		
Chock if the cotting for stall		<u>-</u>	ne stall prevention to the proper value.	
Torque compensation is too large		Adjust the torque compensation (refer to Pr.07-26 torque compensation gain) until the current reduces and the motor does no stall.		
Motor fa		Check the status of the		
	ced three-phase ace of the motor	Replace the motor.		

ID* Display on LCM Keypad	Fault Name	Fault Descriptions		
Fault oH3  Motor over heat	Motor overheating (oH3) PTC	Motor overheating (PTC) (Pr. 03-00 – Pr. 03-02=6 PTC), when PTC input > Pr. 06-30, the fault treatment acts according to Pr. 06-29.		
Action and Reset				
Action level	PTC input value > Pr. 0	6-30 setting (Default = 50%)		
Action time	Immediately act			
Fault treatment parameter	Pr. 06-29 0: Warn and keep operation			
Reset method	When Pr. 06-29=1 or 2,	B is a "Warning". The "Warning" is automatically cleared. oH3 is a "Fault". You must reset manually.		
Reset condition	Immediately reset			
Record	When Pr. 06-29=1 or 2,	oH3 is a "Fault", and the fault is recorded.		
Cause		Corrective Actions		
Motor shaft lock	Remove the shaft lock.			
The load is too large	Reduce the load. Increase the motor cap			
Ambient temperature is too high		ace if there are heating devices in the surroundings. or air conditioner to lower the ambient temperature.		
Motor cooling system error	Check the cooling syste	em to make it work normally.		
Motor fan error	Replace the fan.			
Operate at low-speed too long.	Decrease low-speed op Replace the motor with Increase the motor cap	a dedicated to VFD model.		
Accel./Decel. time and working cycle are too short	Increase the setting val	ues for Pr. 01-12-01-19 (accel./decel. time)		
V/F voltage is too high		1-01–01-08 (V/F curve), especially the setting value for if the mid-point voltage is set too low, the load capacity d).		
Check if the motor rated current matches that on the motor nameplate.	Reset to the correct motor rated current.			
Check if the PTC is properly set and wired.	Check the connection between PTC thermistor and the heat protection.			
Check if the setting for stall prevention is correct.	Set the stall prevention to the proper value.			
Unbalanced three-phase impedance of the motor	Replace the motor.			
Harmonics are too high.	Use remedies to reduce harmonics.			

ID* Display on LCM Keypad	Fault Name	Fault Descriptions		
Fault oH3 Motor over heat	Motor overheating (oH3) PT100	Motor overheating (PT100) (Pr. 03-00 – Pr. 03-02=11 PT100). When PT100 input > Pr. 06-57 (default = 7V), the fault treatment acts according to Pr. 06-29.		
	Action and	l Reset		
Action level	PT100 input value > Pr. 06-57 setting (default = 7V)			
Action time	Immediately act			
Fault treatment parameter	Pr. 06-29 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning			
Reset method	When Pr. 06-29=0 and cleared. When Pr. 06-29=1 or 2,	d the temperature < Pr. 06-56, oH3 is automatically oH3 is a "Fault". You must reset manually.		
Reset condition	Immediately reset			
Record	When Pr. 06-29=1 or 2,	oH3 is a "Fault", and the fault is recorded.		
Cause		Corrective Actions		
Motor shaft lock	Remove the shaft lock.			
The load is too large	Reduce the load. Increase the motor capa	acity.		
Ambient temperature is too high		lace If there are heating devices in the surroundings. or air conditioner to lower the ambient temperature.		
Motor cooling system error		em to make it work normally.		
Motor fan error	Replace the fan.			
Operate at low-speed too long	Decrease low-speed op Replace the motor with Increase the motor capa	a dedicated to VFD model.		
Accel./Decel. time and working cycle are too short	Increase the setting val	ues for Pr. 01-12–Pr.01-19 (accel./decel. time)		
V/F voltage is too high		1-01–01-08 (V/F curve), especially the setting value for f the mid-point voltage is set too low, the load capacity l).		
Check if the motor rated current matches that on the motor nameplate.	Reset to the correct motor rated current.			
Check if the PT100 is properly set and wired.	t Check connection of PT100 thermistor.			
Check if the setting for stall prevention is correct.	Set the stall prevention to the proper value.			
Unbalanced three-phase impedance of the motor	Replace the motor.			
Harmonics are too high	Use remedies to reduce harmonics.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
26	Fault ot1 Over torque 1	Over torque 1 (ot1)	When output current exceeds the over-torque detection level (Pr.06-07) and exceeds over-torque detection time (Pr.06-08), and when Pr.06-06 or Pr.06-09 is set to 2 or 4, the ot1 error displays.	
Action and Reset				
	Action level	Pr. 06-07		
	Action time	Pr. 06-08		
Fault	t treatment parameter	operation 2: Stop after Over-torqu 3: Continue operation a	fter Over-torque detection during constant speed e detection during constant speed operation fter Over-torque detection during RUN e detection during RUN	
	Reset method Reset condition	Auto When Pr. 06-06=1 or 3, ot1 is a "Warning". The warning is automatically cleared when the output current < (Pr. 06-07 – 5%)  Manual When Pr. 06-06=2 or 4, ot1 is a "Fault". You must reset manually.		
	Record	Immediately reset	70-2 of 4, of its a Fault . Tou must reset manually.	
	Active level		ot1 is a "Fault", and the fault is recorded.	
	Cause	Corrective Actions		
Incorrect	parameter setting	Reset Pr. 06-07 and Pr.	06-08	
	cal failure (e.g. ue, mechanical lock)	Remove the causes of	malfunction.	
The load	is too large	Reduce the load. Replace the motor with	a larger capacity model.	
	ecel. time and working too short	Increase the setting val	ues for Pr. 01-12–Pr. 01-19 (accel./decel. time)	
V/F volta	ge is too high	Adjust settings for Pr.01-01-08 (V/F curve), especially the setting value for the mid-point voltage (if the mid-point voltage is set too low, the load capacity decreases at low speed).		
	or capacity is too small	Replace the motor with	a larger capacity model.	
	during low-speed	Decrease low-speed op		
operation		Increase the motor capa		
-	ompensation is too large		pensation (refer to Pr.07-26 torque compensation gain) s and the motor does no stall.	
speed tra restart af	parameter settings for acking function (including ter momentary power loss art after fault)	1. Start the speed tra	settings for speed tracking. acking function. um current for Pr.07-09 speed tracking.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
27	Fault ot2 Over torque 2	Over torque 2 (ot2)	When output current exceeds the over-torque detection level (Pr.06-10) and exceeds over-torque detection time (Pr.06-11), and when Pr.06-09 is set to 2 or 4, the ot2 error displays.	
		Action and	Reset	
	Action level	Pr. 06-10		
	Action time	Pr. 06-11		
Fau	It treatment parameter	Pr. 06-09 0: No function 1: Continue operation after Over-torque detection during constant speed operation 2: Stop after Over-torque detection during constant speed operation 3: Continue operation after Over-torque detection during RUN 4: Stop after Over-torque detection during RUN		
	Reset method Reset condition	Auto When Pr. 06-09=1 or 3, ot2 is a "Warning". The warning is automatically cleared when the output current < (Pr. 06-10 – 5%).  Manual When Pr. 06-09=2 or 4, ot2 is a "Fault". You must reset manually.		
	Record	Immediately reset	75-2 of 4, otz is a Tault . Tou must reset manually.	
	Active level		ot2 is a "Fault", and the fault is recorded.	
	Cause	, ,	Corrective Actions	
Incorrect	t parameter setting	Reset Pr. 06-07 and Pr.		
Mechani	cal failure (e.g. que, mechanical lock)	Remove the causes of	malfunction.	
	l is too large.	Reduce the load. Replace the motor with	a larger capacity model.	
	ecel. time and working e too short		ues for Pr.01-12–01-19 (accel./decel. time).	
V/F volta	nge is too high	Adjust the settings for Pr.01-01-08 (V/F curve), especially the setting value for the mid-point voltage (if the mid-point voltage is set too low, the load capacity decreases at low speed).		
	or capacity is too small		a larger capacity model.	
	d during low-speed	Decrease low-speed op		
operatio	n	Increase the motor capa		
·	compensation is too large	Adjust the torque compensation (refer to Pr.07-26 torque compensation gain) until the current reduces and the motor does no stall.		
speed tra	r parameter settings for acking function (including t momentary power loss art after fault)	1. Start the speed tra	settings for speed tracking. acking function. um current for Pr.07-09 speed tracking.	

ID*	Display on LCM Keypad	Fau	It Name	Fault Descriptions
28	Fault uC Under current	_	er current (uC)	Low current detection
			Action and	Reset
	Action level	Pr. 06-71		
	Action time	Pr. 06-72		
Pr. 06-73 0: No function 1: warn and coast to stop 2: warn and ramp to stop by 2 <sup>nd</sup> deceleration time 3: warn and operation continue		p by 2 <sup>nd</sup> deceleration time		
	Reset method Reset condition	Auto  When Pr. 06-73=3, uC is a "Warning". The warning is automatical cleared when the output current > (Pr. 06-71+0.1A).  Manual When Pr. 06-73=1 or 2, uC is a "Fault". You must reset manually.		
	Record	Immediate		,
	Active level	When Pr.	06-71=1 or 2,	uC is a "Fault", and the fault is recorded.
	Cause	Corrective Actions		
Motor ca	able disconnection	Troubleshoot the connection between the motor and the load.		
Imprope protection	er setting of low-current on	Reset Pr. 06-71, Pr. 06-72 and Pr. 06-73 to proper settings.		
The load	d is too low	Check the load status. Check if the motor capacity matches the load.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
29	Fault  LMIT  Limit Error	Limit Error (LMIT)	When MIx=45 (forward run limit) or MIx=44 (backward run limit) act during operation, LMIT error shows.	
		Action and	d Reset	
	Action level	MIx=44 (backward run l	limit) or MIx=45(forward run limit)	
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
Reset method		Manual reset		
Reset condition		Immediately reset		
	Record	Yes		
Cause			Corrective Actions	
The limit ON/OFF switch is on incorrect position		Install the limit ON/OFF	switch to correct position.	
Decelera	ation time is too long,	Reduce deceleration tin	ne.	
causing limited p	•	Adjust setting values for brake level (Pr. 07-01 or the insert position on the brake unit).		
	or cannot stop due to tage stall prevention	Reset the over-voltage stall prevention.		
Malfunct	tion caused by interference	Verify wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
30	Fault cF1 EEPROM write err	EEPROM write error (cF1)	Internal EEPROM cannot be programmed	
		Action and	d Reset	
	Action level	Firmware internal detection		
	Action time	cF1 acts immediately when the drive detects the fault		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
Cause		Corrective Actions		
Internal program	EEPROM cannot be	exists, return to the fact	reset the parameter to the default setting, if cF1 still ory for repair. still exists, return to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions
31	Fault cF2 EEPROM read err	EEPROM read error (cF2)	Internal EEPROM cannot be read
		Action and	d Reset
	Action level	Firmware internal detection	
Action time		cF2 acts immediately when the drive detects the fault	
Fau	ılt treatment parameter	N/A	
	Reset method	Manual reset	
	Reset condition	Immediately reset	
	Record	Yes	
Cause		Corrective Actions	
Internal EEPROM cannot be read		exists, return to the fact	reset the parameter to the default setting, if cF2 still ory for repair. error still exists, return to the factory for repair.

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions
33	Fault cd1 las sensor err	U-phase error (cd1)	U-phase current detection error when power is ON
		Action and	d Reset
	Action level	Hardware detection	
Action time		cd1 acts immediately when the drive detects the fault	
Fau	ılt treatment parameter	N/A	
	Reset method	Power-off	
·	Reset condition	N/A	
	Record	Yes	
Cause			Corrective Actions
		Cycle the power. If cd1 still exists, return	to the factory for repair.

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
34	Fault cd2	V-phase error (cd2)	V-phase current detection error when power ON	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	cd2 acts immediately when the drive detects the fault		
Fau	ılt treatment parameter	N/A		
	Reset method	Power-off		
	Reset condition	N/A		
	Record	Yes		
Cause		Corrective Actions		
		Cycle the power. If cd2 still exists, return	to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
35	Fault cd3	W-phase error (cd3)	W-phase current detection error when power ON	
Action and Reset			d Reset	
	Action level	Hardware detection		
Action time		cd3 acts immediately when the drive detects the fault		
Fau	ılt treatment parameter	N/A		
	Reset method	Power-off		
	Reset condition	N/A		
	Record	Yes		
Cause		Corrective Actions		
Hardwa	re failure	Cycle the power. If cd3 still exists, return	to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
36	Fault Hd0 cc HW error	cc hardware failure (Hd0)	cc (current clamp) hardware protection error when power is ON	
		Action and	Reset	
	Action level	Hardware detection		
	Action time	Hd0 acts immediately when the drive detects the fault		
Fau	It treatment parameter	N/A		
	Reset method	Power-off		
	Reset condition	N/A		
Record		Yes		
Cause		Corrective Actions		
		Cycle the power. If Hd0 still exists, return	to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
37	Fault Hd1 Oc HW error	Oc hardware error (Hd1)	oc hardware protection error when power is ON	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	Hd1 acts immediately when the drive detects the fault		
Fau	ılt treatment parameter	N/A		
	Reset method	Power-off		
	Reset condition	N/A		
	Record	Yes		
Cause			Corrective Actions	
		Cycle the power. If Hd1 still exists, return	to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
38	Fault Hd2 Ov HW error	ov hardware error (Hd2)	ov hardware protection error when power is ON	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	Hd2 acts immediately when the drive detects the fault		
Fau	ılt treatment parameter	N/A		
	Reset method	Power-off		
	Reset condition	N/A		
	Record	Yes		
Cause		Corrective Actions		
Hardwa	re failure	Cycle the power. If Hd2 still exists, return	to the factory for repair.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
39	Fault Hd3 occ HW error	occ hardware error (Hd3)	Protection error of occ IGBT short-circuit detection when power is ON	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	Hd3 acts immediately when the drive detects the fault		
Fau	ılt treatment parameter	N/A		
	Reset method	Power-off		
	Reset condition	N/A		
Record		Yes		
Cause		Corrective Actions		
Hardware failure Cy		Cycle the power. If Hd3 still exists, return	to the factory for repair.	

ID* Display on LCM Keypad	Fault Name	Fault Descriptions	
Fault AUE Auto tuning error	Auto-tuning error (AUE)	Motor auto-tuning error	
	Action and	Reset	
Action level	Hardware detection		
Action time	Immediately act		
Fault treatment parameter	N/A		
Reset method	Manual reset		
Reset condition	Immediately reset		
Record	Yes		
Cause		Corrective Actions	
Press "STOP" key during	Re-execute auto-tuning.		
auto-tuning	3		
-	Check motor capacity a	ers, that is Pr. 01-01–Pr. 01-02.	
auto-tuning Incorrect motor capacity (too large	Check motor capacity a Set the correct paramet	ers, that is Pr. 01-01–Pr. 01-02.	
auto-tuning Incorrect motor capacity (too large or too small) and parameter setting	Check motor capacity a Set the correct paramet Set Pr.01-00 larger than	ers, that is Pr. 01-01–Pr. 01-02. motor rated frequency.	
auto-tuning Incorrect motor capacity (too large or too small) and parameter setting Incorrect motor wiring	Check motor capacity a Set the correct paramet Set Pr.01-00 larger than Check the wiring.	ers, that is Pr. 01-01–Pr. 01-02. motor rated frequency. otor shaft lock.	
auto-tuning Incorrect motor capacity (too large or too small) and parameter setting Incorrect motor wiring Motor shaft lock The electromagnetic contactor is ON at output side (U/V/W) of the	Check motor capacity a Set the correct paramet Set Pr.01-00 larger than Check the wiring. Remove the cause of make sure the electrom	ers, that is Pr. 01-01–Pr. 01-02. motor rated frequency. otor shaft lock.	

		<u> </u>
ID* Display on LCM Keypad	Fault Name	Fault Descriptions
Fault AFE PID Fbk error	PID loss ACI (AFE)	PID feedback loss (analog feedback signal is only valid when the PID function is enabled)
	Action and	d Reset
Action level	When the analog input	< 4mA (only detects 4–20mA analog input)
Action time	Pr. 08-08	
Fault treatment parameter	Pr. 08-09 0: warn and keep operation 1: warn and ramp to stop 2: warn and coast to stop 3: warn and operate at last frequency	
Reset method	is > 4mA, the	09=3 or 4, AFE is a "Warning". When the feedback signal "Warning" is automatically cleared. 09=1 or 2, AFE is a "Fault". You must reset manually.
Reset condition	Immediately reset	·
Record	When Pr 08-09=1 or 2 AFF is a "Fault" and the fault is recorded wh	
Cause	Corrective Actions	
PID feedback cable is loose or cut off	Tighten the terminal. Replace the cable with a new one.	
Feedback device failure	Replace the device with	n a new one.
Hardware failure	Check all the wiring. If A	AFE fault still exists, return to the factory for repair.

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
42	Fault PGF1 PG Fbk error	PG feedback error (PGF1)	The motor runs in a reverse direction to the frequency command direction.	
		Action and	d Reset	
	Action level	Software detection		
	Action time	Pr. 10-09		
Fault treatment parameter		Pr. 10-08 0: warn and keep operation 1: warn and ramp to stop 2: warn and coast to stop		
Reset method		Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
Incorrect parameter setting of encoder		Reset encoder parameter (Pr. 10-02).		
Check wiring of the encoder Re-wire the encoder.				
PG card	or PG encoder failure	Replace PG card or encoder with a new one.		
Malfunc	tion caused by interference	Verify wiring of the corprevent interference.	ntrol circuit and wiring/grounding of the main circuit to	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
43	Fault PGF2 PG Fbk loss	PG feedback loss (PGF2)	Pr. 10-00 and Pr. 10-02 is not set in the PG control mode. When press "RUN" key, PGF2 fault occurs.	
		Action and	d Reset	
	Action level	Software detection		
	Action time	Immediately act		
Fau	Ilt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause	Corrective Actions		
Incorrect setting of encoder parameter		Reset encoder parameters (Pr. 10-00 and Pr. 10-02)		
Incorrect selection of the control mode		Choose the correct control mode.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
44	Fault PGF3 PG Fbk over SPD	PG feedback stall (GF3)	Under PG mode, when the motor frequency exceeds the encoder observer stall level (Pr. 10-10) and starts to count, the fault time is longer than the detection time of encoder observer stall (Pr. 10-11), then PGF3 fault occurs.	
		Action and	Reset	
	Action level	Pr. 10-10		
	Action time	Pr. 10-11		
Fault treatment parameter		Pr. 10-12 0: warn and keep operation 1: warn and ramp to stop 2: warn and coast to stop		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
Incorrect paramet	t setting of encoder er	Reset encoder parameter (Pr. 10-01)		
Pr. 01-00 is set too small		Set proper value for Pr. 01-00.		
	t setting for ASR ers and accel./decel. time	Reset ASR parameters. Set correct accel./decel. time.		
Incorrect stall	t setting for PG feedback	Reset proper values for Pr. 10-10 and Pr. 10-11		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
יטו		I duit Ivaille	i aut Descriptions	
45	Fault PGF4 PG Fbk deviate	PG slip error (PGF4)	Under PG mode, when the motor frequency exceeds encoder observer slip range (Pr. 10-13) and starts to count, the fault time is longer than the detection time of encoder observer slip (Pr. 10-14), PGF4 fault occurs.	
L		Action and	Reset	
	Action level	Pr. 10-13		
	Action time	Pr. 10-14		
		Pr. 10-15		
Fault treatment parameter		0: warn and keep operation 1: warn and ramp to stop 2: warn and coast to stop		
	Reset method	When Pr. 10-15=0, PGF4 is a "Warning", when the deviation between output frequency and motor frequency is smaller than the encoder observer slip range, the warning is automatically cleared.		
		Manual When Pr. 10-15=1 or 2, PGF4 is a "Fault". You must reset manually.		
	Reset condition	Immediately reset		
	Record	When Pr. 10-15=1 or 2,	PGF4 is a "Fault", and the fault is recorded.	
	Cause		Corrective Actions	
Incorrect paramete	settings for PG feedback	Reset correct values for Pr. 10-13 and Pr. 10-14.		
	settings for ASR	Reset ASR parameters.		
paramete	ers and accel./decel. time	Set correct accel./decel time.		
Incorrect paramete	settings of encoder ers	Reset encoder parameters (Pr. 10-01).		
		Reset proper accel./decel. time.		
paramete 11-17–20		Reset proper setting va	lues for Pr. 06-12 and Pr. 11-17–Pr. 17-20.	
Motor sha	aft lock	Remove causes of motor shaft lock.		
Mechanic	cal brake is not released	Check the action sequence of the system.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
48	Fault ACE ACI loss	ACI loss (ACE)	Analog input loss (including all the 4–20mA analog signal)	
		Action and	d Reset	
	Action level	When the analog input i	s < 4mA (only detects 4–20mA analog input)	
	Action time	Immediately act		
Fault treatment parameter		Pr. 03-19 0: Disable 1: Continue operation at the last frequency (warning, ANL is displayed on the keypad) 2: Decelerate to stop (warning, ANL is displayed on the keypad) 3: Stop immediately and display ACE		
Reset method		Auto When Pr. 03-19=1 or 2, ACE is a "Warning". When analog input signal is > 4mA, the warning is automatically cleared.  Manual When Pr. 03-19=3, ACE is a "Fault". You must reset manually.		
	Reset condition	Immediately reset	,	
	Record When Pr. 03-19=3, ACE is a "Fault", and the fault is recorded.		is a "Fault", and the fault is recorded.	
Cause Corrective Actions		Corrective Actions		
ACI cable is loose or cut off		Tighten the terminal. Replace the cable with a new one.		
External	l device failure	Replace the device with a new one.		
Hardwa	Hardware failure Check all the wiring. If ACE still exists, return to the factory for repair.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
49	Fault  EF  External fault	External fault (EF)	External fault. When the drive decelerates based on the setting of Pr. 07-20, the EF fault displays on the keypad.	
		Action and	d Reset	
	Action level	MIx=EF and the MI tern	ninal is ON	
	Action time	Immediately act		
Fault treatment parameter		Pr. 07-20 0: Coast to stop 1: Stop by 1 <sup>st</sup> decelerati 2: Stop by 2 <sup>nd</sup> decelerati 3: Stop by 3 <sup>rd</sup> decelerati 4: Stop by 4 <sup>th</sup> decelerati 5: System deceleration 6: Automatic deceleration	ion time ion time on time	
Reset method		Manual reset		
Reset condition		Manual reset only after the external fault is cleared (terminal status is recovered)		
Record		Yes		
	Cause	Corrective Actions		
External fault		Press RESET key after the fault is cleared.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
50	Fault  EF1  Emergency stop	Emergency stop (EF1)	When the contact of MIx=EF1 is ON, the output stops immediately and displays EF1 on the keypad. The motor is in free running.	
		Action and	d Reset	
	Action level	MIx=EF1 and the MI ter	minal is ON	
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Manual reset only after the external fault is cleared (terminal status is recovered)		
	Record	Yes		
	Cause	Corrective Actions		
When MIx=EF1 activates		Verify if the system is back to normal condition, and then press "RESET" key to go back to the default.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
51	Fault bb Base block	External base block (bb)	When the contact of MIx=bb is ON, the output stops immediately and displays bb on the keypad. The motor is in free running.	
		Action and	d Reset	
	Action level	MIx=bb and the MI terminal is ON		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	The display "bb" is automatically cleared after the fault is cleared.		
	Reset condition	N/A		
Record		No		
	Cause	Corrective Actions		
When MIx=bb activates		Verify if the system is back to normal condition, and then press "RESET" key to go back to the default.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
52	Fault Pcod Password error	Password is locked (Pcod)	Entering the wrong password three consecutive times	
		Action and	d Reset	
	Action level	Entering the wrong pas	sword three consecutive times	
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Power-off		
	Record	Yes		
	Cause		Corrective Actions	
Incorrec Pr. 00-0	et password input through 7	<ol> <li>Input the correct password after rebooting the motor drive.</li> <li>If you forget the password, do the following steps:         Step 1: Input 9999 and press ENTER.         Step 2: Repeat step 1. Input 9999 and press ENTER.         (You need to finish step 1 and step 2 within 10 seconds. If you don't finish the two steps in 10 seconds, try again.)</li> <li>The parameter settings return to the default when the "Input 9999" process is finished.</li> </ol>		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
54	Fault CE1 PC err command	Illegal command (CE1)	Communication command is illegal	
		Action and	Reset	
	Action level	When the function code	is not 03, 06, 10, or 63.	
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	No		
	Cause		Corrective Actions	
Incorrect communication command from the upper unit  Check if the communication command is correct.		ation command is correct.		
Malfunction caused by interference to separ		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.		
	t communication setting upper unit	Check if the setting for Pr.09-02 is the same as the setting for the upper unit.		
Disconn of the ca	ection or bad connection able	Check the cable and replace it if necessary.		

.=.				
ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
55	Fault CE2 PC err address	Illegal data address (CE2)	Data address is illegal	
		Action and	d Reset	
	Action level	When the data address	is correct.	
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	No		
	Cause		Corrective Actions	
	et communication and from the upper unit	Check if the communication	ation command is correct.	
Malfunction caused by interference		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.		
from the	t communication setting e upper unit	Check if the setting for Pr.09-02 is the same as the setting for the upper unit.		
Disconnection or bad connection of the cable  Check the cable and replace it if necessary.		place it if necessary.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
56	Fault CE3 PC err data	Illegal data value (CE3)	Data value is illegal	
		Action and	d Reset	
	Action level	When the data length is	too long	
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	No		
	Cause		Corrective Actions	
	Incorrect communication Check if the communication		ation command is correct.	
Verify the wiring and grounding of the communication circuit. It is recommunication caused by interference to separate the communication circuit from the main circuit, or wire in 90 for effective anti-interference performance.		nication circuit from the main circuit, or wire in 90 degree		
	t communication setting upper unit	Check if the setting for Pr.09-02 is the same as the setting for the upper unit.		
Disconn of the ca	ection or bad connection able	Check the cable and replace it if necessary.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
57	Fault CE4 PC slave fault	Data is written to read-only address (CE4)	Data is written to read-only address	
		Action and	d Reset	
	Action level	When the data is writter	n to read-only address.	
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
Record		No		
	Cause		Corrective Actions	
	et communication and from the upper unit	Check if the communication	ation command is correct.	
Verify the wiring and grounding of the communication circuit. It is recommunication caused by interference to separate the communication circuit from the main circuit, or wire in 90 for effective anti-interference performance.		nication circuit from the main circuit, or wire in 90 degree		
	t communication setting upper unit	Check if the setting for Pr.09-02 is the same as the setting for the upper unit.		
Disconn of the ca	ection or bad connection able	Check the cable and replace it if necessary.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
58	Fault CE10 PC time out	MODBUS transmission time-out (CE10)	MODBUS transmission time-out occurs	
_		Action and	d Reset	
	Action level	When the communication	on time exceeds the detection time for Pr.09-03 time-out.	
	Action time	Pr. 09-03		
Fau	llt treatment parameter	Pr. 09-02 0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning and continue operation		
Reset method		Manual reset	•	
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
the com	er unit does not transmit munication command r.09-03 setting time.	Check if the upper unit transmits the communication command within the setting time for Pr.09-03.		
Malfunction caused by interference		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degrees for effective anti-interference performance.		
Different communication setting from the upper unit		Check if the setting for Pr.09-02 is the same as the setting for the upper unit.		
Disconnection or bad connection of the cable		Check the cable and re	place it if necessary.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
60	Fault  bF  Braking fault	Brake transistor error (bF)	The brake transistor of the motor drive is abnormal. (for the models with built-in brake transistor)	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
Hardware error		<ol> <li>Press "RESET" key to go back to the default. If bF still exists, return to the factory for repair.</li> <li>Power off the motor drive since the internal circuit is abnormal. Use a meter to check if it is short-circuit between B2 to DC If short-circuit exists, return to the factory for repair.</li> </ol>		
Malfunction caused by interference		Verify wiring/grounding of the main circuit to prevent interference.		
Using the incorrect brake resistor		Check if the resistance value of the brake resistor matches to the drive.		
Incorrect wiring of the brake resistor		Refer to the optional ac	cessories instruction in chapter 7, and verify the wiring.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
61	Fault ydc Y-delta connect	Y-connection / Δ-connection switch error (ydc)	An error occurs when Y-Δ switches	
		Action and	Reset	
	Action level	are conducted at the	e confirmation signals of Y-connection and Δ-connection e same time. n signals is not conducted within Pr. 05-25, ydc occurs.	
	Action time	Pr. 05-25	· ·	
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition		the confirmation signal of Y-connection is conducted if it n the confirmation signal of $\Delta$ -connection is conducted if	
	Record	Yes		
	Cause		Corrective Actions	
	ctromagnetic valve s incorrectly during Y-∆	Check if the electromagnetic valve works normally. If not, replace it.		
Incorrec	t parameter setting	Check if related parameters are all set up and set correctly.		
The wiri	ng of Y- $\Delta$ switch function is t	Check the wiring.		

ID*	Display on LCM Keypad	Fai	ult Name	Fault Descriptions	
טו		I at	uit ivairie	l aut Descriptions	
62	Fault dEb Dec. Energy back	bac	ration energy kup error (dEb)	When Pr. 07-13 is not 0, and the power is suddenly off, causing the DCBUS voltage lower than the dEb action level, the dEb function acts and the motor ramps to stop. Then dEb displays on the keypad.	
			Action and	d Reset	
	Action level	When Pr	. 07-13 is not 0	, and the DCBUS voltage is lower than the level of dEb.	
	Action time	Immedia	tely act		
Fau	It treatment parameter	N/A			
	Reset method		When Pr. 07-13=2 (dEb with auto-acceleration / auto-deceleration, the drive outputs the frequency after the power is restored): dEb is automatically cleared.		
			Hand When Pr. 07-13=1 (dEb with auto-acceleration / auto-deceleration, the drive does not output the frequency after the power is restored): The drive stops when dEb acts and the rotation speed becomes 0 Hz, then the drive can be reset manually.		
	Reset condition	Auto: The fault is automatically cleared. Hand: When the drive decelerates to 0 Hz.			
	Record	Yes			
	Cause		Corrective Actions		
power is	nstable power source or the ower is off  Check the power system.				
	any other large load s in the power system	<ol> <li>Replace power system with a larger capacity.</li> <li>Use a different power system from the large load system.</li> </ol>			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
63	Fault  oSL  Over slip error	Over slip error (oSL)	On the basis of the maximum slip limit set via Pr. 10-29, the speed deviation is abnormal. When the motor drive outputs at constant speed, F>H or F <h 07-29,="" 07-30,="" and="" exceeds="" in="" induction="" it="" level="" motors="" occurs="" only.<="" osl="" pr.="" set="" shows.="" td="" the="" time="" via=""></h>	
		Action and	d Reset	
	Action level	Pr. 07-29 100% of Pr. 07-29 = the	e maximum limit of the slip frequency (Pr. 10-29)	
	Action time	Pr. 07-30		
Fault treatment parameter		Pr. 07-31 0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning		
	Reset method	does not exce be cleared au	otor drive outputs at constant speed, and F>H or F <h 07-29="" anymore,="" eed="" level="" osl="" pr.="" set="" td="" the="" via="" warning="" will<=""></h>	
	Reset condition	Immediately reset		
	Record	Pr. 07-31=1 or 2, oSL is	s "Fault", and will be recorded.	
	Cause		Corrective Actions	
	he motor parameters in ter group 5 may be t	Check the motor parameters		
Overloa		Decrease the load		
Any of the setting value of Pr. 07-29, 07-30, and 10-29 is Check the setting of oS improper		Check the setting of oS	L protection function related parameters	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
64	Fault ryF MC Fault	Electric valve switch error (ryF)	Electric valve switch error when executing Soft Start	
		Action and	d Reset	
	Action level	Hardware detection (Fra	ame D and above)	
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset when the electric valve switch is correctly closed		
	Record	Yes		
	Cause	Corrective Actions		
The input power is abnormal		Check if the power is shut down during the drive operation? Check if the three-phase input power is normal.		
Malfunction caused by interference		Verify the wiring/grounding of the main circuit to prevent interference.		
Hardware failure		Cycle the power after checking the power. If ryF error still exists, return to the factory for repair.		

ID* Display on LCM Keypad	Fault Name	Fault Descriptions	
Fault PGF5 PG HW Error	Hardware error of PG card (PGF5)	Hardware error of PG card	
	Action and	d Reset	
Action level	<ol> <li>The PG card (PG01U/PG02U) can only be used with the permanent magnetic motor. When the power is ON and Pr. 00-04=29 pole section shows 0 or 7 (wiring error or no U/V/W signal input), the PGF5 error will be activated.</li> <li>The drive receives the operation command right after the power is ON, meanwhile, the PG card is not ready yet.</li> </ol>		
Action time	Immediately act		
Fault treatment parameter	N/A		
Reset method	Manual reset		
Reset condition	Reset after cycle the power.		
Record	Yes		
Cause		Corrective Actions	
Wiring error or there is no U/V/W signal input Re-connect the cables correctly			
Encoder failure	Verify if it is the UVW encoder		
The setting of encoder parameter is incorrect	Choose the correct setting of Pr. 10-00		
If the motor selection switch of PG card on the correct position  Check if it is the UVW encoder or Delta encoder			
PG card selection is incorrect			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
68	Fault SdRv SpdFbk Dir Rev	Reverse direction of the speed feedback (SdRv)	Rotating direction is different from the commanding direction detected by the sensorless	
		Action and	d Reset	
	Action level	Software detection		
	Action time	Pr. 10-09		
Fau	It treatment parameter	Pr. 10-08 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
Record		When Pr. 10-08=1 or 2,	SdRv is a "Fault", and the fault is recorded.	
Cause			Corrective Actions	
The setting of Pr.10-25 FOC bandwidth of speed observer is improper		Decrease the setting of	Pr. 10-25	
The sett incorrect	ing of motor parameter is t	Reset the motor parameter and execute parameter tuning		
The motor cable is abnormal or broken		Check if the cable is well functioned or replace the cable		
	e force is exerted, or the ns in a reverse direction at	Start speed tracking fun	action (Pr. 07-12)	
Malfunct	tion caused by interference	Verify the wiring of the prevent interference.	control circuit and wiring/grounding of the main circuit to	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
69	Fault SdOr SpdFbk over SPD	Over speed rotation feedback (SdOr)	Over speed rotation detected by sensorless	
		Action and	Reset	
	Action level	Pr. 10-10		
	Action time	Pr. 10-11		
Fau	ılt treatment parameter	Pr. 10-12 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	When Pr. 10-12=1 or 2, SdOr is a "Fault", and the fault is recorded.		
	Cause		Corrective Actions	
The setting of Pr. 10-25 FOC bandwidth of speed observer is improper		Decrease the setting of	Pr. 10-25	
speed c	ing of ASR bandwidth of ontroller is improper	Increase the bandwidth of ASR speed controller		
The sett incorrec	ing of motor parameter is t	Reset motor parameter and execute parameter tuning		
Malfunc	tion caused by interference	Verify the wiring of the prevent interference.	control circuit and wiring/grounding of the main circuit to	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
70	Fault SdDe SpdFbk deviate	Large deviation of speed feedback (SdDe)	A large deviation between the rotating speed and the command detected by the sensorless	
		Action and	Reset	
	Action level	Pr. 10-13		
	Action time	Pr. 10-14		
		Pr. 10-15		
Fau	It treatment parameter	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	When Pr. 10-15=1 or 2, SdDe is a "Fault", and the fault is recorded.		
Cause			Corrective Actions	
abnorma	r parameter setting for al rotating slip function	Reset proper setting for	Pr. 10-13 and Pr. 10-14	
Imprope	r parameter setting for	Reset ASR parameters		
	d acceleration/deceleration	Set proper acceleration/deceleration time		
The acce	eleration/deceleration time ort	Reset proper accelerati	on/deceleration time	
Motor sh	naft lock	Remove the cause of m	notor shaft lock	
The mechanical brake is not released  Verify the system action timeline			timeline	
	t parameter setting for mit (Pr. 06-12, Pr. 11-17 –			
Malfunct	tion caused by interference	Verify the wiring of the prevent interference.	control circuit and wiring/grounding of the main circuit to	

ID*	D'anterior LONGIC	FIt NI	F4-D	
ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
71	Fault WDTT Watchdog	Watchdog(WDTT)	Watchdog error	
		Action and	Reset	
	Action level	Hardware detection		
	Action time	N/A		
Fau	ılt treatment parameter	N/A		
	Reset method	Hardware failure, and c	annot reset. Cycle the power.	
	Reset condition	N/A		
Record		Yes		
Cause		Corrective Actions		
Hardware interference		Verify the wiring of the control circuit and wiring/grounding of the main circuit to prevent interference.  If the WDTT fault still exists, return to the factory for repair.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
72	Fault STL1 STO Loss 1	STO Loss 1 (STL1)	STO1 – SCM1 internal loop detection error	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	lt treatment parameter	N/A		
	Reset method	Hardware failure, and cannot reset. Cycle the power.		
	Reset condition	N/A		
Record		Yes		
	Cause		Corrective Actions	
	nd SCM1 short circuit lines connected	Connect the short circui	t line	
Hardware failure		After you make sure all the wiring is correct, if STOL fault still exists after cycling the power, please return to the factory for repair.		
Bad con	nection of the IO card	Check if the PIN of IO c Check if the IO card co are tightened well?	ard is broken? onnects to the control board correctly, and if the screws	
The IO card does not match the version of the control board  Contact local agent or Delta			Pelta	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
73	Fault S1-emergy stop	Emergency stop for external safety (S1)	Emergency stop for external safety	
		Action and	Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Reset only after S1 error is cleared.		
	Record	Yes		
Cause			Corrective Actions	
The swit (OPEN)	tch action of S1 and SCM	Reset the switch and cycle the power.		
S1 and S	SCM short circuit lines are nected	Re-connect the short circuit lines		
Malfunct	tion caused by interference	Verify the wiring/grounding of the main circuit, control circuit and encoder to prevent interference.		
Hardware failure		If S1 fault still exists after cycling the power, please return to the factory for repair.		
	Check if the PIN of IO card is broken?  Poor connection of the IO card  Check if the PIN of IO card is broken?  Check if the IO card connects to the control board correctly, and if the sc are tightened well?			
1	card does not match the of the control board	Contact local agent or Delta		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
75	Fault Brk EXT-Brake Error	External brake error (Brk)	External mechanical brake error The MO terminal is active when MOx=12, 42, 47 or 63, but the MIx=55 does not receive signal for mechanical brake action during the set time of Pr. 02-56.	
		Action and	Reset	
		MIx=55 did not receive of Pr. 02-56.	signal for the mechanical brake action during the set time	
	Action time	Pr. 02-56		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
Reset condition		Immediately reset		
Record Yes				
Cause			Corrective Actions	
Mechani	ical brake error	Verify if the mechanical brake can work correctly.  Replace mechanical brake.		
Incorrec	t parameter setting	If there is no brake-conf	firming signal to use, set Pr. 02-56=0.	
Signal cable is loose or cut off  Tighten the screws.  Replace the signal cable with a new one.		e with a new one.		
The time short	e of Pr. 02-56 is set too	Increase the time setting of Pr. 02-56		
Malfunction caused by interference Verify the wiring/groundin prevent interference.			ding of the main circuit, control circuit and encoder to	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
76	Fault STO	STO (STO)	Safety Torque Off function active	
		Action a	nd Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Auto When Pr. 06-44=1 and after STO error is cleared, it automatically resets.		
	Deart condition	Manual When Pr. 06-44=0 and after STO error is cleared, reset it manually.  Reset only after STO error is cleared.		
	Reset condition	•	error is cleared.	
	Record	Yes		
	Cause		Corrective Actions	
	ch action of STO1/SCM1 02/SCM2 (OPEN)	Reset the switch (ON) and cycle the power		
Poor cor	nnection of the IO card	Check if the PIN of IO card is broken?  Check if the IO card connects to the control board correctly, and if the screws are tightened well?		
	eard does not match the of the control board	Contact local agent or Delta		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
77	Fault STL2 STO Loss 2	STO Loss 2 (STL2)	STO2–SCM2 internal loop detection error	
		Action and	Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Hardware failure, and cannot reset. Cycle the power.		
Reset condition		N/A		
	Record	Yes		
	Cause		Corrective Actions	
	nd SCM2 short circuit lines connected	Connect the short circuit	it lines	
Hardware failure		After you make sure all the wiring is correct, if STL2 fault still exists after cycling the power, please return to the factory for repair.		
Check if the PIN of IO card is broken?  Poor connection of the IO card  Check if the PIN of IO card is broken?  Check if the IO card connects to the control board correctly, and if are tightened well?				
The IO card does not match the version of the control board  Contact local agent or Delta		Delta		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
78	Fault STL3 STO Loss 3	STO Loss 3 (STL3)	STO1–SCM1 and STO2–SCM2 internal loop detection error	
		Action and	d Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Hardware failure, and cannot reset. Cycle the power.		
	Reset condition	N/A		
	Record	Yes		
Cause			Corrective Actions	
STO1 and SCM1, or STO2 and SCM2 short circuit lines are not connected		Re-connect the short circuit lines		
Hardware failure		After you make sure all the wiring is correct, if STL3 fault still exists after cycling the power, please return to the factory for repair.		
Poor connection of the IO card		Check if the PIN of IO card is broken? Check if the IO card connects to the control board correctly, and if the screws are tightened well?		
The IO card does not match the version of the control board  Contact local agent or Delta		Delta		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
82	Fault OPHL U phase lacked	Output phase loss U phase (OPHL)	U phase output phase loss	
		Action and	Reset	
	Action level	Pr. 06-47		
Action time			ng value of Pr. 06-48 first if there is DC braking function, that of Pr. 06-46.	
Fault treatment parameter		Pr.06-45 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning		
Reset method Manual reset				
	Reset condition Immediately reset			
	Record	Pr. 06-45=1 or 2 is "Fau	ılt", and will be recorded.	
	Cause		Corrective Actions	
	ee-phase impedance of unbalanced	Replace the motor.		
The mot	tor is wired incorrectly	Check the cable condition. Replace the cable.		
Using a single-phase motor Choose a three-phase motor		notor		
	rent sensor is damaged	Check the flat cable of the control board. Re-do the wiring and test again if the flat cable is loose. If the fault still exists, return the unit to the factory. Verify that the three-phase current is balanced via a current clamp meter. If it is balanced and the OPHL fault still exists, return the unit to the factory		
	re capacity is much larger emotor capacity	Make sure the capacity of the drive and motor match to each other.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
83	Fault OPHL V phase lacked	Output phase loss V phase (OPHL)	V phase output phase loss	
		Action and	Reset	
	Action level	Pr. 06-47		
	Action time	activates, us	etting value of Pr. 06-48 first. If DC braking function e that of Pr. 06-46.	
Fault treatment parameter		Pr. 06-45 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning		
Reset method		Manual reset		
	Reset condition	Immediately reset		
	Record	When Pr. 06-45=1 or 2, OPHL is a "Fault", and the fault is recorded.		
	Cause		Corrective Actions	
Unbalanced three-phase impedance of the motor Replace the motor.				
Check if	the wiring is incorrect	Check the cable and re	place it if necessary.	
	Check if the motor is a Choose a three-phase motor.		motor.	
	the current sensor is	Check if the control board cable is loose. If yes, reconnect the cable and run the drive to test. If the fault still exists, return to the factory for repair.  Check if the three-phase current is balanced with a current clamp meter. If the current is balanced and the OPHL fault still exists, return to the factory for repair.		
	the drive capacity is larger motor capacity	Choose the drive that m	natches the motor capacity	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
84	Fault  OPHL  W phase lacked	Output phase loss W phase (OPHL)	W phase output phase loss	
		Action and	Reset	
	Action level	Pr. 06-47		
Action time			etting value of Pr. 06-48 first. If DC braking function e that of Pr. 06-46.	
Fault treatment parameter		Pr. 06-45 0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning		
	Reset method Manual reset			
	Reset condition	Immediately reset		
	Record	When Pr. 06-45=1 or 2,	OPHL is a "Fault", and the fault is recorded.	
	Cause	Corrective Actions		
	nced three-phase nce of the motor	Replace the motor.		
Check if	the wiring is incorrect	Check the cable and re	place it if necessary.	
_	the motor is a hase motor	Choose a three-phase motor.		
Check if	the current sensor is	Check if the control board cable is loose. If yes, reconnect the cable and run the drive to test. If the fault still exists, return to the factory for repair.  Check if the three-phase current is balanced with a current clamp meter. If the current is balanced and the OPHL fault still exists, return to the factory for repair.		
	the drive capacity is larger motor capacity			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
85	Fault AboF PG ABZ Line off	PG ABZ line off (AboF)	The ABZ line off for protection when using PG02U	
		Action and	Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
Cause			Corrective Actions	
	signal cable is not ed or cut off	Check the PG signal cable		
PG card	l screw is loose	Tighten all the screws		
Malfunc	tion caused by interference	Verify the wiring/groun- prevent interference.	ding of the main circuit, control circuit and encoder to	
Hardware failure		<ol> <li>After you check the wiring, if AboF fault still exists after cycle the power, return to the factory for repair.</li> <li>Check if the VP power of PG card has no output, or the output voltage level is abnormal.</li> <li>Check if the encoder is broken.</li> </ol>		
Encoder wiring is too long, causing large voltage drop of PG card VP power.		Decrease the wiring length.     Power on the encoder by other power sources.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
86	Fault UvoF PG UVW Line off	PG UVW line off (UvoF)	UVW line off for protection when using PG02U	
		Action and	Reset	
	Action level	Hardware detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
	signal cable is not ed or cut off	Check the PG signal cable		
PG card	d screw is loose	Tighten all the screws		
Malfunc	tion caused by interference	Verify the wiring/ground prevent interference.	ding of the main circuit, control circuit and encoder to	
Hardware failure		<ol> <li>After you check the wiring, if AboF fault still exists after cycle the power, return to the factory for repair.</li> <li>Check if the VP power of PG card has no output, or the output voltage level is abnormal.</li> <li>Check if the encoder is broken.</li> </ol>		
liarde Voltade drop of PL - card VP				

	•		,	
ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
87	Fault oL3 Derating Error	Overload protection at low frequency (oL3)	Low frequency and high current protection	
		Action and	d Reset	
	Action level	Software detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
frequent 15 Hz; L	Low HP: below 5 Hz) and mperature (High HP: 20°C;	4. If the drive operates in V/F control mode, reduce the output voltage for		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
89	яшто Fault RoPd Rotor Pos. Error	Rotor position detection error (RoPd)	Rotor position detection error protection	
		Action and	d Reset	
	Action level	Reset the software		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause		Corrective Actions	
Check if the motor cable is abnormal or broken		Check or replace the cable.		
Motor coil error		Replace the motor.		
Hardware failure		IGBT broken. Return to the factory for repair.		
Drive's current feedback line error		Cycle the power. If RoPd still occurs during operation, return to the factory for repair.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
90	Fault Fstp Force Stop	Force to stop (FStp)	Keypad forces PLC to Stop		
Action and Reset					
Action level		When Pr. 00-32=1, STOP button on the keypad is valid. When giving the STOP command during the PLC operation, FStp fault will active.			
Action time		Immediately act			
Fault treatment parameter		N/A			
Reset method		Manual reset			
Reset condition		Immediately reset			
Record		Yes			
Cause		Corrective Actions			
Pr. 00-32=1: keypad STOP button is valid		Check if it is necessary to set Pr. 00-32=0, so the keypad STOP button is invalid.			
Press STOP button during PLC operation		Verify the timing of STOP function.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
93	Fault TRAP CPU Trap 0 error	CPU error 0 (TRAP)	CPU crash		
Action and Reset					
Action level		Hardware detection			
Action time		Immediately act			
Fault treatment parameter		N/A			
Reset method		Cannot reset, power off.			
Reset condition		N/A			
Record		Yes			
Cause		Corrective Actions			
Hardware interference		Verify the wiring of control circuit, and the wiring/grounding of the main circuit to prevent interference.  If TRAP fault still exists, return to the factory for repair.			
Hardware failure		Return to the factory for repair.			
CPU is in an infinite loop		Cycle the power. If the TRAP fault still exists, return to the factory for repair.			

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions			
101	Fault  CGdE  Guarding T-out	CANopen guarding error (CGdE)	CANopen guarding error			
	Action and Reset					
Action level		When CANopen Node Guarding detects that one of the slaves does not response, the CGdE fault will activate.  The upper unit sets factor and time during configuration.				
Action time		The time that upper unit sets during configuration				
Fault treatment parameter		N/A				
Reset method		Manual reset				
Reset condition		The upper unit sends a reset package to clear this fault				
Record		Yes				
Cause		Corrective Actions				
The guarding time is too short, or less detection times		Increase the guarding time (Index 100C) and detection times				
Malfunction caused by interference		<ol> <li>Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.</li> <li>Make sure the communication circuit is wired in series.</li> <li>Use CANopen cable or add terminating resistance.</li> </ol>				
Commur bad con	nication cable is broken or nected	Check or replace the communication cable.				

# Chapter 14 Fault Codes and Descriptions | C2000

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
102	Fault  CHbE  Heartbeat T-out	CANopen heartbeat error (CHbE)	CANopen heartbeat error	
		Action and	Reset	
Action level		response, the CHbE fau	eat detects that one of the slaves does not ult will activate. ne confirming time of producer and consumer during	
	Action time	The confirming time that upper unit sets for producer and consumer during configuration.		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	The upper unit sends a	reset package to clear this fault	
	Record	Yes		
	Cause	Corrective Actions		
The hea	rtbeat time is too short	Increase heartbeat time (Index 100C)		
Malfunction caused by interference		recommended to se or wire in 90 degree 2. Make sure the com	and grounding of the communication circuit. It is eparate the communication circuit from the main circuit, of for effective anti-interference performance. munication circuit is wired in series. The or add terminating resistance.	
Commu bad con	nication cable is broken or nected	Check or replace the co	mmunication cable.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
104	Fault CbFE Can bus off	CANopen bus off error (CbFE)	CANopen bus off error	
		Action and	Reset	
		Hardware When CANo	pen card is not installed, CbFE fault will occur.	
	Action level	Software fault will occur Too much in When the C		
	Action level	Immediately act		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Cycle the power		
	Record	Yes		
	Cause		Corrective Actions	
Check if installed	the CANopen card is	Make sure the CANope	n card is installed.	
Check if is correct	the CANopen speed t	Reset CANopen speed (Pr. 09-37)		
1. Verify the wiring and grounding of the communication circuit recommended to separate the communication circuit from the mature or wire in 90 degree for effective anti-interference performance.  2. Make sure the communication circuit is wired in series.  3. Use CANopen cable or add terminating resistance.		eparate the communication circuit from the main circuit, for effective anti-interference performance. munication circuit is wired in series.		
Communication cable is broken or bad connected  Check or replace the communication cable.		mmunication cable.		

ID*	Dianlay on LCM Kaynad	Fault Name	Foult Descriptions	
טו	Display on LCM Keypad	Fault Name	Fault Descriptions	
105	Fault CldE Can bus Index Err	CANopen index error (CldE)	CANopen index error	
		Action and	Reset	
	Action level	Software detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Upper unit sends a reset package to clear this fault		
Record		Yes		
Cause		Corrective Actions		
Incorrect setting of CANopen index		Reset CANopen Index (Pr. 00-02=7)		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
106	Fault CAdE Can bus Add. Err	CANopen station address error (CAdE)	CANopen station address error (only supports 1 – 127)	
		Action and	d Reset	
	Action level	Software detection		
Action time		Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset (Pr. 00-02	=7)	
	Reset condition	N/A		
Record		Yes		
Cause		Corrective Actions		
Incorrect setting of CANopen station address		<ol> <li>Disable CANopen (Pr. 09-36=0)</li> <li>Reset CANopen (Pr. 00-02=7)</li> <li>Reset CANopen station address (Pr. 09-36)</li> </ol>		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
107	Fault  CFrE  Can bus off	CANopen memory error (CFrE)	CANopen memory error	
		Action and	d Reset	
	Action level	When the user update firmware version of the control board, the FRAM internal data will not be changed, and then CFrE fault will occur.		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Pr. 00-02=7		
	Record	Pr. 00-21=3, the fault is recorded		
Cause		Corrective Actions		
CANopen internal memory error		<ol> <li>Disable CANopen (Pr. 09-36=0)</li> <li>Reset CANopen (Pr. 00-02=7)</li> <li>Reset CANopen station address (Pr. 09-36)</li> </ol>		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
111	Fault ictE InrCom Time Out	InrCOM time-out error (ictE)	Internal communication time-out	
		Action and	l Reset	
	Action level		re is no -9), when the internal communication between normal, lctE fault will occur.	
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Automatically reset afte	r the internal communication is normal	
	Reset condition	N/A		
	Record	Yes		
	Cause		Corrective Actions	
Malfunction caused by interference		Verify the wiring and grounding of the communication circuit. It is recommended to separate the communication circuit from the main circuit, or wire in 90 degree for effective anti-interference performance.		
	nmunication condition is t with the upper unit	Verify the setting of Pr. 09-02 is the same as the setting of upper unit.		
Communication cable is broken or bad connected  Check or replace the communication cable.		mmunication cable.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
112	Fault SfLK PMLess Shaft Lock	PMLess shaft lock (SfLK)	The drive has RUN command with output frequency, but the permanent magnetic motor does not turn.	
		Action and	d Reset	
	Action level	Software detection		
	Action time	3 sec.		
Fau	It treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause	Corrective Actions		
Improper setting of the speed observer bandwidth		Increase the setting value.		
Motor shaft lock		Remove causes of the motor shaft lock.		
Motor error (e.g. demagnetization)		Replace the motor with a new one.		

# Chapter 14 Fault Codes and Descriptions | C2000

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
142	Fault AUE1 Auto tuning Err	Auto-tune error 1 (AUE1)	No feedback current error when motor parameter automatically detects	
		Action and	Reset	
	Action level	Software detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
Cause			Corrective Actions	
Motor is not wired		Wire the motor correctly		
The electromagnetic contactor is used as an open state on the output side of the drive (U/V/W).		Verify that the electroma	agnetic valve is closed.	

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions		
143	Fault AUE2 Auto tuning Err	Auto-tune error 2 (AUE2)	Motor phase loss error when motor parameter automatically detects		
		Action and	d Reset		
	Action level	Software detection			
	Action time	Immediately act			
Fau	It treatment parameter	N/A			
	Reset method	Manual reset			
	Reset condition	Immediately reset			
	Record	Yes			
	Cause		Corrective Actions		
Incorrec	t motor wiring	Wire the motor correctly.			
Motor error		Check if the motor works normally.			
The electromagnetic contactor is					
used as an open state on the		Verify that the three-phases of the electromagnetic valve are all closed.			
output side of the drive (U/V/W).					
Motor U	/V/W wire error	Check if the wires are b	roken.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
144	Fault AUE3 Auto tuning Err	Auto-tune error 3 (AUE3)	No load current l₀ measurement error when motor parameter automatically detects.	
-		Action and	Reset	
	Action level	Software detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
	Cause	Corrective Actions		
Incorrect settings for the motor parameter (rated current)  Check the settings for		Check the settings for F	Pr. 05-01 / Pr. 05-13 / Pr. 05-34.	
Motor error C		Check if the motor works normally.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
148	Fault AUE4 Auto tuning Err	Auto-tune error 4 (AUE4)	Leakage inductance Lsigma measurement error when motor parameter automatically detects.	
		Action and	Reset	
	Action level	Software detection		
	Action time	Immediately act		
Fau	ılt treatment parameter	N/A		
	Reset method	Manual reset		
	Reset condition	Immediately reset		
	Record	Yes		
Cause		Corrective Actions		
Motor error		Check if the motor works normally.		
Incorrect setting of motor parameters (base frequency)		Check the setting of Pr. 01-01.		

ID*	Display on LCM Keypad	Fault Name	Fault Descriptions	
170	Fault  CBM  C/B Mismatch	C/B mismatch (CBM)	Control board matching error	
		Action and	d Reset	
	Action level	N/A		
	Action time	Acts when turning on the drive		
Fau	It treatment parameter	N/A		
	Reset method	Cannot reset		
·	Reset condition	Cannot reset		
Record		Yes		
Cause		Corrective Actions		
Incorrect control board		Replace with the correct control board. If the CBM still exists, contact Delta for further confirmation.		

[This page intentionally left blank]

# Chapter 15 CANopen Overview

- 15-1 CANopen Overview
- 15-2 Wiring for CANopen
- 15-3 CANopen Communication Interface Description
- 15-4 CANopen Supporting Index
- 15-5 CANopen Fault Code
- 15-6 CANopen LED Function

The built-in CANopen function is a kind of remote control. You can control the AC motor drive by using CANopen protocol. CANopen is a CAN-based higher layer protocol that provides standardized communication objects, including real-time data (Process Data Objects, PDO), configuration data (Service Data Objects, SDO), and special functions (Time Stamp, Sync message, and Emergency message). It also has network management data, including Boot-up message, NMT message, and Error Control message. Refer to the CiA website <a href="http://www.can-cia.org/">http://www.can-cia.org/</a> for details. The content of this instruction sheet may be revised without prior notice. Consult our distributors or download the most updated version at <a href="http://www.delta.com.tw/industrialautomation">http://www.delta.com.tw/industrialautomation</a>

## **Delta CANopen supporting functions:**

- ■Supports CAN2.0A Protocol
- ■Supports CANopen DS301 V4.02
- Supports DS402 V2.0.

#### **Delta CANopen supporting services:**

- ■PDO (Process Data Objects): PDO1-PDO4
- SDO (Service Data Objects):

Initiate SDO Download;

Initiate SDO Upload;

Abort SDO:

You can use the SDO message to configure the slave node and access the Object Dictionary in every node.

■SOP (Special Object Protocol):

Support default COB-ID in Predefined Master/Slave Connection Set in DS301 V4.02;

Support SYNC service;

Support Emergency service.

■NMT (Network Management):

Support NMT module control;

Support NMT Error control;

Support Boot-up.

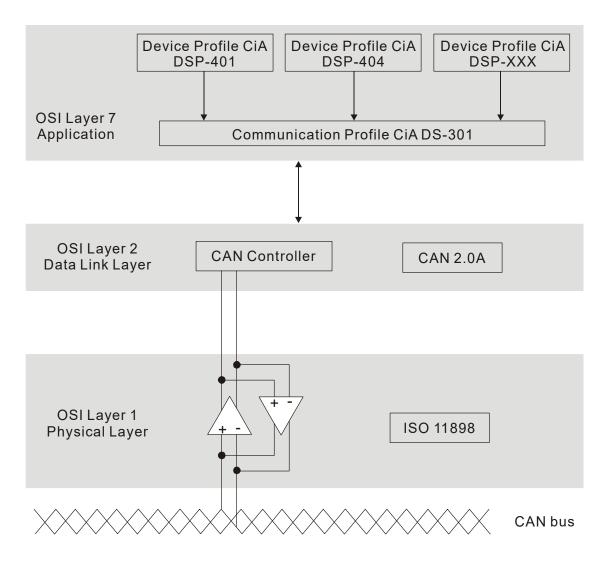
#### **Delta CANopen not supporting service:**

■ Time Stamp service

# 15-1 CANopen Overview

# **CANopen Protocol**

CANopen is a CAN-based higher layer protocol, and was designed for motion-oriented machine control networks such as handling systems. Version 4.02 of CANopen (CiA DS301) is standardized as EN50325-4. The CANopen specifications cover the application layer and communication profile (CiA DS301), as well as a framework for programmable devices (CiA DS302), recommendations for cables and connectors (CiA DS303-1), SI units, and prefix representations (CiA DS303-2).



## **RJ45 Pin Definition**



PIN	Signal	Description				
1	CAN_H	CAN_H bus line (dominant high)				
2	CAN_L	CAN_L bus line (dominant low)				
3	CAN_GND	Ground / 0V /V-				
6	CAN_GND	Ground / 0V /V-				

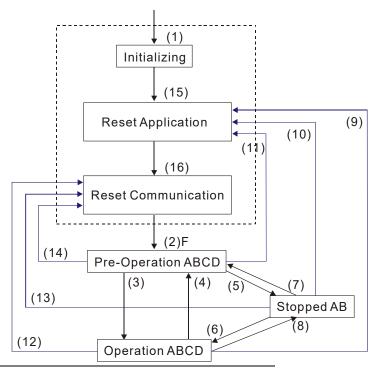
## **CANopen Communication Protocol**

It has services as follows:

- NMT (Network Management Object)
- SDO (Service Data Objects)
- PDO (Process Data Object)
- EMCY (Emergency Object)

## **NMT (Network Management Object)**

The Network Management (NMT) follows a Master/Slave structure for executing NMT service. A network has only one NMT master, and the other nodes are slaves. All CANopen nodes have a present NMT state, and the NMT master can control the state of the slave nodes. Following shows the state diagram of a node:



A: NMT

C: SDO

E: PDO

F: Boot-up

B: Node Guard

D: Emergency

- (1) After power is applied, start in the auto-initialization state
- (2) Automatically enter the pre-operational state
- (3) (6) Start remote node
- (4) (7) Enter the pre-operational state
- (5) (8) Stop remote node
- (9) (10) (11) Reset node

NMT

- (12) (13) (14) Reset communication
- (15) Automatically enter reset application state
- (16) Automatically enter reset communication state

	Initializing	Pre-Operational	Operational	Stopped
PDO			0	
SDO		0	0	
SYNC		0	0	
Time Stamp		0	0	
EMCY		0	0	
Boot-up	0			

## **SDO (Service Data Objects)**

Use SDO to access the Object Dictionary in every CANopen node using the Client/Server model. One SDO has two COB-IDs (request SDO and response SDO) to upload or download data between two nodes. There is no data limit for SDOs to transfer data, but it must transfer data by segment when the data exceeds four bytes with an end signal in the last segment.

The Object Dictionary (OD) is a group of objects in a CANopen node. Every node has an OD in the system, and OD contains all parameters describing the device and its network behavior. The access path in the OD is the index and sub-index; each object has a unique index in the OD, and has a sub-index if necessary.

## PDO (Process Data Objects)

PDO communication can be described by the producer/ consumer model. Each node of the network listens to the messages of the transmission node and distinguishes whether the message has to be processed or not after receiving the message. A PDO can be transmitted from one device to one another device or to many other devices. Every PDO has two PDO services: a TxPDO and an RxPDO. PDOs are transmitted in a non-confirmed mode. All transmission types are listed in the following table:

Type Number	PDO									
Type Number	Cyclic	Acyclic	Synchronous	Asynchronous	RTR only					
0		0	0							
1–240	0		0							
241–251			Reserved							
252			0		0					
253				0	0					
254				0						
255				0						

Type number 0 indicates the synchronous aperiodic message between two PDO transmissions.

Type number 1–240 indicates the number of SYNC message between two PDO transmissions.

Type number 252 indicates the data is updated (but not sent) immediately after receiving SYNC.

Type number 253 indicates the data is updated immediately after receiving RTR.

Type number 254: Delta CANopen does not support this transmission format.

Type number 255 indicates the data is an asynchronous aperiodic transmission.

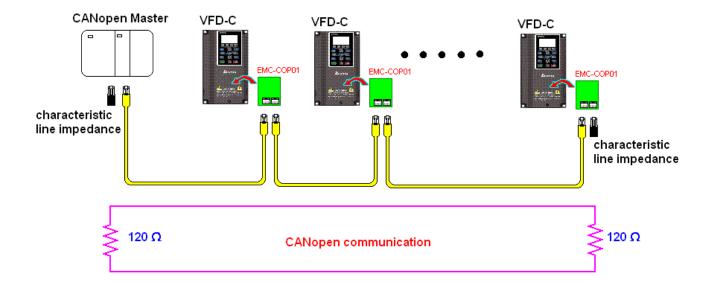
All PDO transmission data must be mapped to index via Object Dictionary.

#### **EMCY (Emergency Object)**

When errors occur inside the hardware, an emergency object is triggered. An emergency object is only sent when an error occurs. As long as there is nothing wrong with the hardware, there is no emergency object warning of an error message.

# 15-2 Wiring for CANopen

Use an external adapter card EMC-COP01 for CANopen wiring to connect CANopen to a C2000. The link uses a RJ45 cable. You must terminate the two farthest ends with 120  $\Omega$  terminating resistors as shown in the picture below.



## 15-3-1 CANopen Control Mode Selection

There are two control modes for CANopen: the DS402 standard (Pr. 09-40 set to 1) is the default, and the Delta's standard setting (Pr. 09-40 set to 0). There are two control modes according to Delta's standard. One is the old control mode (Pr. 09-30 = 0); this control mode can only control the motor drive under frequency control. The other mode is a new standard (Pr. 09-30 = 1); this new control mode allows the motor drive to be controlled under multiple modes. The C2000 currently supports speed, torque, position and home mode. The following table shows the control mode definitions:

CANopen				Control Mode	)			
Control	,	Speed		Torque	Pos	sition	Home	
Mode Selection	Index	Description	Index	Description	Index	Description	Index	Description
DS402 standard	6042-00	2-00 Rotating 6 Speed (RPM)		Target Torque (%)	607A-00	Target Position		
Pr. 09-40=1			6072-00	Max. Torque Limit (%)				
Delta Standard (Old definition) Pr. 09-40=1, Pr. 09-30=0	2020-02	Target Rotating Speed (Hz)						
Delta Standard (New definition)	2060-03	Target Rotating Speed (Hz)	2060-07	Target Torque (%)	2060-05	Target Position		
Pr. 09-40=0, Pr. 09-30=1	2060-04	Torque Limit (%)	2060-08	Speed Limit (Hz)				

CANopen Control Mode	Operation Control				
Selection	Index	Description			
DS402 standard	6040-00	Operation Command			
Pr. 09-40=1					
Delta Standard (Old definition) Pr. 09-40=1, Pr. 09-30=0	2020-01	Operation Command			
Delta Standard (New definition)	2060-01	Operation Command			
Pr. 09-40=0, Pr. 09-30=1					

CANopen Control Mode	Other				
Selection	Index	Description			
DS402 standard	605A-00	Quick stop processing mode			
Pr. 09-40=1	605C-00	Disable operation processing mode			
Delta Standard (Old definition) Pr. 09-40=1, Pr. 09-30=0					
Delta Standard (New definition)					
Pr. 09-40=0, Pr. 09-30=1					

You can use some indices in either DS402 or Delta's standard.

#### For example:

- 1. Indices that are defined as RO attributes.
- 2. The corresponding index of available parameter groups: (2000-00-200B-XX)
- 3. Accelerating / Decelerating Index: 604F 6050

#### 15-3-2 DS402 Standard Control Mode

## 15-3-2-1 Related set up for an AC motor drive (following the DS402 standard)

If you want to use the DS402 standard to control the motor drive, follow these steps:

- 1. Wire the hardware (refer to Section 15-2 Wiring for CANopen)
- Set the operation source: set Pr.00-21 to 3 for CANopen communication card control. (Run/ stop, forward/ reverse run...etc.)
- 3. Set the frequency source: set Pr.00-20 to 6. Choose the source for the Frequency command from the CANopen setting.
- 4. Set the torque source: set Pr. 11-33. Choose the source for the Torque command from the CANopen setting.
- 5. Set the position source: set Pr. 11-40. Choose the source for the Position command from the CANopen setting.
- 6. Set DS402 for the control mode: Pr. 09-40=1
- 7. Set the CANopen station: set the CANopen station (range 1–127, 0 is the disable CANopen slave function) with Pr.09-36. Note: set Pr.00-02 = 7 to reset if the station number error CAdE or CANopen memory error CFrE appears.
- 8. Set the CANopen baud rate: set Pr. 09-37 (CANBUS Baud Rate: 1Mbps(0), 500Kbps(1), 250Kbps(2), 125Kbps(3), 100Kbps(4) and 50Kbps(5))
- Set the multiple input functions to Quick Stop. You can also choose enable or disable; the
  default setting is disabled. If it is necessary to enable the function, set MI terminal to 53 in one
  of the following parameters: Pr. 02.01–Pr. 02.08 or Pr. 02.26–Pr. 02.31. (Note: This function is
  available in DS402 only.)

#### 15-3-2-2 The status of the motor drive (by following DS402 standard)

According to the DS402 definition, the motor drive is divided into 3 blocks and 9 statuses as described below.

#### 3 blocks

- 1. Power Disable: without PWM output
- 2. Power Enable: with PWM output
- 3. Fault: One or more errors have occurred.

## 9 status

- 1. Start: Power On
- 2. Not ready to switch on: the motor drive is initiating.
- Switch On Disable: occurs when the motor drive finishes initiating.
- 4. Ready to Switch On: warming up before running.
- 5. Switch On: the motor drive has the PWM output, but the reference command is not effective.
- 6. Operation Enable: able to control normally.
- 7. Quick Stop Active: when there is a Quick Stop request, stop running the motor drive.
- 8. Fault Reaction Active: the motor drive detects conditions that might trigger error(s).
- 9. Fault: One or more errors have occurred in the motor drive.

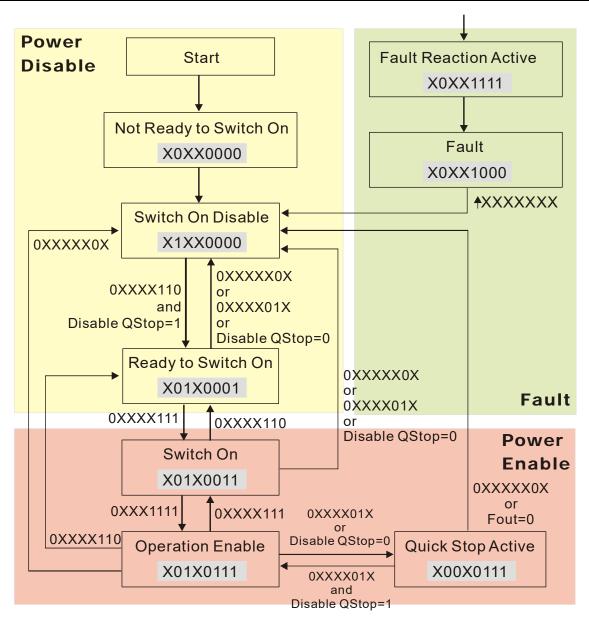
When the motor drive turns on and finishes the initiation, it remains in Ready to Switch On status. To control the operation of the motor drive, change to Operation Enable status. To do this, set the control word's bit0-bit3 and bit7 of the Index 6040H and pair with Index Status Word (Status Word 0X6041). The control steps and index definition are described below:

#### Index 6040

15–9	8	7	6~4	3	2	1	0
Reserved	Halt	Fault Reset	Operation	Enable operation	Quick Stop	Enable Voltage	Switch On

#### Index 6041

15–14	13-12	11	10	9	8	7	6	5	4	3	2	1	0
Reserved	Operation	Internal limit active	Target reached	Remote	Reserved	Warning	Switch on disabled	Quick stop	Voltage enabled	Fault	Operation enable	Switch on	Ready to switch on



Set command 6040=0xE, then set another command 6040=0xF. Then you can switch the motor drive to Operation Enable. The Index 605A determines the lines from Operation Enable when the control mode changes from Quick Stop Active. When the setting value is 1–3, both lines are active, but when the setting value of 605A is not 1–3, once the motor drive is switched to Quick Stop Active, it is not able to switch back to Operation Enable.)

Index	Sub	Definition	Default	R/W	Size	Unit	PDO Map	Mode	note
605Ah		Quick stop option code	2	RW	S16		No		Disable drive function     Slow down on slow down ramp     Slow down on quick stop ramp     Slow down on slow down ramp and stay in QUICK STOP     Slow down on quick stop ramp and stay in QUICK STOP     Slow down on the current limit and stay in Quick stop

When the control section switches from Power Enable to Power Disable, use 605C to define the stop method.

Index	Sub	Definition	Default	R/W	Size	Unit	PDO Map	Mode	note
605Ch	0	Disable operation option code	1	RW	S16		No		Disable drive function     Slow down with slow down ramp; disable the drive function

# 15-3-2-3 Various mode control method (by following DS402 standard)

The control mode of C2000 currently supports speed, torque, position and home control, and are described as below:

## Speed mode

- Set C2000 to speed control mode: set Index 6060 to 2.
   (The Index 6071 is available for torque limit under the speed control mode)
- 2. Switch to Operation Enable mode: set 6040=0xE, and then set 6040=0xF.
- 3. Set the target frequency: Set target frequency of 6042, since the operation unit of 6042 is rpm, a transform is required:

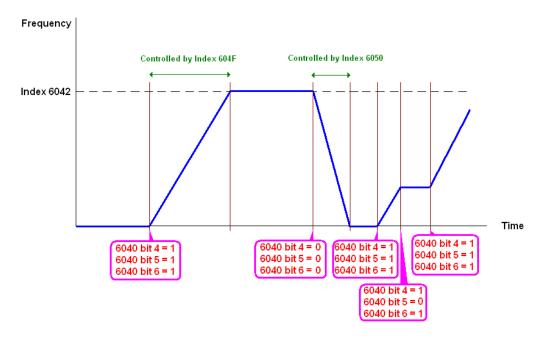
$$n = f \times \frac{120}{p}$$
n: rotation speed (rpm) (rounds/minute)
p: motor's pole number (Pole)
f: rotation frequency (Hz)

#### For example:

Set 6042H = 1500 (rpm), if the number of poles is 4 (Pr. 05-04 or Pr. 05-16), then the motor drive's operation frequency is 1500/(120/4) = 50Hz. The 6042 is defined as a signed operation. The plus or minus sign means to rotate clockwise or counter clockwise

- 4. To set acceleration and deceleration: Use 604F (Acceleration) and 6050 (Deceleration).
- 5. Trigger an ACK signal: in the speed control mode, the bit 6–4 of Index 6040 needs to be controlled. It is defined as below:

		Index 6040	SUM		
Coard made	bit 6	bit 5	bit 4	SOIVI	
Speed mode (Index 6060=2)	1	0	1	Locked at the current signal.	
(index 6000-2)	1	1	1	Run to reach targeting signal.	
		Other		Decelerate to 0Hz.	




NOTE 01: Read 6043 to get the current rotation speed. (Unit: rpm)

NOTE 02: Read bit 10 of 6041 to find if the rotation speed has reached the targeting value. (0: Not reached; 1: Reached)

## **Torque mode**

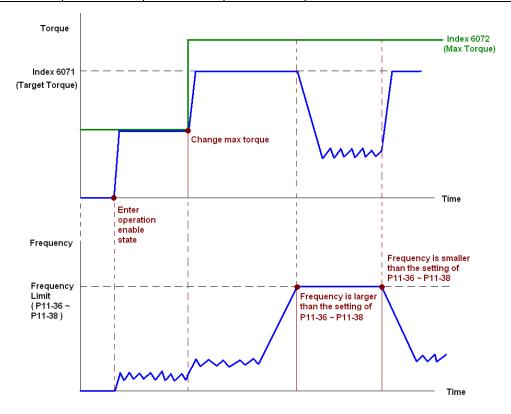- Set AC motor drive to the torque mode: set Index 6060 = 4.
   (The Index 6042 is available for speed limit under the torque control mode)
- 2. Switch to Operation Enable mode: set 6040 = 0xE, and then set 6040 = 0xF.
- 3. To set targeting torque: set 6071 as targeting torque and 6072 as the largest output torque.

		Index 6040		SUM	
Torque mode	bit6	bit5	bit4	SOIVI	
(Index 6060=4)	Х	Х	Х	RUN to reach the targeting torque.	




NOTE: The standard DS402 does not regulate the maximum speed limit. Therefore, if the motor drive defines the control mode of DS402, the highest speed will go with the setting of Pr. 11-36 to Pr. 11-38.

NOTE 01: Read 6077 to get the current torque. (Unit: 0.1%).

NOTE02: Read bit10 of 6041 to find if the torque has reached the targeting value. (0: Not reached; 1: Reached)

#### **Position mode**

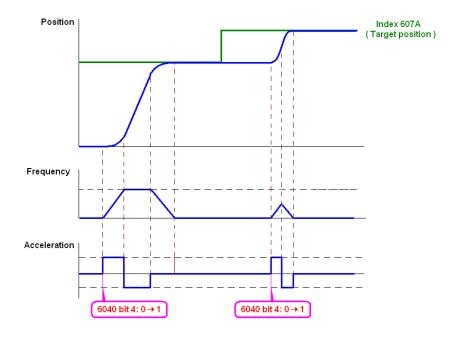- 1. Set the parameter of a trapezium curve to define position control (Pr. 11-43 Max. Frequency of Point-to-Point Position Control, Pr. 11-44 Accel. Time of Point-to-Point Position Control and Pr. 11-45 Decel. Time of Point-to-Point Position Control)
- 2. Set C2000 to position control mode: set Index 6060 = 1.
- 3. Switch to Operation Enable mode: set 6040 = 0xE, and then set 6040 = 0xF.
- 4. Set targeting position: set 607A as the targeting position.
- 5. Trigger an ACK signal: set 6040 = 0x0F, and then set 6040 = 0x1F. (Pulse On).



- NOTE 01: Read 6064 to get the current position.
- NOTE 02: Read bit10 of 6041 to find if the position reaches the targeting position. (0: Not reached, 1: reached)
- NOTE 03: Read bit11 of 6041 to find if the position is over the limited area. (0: in the limit, 1: over the limit)

#### Home mode

- 1. Set Pr. 00-12 to choose a home method.
- 2. Set the left and right limits correspond to the position of MI terminal.
- 3. Switch to Home mode: set Index 6060 = 6.
- 4. Switch to Operation Enable mode: set 6040 = 0xE, and then set 6040 = 0xF.
- 5. To trigger an ACK signal: set 6040 = 0x0F, and then set 6040 = 0x1F (Pulse On, and the motor drive will be back to home.)

NOTE 01: Read bit12 of 6041 to find if the home mode is completed. (0: Not reached, 1: reached)

15-3-3 Using the Delta Standard (Old definition, only supports speed mode)

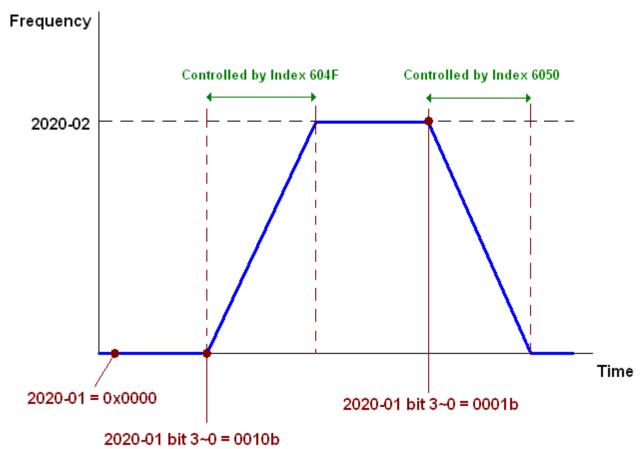
#### 15-3-3-1 Various mode control method (Delta Old Standard)

#### Follow the steps below:

- 1. Wire the hardware (refer to Section 15-2 Wiring for CANopen).
- 2. Set the operation source: set Pr. 00-21 to 3 for CANopen communication card control. (Run/stop, Forward/reverse run...., etc.)
- 3. Set the frequency source: set Pr. 00-20 to 6. Choose source for the Frequency Commend from the CANopen setting.
- 4. Set Delta Standard (Old definition, only supports speed mode) as the control mode: Pr. 09-40 = 0 and Pr. 09-30 = 0.
- 5. Set the CANopen station: set Pr. 09-36; the range is among 1–127. When Pr. 09-36=0, the CANopen slave function is disabled. Note: If an error appears (CAdE or CANopen memory error) as you complete the station setting, set Pr.00-02 = 7 to reset.
- 6. Set the CANopen baud rate: set Pr. 09-37 (CANBUS Baud Rate: 1Mbps(0), 500Kbps(1), 250Kbps(2), 125Kbps(3), 100Kbps(4) and 50Kbps(5))

# 15-3-3-2 By speed mode

- 1. Set the target frequency: set 2020-02, the unit is Hz, with 2 decimal places. For example, 1000 is 10.00Hz.
- 2. Operation control: set 2020-01 = 0002H for running, and set 2020-01 = 0001H for stopping.



15-3-4 Using Delta Standard (New Definition)

15-3-4-1 Related set up for an AC motor drive (Delta New Standard)


#### Follow the steps below:

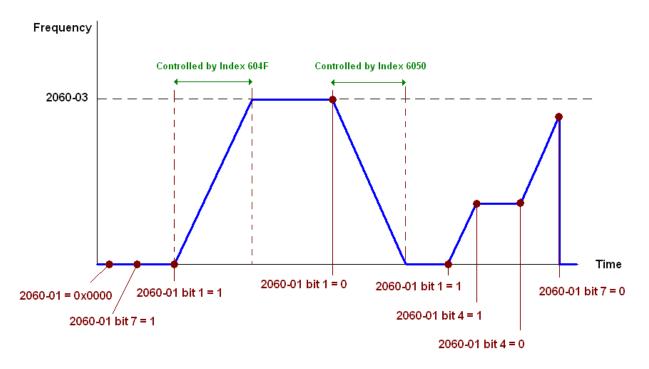- 1. Wire the hardware (refer to Section 15-2 Wiring for CANopen).
- 2. Set the operation source: set Pr. 00-21 to 3 for CANopen communication card control. (Run/stop, Forward/reverse run..., etc.)
- 3. Set the frequency source: set Pr. 00-20 to 6. Choose the source of the Frequency Command from CANopen setting.
- 4. Set the torque source: set Pr. 11-33. Choose the source of the Torque Command from CANopen setting.)
- 5. Set the position source: set Pr.11-40=3. Choose the source of the Position Command from CANopen setting.)
- 6. Set Delta Standard (New definition) as the control mode: Pr. 09-40 = 0 and Pr. 09-30 = 0.
- 7. Set the CANopen station: set Pr. 09-36; the range is among 1–127. When Pr. 09-36=0, the CANopen slave function is disabled. (Note: If an error appears (CadE or CANopen memory error) as you complete the station setting, set Pr.00-02 = 7 to reset.
- 8. Set the CANopen baud rate: set Pr. 09-37 (CANBUS Baud Rate: 1Mbps(0), 500Kbps(1), 250Kbps(2), 125Kbps(3), 100Kbps(4) and 50Kbps(5))

#### 15-3-4-2 Various mode control method (Delta New Standard)


#### Speed Mode

- 1. Set C2000 to speed control mode: set Index6060 = 2.
- 2. Set the target frequency: set 2060-03, unit is Hz, with 2 decimal places. For example, 1000 is 10.00Hz.
- 3. Operation control: set 2060-01 = 008H for Server on, and set 2060-01 = 0081H for running.



## **Torque Mode**

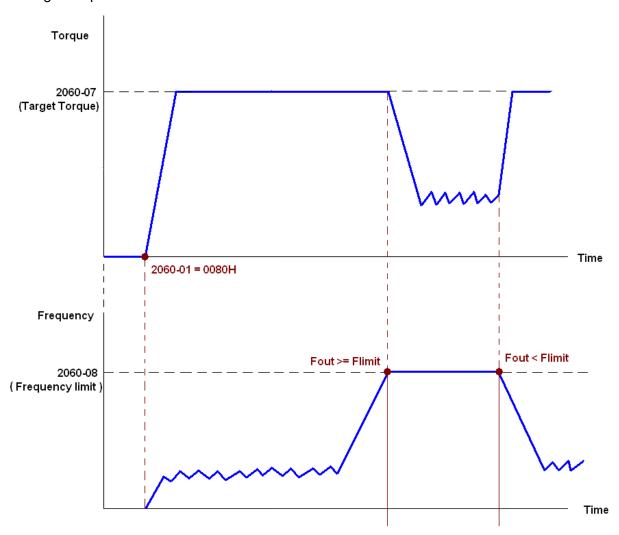- 1. Set C2000 to torque control mode: set Index 6060 = 4.
- 2. Set the target torque: set 2060-07, unit as %, and the value is one decimal place. For example, 100 is 10.0%.
- 3. Operation control: set 2060-01 = 0080H starts excitation, and the drive immediately runs at the target torque.




Note01: Read 2061-07 for the current torque (unit is 0.1%).

Note02: Read bit0 of 2061-01 to find if the torque has reached the set value (0: Not reached, 1: Reached).

Note 03: If the speed of the drive reaches the speed limit when torque outputs, you may reduce the output torque in order to ensure that the speed stays within the limits.

#### **Position Mode**

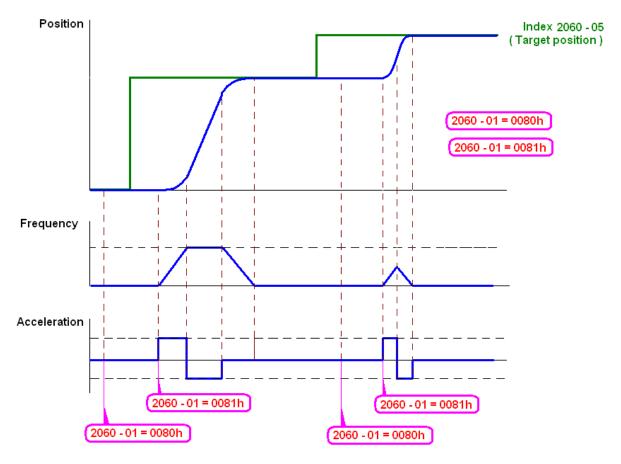- 1. Set the parameter of a trapezium curve to define position control (Pr. 11-43 Max. Position Control Frequency), Pr. 11-44 Accel. Time of Position Control, Pr. 11-45 Decel. Time of Position Control)
- 2. Set C2000 to position control mode, set Index 6060 = 1.
- 3. Set 2060-01 = 0080h, then motor drive starts excitation.
- 4. Set target position: set 2060-05 = target position.
- 5. Set 2060-01 =0081h to trigger the motor drive runs to the target position.
- 6. Repeat step 3 to step 5 to move to another position.



NOTE01: Read 2061-05 to get the current position.

NOTE02: Read bit0 of 2061 to find if the position has reached to the target position. (0: Not reached, 1: Reached).

#### **Home Mode**

- 1. Set Pr. 00-12 to choose the method to return home.
- 2. Set the left and right limits correspond to the position of MI terminal.
- 3. Switch to home mode: set Index 6060 = 6.
- 4. Set 2060-01 = 0080h, then the motor drive starts excitation.
- 5. Set the ACK signal: set 2060-01 = 0081h, then the motor drive starts to go back home.

NOTE 01: Read bit12 of 6041 to find if returning home is completed. (0: Not reached, 1: Reached).

# 15-3-5 DI/DO AI/AO are controlled through CANopen

To control the DO/AO of the motor drive through CANopen, follow the steps below:

- 1. Define the DO to be controlled by CANopen. For example, set Pr. 02-14 to control RY2.
- 2. Define the AO to be controlled by CANopen. For example, set Pr. 03-23 to control AFM2.
- 3. Control the mapping index of CANopen. To control DO, use control index 2026-41. To control AO, you will need to control 2026-AX. To set RY2 as ON, set bit1 of Index 2026-41 =1, then RY2 outputs 1. To control AFM2 output = 50.00%, set Index 2026-A2 =5000, then AFM2 outputs 50%.

The following table shows the mapping of CANopen DI/ DO/ AI/ AO:

DI:

Terminal	Related Parameters	R/W	Mapping Index
FWD	==	RO	2026-01 bit0
REV	==	RO	2026-01 bit1
MI1	==	RO	2026-01 bit2
MI2	==	RO	2026-01 bit3
MI3	==	RO	2026-01 bit4
MI4	==	RO	2026-01 bit5
MI5	==	RO	2026-01 bit6
MI6	==	RO	2026-01 bit7
MI7	==	RO	2026-01 bit8
MI8	==	RO	2026-01 bit9
MI10	==	RO	2026-01 bit10
MI11	==	RO	2026-01 bit11
MI12	==	RO	2026-01 bit12
MI13	==	RO	2026-01 bit13
MI14	==	RO	2026-01 bit14
MI15	==	RO	2026-01 bit15

# Chapter 15 CANopen Overview | C2000

# DO:

Terminal	Related Parameters	R/W	Mapping Index					
RY1	Pr. 02-13 = 50	RW	2026-41 bit0					
RY2	Pr. 02-14 = 50	RW	2026-41 bit1					
MO1	Pr. 02-16 = 50	RW	2026-41 bit3					
MO2	Pr. 02-17 = 50	RW	2026-41 bit4					
MO10	Pr. 02-36 = 50	RW	2026-41 bit5					
RY10	P1. 02-30 – 50	KVV	2026-41 bit5					
MO11	Pr. 02-37 = 50	RW	2026-41 bit6					
RY11	P1. 02-37 = 30	KVV	2026-41 bit6					
RY12	Pr. 02-38 = 50	RW	2026-41 bit7					
RY13	Pr. 02-39 = 50	RW	2026-41 bit8					
RY14	Pr. 02-40 = 50	RW	2026-41 bit9					
RY15	Pr. 02-41 = 50	RW	2026-41 bit10					

# AI:

Terminal	Related Parameters	R/W	Mapping Index
AVI	==	RO	Value of 2026-61
ACI	==	RO	Value of 2026-62
AUI	==	RO	Value of 2026-63

# AO:

Terminal	Related Parameters	R/W	Mapping Index
AFM1	Pr. 03-20 = 20	RW	Value of 2026-A1
AFM2	Pr. 03-23 = 20	RW	Value of 2026-A2

# 15-4 CANopen Supporting Index

C2000 Index:

The parameter index corresponds as shown in this example:

Index sub-Index

2000H + Group member+1

For example:

Pr. 10-15 (Encoder Slip Error Treatment)

**Group member** 10(0AH) - 15(0FH)

Index = 2000H + 0AH = 200A

Sub Index = 0FH + 1H = 10H

C2000 Control Index:

# **Delta Standard Mode (Old Definition)**

Index	Sub	Definition	Default	R/W	Size		Note
	0	Number	3	R	U8		
						bit1–0	00B: disable
							01B: stop
							10B: disable
							11B: JOG Enable
						bit3–2	Reserved
						bit5-4	00B:disable
							01B: Direction forward
							10B: Reverse
							11B: Switch Direction
						bit7–6	00B: 1st step Accel. /Decel.
							01B: 2 <sup>nd</sup> step Accel. /Decel.
							10B: 3 <sup>rd</sup> step Accel. /Decel.
							11B: 4 <sup>th</sup> step Accel. /Decel.
						bit11-8	0000B: Master speed
							0001B: 1 <sup>st</sup> step speed
	1	Control word	0	RW	U16		0010B: 2 <sup>nd</sup> step speed
2020H		Gorna or Word	Ü		0.0		0011B: 3 <sup>rd</sup> step speed
							0100B: 4 <sup>th</sup> step speed
							0101B: 5 <sup>th</sup> step speed
							0110B: 6 <sup>th</sup> step speed
							0111B: 7 <sup>th</sup> step speed
							1000B: 8 <sup>th</sup> step speed
							1001B: 9 <sup>th</sup> step speed
							1010B: 10 <sup>th</sup> step speed
							1011B: 11 <sup>th</sup> step speed
							1100B: 12 <sup>th</sup> step speed
							1101B: 13 <sup>th</sup> step speed
							1110B: 14 <sup>th</sup> step speed
							1111B: 15 <sup>th</sup> step speed
						bit12	1: Enable the function of
						1:1.45	bit6-11
		<b>F</b>				bit 15	Reserved
	2	Freq. command	0	RW	U16		
		(XXX.XXHz)					

Index	Sub	Definition	Default	R/W	Size		Note
HOOK	240	Sommon	Dollant		3120	bit0 ′	1: E.F. ON
	_	04	^	D	1140		1: Reset
	3	Other trigger	0	RW	U16		1: Base Block (B.B) ON
							Reserved
2021H	0	Number	10	R	U8		
	1	Error code	0	R	U16	High byte: \	
	'	Lifoi code	0	11	010	Low byte: E	
						l —	00B: stop
							01B: decelerate to stop
						1	0B: waiting for operation
						<u> </u>	command
							11B: in operation
							1: JOG command 00B: Run forward
							01B: switch from run in reverse
							to run forward
							10B: switch from run forward to
							run in reverse
							11B: Run in reverse
	2	AC motor drive status	0	R	U16		Reserved
		AC motor drive status	U	K	016		1: Master Frequency command
							controlled by communication
							interface
						bit9	1: Master Frequency command
							controlled by analog signal
						1 1140	input
						bit10	1: Operation command
							controlled by communication interface
						bit11	1: Parameter lock
							1: Enable the digital keypad
						DICTE	copy parameter function
						bit15-13 F	
	3	Freq. command	0	R	U16		
		(XXX.XXHz)					
	4	Output freq. (XXX.XXHz)	0	R	U16		
	5	Output current (XX.XA)	0	R	U16		
	<u>6</u> 7	DC bus voltage (XXX.XV)	0	R R	U16		
	/	Output voltage (XXX.XV) The current segment run by	U	K	U16		
	8	the multi-segment speed	0	R	U16		
		commend	J	'`	5.0		
	9	Reserved	0	R	U16		
	Α	Display counter value (c)	0	R	U16		
	В	Display output power angle	0	R	U16		
		(XX.X°)		· ` `	0.0		
	С	Display output torque	0	R	U16		
		(XXX.X%)					
	D	Display actual motor speed (rpm)	0	R	U16		
		Number of PG feedback					
	Е	pulses (0–65535)	0	R	U16		
	-	Number of PG2 pulse	^	-	1140		
	F	commands (0–65535)	0	R	U16		
	10	Power output (X.XXXkWh)	0	R	U16		
	17	Multi-function display	0	R	U16		
		(Pr.00-04)					
2022H	0	Reserved	0	R	U16		
	1	Display output current	0	R	U16		
	2	Display counter value	0	R	U16		

Index	Sub	Definition	Default	R/W	Size	Note
	3	Display actual output frequency (XXX.XXHz)	0	R	U16	
	4	Display DC-BUS voltage (XXX.XV)	0	R	U16	
	5	Display output voltage (XXX.XV)	0	R	U16	
	6	Display output power angle (XX.X°)	0	R	U16	
	7	Display output power in kW	0	R	U16	
	8	Display actual motor speed (rpm)	0	R	U16	
	9	Display estimate output torque (XXX.X%)	0	R	U16	
	Α	Display PG feedback	0	R	U16	
	В	Display PID feedback value after enabling PID function in % (To 2 decimal places)	0	R	U16	
	С	Display signal of AVI analog input terminal, 0–10V corresponds to 0–100% (To 2 decimal places)	0	R	U16	
		Display signal of ACI analog input terminal, 4–20mA/0–10V corresponds to 0–100% (To	0	R	U16	
	E	2 decimal places)  Display signal of AUI analog input terminal, -10V–10V corresponds to -100–100% (To 2 decimal places)	0	R	U16	
	F	Display the IGBT temperature of drive power module in °C	0	R	U16	
	10	Display the temperature of capacitance in °C	0	R	U16	
	11	The status of digital input (ON/OFF), refer to Pr.02-12	0	R	U16	
	12	The status of digital output (ON/OFF), refer to Pr.02-18	0	R	U16	
	13	Display the multi-step speed that is executing	0	R	U16	
	14	The corresponding CPU pin status of digital input	0	R	U16	
	15	The corresponding CPU pin status of digital output	0	R	U16	
	16	Number of actual motor revolutions (PG1 of PG card). Starts from 9 when the actual operation direction is changed, or the keypad display at stop is 0. Max. is 65535	0	R	U16	
	17	Pulse input frequency (PG2 of PG card)	0	R	U16	
	18	Pulse input position (PG card PG2), maximum setting is 65535.	0	R	U16	
	19	Position command tracing error	0	R	U16	
	1A	Display times of counter overload (0.00–100.00%)	0	R	U16	
	1B	Display GFF in %	0	R	U16	

Index			Default	R/W	Size	Note
	IC	Display DC BUS voltage ripples (Unit: V <sub>DC</sub> )	0	R	U16	
	טו	Display PLC register D1043 data	0	R	U16	
	1 🗆	Display Pole of Permanent Magnet Motor	0	R	U16	
	- 11	User page displays the value in physical measure	0	R	U16	
		Output Value of Pr.00-05	0	R	U16	
	21	Number of motor turns when drive operates	0	R	U16	
	22	Operation position of motor	0	R	U16	
	23	Fan speed of the drive	0	R	U16	
	24	Control mode of the drive 0: speed mode 1: torque mode	0	R	U16	
	25	Carrier frequency of the drive	0	R	U16	
		Reserved				
	27	Motor status				
	28	Output positive/ negative torque of motor drive calculation				
		Torque command				
		kWh display				
		PG2 pulse input low-word				
		PG2 pulse input high-word				
	20	Motor actual position low-word				
	2E	Motor actual position high-word				
	2F	PID reference target				
		PID bias value				
	31	PID output frequency				

# CANopen Remote IO mapping

Index	Sub	R/W	Definition						
	01h	R	Each bit corresponds to the different input terminals						
	02h	R	Each bit corresponds to the different input terminals						
	03h-40h	R	Reserved						
	41h	RW	Each bit corresponds to the different output terminals						
	42h-60h	R	Reserved						
	61h	R	AVI proportional value (%)						
	62h	R	ACI proportional value (%)						
	63h	R	AUI proportional value (%)						
2026H	64h–6Ah	R	Reserved						
	6Bh	R	Extension card AI10, 0.0–100.0% (EMC-A22A)						
	6Ch	R	Extension card Al11, 0.0–100.0% (EMC-A22A)						
	6Dh-A0h	R	Reserved						
	A1h	RW	AFM1 output proportional value (%)						
	A2h	RW	AFM2 output proportional value (%)						
	A3h–AAh	RW	Reserved						
	ABh	RW	Extension card AO10, 0.0–100.0% (EMC-A22A)						
	ACh	RW	Extension card AO11, 0.0–100.0% (EMC-A22A)						

Index 2026-01	bit0	bit1	bit2	bit3	bit4	bit5	bit6	bit7	bit8	bit9	bit10	bit11	bit12	bit13	bit14	bit15
1	FWD	REV	MI1	MI2	MI3	MI4	MI5	MI6	MI7	MI8						
2											MI10	MI11	MI12	MI13	MI14	MI15
3											MI10	MI11	MI12	MI13		

- 1: Control broad I/O (Standard)
- 2: Add external card, EMC-D611A
- 3: Add external card, EMC-D42A

Index 2026-41	bit0	bit1	bit2	bit3	bit4	bit5	bit6	bit7	bit8	bit9	bit10	bit11	bit12	bit13	bit14	bit15
1	RY1	RY2		MO1	MO2											
2						MO10	MO11									
3						RY10	RY11	RY12	RY13	RY14	RY15					

- 1: Control broad I/O (Standard)
- 2: Add external card, EMC-D42A
- 3: Add external card, EMC-R6AA

# **Delta Standard Mode (New definition)**

Index	oub	D/M	Sizo		Description	ıs	Speed Mode	Position Mode	Home Mode	Torque Mode
maex	Sub	FX/ V V	Size	bit	Definition	Priority	Speed Mode	Position Mode	nome wode	Torque Mode
	00h	R	U8						0: Stop Homing	
				0	Ack	4	1: fcmd = Fset(Fpid)	Pulse 1: Position control	Pulse 1: Return to home	
				1	Dir	4	0: FWD run command 1: REV run command			
				2				0: Relative move 1: Absolute move		
				3	Halt		0: drive run till target speed is attained 1: drive stop by declaration setting			The torque target of internal decoding is set as 0, but the display of outside torque target will remain its outside setting.
	01h	RW	U16	4	Hold	4	0: drive run till target speed is attained 1: frequency stop at current frequency			
2060h	l			5	JOG	4	0: JOG OFF Pulse 1: JOG RUN			
				6	Qstop	2	Quick Stop	Quick Stop	Quick Stop	Quick Stop
				7	Power	1	0: Power OFF 1: Power ON	0: Power OFF 1: Power ON	0: Power OFF 1: Power ON	0: Power OFF 1: Power ON
				8	Reserved					
				9	Ext Cmd2	4	0->1: Absolute position cleared	0->1: Absolute position cleared	0->1: Absolute position cleared	0->1: Absolute position cleared
				10–14	Reserved					
				15	RST		Pulse 1: Fault code cleared	code cleared	Pulse 1: Fault code cleared	Pulse 1: Fault code cleared
	02h	RW	U16		Mode Cmd		0: Speed mode	1: P2P position mode	3: Home mode	2: Torque mode
			U16				Speed command (unsigned decimal)			
	04h	RW	U16							
	05h	RW	S32					Position command		

Index	sub	D/M	Cizo	Descriptions		Speed Mode	Position Mode	Home Mode	Torque Mode	
index		Γ/ / / /	SIZE	bit	Definition	Priority	opeed Mode	Position wode	Home wode	Torque Mode
	06h	RW								
	07h	RW	U16							Torque command (signed decimal)
	08h	RW	U16							Speed limit (unsigned decimal)
	01h			0	Arrive		Frequency attained	Position attained	Homing complete	Torque attained
					1	Dir		0: Motor FWD run 1: Motor REV run	run	0: Motor FWD run 1: Motor REV run
				2	Warn		Warning	Warning	Warning	Warning
		R	U16	3	Error		Error detected	Error detected	Error detected	Error detected
				4						
				5	JOG		JOG	JOG	JOG	JOG
2061h				6	Qstop		Quick stop	Quick stop	Quick stop	Quick stop
200111				7	Power On		Switch ON	Switch ON	Switch ON	Switch ON
				15–8						
	02h	R								
	03h	R	U16				Actual output frequency		Actual output frequency	Actual output frequency
	04h	R								
	05h	R	S32				Actual position (absolute)	Actual position (absolute)	Actual position (absolute)	Actual position (absolute)
	06h	R								
	07h	R	S16				Actual torque	Actual torque	Actual torque	Actual torque

## **DS402 Standard**

D3402 Statitual u									
Index	Sub	Definition	Default	R/W	Size	Unit	PDO Map	Mode	Note
6007h	0	Abort connection option code	2	RW	S16		Yes		0: No action 2: Disable Voltage 3: Quick stop
603Fh	0	Error code	0	R0	U16		Yes		
6040h	0	Control word	0	RW	U16		Yes		
6041h	0	Status word	0	R0	U16		Yes		
6042h	0	vl target velocity	0	RW	S16	rpm	Yes	vl	
6043h	0	vl velocity demand	0	RO	S16		Yes	vl	
6044h	0	vl control effort	0	RO	S16		Yes	vl	
604Fh	0	vl ramp function time	10000	RW	U32		Yes	vl	Unit must be 100ms, and
6050h	0	vl slow down time	10000	RW	U32		Yes	vl	check if the setting is 0.
6051h	0	vl quick stop time	1000	RW	U32	1ms	Yes	vl	
605Ah	0	Quick stop option code	2	RW	S16		No		Disable drive function     Slow down on slow down ramp     Slow down on quick stop ramp     Slow down on slow down ramp and stay in QUICK STOP     Slow down on quick stop ramp and stay in QUICK STOP
605Ch	0	Disable operation option code	1	RW	S16		No		Disable drive function     Slow down with slow down ramp; disable the drive function
6060h	0	Mode of operation	2	RW	S8		Yes		1: Profile Position Mode 2: Velocity Mode 4: Torque Profile Mode

Index	Sub	Definition	Default	R/W	Size	Unit	PDO Map	Mode	Note
									6: Homing Mode
6061h	0	Mode of operation display	2	RO	S8		Yes		Same as above
6064h	0	pp Position actual value	0	RO	S32		Yes	рр	
6071h	0	tq Target torque	0	RW	S16	0.1%	Yes	tq	Valid unit: 1%
6072h	0	tq Max torque	150	RW	U16	0.1%	No	tq	Valid unit: 1%
6075h	0	tq Motor rated current	0	RO	U32	mA	No	tq	
6077h	0	tq torque actual value	0	RO	S16	0.1%	Yes	tq	
6078h	0	tq current actual value	0	RO	S16	0.1%	Yes	tq	
6079h	0	tq DC link circuit voltage	0	RO	U32	mV	Yes	tq	
607Ah	0	pp Target position	0	RW	S32	1	Yes	рр	

# 15-5 CANopen Fault Code



- ① Display error signal
- 2 Abbreviate error code
- 3 Display error description

# \*: Refer to setting value of Pr.06-17-Pr. 06-22

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
1	Fault ocA Oc at accel	0001H	Over-current during acceleration	1	2213 H
2	Fault ocd Oc at decel	0002H	Over-current during deceleration	1	2213 H
3	Fault ocn Oc at normal SPD	0003H	Over-current during steady operation	1	2214H
4	Fault GFF Ground fault	0004H	Ground fault. When one of the output terminals is grounded, the short circuit current is more than 50% of AC motor drive rated current.  NOTE: The short circuit protection is provided for the AC motor drive protection, not to protect the user.	1	2240H
5	Fault occ Short Circuit	0005H	Short-circuit is detected between upper bridge and lower bridge of the IGBT module.	1	2250H
6	Fault ocS Oc at stop	0006H	Over-current at stop. Hardware failure in current detection	1	2214H
7	Fault ovA Ov at accel	0007H	Over-current during acceleration. Hardware failure in current detection	2	3210H
8	Fault ovd Ov at decel	0008H	Over-current during deceleration. Hardware failure in current detection.	2	3210H

ID No.*	Display	Fault code	ult code Description f		CANopen fault code
9	Fault ovn Ov at normal SPD	0009H	DC BUS over-voltage at constant speed	2	3210H
10	Fault ovS Ov at stop	000AH	Over-voltage at stop. Hardware failure in voltage detection	2	3210H
11	Fault LvA Lv at accel	000BH	DCBUS voltage is less than Pr.06-00 during acceleration.	2	3220H
12	Fault Lvd Lv at decel	000CH	DCBUS voltage is less than Pr.06-00 during deceleration.	2	3220H
13	Fault Lvn Lv at normal SPD	000DH	DCBUS voltage is less than Pr.06-00 at constant speed.	2	3220H
14	Fault LvS Lv at stop	000EH	DCBUS voltage is less than Pr.06-00 at stop	2	3220H
15	Рашіто OrP Phase lacked	000FH	Phase Loss Protection	2	3130H
16	яшто Fault oH1 IGBT over heat	0010H	IGBT is overheated above the protection level. 1–15HP: 90°C 20–100HP: 100°C	3	4310H
17	Fault oH2 Heat Sink oH	0011H	Heat sink overheat Heat sink temperature exceeds 90°C	3	4310H
18	Fault tH1o Thermo 1 open	0012H	IGBT over-heating protection error	3	FF00H
19	Fault tH2o Thermo 2 open	0013H	Temperature detection circuit error (capacity module) CAP NTC	3	FF01H

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
21	Fault oL Over load	0015H	Overload; the AC motor drive detects excessive drive output current.  NOTE: The AC motor drive can withstand up to 150% of the rated current for a maximum of 60 seconds.	1	2310H
22	Fault EoL1 Thermal relay 1	0016H	Electronic thermal relay 1 protection	1	2310H
23	Fault EoL2 Thermal relay 2	0017H	Electronic thermal relay 2 protection	1	2310H
24	Fault оНЗ	0018H	Motor overheating: the AC motor drive internal temperature exceeds the setting for Pr. 06-30 (PTC level).	3	FF20H
26	Fault ot1 Over torque 1	001AH	When the output current exceeds the over-torque detection level (Pr. 06-07 or Pr. 06-10) and exceeds Pr. 06-08	3	8311H
27	Fault ot2 Over torque 2	001BH	or Pr. 06-11; when Pr. 06-06 or Pr. 06-09 is set as 2 or 4, the keypad displays these two fault codes.	3	8311H
28	Раши и С Under current	001CH	Low current detection	1	8321H
29	АUTO Fault LMIT Limit Error	001DH	Home limit error	1	7320H
30	яшt Fault cF1 EEPROM write err	001EH	Cannot program internal EEPROM	5	5530H
31	Fault cF2 EEPROM read err	001FH	Cannot read internal EEPROM	5	5530H
33	Ашто Fault cd1 las sensor err	0021H	U-phase current error	1	FF04H

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
34	Fault cd2	0022H	V-phase current error	1	FF05H
35	Fault cd3	0023H	W-phase current error	1	FF06H
36	Fault Hd0 cc HW error	0024H	cc (current clamp) hardware error	5	FF07H
37	Fault Hd1 Oc HW error	0025H	oc hardware error	5	FF08H
38	Fault Hd2 Ov HW error	0026H	ov hardware error	5	FF09H
39	Fault Hd3 occ HW error	0027H	GFF hardware error	5	FF0AH
40	Auto Fault AUE Auto tuning error	0028H	Motor parameters auto-tuning error	1	FF21H
41	Аито Fault AFE PID Fbk error	0029H	PID loss (ACI)	7	FF22H
42	Fault PGF1 PG Fbk error	002AH	PG feedback error	7	7301H
43	Fault PGF2 PG Fbk loss	002BH	PG feedback loss	7	7301H
44	РОБЕРБИТЕ РОБЕР	002CH	PG feedback stall	7	7301H

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
45	РОБЕРБИИ РО	002DH	PG slip error	7	7301H
48	Fault ACE ACI loss	0030H	ACI loss (ACE)	1	FF25H
49	Башіт БЕР External fault	0031H	External Fault; when the multi-function input terminal (EF) is active, the AC motor drive stops output.	5	9000Н
50	Башіт EF1 Emergency stop	0032H	Emergency stop; when the multi-function input terminals MI1 to MI6 are active, the AC motor drive stops output.	5	9000Н
51	Fault bb Base block	0033H	External Base Block; when the multi-function input terminal (B.B.) is active, the AC motor drive stops output.	5	9000Н
52	Раиlt Pcod Password error	0034H	Keypad is locked after you enter the wrong password three times.	5	FF26H
54	РС err command	0036H	Modbus function code error (illegal function code)	4	7500H
55	Fault CE2 PC err address	0037H	Modbus data address error [illegal data address (00 H–254 H)]	4	7500H
56	Fault CE3 PC err data	0038H	Modbus data error (illegal data value)	4	7500H
57	АUTO Fault CE4 PC slave fault	0039H	Modbus communication error (data is written to read-only address)	4	7500H

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
58	Fault CE10 PC time out	003AH	Modbus transmission time-out.	5	7500H
60	Fault bF Braking fault	003CH	Brake resistor error	4	7110H
61	Аито Fault ydc Y-delta connect	003DH	Y-connection / Δ-connection switch error	2	3330H
62	Fault dEb Dec. Energy back	003EH	Energy regeneration when decelerating	2	FF27H
63	Fault  OSL  Over slip error	003FH	Motor slip exceeds Pr. 05-26 and Pr. 05-27 setting	7	FF28H
64	Auto Fault ryF MC Fault	0040H	Electric valve switch error	5	7110H
65	Fault PGF5 PG HW Error	0041H	PG Card Error	5	FF29H
68	яшто Fault SdRv SpdFbk Dir Rev	0044H	Reverse direction of the speed feedback	7	8400H
69	Fault SdOr SpdFbk over SPD	0045H	Over speed rotation feedback	7	8400H
70	яшто Fault SdDe SpdFbk deviate	0046H	Large deviation of speed feedback	7	8400H
72	Fault STL1	0048H	STO1–SCM1 internal loop detection error	5	5441H

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
73	Fault S1 S1-emergy stop	0049H	Emergency stop for external safety	5	FF2AH
75	Fault Brk EXT-Brake Error	004BH	External brake error	5	7110H
76	Fault STO	004CH	Safe Torque Off function active	5	5440H
77	Fault STL2 STO Loss 2	004DH	STO2–SCM2 internal loop detection error	5	5442H
78	Fault STL3 STO Loss 3	004EH	STO1–SCM1 and STO2–SCM2 internal loop detection error	5	5443H
82	АUТО Fault OPHL U phase lacked	0052H	Output phase loss 1 (Phase U)	2	2331H
83	Рашто Fault OPHL V phase lacked	0053H	Output phase loss 2 (Phase V)	2	2332H
84	Аито Fault OPHL W phase lacked	0054H	Output phase loss 3 (Phase W)	2	2333H
85	Аито Fault AboF PG ABZ Line off	0055H	PG ABZ line off	5	7301H
86	Башlt UvoF	0056H	PG UVW line off	5	7301H
89	лито Fault RoPd Rotor Pos. Error	0059H	Rotor position detection error	7	FF30H

ID No.*	Display	Fault code	Description	CANopen fault register (bit 0–7)	CANopen fault code
90	Fault Fstp Force Stop	005AH	Force to stop	7	FF2EH
101	Fault  CGdE  Guarding T-out	0065H	CANopen guarding error	4	8130H
102	Fault CHbE Heartbeat T-out	0066H	CANopen heartbeat error	4	8130H
104	Fault CbFE Can bus off	0068H	CANopen bus off error	4	8140H
105	Fault CldE Can bus Index Err	0069H	CANopen index error	4	8100H
106	Fault CAdE Can bus Add. Err	006AH	CANopen station address error	4	8100H
107	Fault  CFrE  Can bus off	006BH	CANopen memory error	4	8100H
111	Fault ictE InrCom Time Out	006FH	InrCOM internal communication special error code	4	7500H
112	яшто Fault SfLK PMLess Shaft Lock	0070H	PMLess shaft lock	7	FF31H

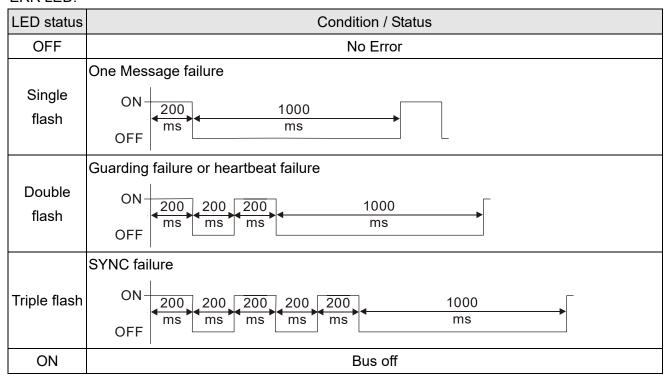
# 15-6 CANopen LED Function

There are two CANopen flash signs: RUN and ERR.

### **RUN LED**:

LED status	Condition	CANopen State
OFF	OFF	Initial
Blinking	ON 200 ms ms	Pre-Operation
Single flash	ON 200 1000 ms ms	Stopped
ON	ON	Operation

#### ERR LED:



# Chapter 16 PLC Function Applications

16-1	PLC Summary
16-2	Notes before PLC use
16-3	Turn on
16-4	Basic principles of PLC ladder diagrams
16-5	Various PLC device functions
16-6	Introduction to the Command Window
16-7	Error display and handling
16-8	CANopen Master control applications
16-9	Explanation of various PLC mode controls (speed, torque
	homing, and position)
16-10	Internal communications main node control
16-11	Count function using MI8
16-12	Modbus remote IO control applications (use MODRW)
16-13	Calendar Function

# 16-1 PLC Summary

### 16-1-1 Introduction

The commands provided by the C2000's built-in PLC functions, including the ladder diagram editing tool WPLSoft, as well as the usage of basic commands and applications commands, chiefly retain the operating methods of Delta's PLC DVP series.

# 16-1-2 WPLSoft ladder diagram editing tool

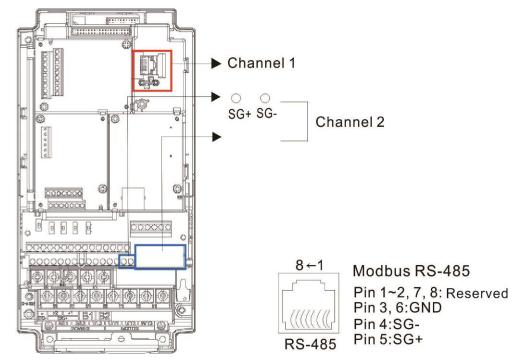
WPLSoft is Delta's program editing software for the DVP and C2000 programmable controllers in the Windows operating system environment. Apart from general PLC program design general Windows editing functions (such as cut, paste, copy, multiple windows, etc.), WPLSoft also provides many Chinese/ English annotation editing and other convenience functions (such as registry editing, settings, file reading, saving, and contact graphic monitoring and settings, etc.).

The following basic requirements that need to install WPLSoft editing software:


Item	System requirements			
Operating system	Windows 95/98/2000/NT/ME/XP			
CPU	At least Pentium 90			
Memory	At least 16MB (we recommend at least 32MB)			
Hand daba	Hard drive capacity: at least 100MB free space			
Hard drive	One optical drive (for use in installing this software)			
Dioplay	Resolution: 640×480, at least 16 colors; it is recommended that the screen			
Display	area be set at 800×600 pixels			
Mouse	Ordinary mouse or Windows-compatible device			
Printer	Printer with a Windows driver program			
RS-485 port	Must have at least an RS-485 port to link to the PLC			
Suitable PLC	Dolta's full DVD DLC series VED C2000 series			
models	Delta's full DVP-PLC series, VFD-C2000 series			

### 16-2 Notes before PLC use

- 1. The PLC has a preset communications format of 7, N, 2, 9600, with node 2; the PLC node can be changed in Pr. 09-35, but this address may not be the same as the drive's address setting of Pr. 09-00.
- 2. The C2000 provides 2 communications serial ports that can be used to download PLC programs (see figure below). Channel 1 has a fixed communications format of 19200, 8, N, 2 RTU.



- 3. The client can simultaneously access data from the converter and internal PLC, which is performed through identification of the node. For instance, if the converter node is 1 and the internal PLC node is 2, then the client command will be
  - 01 (node) 03 (read) 0400 (address) 0001 (1 data item), indicating that it must read the data in converter Pr. 04-00
  - 02 (node) 03 (read) 0400 (address) 0001 (1 data item), indicating that it must read the data in internal PLC X0
- 4. The PLC program will be disabled when uploading/ downloading programs.
- 5. Please note when using WPR commands to write in parameters, values may be modified up to a maximum of 10<sup>9</sup> times, otherwise a memory write error will occur. The calculation of modifications is based on whether the entered value has been changed. If the entered value is left unchanged, the modifications will not increase afterwards. But if the entered value is different from before, the number of modifications will increase by one.
- 6. When Pr. 00-04 is set as 28, the displayed value will be the value of PLC register D1043 (see figure below):



Digital Keypad KPC-CC01 Can display 0–65535


- 7. In the PLC Run and PLC Stop mode, the content 9 and 10 of Pr. 00-02 cannot be set and cannot be reset to the default value.
- 8. The PLC can be reset to the default value when Pr. 00-02 is set as 6.
- 9. The corresponding MI function will be disabled when the PLC writes to input contact X.
- 10. When the PLC controls converter operation, control commands will be entirely controlled by the PLC and will not be affected by the setting of Pr. 00-21.
- 11. When the PLC controls converter frequency commands (FREQ commands), frequency commands will be entirely controlled by the PLC, and will not be affected by the setting of Pr. 00-20 or the Hand ON/OFF configuration.
- 12. When the PLC controls converter frequency (TORQ commands), torque commands will be entirely controlled by the PLC, and will not be affected by the setting of Pr. 11-33 or the Hand ON/OFF configuration.
- 13. When the PLC controls converter frequency (POS commands), position commands will be entirely controlled by the PLC, and will not be affected by the setting of Pr. 11-40 or the Hand ON/OFF configuration.
- 14. When the PLC controls converter operation, if the keypad Stop setting is valid, this will trigger an FStP error and cause stoppage.

### 16-3 Turn on

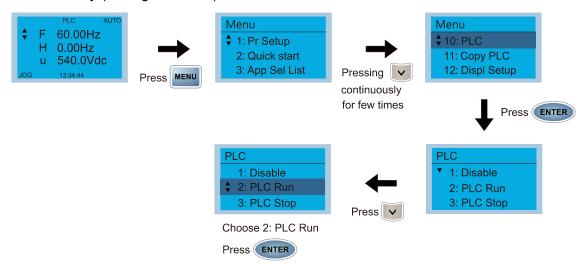
### 16-3-1 Connect to PC

Start operation of PLC functions in accordance with the following four steps

1. After pressing the Menu key and selecting 4: PLC on the KPC-CC01 digital keypad, press the Enter key (see figure below).



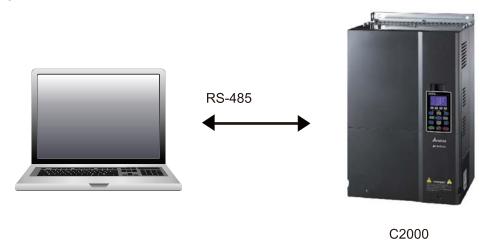2. Wiring: Connect the drive's RJ45 communications interface to a PC via the RS-485.



3. PLC function usage



- PLC functions are as shown in the figure on the left; select item 2 and implement PLC functions.
- 1: No function (Disable)
- 2: Enable PLC (PLC Run)
- 3: Stop PLC functions (PLC Stop)
- When the external multifunctional input terminals (MI1–MI8) are in PLC Mode select bit0 (51) or PLC Mode select bit1 (52), and the terminal contact is closed or opened, it will compulsorily switch to the PLC mode, and keypad switching will be ineffective. Corresponding actions are as follows:

PLC mode	PLC Mode select bit1(52)	PLC Mode select bit0 (51)			
Using KPC-CC01	FEC Widde select bit 1(32)	PLC Wode select bito (31)			
Disable	OFF	OFF			
PLC Run	OFF	ON			
PLC Stop	ON	OFF			
Maintain previous state	ON	ON			

### NOTE

- When input/ output terminals (FWD REV MI1–MI8, MI10–15, Relay1, Relay2, RY10–RY15, MO1–MO2, and MO10–MO11) are included in the PLC program, these input/ output terminals will only be used by the PLC. As an example, when the PLC program controls Y0 during PLC operation (PLC1 or PLC2), the corresponding output terminal relay (RA/RB/RC) will operate in accordance with the program. At this time, the multifunctional input/ output terminal setting will be ineffective. Because these terminal functions are already being used by the PLC, the DI/ DO/ AO in use by the PLC can be determined by looking at Pr. 02-52, Pr. 02-53, and Pr. 03-30.
- When the PLC's procedures use special register D1040, the corresponding AO contact AFM1 will be occupied, and AFM2 corresponding to special register D1045 will have the same situation.
- Pr. 03-30 monitors the state of action of the PLC function analog output terminal; bit0 corresponds to the AFM1 action state, and bit1 corresponds to the AFM2 action state.

# 16-3-2 I/O device explanation

### Input devices:

Serial No.	X0	X1	X2	Х3	X4	X5	X6	X7	X10	X11	X12	X13	X14	X15	X16	X17
1	FWD	REV	MI1	MI2	MI3	MI4	MI5	MI6	MI7	MI8						
2											MI10	MI11	MI12	MI13	MI14	MI15
3											MI10	MI11	MI12	MI13		

1: Control I/O |

2: Expansion card: EMC-D611A (D1022=4)

3: Expansion card: EMC-D42A (D1022=5)

### Output devices:


Serial No.	Y0	Y1	Y2	Y3	Y4	Y5	Y6	Y7	Y10	Y11	Y12	Y13	Y14	Y15	Y16	Y17
1	RY1	RY2		MO1	MO2											
2						MO10	MO11									
3						RY10	RY11	RY12	RY13	RY14	RY15					

1: Control I/O |

2: Expansion card: EMC-D42A (D1022=5)

3: Expansion card: EMC-R6AA (D1022=6)

#### RY1 / RY2 / RY3







### 16-3-3 Installation WPLSoft

Download and install WPLSoft editing software in Delta's website:



After completing installation, the WPLSoft program will be installed in the designated subfolder "C: \Program Files\Delta Industrial Automation\WPLSoft x.xx".

# 16-3-4 Program writing

Step 1: Click on the WPLSoft icon to start the editing software. (See figure 16-1)



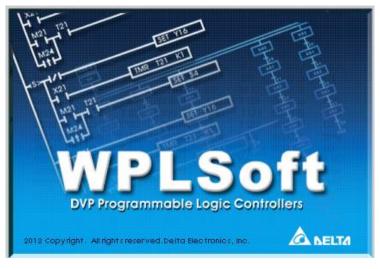


Figure 16-1 (Left: WPLSoft icon; Right: Start WPLSoft)

Step 2: The WPLSoft editing window appears (see figure 16-2 below). When running WPLSoft for the first time, before "New file" has been used, only the "File (F)," "Communications (C)," View (V)," "Options (O)," and "Help (H)" columns will appear on the function toolbar.

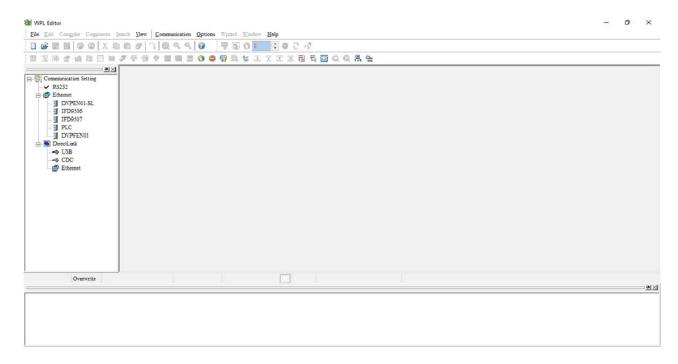


Figure 16-2

After running WPLSoft for the second time, the last file edited will open and be displayed in the editing window. The following figure 16-3 provides an explanation of the WPLSoft editing software window:

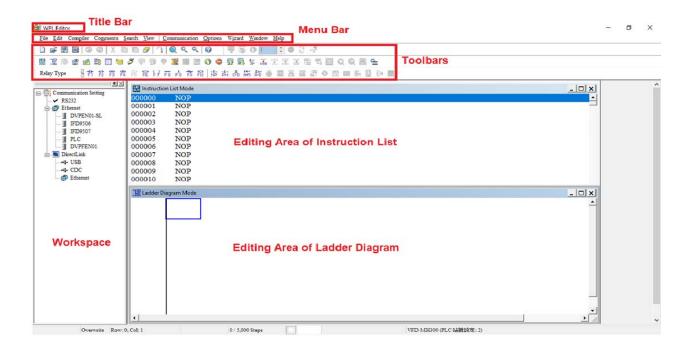


Figure 16-3

Step 3: Click on the icon on the toolbar: opens new file (Ctrl+N), see figure 16-4 below



Figure 16-4

NOTE You can also find "New file (N) (Ctrl+N)" in the "File (F)", as shown in figure 16-5 below.



Figure 16-5

Step 4: The "Device settings" window will appear after clicking, see figure 16-6 below. You can now enter the project title and filename, and select the device and communication settings to be used.

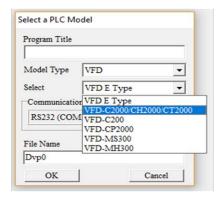


Figure 16-6

Communications settings: Perform settings in accordance with the desired communications method. See figure 16-7 below.

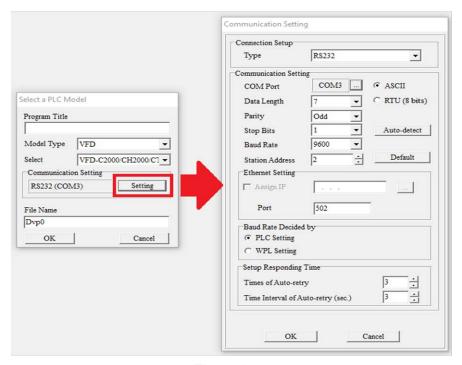


Figure 16-7

Step 5: Press Confirm after completing settings and begin program editing. There are two program editing methods; you can choose whether to perform editing in the command mode or the ladder diagram mode (see figure 16-8 below).

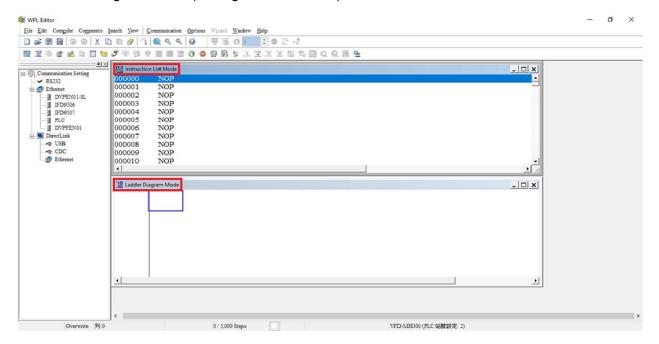


Figure 16-8

NOTE In ladder diagram mode, you can perform program editing using the buttons on the function icon row (see figure 16-9 below).

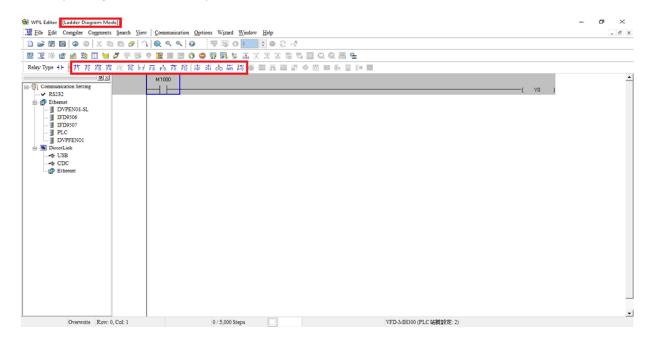


Figure 16-9

#### **Basic Operation-Example**

Input the ladder diagram as the figure below. The following steps can be operated through the mouse or function key (F1–F12) on the keyboard.

```
M10 ( Y0 )
```

Figure 16-10

Step 1: The following screen will appear after a new file is established:

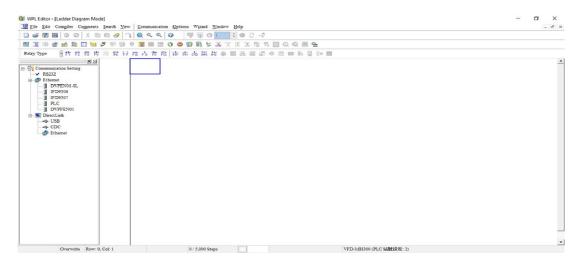


Figure 16-11

Step 2: Click on the always-open switch icon or press the function key F1. After the name of the input device and the comment dialog box have appeared, the device name (such as "M"), device number (such as "10"), and input comments (such as "auxiliary contact") can be selected; press the OK button when finished (see figure 16-12 and 16-13 below).

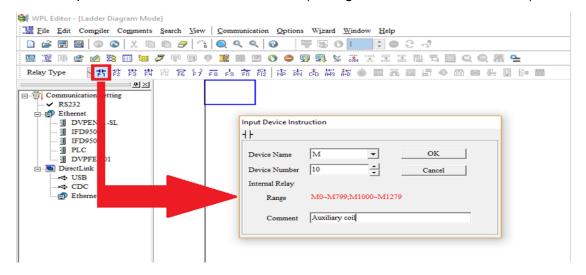


Figure 16-12



Figure 16-13

Step 3: Click on the output coil icon or press function key F7. After the name of the input device and the comment dialog box have appeared, the device name (such as "Y"), device number (such as "0"), and input comments (such as "output coil") can be selected; press the OK button when finished (see figure 16-14 and 16-15 below).

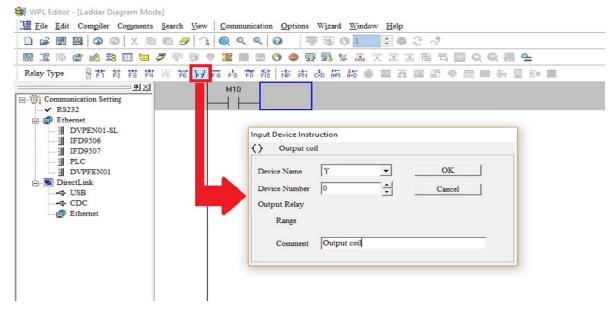


Figure 16-14



Figure 16-15

Step 4: Press "ENTER" button, when the "Input Instructions" window appears, key in "END" in the field and press the OK button (see figure 16-16 and 16-17 below).



Figure 16-16



Figure 16-17

Step 5: Click on the Ladder diagram => Code" icon, which will compile the edited ladder diagram as a command program. After compiling, the number of steps will appear on the left side of the busbar (see figure 16-18 below).

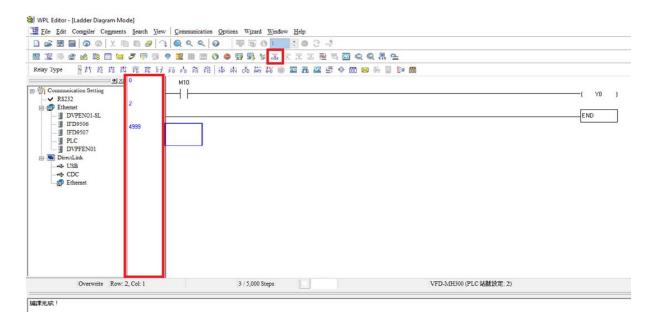



Figure 16-18

# 16-3-5 Program download

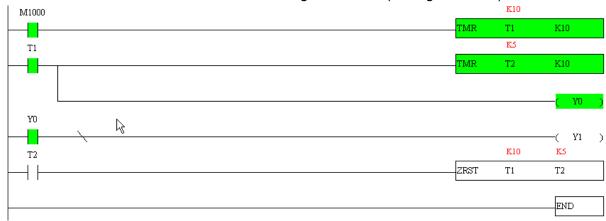After inputting a program using WPLSoft, select compile . After completing compilation, select the to download a program. WPLSoft will perform program download with the online PLC in the communications format specified in communications settings.

# 16-3-6 Program monitoring


While confirming that the PLC is in the Run mode, after downloading a program, click on in the communications menu and select start ladder diagram control (see figure below)



# 16-4 Basic principles of PLC ladder diagrams

# 16-4-1 Schematic diagram of PLC ladder diagram program scanning

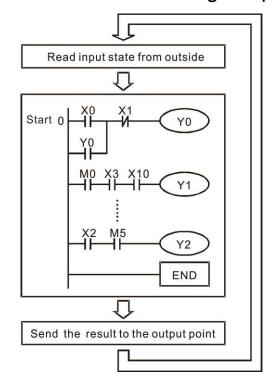Output results are calculated on the basis of the ladder diagram configuration (internal devices will have real-time output before results are sent to an external output point)



Repeated implementation

# 16-4-2 Introduction to ladder diagrams

Ladder diagrams comprise a graphic language widely applied in automatic control, and employs common electrical control circuit symbols. After a ladder diagram editor has been used to create a ladder pattern, PLC program designed is completed. The use of a graphic format to control processes is very intuitive, and is readily accepted by personnel who are familiar with electrical control circuit technology. Many of the basic symbols and actions in a ladder diagram comprise commonly seen electrical devices in conventional automatic control power distribution panels, such as buttons, switches, relays, timers, and counters.

Internal PLC devices: The types and quantities of internal PLC devices vary in different brands of products. Although these internal devices use the same names as conventional electrical control circuit elements such as relays, coils, and contacts, a PLC does not actually contain these physical devices, and they instead correspond to basic elements in the PLC's internal memory (bits). For instance, if a bit is 1, this may indicate that a coil is electrified, and if that bit is 0, it will indicate that the coil is not electrified. An N.O. contact (Normal Open, or contact a) can be used to directly read the value of the corresponding bit, and an N.C. contact (Normal Close, or contact b) can be used to obtain the inverse of the bit's value. Multiple relays occupy multiple bits, and 8 bits comprise one byte; two bytes comprise one word, and two words comprise a double word. When multiple relays are processing at the same time (such as addition/ subtraction or displacement, etc.), a byte, word, or double word can be used. Furthermore, a PLC contains two types of internal devices: a timer and a counter. It not only has a coil, but can count time and numerical values. Because of this, when it is necessary to process some numerical values, these values are usually in the form of bytes, words, or double words.

The various internal devices in a PLC all account for a certain quantity of storage units in the PLC's storage area. When these devices are used, the content of the corresponding storage area is read in the form of bits, bytes, or words.

Introduction to the basic internal devices in a PLC

Device type	Description of Function
Input Relay	An input relay constitutes the basic unit of storage in a PLC's internal memory corresponding to an external input point (which serves as a terminal connecting with an external input switch and receiving external input signals). It is driven by external input signals, to which it assigns values of 0 or 1. A program design method cannot change the input relay status, and therefore cannot rewrite the corresponding basic units of an input relay, and WPLSoft cannot be used to perform compulsory On/Off actions. A relay's contacts (contacts a and b) can be used an unlimited number of times. An input relay with no input signal must be left idle and cannot be used for some other purpose.
	Device indicated as: X0, X1, X7, X10, X11, etc. This device is expressed with the symbol "X", and a device's order is indicated with an octal number. Please refer to Chapter 16-3-2 I/O device explanation for input point numbers.
Output Relay	An output relay constitutes the basic unit of storage in a PLC's internal memory corresponding to an external output point (which connects with an external load). It may be driven by an input relay contact, a contact on another internal device, or its own contacts. It uses one NO contact to connect with external loads or other contacts, and, like input contacts, can use the contact an unlimited number of times. An output relay with no input signal will be idle, but may be used an internal relay if needed.
	☑ Device indicated as: Y0, Y1,Y7, Y10, Y11,etc. This device is expressed with the symbol "Y", and a device's order is indicated with an octal number. Please refer to Chapter 16-3-2 I/O device explanation for output point numbers.
Internal Relay	Internal relays have no direct connection with the outside. These relays are auxiliary relays inside a PLC. Their function is the same as that of an auxiliary (central) relay in an electrical control circuit: Each auxiliary relay corresponding to a basic unit of internal storage; they can be driven by input relay contacts, output relay contacts, and the contacts of other internal devices. An internal auxiliary relay's contact can also be used an unlimited number of times. Internal relays have no outputs to outside, and must output via an output point.  Device indicated as: M0, M1 to M799, etc. This device is expressed as the
	symbol "M" , and its order is expressed as a decimal number.
Counter	A counter is used to perform counting operations. A count setting value (such as the number of pulses to be counted) must be assigned when a counter is used. A counter contains a coil, contact, and a counting storage device. When the coil goes from Off to On, this indicates that the counter has an input pulse, and one is added to its count. There are 16 bits that can be employed by the user.
	☑ Device indicated as: C0, C1 to C79, etc. This device is expressed as the symbol "C", and its order is expressed as a decimal number.
Timer	A timer is used to complete control of timing. The timer contains a coil, contact, and a time value register. When the coil is electrified, if the preset time is reached, the contact will be actuated (contact a will close, contact b will open), and the timer's fixed value will be given by the set value. Timer has a regulated clock cycle (timing units: 100 ms). As soon as power to the coil is cut off, the contact will no longer be actuated (contact a will open, contact b will close), and the original timing value will return to zero.
	Device indicated as: T0, T1 to T159, etc. The device is expressed as the symbol "T", and its order is expressed as a decimal number.

Device type	Description of Function							
Data register	When a PLC is used to perform various types of sequence control and set time value and count value control, it most commonly perform data processing and numerical operations, and data registers are used exclusively for storage of data and various parameters. Each data register contains 16 bits of binary data, which means that it can store one word. Two data registers with adjacent numbers can be used to process double words.							
	☑ Device indicated as: D0, D1 to D399, etc. The device is expressed as the symbol "D", and its order is expressed as a decimal number.							

Ladder diagram images and their explanation

Ladder diagram structures	Explanation of commands	Command	Using Device
	NO switch, contact a	witch, contact a LD X · Y · M · T	
	NC switch, contact b	LDI	X、Y、M、T、C
	Series NO	AND	X、Y、M、T、C
	Series NC	ANI	X、Y、M、T、C
	Parallel NO	OR	X、Y、M、T、C
	Parallel NC	ORI	X · Y · M · T · C
	Positive edge-triggered switch	LDP	X · Y · M · T · C
	Negative edge-triggered switch	LDF	X · Y · M · T · C
<b>├</b> ── <b>├</b> ── <b>│↑├</b> ──	Positive edge-triggered series	ANDP	X · Y · M · T · C
	Negative edge-triggered series	ANDF	X、Y、M、T、C
	Positive edge-triggered parallel	ORP	X、Y、M、T、C
	Negative edge-triggered parallel	ORF	X、Y、M、T、C
	Block series	ANB	N/A
	Block parallel	ORB	N/A
	Multiple outputs	MPS MRD MPP	N/A
	Coil driven output commands	OUT	Υ·M

Ladder diagram structures	Explanation of commands	Command	Using Device
	Some basic commands, applications commands	Some basic commands Applications commands	
	Inverted logic	INV	N/A

# 16-4-3 Overview of PLC ladder diagram editing

The program editing method begins from the left busbar and proceeds to the right busbar (the right busbar is omitted when editing using WPLSoft). Continue to the next row after completing each row; there is a maximum of 11 contacts on each row. If this is not sufficient, a continuous line will be generated to indicate the continued connection and more devices can be added. A continuous series of numbers will be generated automatically and identical input points can be used repeatedly. See figure below:

The ladder diagram programming method involves scanning from the upper left corner to the lower right corner. The coils and applications command-computing box are handled in the output, and the ladder diagram is placed on the farthest right. Taking the figure below as an example, we can gradually analyze the procedural sequence of the ladder diagram. The number in the upper right corner gives the sequential order.

**TMR** 

K10

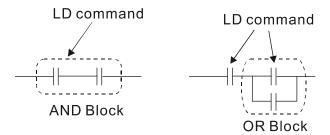
Explanation of command sequence 1 LD X0 2 OR M0 3 AND X1 4 LD X3 Y1 AND M1 М3 **ORB** 5 LD Y1 AND X4 LD 6 T0 AND М3 **ORB** 7 **ANB** 8 OUT Y1

TMR T0


K10

Explanation of basic structure of ladder diagrams

LD (LDI) command: An LD or LDI command is given at the start of a block.



LDP and LDF have this command structure, but there are differences in their action state. LDP, LDF only act at the rising or falling edge of a conducting contact. (see figure below):




**AND (ANI) command:** A series configuration in which a single device is connected with one device or a block.




ANDP, ANDF also have structures like this, but their action occurs at the rising and falling edge.

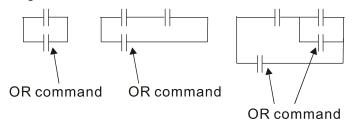**OR (ORI) command:** A single device is connected with one device or a block.




ORP, ORF also have identical structures, but their action occurs at the rising and falling edge.

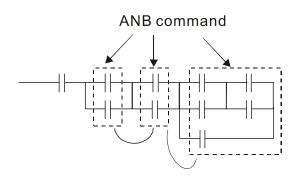**ANB command:** A configuration in which one block is in series with one device or block.



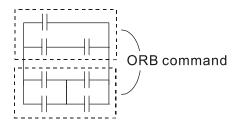**ORB command:** A configuration in which one block is in parallel with one device or block.




In the case of ANB and ORB operations, if a number of blocks are connected, they should be combined to form a block or network from the top down or from left to right.

MPS, MRD, MPP commands: Branching point memory for multiple outputs, enabling multiple, different outputs. The MPS command begins at a branching point, where the so-called branching point refers to the intersection of horizontal and vertical lines. We have to rely on the contact status along a single vertical line to determine whether the next contact can give a memory command. While each contact is basically able to give memory commands, in view of convenience and the PLC's capacity restrictions, this can be omitted from some places when converting a ladder diagram. The structure of the ladder diagram can be used to judge what kinds of contact memory commands are used.

MPS can be distinguished by use of the "T" symbol; this command can be used consecutively for up to 8 times. The MRD command is read from branching point memory; because logic states along any one vertical line must be the same, in order to continue analysis of other ladder diagrams, the original contact status must be read.

MRD can be distinguished by use of the "|-" symbol. The MPP command is read from the starting state of the uppermost branching point, and it is read from the stack (pop); because it is the final command along a vertical line, it indicates that the state of the vertical line can be concluded.

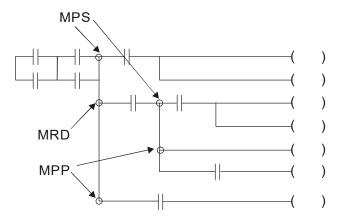MPP can be distinguished by use of the "L" symbol. Although there should basically be no errors when using the foregoing analytical approach, the compiling program may sometimes omit identical state output, as shown in the following figure:




# 16-4-4 Commonly used basic program design examples

#### Start, stop, and protection

Some applications may require a brief close or brief break using the buttons to start and stop equipment. A protective circuit must therefore be designed to maintain continued operation in these situations; this protective circuit may employ one of the following methods:


#### Example 1: Priority stop protective circuit

When the start NO contact X1=On, and the stop NC contact X2=Off, Y1=On; if X2=On at this time, coil Y1 will no longer be electrified, and this is therefore referred to as priority stop.



#### Example 2: Priority start protective circuit

When start NO contact X1=On, and the stop NC contact X2=Off, Y1=On, and coil Y1 will be electrified and protected. At this time, if X2=On, coil Y1 will still protect the contact and continue to be electrified, and this is therefore priority start.



#### Example 3: Setting (SET) and reset (RST) command protective circuit

The following figure shows a protective circuit composed of RST and SET commands.

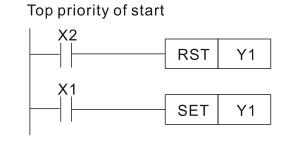
Priority stop occurs when the RST command is placed after the SET command. Because the PLC executes programs from the top down, at the end of the program, the state of Y1 will indicate whether coil Y1 is electrified. When X1 and X2 are both actuated, Y1 will lose power, and this is therefore priority stop.

Priority start occurs when the SET command is placed after the RST command. When X1 and X2 are both actuated, Y1 will be electrified, and this is therefore priority start.

Top priority of stop

X1
SET Y1


X2
RST Y1



### Commonly used control circuits


#### Example 4: Conditional control

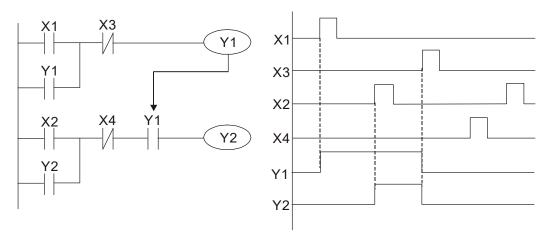X1, X3 are respectively start/ stop Y1, and X2 & X4 are respectively start/ stop Y2; all have protective circuits. Because Y1's NO contact is in series with Y2's circuit, it becomes an AND condition for the actuation of Y2. The action of Y1 is therefore a condition for the action of Y2, and Y1 must be actuated before Y2 can be actuated.




Example 5: Interlocking control

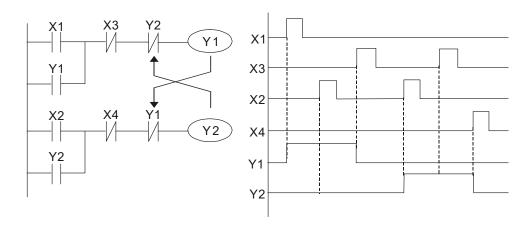The figure below shows an interlocking control circuit. Depending on which of the start contacts X1, X2 is valid first, the corresponding output Y1 or Y2 will be actuated, and when one is actuated, the other will not be actuated. This implies that Y1 and Y2 cannot be actuated at the same time (interlocking effect). Even if both X1 and X2 are valid at the same time, because the ladder diagram program is scanned from the top down, it is impossible for Y1 and Y2 to be actuated at same time. This ladder diagram assigns priority only to Y1.



#### Example 6: Sequence control

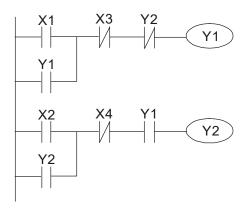
If the NC contact of Y2 in the interlocking control configuration of example 5 is put in series with the Y1 circuit, so that it is an AND condition for actuation of Y1 (see figure below), not only is Y1 a condition for the actuation of Y2 in this circuit, the actuation of Y2 will also stop the actuation of Y1. This configuration confirms the actuation order of Y1 and Y2.



Example 7: Oscillating circuit


Oscillating circuit with a period of  $\Delta T + \Delta T$ 

The figure below shows a very simple ladder diagram. When starting to scan the Y1 NC contact, because the Y1 coil has lost power, the Y1 NC contact will be closed. When the Y1 coil is then scanned, it will be electrified, and the output will be 1. When the Y1 NC contact is scanned in the scanning cycle, because Y1 coil is electrified, the Y1 NC contact will be opened, the Y1 coil will then lose power, and the output will be 0. Following repeated scanning, the output of Y1 coil will have an oscillating waveform with a period of  $\Delta T$  (On) + $\Delta T$  (Off).




#### Oscillating circuit with a period of nT+ΔT

The program of the ladder diagram shown below uses timer T0 to control coil Y1's electrified time. After Y1 is electrified, it causes timer T0 to close during the next scanning cycle, which will cause the output from Y1 to have the oscillating waveform shown in the figure below. Here n is the timer's decimal setting value, and T is the clock cycle of the timer.

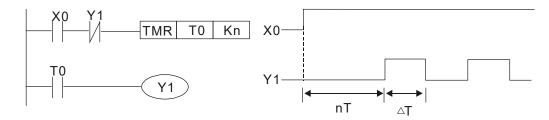


#### Example 8: Flashing circuit

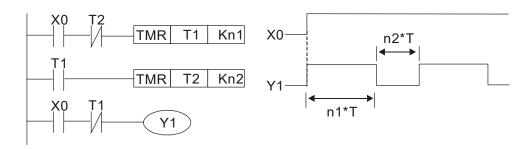The following figure shows an oscillating circuit of a type commonly used to cause an indicator light to flash or a buzzer to buzz. It uses two timers to control the On and Off time of Y1 coil. Here n1, n2 are the timing set values of T1 and T2, and T is the clock cycle of the timer.




#### Example 9: Triggering circuit

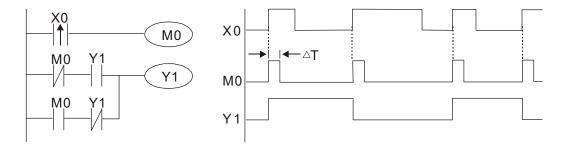In the figure below, a command consisting of the differential of the rising edge of X0 causes coil M0 to generate a single pulse for  $\Delta T$  (length of one scanning cycle), and coil Y1 is electrified during this scanning cycle. Coil M0 loses power during the next scanning cycle, and NC contact M0 and NC contact Y1 are both closed. This causes coil Y1 to stay in an electrified state until there is another rising edge in input X0, which again causes the electrification of coil M0 and the start of another scanning cycle, while also causing coil Y1 to lose power, etc. The sequence of these actions can be seen in the figure below. This type of circuit is commonly used to enable one input to perform two actions in alternation. It can be seen from the time sequence in the figure below that when input X0 is a square wave signal with a period of T, the output of coil Y1 will be a square wave signal with a period of 2T.




#### Example 10: Delay circuit

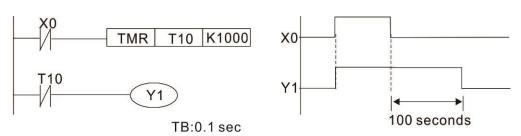When input X0 is On, because the corresponding NC contact will be Off, the timer T10 will be in no power status, and output coil Y1 will be electrified. T10 will receive power and begin timing only after input X0 is Off, and output coil Y1 will be delayed for 100 sec. (K1000\*0.1 sec. =100 sec.) before losing power; please refer to the sequence of actions in the figure below.




Example 11: The open/ close delay circuit is composed of two timers; output Y4 will have a delay whether input X0 is On or Off.

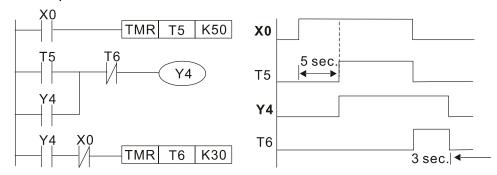

Example 12: Extended timing circuit

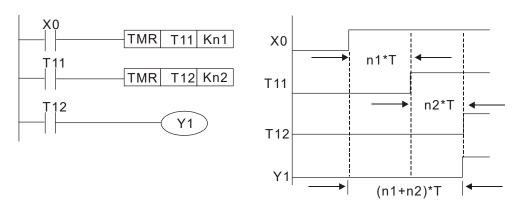In the circuit in the figure on the left, the total delay time from the moment input X0 closes to the time output Y1 is electrified is (n1+n2)\*T, where T is the clock cycle. Timers: T11, T12; clock cycle: T.



# 16-5 Various PLC device functions

Item	Specifications	Notes
	Program stored internally, alternating back-and-forth scanning method	
	When it starts again after ending (after execution to the END command), the input/ output has an immediate refresh command	
Algorithmic processing speed	Basic commands (several μs);	Applications command (1 to several tens of µs)
Programming language	Command + ladder diagram	
Program capacity	10000 steps	
Input/ output terminal	Input (X): 10, output (Y): 4	This number of contacts constitutes C2000 input/ output contacts; other devices have different correspondences

Type	Device	Ite	em	Range		Function
•	Х	External input	relay	X0-X17, 16 points, octal	Total	Corresponds to external
	^	External input	Tolay	number		
	Υ	External outpu	ut relay	Y0–Y17, 16 points, octal number	Total 32 points   Total 880 points   Total 880 points   Total 160 points   Total 80 points   Total 1400	Corresponds to external
	М	1	General Use	M0–M799, 800 points	Total	output point
		Relay	Special Special ourpose	M1000–M1079, 80 points	880	Contact can switch On/ Off within the program
Relay bit form	Т	Timer	100ms timer	T0-T159, 160 points	160	number will go On when the time is reached
	С	I Alintar I	16-bit counter, general use	C0–C79, 80 points	80	number will go On when
	Т	Current timer	value	T0-T159, 160 points		The contact will be On when the time is reached
Register	С	Current counter value		C0–C79, 16-bit counter 80 points		The counter contact will come On when the count is reached
word data	D	D Data Register	Used to maintain power Off	D0-D399, 400 points		•
			Special purpose	D1000–D1199, 200 points D2000–D2799, 800 points	points	memory area
	17	Daniman	Single-byte	Setting Range: K-32,768-I	K32,767	7
Constant	K	Decimal	Double-byte	Setting Range: K-2,147,483,648-I		
Constant	Н	Hexadecimal	Single-byte	Setting Range:H0000–HFFFF		
			Double-byte	Setting Range: H00000000	0-HFFF	FFFFF
Serial communications port (program write/read)		RS-485/ keypad port				
Input/output		Built-in three analog inputs and two analog outputs				
Function expansion module Optional Accessories		EMC-D42A; EMC-R6AA; EMCD611A				
Communication Expansion Optional Accessories		EMC-COP01,(CANopen)				

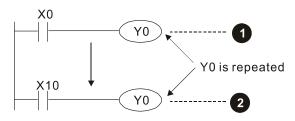
# 16-5-1 Introduction to device functions

# Input/ output contact functions

Input contact X functions: Input contact X is connected with an input device, and reads input signals entering the PLC. The number of times that contact a or b of input contact X is used in the program is not subject to restrictions. The On/ Off state of input contact X will change as the input device switches On and Off; a peripheral device (WPLSoft) cannot be used to force contact X On or Off.

### Output contact Y functions

The job of output contact Y is to send an On/Off signal to drive the load connected with output contact Y. Output contacts consist of two types: relays and transistors. While number of times that contact a or b of each output contact Y is used in the program is not subject to restrictions, it is recommended that the number of output coil Y be used only once in a program, otherwise the right to determine the output state when the PLC performs program scanning will be assigned to the program's final output Y circuit.



The output of Y0 will be decided by circuit **2**, i.e. decided by ON/OFF of X10.

# Numerical value, constant [K]/ [H]

Constant	Single-byte	K	LDecimai	K-32,768–K32,767
	Double-byte			K-2,147,483,648–K2,147,483,647
	Single-byte	ш	Hexadecimal	H0000-HFFFF
	Double-byte	П		H00000000—HFFFFFFF

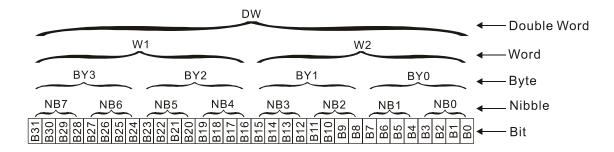
The PLC can use five types of numerical values to implement calculations based on its control tasks; the following is an explanation of the missions and functions of different numerical values.

#### Binary Number, BIN

The PLC's numerical operations and memory employ binary numbers. Binary nibbles and relevant terms are explained as follows:

bit	Bits are the fundamental units of binary values, and have a state of either 1 or 0
Nibble	Comprised of a series of 4 bits (such as b3–b0); can be used to express a
	one-nibble decimal number 0–9 or hexadecimal number: 0–F.
Byte	Comprised of a series of two nibbles (i.e. 8 bits, b7–b0); can express a
Dyte	hexadecimal number: 00–FF.
Word	Comprised of a series of two bytes (i.e. 16 bits, b15–b0); can express a
VVOIG	hexadecimal number with four nibbles: 0000–FFFF.
Double Word	Comprised of a series of two words (i.e. 32 bits, b31–b0); can express a
Double Word	hexadecimal number with eight nibbles: 00000000–FFFFFFFF

Relationship between bits, digits, nibbles, words, and double words in a binary system (see figure below):



#### Octal Number, OCT

The external input and output terminals of a DVP-PLC are numbered using octal numbers

Example: External input: X0–X7, X10–X17...(Device number table);

External output: Y0-Y7, Y10-Y17...(Device number table)

#### Decimal Number, DEC

Decimal numbers are used for the following purposes in a PLC system:

- ☐ The setting values of timer T or counter C, such as TMR C0 K50. (K constant)
- ☑ The numbers of devices including M, T, C, or D, such as M10 or T30. (device number)
- ☑ Used as an operand in an application command, such as MOV K123 D0. (K constant)

#### Binary Code Decimal, BCD

Uses one nibble or 4 bits to express the data in a decimal number; a series of 16 bits can therefore express a decimal number with 4 nibbles. Chiefly used to read the input value of a fingerwheel numerical switch input or output a numerical value to a seven-segment display drive.

#### Hexadecimal Number, HEX

Applications of hexadecimal numbers in a PLC system: Used as operands in application commands, such as MOV H1A2B D0. (H constant)

#### Constant K

Decimal numbers are usually prefixed with a "K" in a PLC system, such as K100. This indicates that it is a decimal number with a numerical value of 100.

Exceptions: K can be combined with bit device X, Y, M, or S to produce data in the form of a nibble, byte, word, or double word, such as in the case of K2Y10 or K4M100. Here K1 represents a 4-bit combination, and K2–K4 variously represent 8, 12, and 16-bit combinations.

#### Constant H

Hexadecimal numbers are usually prefixed with the letter "H" in a PLC system, such as in the case of H100, which indicates a hexadecimal number with a numerical value of 100.

# Functions of auxiliary relays

Like an output relay Y, an auxiliary relay M has an output coil and contacts a and b, and the number of times they can be used in a program is unrestricted. Users can use an auxiliary relay M to configure the control circuit, but cannot use it to directly drive an external load. Auxiliary relays have the following two types of characteristics:

Ordinary auxiliary relays: Ordinary auxiliary relays will all revert to the Off state if a power outage occurs while the PLC is running, and will remain in the Off state if power is again turned down.

Special purpose auxiliary relays: Each special purpose auxiliary relay has its own specific use. Do not use any undefined special purpose auxiliary relays.

### Timer functions

Timers take 100 ms as their timing units. When the timing method is an upper time limit, when the current timer value = set value, power will be sent to the output coil. Timer setting values consist of decimal K values, and the data register D can also serve as a setting value.

Actual timer setting time = timing units \* set value

#### Counter features

Item	16-bit counter
Type	General Type
CT Direction:	Score
Setting	0–32,767
Designation of set value	Constant K or data register D
Change in current value	When the count reaches the set value, there is no longer a count
Output contact	When the count reaches the set value, the contact comes On and stays On
Reset	The current value reverts to 0 when an RST command is executed, and the
Reset	contact reverts to Off
Contact actuation	All are actuated after the end of scanning

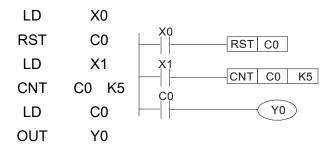
#### Counter functions

When a counter's counting pulse input signal goes Off→On, if the counter's current value is equal to the set value, the output coil will come On. The setting value will be a decimal K values, and the data register D can also serve as a setting value.


#### 16-bit counter C0-C79:

- ☑ 16-bit counter setting range: K0–K32,767. (when K0 and K1 are identical, the output contact will immediately be On during the first count.)
- ☐ The current counter value will be cleared from an ordinary counter when power is shut off to the PLC.
- ☑ If the MOV command or WPLSoft is used to transmit a value greater than the set value to the
  C0 current value register, when the next X1 goes from Off→On, the C0 counter contact will
  change to On, and the current value will change to the set value.
- A counter's setting value may be directly set using a constant K or indirectly set using the value in register D (not including special data registers D1000–D1199 or D2000–D2799).
- ☑ If the set value employs a constant K, it may only be a positive number; the set value may be either a positive or a negative number if the value in data register D is used. The current counter value will change from 32,767 to -32,768 as the count continues to accumulate.

#### Example



- When X0=On and the RST command is executed, the current value of C0 will revert to 0, and the output contact will revert to Off.
- When X1 changes from Off→On, the current value of the counter will execute an increase (add one).
- When the count of counter C0 reaches the 4. set value K5, the contact C0 will come On, and the current value of C0= set value =K5. Afterwards, signal C0 triggered by X1 cannot be received, and the current value of C0 will remain K5.

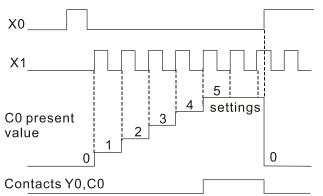

# 16-5-2 Introduction to special relay functions (special M)

R/W items: RO: read only function; RW: read and write function

Special M	Description of Function	R/W *
M1000	Operates monitor NO contact (contact a). NO while RUN, contact a. This contact is On while in the RUN state.	RO
M1001	Operates monitor NC contact (contact b). NC while RUN, contact b. This contact is Off while in the RUN state.	RO
M1002	Initiates a forward (the instant RUN is On) pulse. Initial pulse, contact a. Produces a forward pulse the moment RUN begins; its width = scan cycle	RO
M1003	Initiates a reverse (the instant RUN is Off) pulse. Initial pulse, contact a. Produces a reverse pulse the moment RUN ends; the pulse width = scan cycle	RO
M1004	Reserved	RO
M1005	Drive malfunction instructions	RO
M1006	Converter has no output (1 = no output, 0 = output)	RO
M1007	Drive direction FWD(0)/REV(1)	RO
M1008 - M1010		
M1011	10 ms clock pulse, 5ms On / 5ms Off	RO
M1012	100 ms clock pulse, 50ms On / 50ms Off	RO
M1013	1 sec. clock pulse, 0.5s On / 0.5s Off	RO
M1014	1 min. clock pulse, 30s On / 30s Off	RO
M1015	Frequency attained (when used together with M1025)	RO
M1016	Parameter read/write error	RO
M1017	Parameter write successful	RO
M1018		

Special	Description of Function	R/W *
M	2 3331 p 13 11 3 11 3 11 3 11 3 11 3 11	
M1019		
	Zero flag	RO
M1021	Borrow flag	RO
	Carry flag Divisor is 0	RO
M1023 M1024	DIVISOR IS 0	RO
W1024	Target drive frequency = set frequency (ON)	
M1025	Target drive frequency =0 (OFF)	RW
M1026	Drive operating direction FWD(OFF) / REV(ON)	RW
M1027	Drive Reset	RW
M1028		
M1029		
M1030		
M1031	Compulsory setting of the current PID integral value equal to D1019 (0 change, 1 valid)	RW
M1032	Compulsory definition of FREQ command after PID control	RW
M1033		
M1034	Initiates CANopen real-time control	RW
M1035	Initiates internal communications control	RW
M1036	Ignore calendar error	RW
M1037		
M1038	MI8 count begins	RW
M1039	Reset MI8 count value	RW
M1040	Excitation (Servo On)	RW
M1041		
M1042	Quick stop	RW
M1043	<del></del>	
	Pause (Halt)	RW
M1045		
M1047	<del></del>	
	Move to new position	RW
M1049		
M1050	Absolute position / relative position (0: relative/1: absolute)	RW
M1051		
M1052	Lock frequency (lock, frequency locked at the current operating frequency)	RW
M1053		
M1054	Compulsory reset of absolute position	RW
M1055	Search Origin	RW
M1056	Excitation ready (Servo On Ready)	RO
M1057		
M1058	On Quick Stopping	RO
M1059	CANopen Master setting complete	RO
M1060	CANopen Currently initializing slave station	RO
M1061	CANopen Slave station initialization failure	RO
M1062		
M1063	Torque attained	RO
M1064	Target reached	RO
M1065	Read/write CANopen data time out	RO
M1066	Read/write CANopen data complete	RO
M1067	Read/write CANopen data successful	RO
M1068	Calendar calculation error	RO
M1069		
M1070	Return home complete	RO
M1071	Homing error	RO

Special M	Description of Function	R/W *
M1072		
_		
M1075		
M1076	Calendar time error or refresh time out	RO
M1077	485 Read/write complete	RO
M1078	485 Read-write error	RO
M1079	485 Communications time out	RO
M1090	AUTO	RO
M1091	OFF	RO
M1092	HAND	RO
M1100	LOCAL	RO
M1101	REMOTE	RO
M1168	SBOV BCD and BIN mode switch	RW
M1260	PLC PID1 Enable	RW
M1262	PLC PID1 integral positive value limit	RW
M1270	PLC PID2 Enable	RW
M1272	PLC PID2 integral positive value limit	RW

# 16-5-3 Introduction to special register functions (special D)

Special D	Description of Function	R/W *
D1000		
D1001	Device system program version	RO
D1002	Program capacity	RO
D1003	Total program memory content	RO
D1004		
_		
D1009		
D1010	Current scan time (units: 0.1 ms)	RO
D1011	Minimum scan time (units: 0.1 ms)	RO
D1012	Maximum scan time (units: 0.1 ms)	RO
D1013		
_		
D1017		
D1018	Current integral value	RO
D1019	Compulsory setting of PID I integral	RW
D1020	Output frequency (0.000–600.00Hz)	RO
D1021	Output current (####.#A)	RO
	Al AO DI DO Expansion card number	
	0: No expansion card	
D1022	4: AC input card (6 in) (EMC-D611A)	RO
D 1022	5: Digital I/O Card (4 in 2 out ) (EMC-D42A)	1.0
	6: Relay card (6 out) (EMC-R6AA)	
	11: Analog I/O Card (2 in 2 out) (EMC-A22A)	
	Communication expansion card number	
	0: No expansion card	
	1: DeviceNet Slave (CMC-DN01)	
D1023	2: Profibus-DP Slave (CMC-PD01)	RO
	3: CANopen Slave (EMC-COP01)	
	4: Modbus-TCP Slave (CMC-MOD01)	
	5: EtherNet/IP Slave (CMC-EIP01)	
D4004	12: PROFINET Slave (CMC-PN01)	
D1024		
D1006	<b> </b>	
D1026		

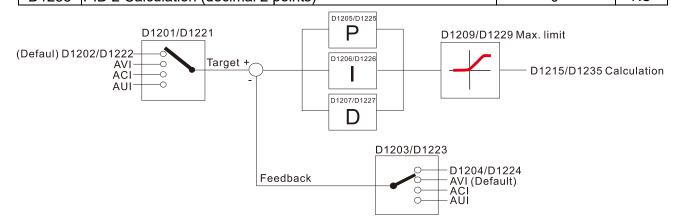
Special D	Description of Function	R/W *
D1027	PID calculation frequency command (frequency command after PID calculation)	RO
D1028	AVI value (0.00–100.00%)	RO
D1029	ACI value (0.0–100.00%)	RO
D1030	AUI value (-100.0–100.00%)	RO
D1031	C series: extension card Al10 (0.0–100.0%)	RO
D1032	C series: extension card AI11 (0.0–100.0%)	RO
D1033		
_ D4005		
D1035 D1036	Servo error bit	RO
D1030	Drive output frequency	RO
D1037	DCBUS voltage	RO
D1039	Output voltage	RO
D1040	Analog output value AFM1 (-100.00–100.00%)	RW
D1040	C series: extension card AO10 (0.0–100.0%)	RW
D1042	C series: extension card AO11 (0.0–100.0%)	RW
	Can be user-defined (will be displayed on panel when Pr. 00-04 is set as 28;	
D1043	display method is C xxx)	RW
D1044 D1045	Analog output value AFM2 (-100.00–100.00%)	- RW
D1045	Analog output value Ariviz (-100.00–100.00%)	ΓVV
D1040		
D1049		
B 10-10	Actual Operation Mode	
	0: Speed	
D1050	1: Position	RO
	2: Torque	
	3: Homing Origin	
D1051	Encoder Pulses L	RO
D1052	Encoder Pulses H	RO
D1053	Actual torque	RO
D1054	MI8 current calculated count value (Low Word)	RO
D1055	MI8 current calculated count value (High Word)	RO
D1056	Rotational speed corresponding to MI8	RO
D1057	MI8's rotational speed ratio	RW
D1058	MI8 refresh rate (ms) corresponding to rotational speed	RW
D1059	Number of nibbles of rotational speed corresponding to MI8 (0–3)	RW
	Operation Mode setting	
D.1000	0: Speed	D) 4 /
D1060	1: Position	RW
	2: Torque	
D1061	3: Homing Origin	DW
D1061 D1062	485 COM1 communications time out time (ms)	RW RW
D1062	Torque command (torque limit in speed mode) Year (Western calendar) (display range 2000–2099) (must use KPC-CC01)	RO
D1063	Week (display range 1–7) (must use KPC-CC01)	RO
D1064	Month (display range 1–12) (must use KPC-CC01)	RO
D1066	Day (display range 1–31) (must use KPC-CC01)	RO
D1000	Hour (display range 0–23) (must use KPC-CC01)	RO
D1067	Minute (display range 0–25) (must use KPC-CC01)	RO
D1069	Second (display range 0–59) (must use KPC-CC01)	RO
D1009	Target frequency	RO
D1100	Target frequency (must be operating)	RO
D1102	Reference frequency	RO
D1103	Target L	RO
D1104	Target H	RO
	. •	

Special D	Description of Function	R/W *
D1105	Target torque	RO
D1106		
D1107	π(Pi) Low word	RO
D1108	$\pi(Pi)$ High word	RO
D1109	Random number	RO
D1110	Internal node communications number (set number of slave stations to be controlled)	RW
D1111	Actual position (Low word)	RO
D1112	Actual position (High word)	RO
D1113		RO
D1114		
D1115	Internal node synchronizing cycle (ms)	RO
D1116	Internal node error (bit0 = Node 0, bit1 = Node 1,bit7 = Node 7)	RO
D1117	Internal node online correspondence (bit0 = Node 0, bit1 = Node 1,bit7 = Node 7)	RO
D1118		
D1119		
D1120	Internal node 0 control command	RW
D1121	Internal node 0 mode	RW
D1122	Internal node 0 reference command L	RW
D1123	Internal node 0 reference command H	RW
D1124		
D1125	<b> </b>	
D1126	Internal node 0 status	RO
D1127	Internal node 0 reference status L	RO
D1128	Internal node 0 reference status H	RO
D1129		
D1130	Internal node 1 control command	RW
D1131	Internal node 1 mode	RW
D1132	Internal node 1 reference command L	RW
D1133	Internal node 1 reference command H	RW
D1134		
D1135		
D1136	Internal node 1 status	RO
D1137	Internal node 1 reference status L	RO
D1138	Internal node 1 reference status H	RO
D1139		
D1140	Internal node 2 control command	RW
D1141	Internal node 2 mode	RW
D1142	Internal node 2 reference command L	RW
D1143	Internal node 2 reference command H	RW
D1144	<del></del>	
D1145		
D1146	Internal node 2 status	RO
D1147	Internal node 2 reference status L	RO
D1148	Internal node 2 reference status H	RO
D1149	Internal node 2 control command	 D\\\
D1150	Internal node 3 control command	RW
D1151 D1152	Internal node 3 mode Internal node 3 reference command L	RW RW
D1152 D1153	Internal node 3 reference command L	RW
D1153		
	<del></del>	
D1155	Internal node 2 status	 BO
D1156 D1157	Internal node 3 status	RO
ופווע	Internal node 3 reference status L	RO

Special D	Description of Function	R/W *
D1158	Internal node 3 reference status H	RO
D1159		
D1160	Internal node 4 control command	RW
D1161	Internal node 4 mode	RW
D1162	Internal node 4 reference command L	RW
D1163	Internal node 4 reference command H	RW
D1164		
D1165		
D1166	Internal node 4 status	RO
D1167	Internal node 4 reference status L	RO
D1168	Internal node 4 reference status H	RO
D1169		
D1170	Internal node 5 control command	RW
D1171	Internal node 5 mode	RW
D1172	Internal node 5 reference command L	RW
D1173	Internal node 5 reference command H	RW
D1174	<b></b>	RW
D1175		
D1176	Internal node 5 status	
D1177	Internal node 5 reference status L	RO
D1178	Internal node 5 reference status H	RO
D1179		
D1180	Internal node 6 control command	RW
D1181	Internal node 6 mode	RW
D1182	Internal node 6 reference command L	RW
D1183	Internal node 6 reference command H	RW
D1184		
D1185		
D1186	Internal node 6 status	RO
D1187	Internal node 6 reference status L	RO
D1188	Internal node 6 reference status H	RO
D1189		
D1190	Internal node 7 control command	RW
D1191	Internal node 7 mode	RW
D1192	Internal node 7 reference command L	RW
D1193	Internal node 7 reference command H	RW
D1194		
D1195		
D1196	Internal node 7 status	RO
D1197	Internal node 7 reference status L	RO
D1198	Internal node 7 reference status H	RO
D1199		

Special D	Description of Function	Default	R/W *
D1200	PID 1 Mode: 0: Basic mode	0	RW
D1201	PID 1 Target selection: 0: Refer to D1202 1: AVI 2: ACI 3: AUI	0	RW
D1202	PID 1 Target value (0.00%–100.00%)	5000	RW

Special D	Description of Function	Default	R/W *
	PID 1 Feedback selection:		
	0: Refer to D1204		
D1203	1: AVI	1	RW
	2: ACI		
	3: AUI		
D1204	PID 1 Feedback value (0.00%–100.00%)	0	RW
	PID 1 P value (decimal 2 points)	10	RW
D1206	PID 1 I value (decimal 2 points)	1000	RW
D1207	PID 1 D value (decimal 2 points)	0	RW
D1209	PID 1 Max. limit	10000	RW
D1215	PID 1 Calculation (decimal 2 points)	0	RO
D1220	PID2 Mode:	0	RW
D1220	0: Basic mode	U	KVV
	PID 2 Target selection:		
	0: Refer to D1202		
D1221	1: AVI	0	RW
	2: ACI		
	3: AUI		
D1222	PID 2 Target value (0.00%–100.00%)	5000	RW
	PID 2 Feedback selection:		
	0: Refer to D1204		
D1223	1: AVI	1	RW
	2: ACI		
	3: AUI		
D1224	PID 2 Feedback value (0.00%–100.00%)	0	RW
	PID 2 P value (decimal 2 points)	10	RW
D1226	PID 2 I value (decimal 2 points)	1000	RW
	PID 2 D value (decimal 2 points)	0	RW
D1229	PID 2 Max. limit	10000	RW
D1235	PID 2 Calculation (decimal 2 points)	0	RO



# The following is CANopen Master's special D (Allow writing only when PLC is in STOP state)

n = 0-7

Special D	Description of Function	PDO Map	Power off Memory	Default	R/W
D1070	Channel opened by CANopen initialization (bit0=Machine code0)	NO	NO	0	R
D1071	Error channel occurring in CANopen initialization process (bit0=Machine code0)	NO	NO	0	R
D1072	Reserved	-	-		-
D1073	CANopen break channel (bit0=Machine code0)	NO	NO		R
D1074	Error code of master error  0: No error  1: Slave station setting error  2: Synchronizing cycle setting error (too small)	NO	NO	0	R
D1075	Reserved	-	-		-
D1076	SDO error message (main index value)	NO	NO		R
D1077	SDO error message (secondary index value)	NO	NO		R
D1078	SDO error message (error code)	NO	NO		R
D1079	SDO error message (error code)	NO	NO		R
D1080	Reserved	-	-		-
D1081					-
_	Reserved	-	_		
D1086					
D1087					
_	Reserved	-	-		-
D1089					
D1090	Synchronizing cycle setting	NO	YES	4	RW
D1091	Sets slave station On or Off (bit 0-bit 7 correspond to slave stations number 0-7)	NO	YES	FFFFH	RW
D1092	Delay before start of initialization	NO	YES	0	RW
D1093	Break time detection	NO	YES	1000ms	RW
D1094	Break number detection	NO	YES	3	RW
D1095 - D1096	Reserved	-	-		-
D1097	Corresponding real-time transmission type (PDO) Setting range: 1–240	NO	YES	1	RW
D1098	Corresponding real-time receiving type (PDO) Setting range: 1–240	NO	YES	1	RW
D1099	Initialization completion delay time Setting range: 1–60000 sec.	NO	YES	15 sec.	RW
D2000+100*n	Station number n of slave station Setting range: 0–127 0: No CANopen function	NO	YES	0	RW

The C2000 supports 8 slave stations under the CANopen protocol; each slave station occupies 100 special D locations; stations are numbered 1–8, total of 8 stations.

Explanation of slave station number	Slave station no. 1	D2000 D2001 — D2099	Node ID Slave station no. 1 torque restrictions  - Address 4(H) corresponding to receiving channel 4
	Slave station no. 2	D2100 D2101 –	Node ID Slave station no. 2 torque restrictions
		D2199	Address 4(H) corresponding to receiving channel 4
	Slave station no. 3	D2200 D2201	Node ID Slave station no. 3 torque restrictions
		D2299	Address 4(H) corresponding to receiving channel 4
		Û	
	Slave station no. 8	D2700 D2701	Node ID Slave station no. 8 torque restrictions
		D2799	Address 4(H) corresponding to receiving channel 4

- 1. The range of n is 0–7
- 2. ●Indicates PDOTX, ▲Indicates PDORX; unmarked special D can be refreshed using the CANFLS command

Special D	Description of Function	Default:	R/W
D2000+100*n	Station number n of slave station Setting range: 0–127 0: No CANopen function	0	RW
D2002+100*n	Manufacturer code of slave station number n (L)	0	R
D2003+100*n	Manufacturer code of slave station number n (H)	0	R
D2004+100*n	Manufacturer's product code of slave station number n (L)	0	R
D2005+100*n	Manufacturer's product code of slave station number n (H)	0	R

#### **Basic definitions**

Special D	Description of Function	Default:	CAN	PDO Default:				R/W
Special D	Description of Function	Delault.	Index	1	2	3	4	FX/ V V
D2006+100*n	Communications break handling method of	0	6007H-0010H					RW
D2000110011	slave station number n	U	000711-001011					1 ( ) (
D2007+100*n	Error code of slave station number n error	0	603FH-0010H					R
D2008+100*n	Control word of slave station number n	0	6040H-0010H	•		•	•	RW
D2009+100*n	Status word of slave station number n	0	6041H-0010H	$\blacktriangle$		$\blacktriangle$	$\blacktriangle$	R
D2010+100*n	Control mode of slave station number n	2	6060H-0008H					RW
D2011+100*n	Actual mode of slave station number n	2	6061H-0008H					R

## **Velocity Control**

Slave station number n=0-7

Special D	Description of Function	Default:	CAN	PDO Default:			R/W	
Special D	Description of Function	Delault.	Index	1	2	3	4	TX/ V V
D2001+100*n	Torque restriction on slave station number n	0	6072H-0010H					RW
D2012+100*n	Target speed of slave station number n	0	6042H-0010H	•				RW
D2013+100*n	Actual speed of slave station number n	0	6043H-0010H					R
D2014+100*n	Error speed of slave station number n	0	6044H-0010H					R
D2015+100*n	Acceleration time of slave station number n	1000	604FH-0020H					R
D2016+100*n	Deceleration time of slave station number n	1000	6050H-0020H					RW

## Torque control

#### Slave station number n=0-7

Chaoial D	Description of Eurotian	Default:	CAN	PD	O I	Def	ault:	R/W
Special D	Description of Function	Delault.	Index	1	2	3	4	FK/VV
D2017+100*n	Target torque of slave station number n	0	6071H-0010H				•	RW
D2018+100*n	Actual torque of slave station number n	0	6077H-0010H					R
D2019+100*n	Actual current of slave station number n	0	6078H-0010H					R

#### Position control

#### Slave station number n=0-7

Special D	Description of Function	Default:	CAN	PDO Default:		R/W		
Special D	Description of Function	Delault.	Index	1	2	3	4	IX/ V V
D2020+100*n	Target of slave station number n (L)	0	607AH-0020H					RW
D2021+100*n	Target of slave station number n (H)	0	007AH-0020H					RW
D2022+100*n	Actual position of slave station number n	0						R
D2022 100 11	(L)	U	6064H-0020H					11
D2023+100*n	Actual position of slave station number n	0	000411-002011			_		R
D2023+100 11	(H)	O						IX.
D2024+100*n	Speed chart of slave station number n (L)	10000	6081H-0020H					RW
D2025+100*n	Speed chart of slave station number n (H)	0	0001H-0020H					RW

## 20XXH correspondences: MI MO AI AO

#### Slave station number n=0-7

Special D	Description of Function	Default:	CAN	PE	00	Def	ault:	R/W
Opecial D	Description of Function	Delault.	Index	1	2	3	4	1 1 / V V
D2026+100*n	MI status of slave station number n	0	2026H-0110H		lack			RW
D2027+100*n	MO setting of slave station number n	0	2026H-4110H		•			RW
D2028+100*n	Al1 status of slave station number n	0	2026H-6110H		lack			RW
D2029+100*n	Al2 status of slave station number n	0	2026H-6210H		lack			RW
D2030+100*n	Al3 status of slave station number n	0	2026H-6310H		lack			RW
D2031+100*n	AO1 status of slave station number n	0	2026H-A110H		•			RW
D2032+100*n	AO2 status of slave station number n	0	2026H-A210H		•			RW
D2033+100*n	AO3 status of slave station number n	0	2026H-A310H		•			RW

## PDO reflection length setting:

Special D	Description of Function	Default:	R/W
D2034+100*n	Real-time transmission setting of slave station number n	000AH	RW
D2067+100*n	Real-time reception setting of slave station number n	0000H	RW

## 16-5-4 PLC Communication address

Device	Range	Туре	Address (Hex)
Х	00-37 (Octal)	bit	0400-041F
Υ	00-37 (Octal)	bit	0500-051F
T	00–159	bit/word	0600-069F
M	000–799	bit	0800-0B1F
M	1000–1079	bit	0BE8-0C37
С	0–79	bit/word	0E00-0E47
D	00–399	word	1000–118F
D	1000–1099	word	13E8-144B
D	2000–2799	word	17D0-1AEF

#### Command code that can be used

Function Code	Description of Function	Function target
01	Coil status read	Y,M,T,C
02	Input status read	X,Y,M,T,C
03	Read single unit of data	T,C,D
05	Compulsory single coil status change	Y,M,T,C
06	Write single unit of data	T,C,D
0F	Compulsory multiple coil status change	Y,M,T,C
10	Write multiple units of data	T,C,D



When PLC functions have been activated, the C2000 can match PLC and drive parameters; this method employs different addresses, drives (default station number is 1, PLC sets station number as 2)

## 16-6 Introduction to the Command Window

## 16-6-1 Overview of basic commands

## Ordinary commands

Command code	Function	OPERAND	Execution speed (us)
LD	Load contact a	X, Y, M, T, C	0.8
LDI	Load contact b	X, Y, M, T, C	0.8
AND	Connect contact a in series	X, Y, M, T, C	0.8
ANI	Connect contact b in series	X, Y, M, T, C	0.8
OR	Connect contact a in parallel	X, Y, M, T, C	0.8
ORI	Connect contact b in parallel	X, Y, M, T, C	0.8
ANB	Series circuit block	N/A	0.3
ORB	Parallel circuit block	N/A	0.3
MPS	Save to stack	N/A	0.3
MRD	Stack read (pointer does not change)	N/A	0.3
MPP	Read stack	N/A	0.3

## Output command

Command code	Function	OPERAND	Execution speed (us)
OUT	Drive coil	Y, M	1
SET	Action continues (ON)	Y, M	1
RST	Clear contact or register	Y, M, T, C, D	1.2

## Timer, counter

Command code	Function	OPERAND	Execution speed (us)
TMR	16-bit timer	T-K or T-D commands	1.1
CNT	16-bit counter	C-K or C-D (16-bit)	0.5

## Main control command

Command code	Function	OPERAND	Execution speed (us)
MC	Common series contact connection	N0-N7	0.4
MCR	Common series contact release	N0-N7	0.4

## Contact rising edge / falling edge detection command

	<del> </del>		
Command code	Function	OPERAND	Execution speed (us)
LDP	Start of forward edge detection action	X, Y, M, T, C	1.1
LDF	Start of reverse edge detection action	X, Y, M, T, C	1.1
ANDP	Forward edge detection series connection	X, Y, M, T, C	1.1
ANDF	Reverse edge detection series connection	X, Y, M, T, C	1.1
ORP	Forward edge detection parallel connection	X, Y, M, T, C	1.1
ORF	Reverse edge detection parallel connection	X, Y, M, T, C	1.1

## Upper/lower differential output commands

Command code	Function	OPERAND	Execution speed (us)
PLS	Upper differential output	Y, M	1.2
PLF	Lower differential output	Y, M	1.2

Stop command

Command code	Function	OPERAND	Execution speed (us)
END	Program conclusion	N/A	0.2


#### Other commands


Command code	Function	OPERAND	Execution speed (us)
NOP	No action	N/A	0.2
INV	Inverse of operation results	N/A	0.2
Р	Index	Р	0.3

## 16-6-2 Detailed explanation of basic commands

Command		Function				
LD	Load contact a	oad contact a				
0,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	X0-X17	Y0-Y17	M0-M799	T0-159	C0-C79	D0-D399
Operand	✓	✓	✓	✓	✓	_
The LD command is used for contact a starting at the left busbar or contact a starting						

The LD command is used for contact a starting at the left busbar or contact a starting at a contact circuit block; its function is to save current content and save the acquired contact status in the cumulative register.





Command code: Description:

LD X0 Load Contact a of X0

Create series

AND X1 connection to contact a


of X1

OUT Y1 Drive Y1 coil

Command		Function				
LDI	Load contact b	oad contact b				
Onerend	X0-X17	Y0-Y17	M0-M799	T0-159	C0-C79	D0-D399
Operand	✓	✓	✓	✓	✓	_

The LDI command is used for contact b starting at the left busbar or contact b starting at a contact circuit block; its function is to save current content and save the acquired contact status in the cumulative register.

Example




Command code: Description:

LDI	X0	Load Contact b of X0
AND	X1	Create series connection to contact a of X1
OLIT	V1	Drive V1 coil


Command		Function				
AND	Connect conta	onnect contact a in series				
0,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	X0-X17	Y0-Y17	M0-M799	T0-159	C0-C79	D0-D399
Operand	✓	✓	✓	✓	✓	_

The AND command is used to create a series connection to contact a; first reads current status of the designated series contact and logical operation results before contact in order to perform "AND" operation; saves results in cumulative register.

Example



Comman	d code:	Description:
LDI	X1	Load Contact b of X1
AND	Х0	Create series connection to contact a of X0
OUT	Y1	Drive Y1 coil

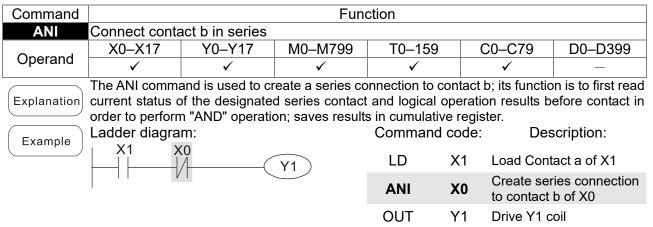


Command			Fun	ction			
OR	Connect conta	act a in paralle					
Onerend	X0-X17	Y0-Y17	M0-M799	T0-159		C0-C79	D0-D399
Operand	✓	✓	✓	✓		✓	_
The OR command is used to establish a parallel connection to contact a; its function is to first read current status of the designated series contact and logical operation results before contact in order to perform "OR" operation; saves results in cumulative register.  Ladder diagram:  Command code:  Description:							
			Y1)	LD	X0	Load Cont	act a of X0
	X1			OR	X1	Create ser to contact	ies connection a of X1
				OUT	Y1	Drive Y1 c	oil


Command		Function					
ORI	Connect conta	ct b in paralle					
0	X0-X17	Y0-Y17	M0-M799	T0-159	(	C0-C79	D0-D399
Operand	✓	✓	✓	✓		✓	_
The ORI command is used to establish a parallel connection to contact a; its function is to first read current status of the designated series contact and logical operation results before contact in order to perform "OR" operation; saves results in cumulative register.  Ladder diagram:  Command code:  Description:							
	X0		<u>Y1</u> )	LD	X0	Load Cont	act a of X0
	X1			ORI	X1	Create ser to contact	ies connection b of X1
				OUT	Y1	Drive Y1 c	oil

Command	Function
ANB	Series circuit block
Operand	N/A

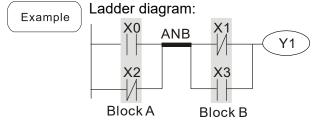Explanation ANB performs an "AND" operation on the previously saved logic results and the current cumulative register content.



Command	code:	Description:
LD	X0	Load Contact a of X0
ORI	X2	Establish parallel connection to contact b of X2
LDI	X1	Load Contact b of X1
OR	X3	Establish parallel connection to contact a of X3
ANB		Series circuit block
OUT	Y1	Drive Y1 coil

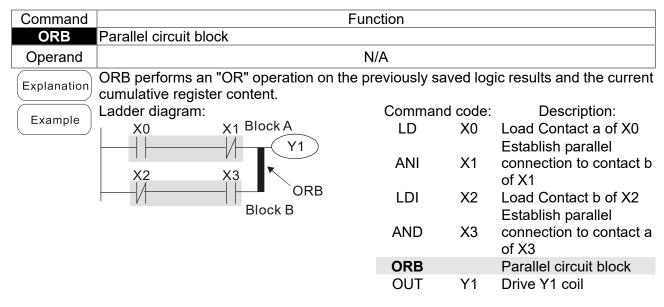

Command	Function
MPS	Save to stack
Operand	N/A

Explanation Save current content of cumulative register to the stack. (Add one to stack pointer)

Command	Function				
MRD	Read stack (pointer does not change)				
Operand	N/A				


Reads stack content and saves to cumulative register. (Stack pointer does not change)

Command	Function
MPP	Read stack
Operand	N/A

Retrieves result of previously-save logical operation from the stack, and saves to cumulative register. (Subtract one from stack pointer)

Example Ladder diagram:

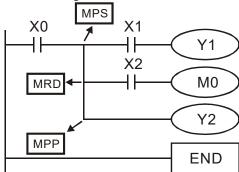
Explanation



Comman	a coae:	Description:
LD	X0	Load Contact a of X0
MPS		Save to stack
AND	X1	Create series connection to contact a of X1
OUT	Y1	Drive Y1 coil
MRD		Read stack (pointer does not change)
AND	X2	Create series connection to contact a of X2
OUT	M0	Drive M0 coil
MPP		Read stack
OUT END	Y2	Drive Y2 coil Program conclusion

Description:

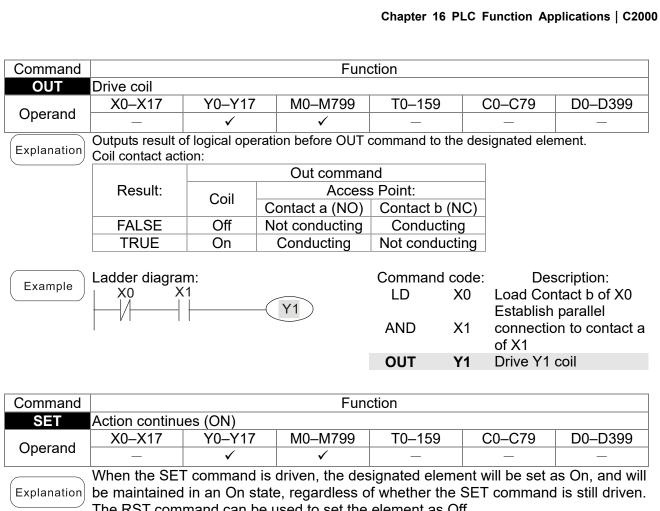register



Command	Function							
SET	Action continues (ON)							
0	X0-X17	Y0-Y17	M0-M799	T0-159		CO-C79	D0-D399	
Operand	_	✓	✓	_		_	_	
	When the SET command is driven, the designated element will be set as On, and will							
Explanation	be maintained in an On state, regardless of whether the SET command is still driven.							
	The RST command can be used to set the element as Off.							
	Ladder diagram: Command code: Description:							
Example	X0 Y	' <b>0</b>		LD >	(0	Load Con	tact a of X0	
		SET Y1 Establish parallel						
	AN Y0 connection to conta					n to contact b		
	of Y0							
		SET Y1 Action continues (ON)						

						01 10		
				SET	Y1	Action co	ntinues	(ON)
	1							
Command			Fund	ction				
RST	Clear con	tact or register						
Operand	X0-X1	7 Y0–Y17	M0-M799	T0-159	C	CO-C79	D0-E	399
Operand	_	✓	✓	✓		✓	✓	<b>/</b>
Evalenation	When the	RST command is	driven, the a	ction of the	design	ated elem	ent will	be as
Explanation	follows:							
	Element	Element Mode						
	Y, M	Y, M Both coil and contact will be set as Off.						
	т.с	The current timing or count value will be set as 0, and both the coil						
	T, C	and contact will be	set as Off.					
	D	The content value	will be set as (	).				
	If the RS1	command has no	t been execute	d, the status	of the	designate	ed eleme	ent will
	remain unchanged.							
	Ladder di	Ladder diagram:			Command code: Description			:
Example	Į X0			LD	X0	Load Cor	ntact a o	f X0
		RST Y5		RST	Y5	Clear con	tact or	
	•			KOI	13	register		

Command		Function				
TMR	16-bit timer					
Operand	T-K	T0-T159, K0-K32,767				
Operand	T-D	T0-T159, D0-D399				
	14/1 (I Th	4D				

When the TMR command is executed, the designated timer coil will be electrified, and the timer will begin timing. The contact's action will be as follows when the timing value reaches the designated set value (timing value >= set value):

NO (Normally Open) contact	Closed
NC (Normally Close) contact	Open

If the RST command has not been executed, the status of the designated element will remain unchanged.



Command code: Description:

LD X0 Load Contact a of X0

TMR T5 K1000 T5 timer Set value as K1000


Command	Function				
CNT	16-bit counter	6-bit counter			
Operand	C-K	C0-C79, K0-K32,767			
	C-D	C0-C79, D0-D399			

Explanation

When the CNT command is executed from Off→On, this indicates that the designated counter coil goes from no power → electrified, and 1 will be added to the counter's count value; when the count reaches the designated value (count value = set value), the contact will have the following action:

NO (Normally Open) contact	Closed
NC (Normally Close) contact	Open

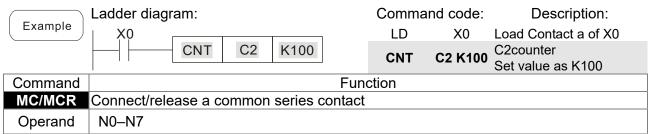After the count value has been reached, the contact and count value will both remain unchanged even if there is continued count pulse input. Please use the RST command if you wish to restart or clear the count.




Explanation

MC is the main control initiation command, and any commands between MC and MCR will be executed normally. When the MC command is Off, any commands between MC and MCR will act as follows:

Determination of commands	Description
Ordinary timer	The timing value will revert to 0, the coil will lose power, and the contact will not operate
Counter	The coil will lose power, and the count value and contact will stay in their current state
Coil driven by OUT command	None receive power
Elements driven by SET, RST commands	Will remain in their current state
Applications commands	None are actuated

MCR is the main control stop command, and is placed at the end of the main control program. There may not be any contact commands before the MCR command.

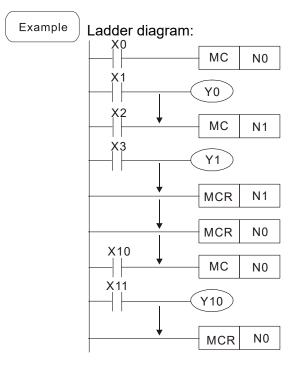
The MC-MCR main control program commands support a nested program structure with a maximum only 8 levels; use in the order N0–N7, please refer to the following program:



Comma		Description:			
LD	X0	Load Contact a of X0			
MC	N0	Connection of N0 common series contact			
LD OUT :	X1 Y0	Load Contact a of X1 Drive Y0 coil			
LD	X2	Load Contact a of X2			
МС	N1	Connection of N1 common series contact			
LD OUT :	X3 Y1	Load Contact a of X3 Drive Y1 coil			
MCR	N1	Release N1 common series contact			
:					
MCR	N0	Release N0 common series contact			
: LD	X10	Load Contact a of X10			
MC	N0	Connection of N0 common series contact			
LD OUT :	X11 Y10	Load Contact a of X11 Drive Y10 coil			
MCR	N0	Release N0 common series contact			

Command	Function					
LDP	Start of forwar	start of forward edge detection action				
Operand	X0-X17	Y0-Y17	M0-M799	T0-159	C0-C79	D0-D399
	✓	✓	✓	✓	✓	_

The LDP command has the same usage as LD, but its action is different; its function is to save current content, while also saving the detected state of the rising edge of the contact to the cumulative register.



Command code:

Description:

LDP X0 Start of X0 forward edge detection action

AND X1 Create series connection to contact a of X1

OUT Y1 Drive Y1 coil

Command code:


Remark

Please refer to the function specifications table for each device in series for the scope of usage of each operand.

A rising edge contact will be TRUE after power is turned on if the rising edge contact is On before power is turned on to the PLC.

Command	Function							
LDF	Start of revers	Start of reverse edge detection action						
Operand	X0-X17 Y0-Y17 M0-M799 T0-159 C0-C79 D0-D399							
Operand	✓	✓	✓	✓	✓	_		

The LDF command has the same usage as LD, but its action is different; its function is to save current content while also saving the detected state of the falling edge of the contact to the cumulative register.



LDF	Х0	Start of X0 reverse edge detection action
AND	X1	Create series connection to contact a of X1
OUT	Y1	Drive Y1 coil

Description:

Command	Function							
ANDP	Forward edge	Forward edge detection series connection						
Operand	X0-X17	X0–X17 Y0–Y17 M0–M799 T0–159 C0–C79 D0–D399						
Operand	✓	✓ ✓ ✓ ✓ —						

The ANDP command used for a contact rising edge detection series connection. Explanation

Ladder diagram: Example Υ1 Command code: Description: LD X0 Load Contact a of X0 X1 Forward edge **ANDP X1** detection series connection OUT Y1 Drive Y1 coil

Command	Function								
ANDF	Reverse edge	Reverse edge detection series connection							
Operand	X0-X17	X0–X17 Y0–Y17 M0–M799 T0–159 C0–C79 D0–D399							
Operand	✓	✓ ✓ ✓ ✓							

Explanation The ANDF command is used for a contact falling edge detection series connection.

Ladder diagram: Example Υ1 Command code: Description: LD X0 Load Contact a of X0 X1 Reverse edge **ANDF X1** detection series connection


Drive Y1 coil

Y1

Command	Function							
ORP	Forward edge	Forward edge detection parallel connection						
Operand	X0-X17	X0–X17 Y0–Y17 M0–M799 T0–159 C0–C79 D0–D399						
Operand	✓	✓ ✓ ✓						

OUT


Explanation The ORP command is used for a contact rising edge detection parallel connection.



Command code: Description: LD X0 Load Contact a of X0 X1 Forward edge detection parallel **ORP X1** connection OUT Y1 Drive Y1 coil


Command	Function							
ORF	Reverse edge	Reverse edge detection parallel connection						
Operand	X0-X17	X0–X17 Y0–Y17 M0–M799 T0–159 C0–C79 D0–D399						
Operand	✓	✓ ✓ ✓						

Explanation The ORF command is used for contact falling edge detection parallel connection.




Description: LD X0 Load Contact a of X0 X1 Reverse edge **ORF X1** detection parallel connection OUT Y1 Drive Y1 coil

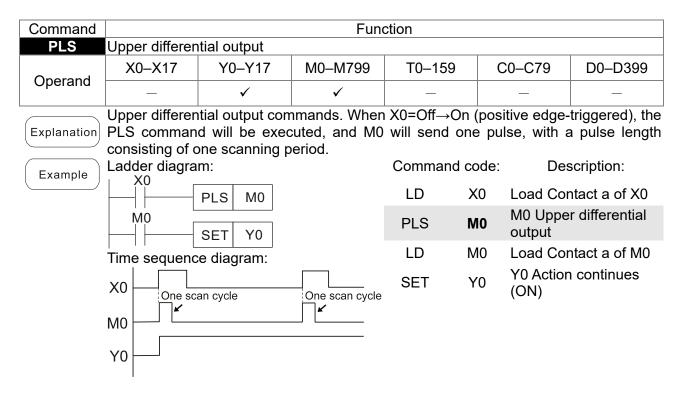Command code:




Command	Function						
PLF Lower differential output							
Operand X0-X17 Y0-Y17 M0-M799 T0-159 C0-C79 D0-D399							
Operand							
	Lower differen	tial output com	mand. When 2	X0= On→Off (r	negative edge-	triagered), the	

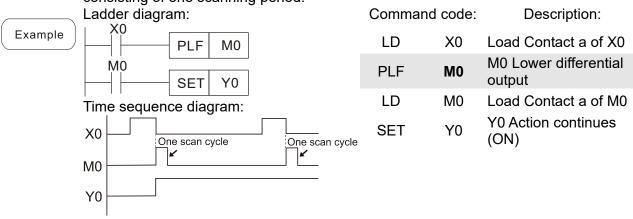
Explanation Lower differential output command. When X0= On→Off (negative edge-triggered), the PLF command will be executed, and M0 will send one pulse, with pulse length consisting of one scanning period.




Command	Function
END	Program conclusion
Operand	N/A

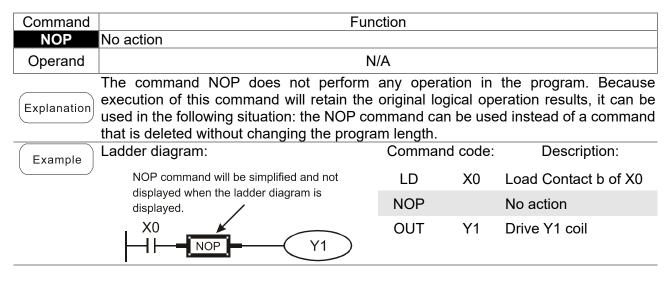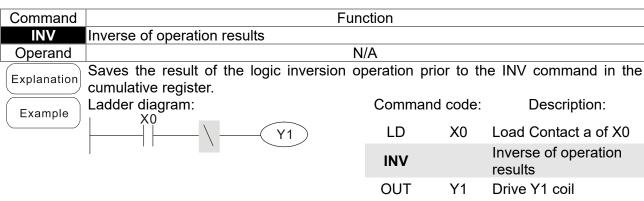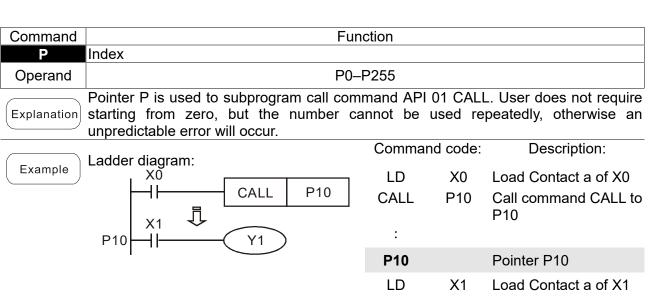An END command must be added to the end of a ladder diagram program or command program. The PLC will scan from address 0 to the END command, and will return to address 0 and begins scanning again after execution.







OUT

Y1

Drive Y1 coil

# 16-6-3 Overview of application commands

Classification	API	Comma	and code	Р	Function	STE	EPS
Ciassilication	AFI	16 bit	32 bit	command	Function	16 bit	32 bit
<u>_</u>	01	CALL	-	✓	Call subprogram	3	-
Circuit control	2	SRET	-	-	Conclusion of subprogram	1	-
	06	FEND	-	-	Conclusion a main program	1	-
-	10	CMP ZCP	DCMP DZCP	✓ ✓	Compares set output	7	13
Send	11 12	MOV	DMOV	<b>✓</b>	Range comparison Data movement	9 5	17 9
comparison	13	SMOV	DSMOV	<b>✓</b>	Nibble movement	11	21
-	15	BMOV		√ ·	Send all	7	_
	18	BCD	DBCD	✓	BIN to BCD transformation	5	9
	19	BIN	DBIN	✓	BCD to BIN transformation	5	9
	20	ADD	DADD	✓	BIN addition	7	13
Four logical	21	SUB	DSUB	✓	BIN subtraction	7	13
operations	22	MUL	DMUL	<b>√</b>	BIN multiplication	7	13
	23	DIV	DDIV	<b>√</b>	BIN division	7	13
	24	INC	DINC	<b>√</b>	BIN add one	3	5
Detetional	25	DEC	DDEC	<b>✓</b>	BIN subtract one	3	5
Rotational displacement	30 31	ROR ROL	DROR DROL	<b>✓</b>	Right rotation  Left rotation	5 5	_
uispiacement	40	ZRST	DROL _	<b>√</b>	Clear range	5	_
-	41	DECO	DDECO	<b>√</b>	Decoder	7	13
-				<b>√</b>			
	42	ENCO	DENCO		Encoder	7	13
Data Process	43	SUM	DSUM	<b>√</b>	ON bit number	5	9
_	44	BON	DBON	✓	ON bit judgement	7	13
	49	FLT	DFLT	<b>✓</b>	BIN whole number → binary floating point number transformation	5	9
	110	_	DECMP	<b>✓</b>	Comparison of binary floating point numbers	_	13
	111	_	DEZCP	<b>✓</b>	Comparison of binary floating point number range	_	17
_	116	_	DRAD	✓	Angle → Diameter	_	9
<u>_</u>	117	_	DDEG	✓	Diameter → angle	_	9
	120	_	DEADD	✓	Binary floating point number addition	_	13
	121	_	DESUB	✓	Binary floating point number subtraction	_	13
	122	_	DEMUL	✓	Binary floating point number multiplication	_	13
Floating point	123	_	DEDIV	✓	Binary floating point number division	_	13
operation	124	_	DEXP	✓	Binary floating point number obtain exponent	_	9
	125	_	DLN	✓	Binary floating point number obtain logarithm	_	9
	127	-	DESQR	✓	Binary floating point number find square root	_	9
	129	INT	DINT	<b>✓</b>	Binary floating point number → BIN whole number transformation	5	9
	130	_	DSIN	✓	Binary floating point number SIN operation	_	9
	131	_	DCOS	✓	Binary floating point number COS operation	-	9
	132	_	DTAN	✓	Binary floating point number TAN operation	_	9

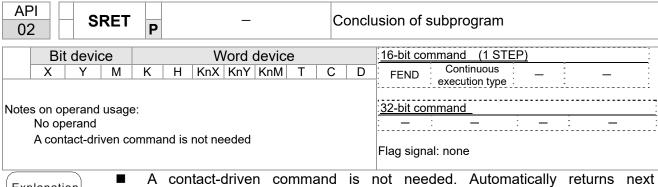
		Canana	and code	Р		STE	De
Classification	API	16 bit	and code 32 bit	-	Function	16 bit	
	133	-	DASIN	command ✓	Binary floating point number	- IO DIL	32 bit 9
	134	_	DACOS	<b>✓</b>	ASIN operation Binary floating point number	_	9
-	135	_	DATAN	<b>✓</b>	ACOS operation Binary floating point number ATAN operation	_	9
-	136	_	DSINH	✓	Binary floating point number SINH operation	_	9
-	137	_	DCOSH	✓	Binary floating point number COSH operation	_	9
	138	_	DTANH	✓	Binary floating point number TANH operation	_	9
Other	147	SWAP	DSWAP	✓	Exchange the up/down 8 bits	3	5
communicatio n	150	MODRW	_	<b>✓</b>	MODBUS read/write	7	_
	160	TCMP	_	✓	Compare calendar data	11	1
	161	TZCP	=	✓	Compare calendar data range	9	_
Calendar	162	TADD	=	✓	Calendar data addition	7	_
	163	TSUB	=	✓	Calendar data subtraction	7	_
	166	TRD	_	✓	Calendar data read	3	ı
	170	GRY	DGRY	✓	BIN→GRY code transformation	5	9
GRAY code	171	GBIN	DGBIN	✓	GRY code →BIN transformation	5	9
	215	LD&	DLD&	-	Contact form logical operation LD#	5	9
	216	LD	DLD	-	Contact form logical operation LD#	5	9
	217	LD^	DLD^	-	Contact form logical operation LD#	5	9
Contact form	218	AND&	DAND&	-	Contact form logical operation AND#	5	9
logical operation	219	ANDI	DANDI	-	Contact form logical operation AND#	5	9
,	220	AND^	DAND^	-	Contact form logical operation AND#	5	9
_	221	OR&	DOR&	-	Contact form logical operation OR#	5	9
_	222	OR	DOR	-	Contact form logical operation OR#	5	9
	223	OR^ LD=	DOR^	-	Contact form logical operation OR#	5	9
	224			-	Contact form compare LD*	5	9
	225	LD>	DLD>	-	Contact form compare LD*	5	9
<u> </u>	226	LD<	DLD<	-	Contact form compare LD*	5	9
	228	LD<>	DLD < >	-	Contact form compare LD*	5	9
	229	LD<=	DLD < =	-	Contact form compare LD*	5	9
[	230	LD>=	$DLD\!>\!=$	-	Contact form compare LD*	5	9
	232	AND=	DAND=	-	Contact form compare AND*	5	9
	233	AND>	DAND>	_	Contact form compare AND*	5	9
Contact form	234	AND<	DAND<	_	Contact form compare AND*	5	9
compare		AND<>	DAND<>	_	Contact form compare AND*	5	9
command	236			-	*		
	237	AND<=	DAND<=	-	Contact form compare AND*	5	9
<u> </u>	238	AND>=	DAND>=	-	Contact form compare AND*	5	9
<u> </u>	240	OR=	DOR=	-	Contact form compare OR*	5	9
	241	OR>	DOR>	-	Contact form compare OR*	5	9
	242	OR<	DOR<	-	Contact form compare OR*	5	9
	244	OR<>	DOR<>	-	Contact form compare OR*	5	9
	245	OR<=	DOR<=	_	Contact form compare OR*	5	9
	246	OR>=	DOR>=	_	Contact form compare OR*	5	9
	240	J.(/ –		<u> </u>	Contact form compare Ort	J	J

Classification	A DI	Comma	and code	Р	Function	STE	EPS
Classification	API	16 bit	32 bit	command	Function	16 bit	32 bit
	275	-	FLD=	-	Floating point number contact form compare LD*	ı	9
Floating point contact form	276	-	FLD>	-	Floating point number contact form compare LD*	ı	9
	277	-	FLD<	-	Floating point number contact form compare LD*	ı	9
	278	-	FLD<>	-	Floating point number contact form compare LD*	ı	9
	279	-	FLD < =	-	Floating point number contact form compare LD*	ı	9
	280	-	FLD> =	-	Floating point number contact form compare LD*	ı	9
	281	-	FAND=	-	Floating point number contact form compare AND*	-	9
	282	-	FAND>	-	Floating point number contact form compare AND*	-	9
	283	-	FAND<	-	Floating point number contact form compare AND*	-	9
	284	-	FAND<>	-	Floating point number contact form compare AND*	-	9
Compare command	285	-	$FAND \! < \! = \!$	-	Floating point number contact form compare AND*	-	9
	286	-	$FAND\!>\!=$	-	Floating point number contact form compare AND*	-	9
	287	-	FOR=	-	Floating point number contact form compare OR*	-	9
	288	-	FOR>	-	Floating point number contact form compare OR*	-	9
	289	-	FOR<	-	Floating point number contact form compare OR*	-	9
	290	-	FOR<>	-	Floating point number contact form compare OR*	-	9
	291	-	FOR<=	-	Floating point number contact form compare OR*	-	9
	292	-	FOR>=	-	Floating point number contact form compare OR*	-	9
	139	RPR	_	<b>√</b>	Read servo parameter	5	_
	140	WPR	_	<b>✓</b>	Write servo parameter	5	_
[	141	FPID	_	✓	Drive PID control mode	9	_
	142	FREQ	_	✓	Drive torque control mode	7	_
	262	_	DPOS	✓	Set target	-	5
	263	TORQ		✓	Set target torque	5	-
Drive special command	261	CANRX	_	<b>✓</b>	Read CANopen slave station data	9	-
Johnnald	264	CANTX		<b>✓</b>	Write CANopen slave station data	9	-
	265	CANFLS		<b>√</b>	Refresh special D corresponding to CANopen	3	-
Ţ	320	ICOMR	DICOMR	✓	Internal communications read	9	17
	321	ICOMW	DICOMW	✓	Internal communications write	9	17
	323	WPRA	-	-	RAM write in drive parameters	5	-


## 16-6-4 Detailed explanation of applications commands

API 01 CALL	P	Call su	bprogram
Bit device	Word device K   H   KnX   KnY   KnM   T   C	C D	16-bit command (3 STEP)  CALL Continuous CALLP Pulse
Notes on operand usage: The S operand can d C2000 series device:	esignate P The S operand can designate P0-l	P63	execution type execution type  32-bit command  — — — —  Flag signal: none
Explanation	<b>S</b> : Call subprogram pointer.		

- Write the subprogram after the FEND command.
- The subprogram must end after the SRET command.
- Refer to the FEND command explanation and sample content for detailed command functions.




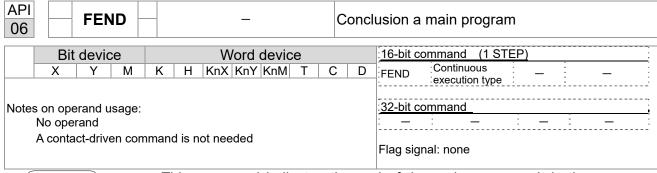
- Explanation
- command after CALL command
- Indicates end of subprogram. After end of subprogram, SRET returns to main program, and executes next command after the original call subprogram CALL command.
- Refer to the FEND command explanation and sample content for detailed command functions.



- This command indicates the end of the main program. It is the same as the END command when the PLC executes this command.
- The CALL command program must be written after the FEND command, and the SRET command added to the end of the subprogram.
- When using the FEND command, an END command is also needed. However, the END command must be placed at the end, after the main program and subprogram.

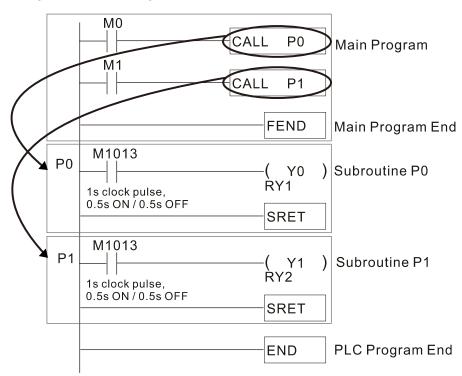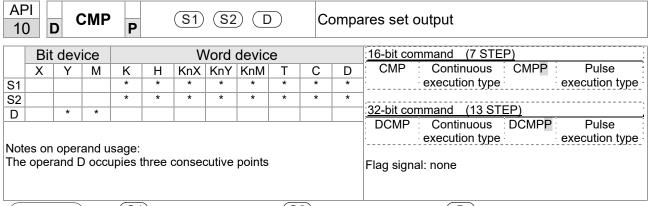CALL command process





- S1: Compare value 1. S2: Compare value 2. D: Results of comparison.
- Compares the size of the content of operand S1 and S2; the results of comparison are expressed in D.
- Size comparison is performed algebraically. All data is compared in the form of numerical binary values. Because this is a 16-bit command, when b15 is 1, this indicates a negative number.

Example

- When the designated device is Y0, it automatically occupies Y0, Y1 and Y2.
- When X10=On, the CMP command executes, and Y0, Y1 or Y2 will be On. When X10=Off, the CMP command will not execute, and the state of Y0, Y1 and Y2 will remain in the state prior to X10=Off.
- If ≥, ≤, or ≠ results are needed, they can be obtained via series/parallel connections of Y0–Y2.

```
X10

Y0

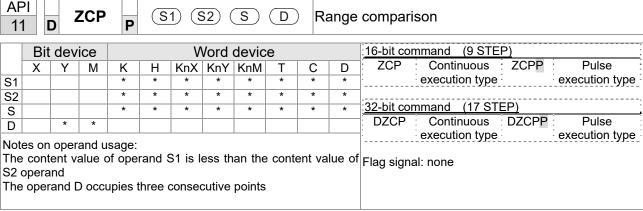
Y1

If K10 = D10, Y0 = ON

Y2

If K10 < D10, Y2 = ON
```

■ To clear results of comparison, use the RST or ZRST command.



- S1: Lower limit of range comparison.

  S2: Upper limit of range comparison.

  S: Comparative value.

  D: Results of comparison.
- When the comparative value S is compared with the lower limit S1 and upper limit S2, the results of comparison are expressed in D.
- When lower limit S1 > upper limit S2, the command will use the lower limit to perform comparison with the upper and lower limit.
- Size comparison is performed algebraically. All data is compared in the form of numerical binary values. Because this is a 16-bit command, when b15 is 1, this indicates a negative number.

Example

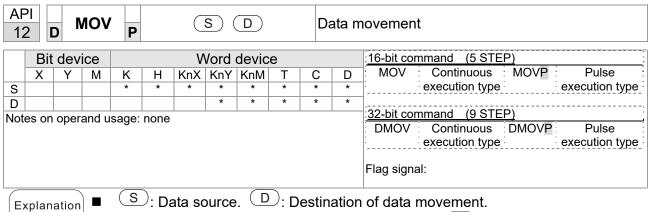
- When the designated device is M0, it automatically occupies M0, M1 and M2.
- When X0=On, the ZCP command executes, and M0, M1 or M2 will be On. When X0=Off, the ZCP command will not execute, and the state of M0, M1 or M2 will remain in the state prior to X0=Off.
- If ≥, ≤, or ≠ results are needed, they can be obtained via series/parallel connections of M0–M2.

■ To clear results of comparison, use the RST or ZRST command.

```
RST M0 ZRST M0 M2

RST M1


RST M2
```



■ When this command is executed, the content of S will be directly moved to D. When the command is not executed, the content of D will not change.

Example

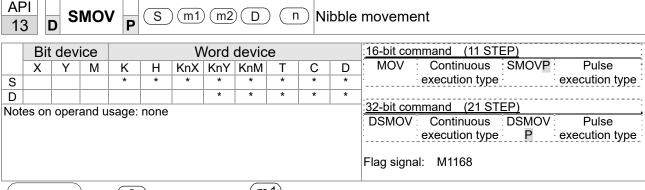- When X0=Off, the content of D10 will not change; if X0=On, the value K10 will be sent to data register D10.
- When X1=Off, the content of D10 will not change; if X1=On, the current value of T0 will be sent to data register D10.




- S: Data source. (m1): The data source transfers starting bit number.
  - (m2): The data source transfers individual bit number. D: Transfer destination.
  - n Transferring starting bit number of the destination.
- BCD mode (M1168 = Off):

SMOV enables and operates BCD under this mode, the operation is similar to the way SMOV operates decimal numbers. The command copies specific bit number of arithmetic element S (S is a 4-figure decimal number), and sends the bit number to arithmetic element D (D is also a 4-figure decimal number). The current data on the target register will be covered.

- m₁ range: 1–4
- $\blacksquare$  m<sub>2</sub> range: 1-m<sub>1</sub> (m<sub>2</sub> cannot be larger than m<sub>1</sub>)
- n range: m<sub>2</sub>-4 (n cannot be smaller than m<sub>2</sub>)


Example 1

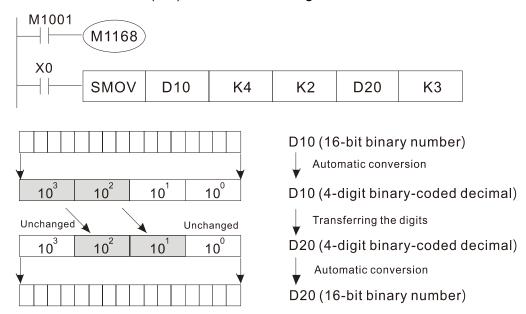
■ When M1168 = Off (BCD mode), X0 is ON, the instruction transfers two digits of the decimal number starting from the fourth digit of the decimal number (the digit in the thousands place of the decimal number) in D10 to the two digits of the decimal number starting from the third digit of the decimal number (the digit in the hundreds place of the decimal number) in D20. After the instruction is executed, the digits in the thousands place of the decimal number (10³) and the ones place of the decimal number (10¹) in D20 are unchanged.




Example 2

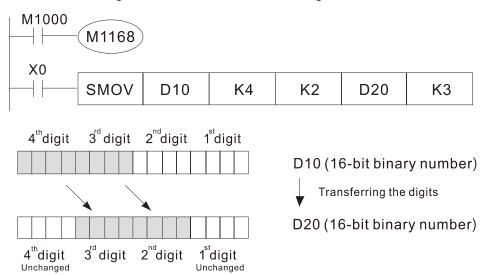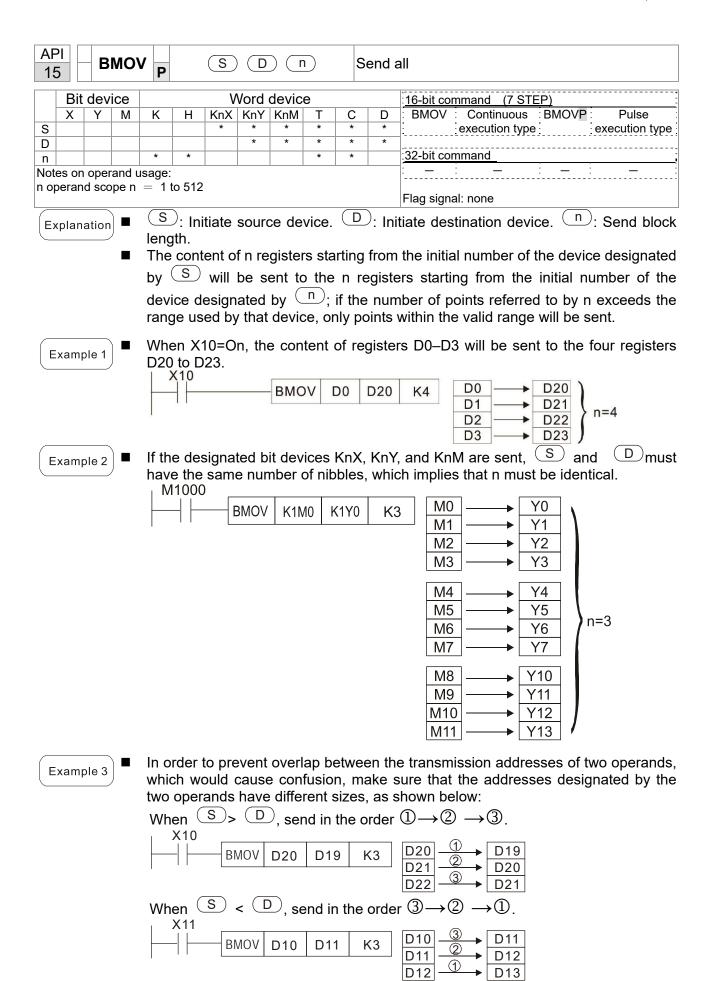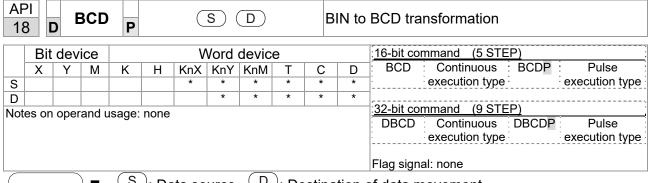■ When M1168 is On (BIN mode), and the SMOV command is executed, D10 and D20 do not change in BCD mode, but send 4 digits as a unit in BIN mode.









- S: Data source. D: Destination of data movement.
- The content of data source (S) (BIN value, 0–9999) executes BCD transformation and saves in (D).
- Arithmetic elements S and D use the F device, it can only use 16-bit command.

Example

When X0 is ON, and the BIN value of D10 is transformed to BCD value, the digit is saved in 4-bit element of K1Y0 (Y0–Y3).

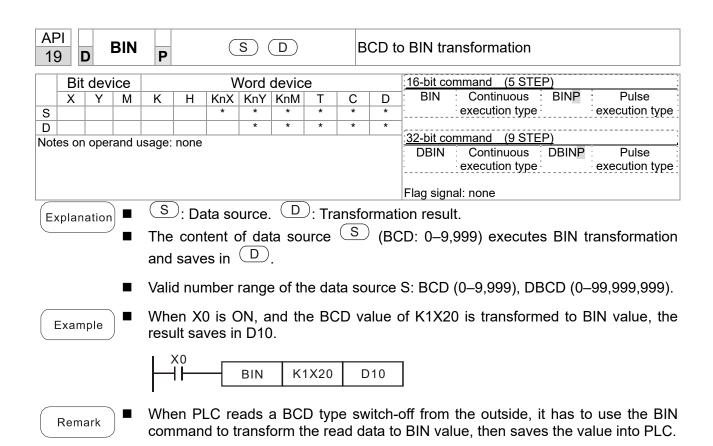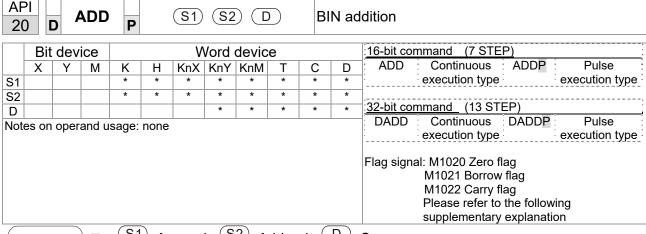■ If D10 = 001E (Hex) = 0030 (Decimal), the executed result will be Y0–Y3=0000 (BIN).






- S1: Augend. S2: Addend. D: Sum.
- Using two data sources: The result of adding S1 and S2 using the BIN method will be stored in D.
- The highest bit of any data is symbolized as bit 0 indicating (positive) 1 indicating (negative), enabling the use of algebraic addition operations. (for instance: 3+(-9)=-6)
- Flag changes connected with the addition.
  - 1. When calculation results are 0, the zero flag M1020 will be On.
  - 2. When calculation results are less than –32,768, the borrow flag M1021 will be On.
  - 3. When calculation results are greater than 32,767, the carry flag M1022 will be On.

Example


■ 16-bit BIN addition: When X0=On, the result of the content of addend D0 plus the content of augend D10 will exist in the content of D20.


Remark

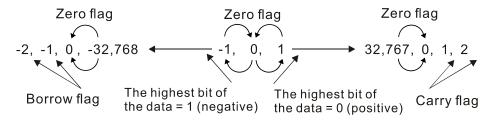Relationship between flag actions and negative/positive numbers: 16-bit:



32-bit:



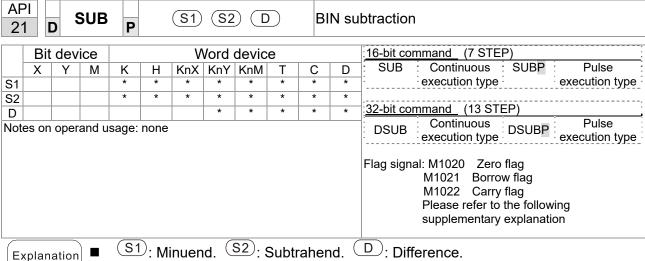


- Using two data sources: The result of subtraction of (S1) and (S2) using the BIN method is stored in D.
- The highest bit of any data is symbolized as bit 0 indicating (positive) 1 indicating (negative), enabling the use of algebraic subtraction operations.
- Flag changes connected with subtraction.
  - 1. When calculation results are 0, the zero flag M1020 will be On.
  - 2. When calculation results are less than -32,768, the borrow flag M1021 will be On.
  - 3. When calculation results are greater than 32,767, the carry flag M1022 will be On.

Example

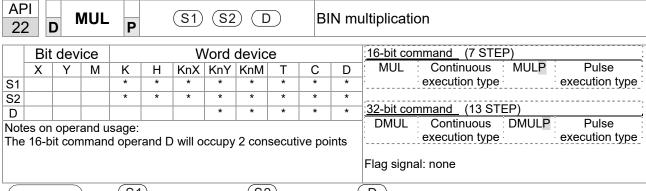16-bit BIN subtraction: When X0=On, the content of D10 is subtracted from the content of D0, and the difference is stored in D20.





- S1: Multiplicand. S2: Multiplier. D: Product.
- Using two data sources: When S1 and S2 are multiplied using the BIN method, the product is stored in D.

16-bit BIN multiplication operation:



b15 is a symbol bit b15 is a symbol bit b31 is a symbol bit (b15 of D+1)

Symbol bit = 0 refers to a positive value Symbol bit = 1 refers to a negative value

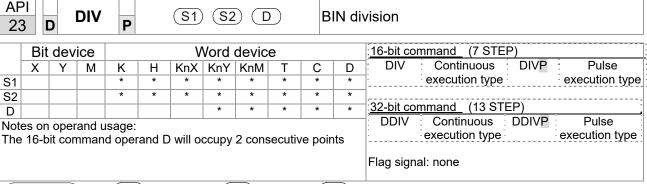
When D is a bit device, K1–K4 can be designated as a hexadecimal number, which will occupy 2 consecutive units.

Example

■ When 16-bit DO is multiplied by 16-bit D10, the result will be a 32-bit product; the upper 16 bits will be stored in D21, and the lower 16 bits will be stored in D20. Whether the bit at the farthest left is Off or On will indicate the sign of the result.


```
MUL D0 D10 D20

MUL D0 D10 K8M0
```



- $\blacksquare$  (S1): Dividend. (S2): Divisor. (D): Quotient and remainder.
- Using two data sources: The quotient and remainder will be stored in D when S1 and S2 are subjected to division using the BIN method. The sign bit for S1, S2 and D must be kept in mind when performing a 16-bit operation.

#### 16-bit BIN division:





If D is a bit device, K1–K4 can be designated 16 bits, which will occupy 2 consecutive units and yield the quotient and remainder.


Example


When X0=On, the quotient resulting from division of dividend D0 by divisor D10 will be placed in D20, and the remainder will be placed in D21. Whether the highest bit is Off or On will indicate the sign of the result.

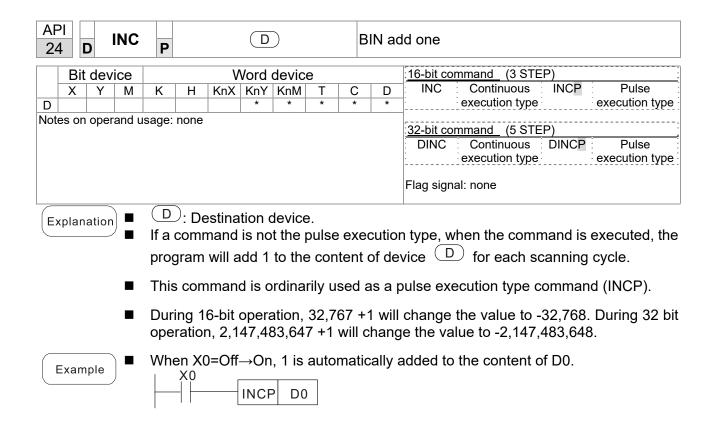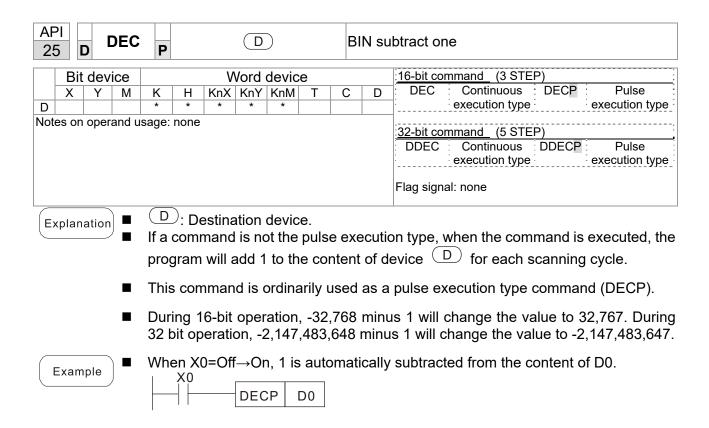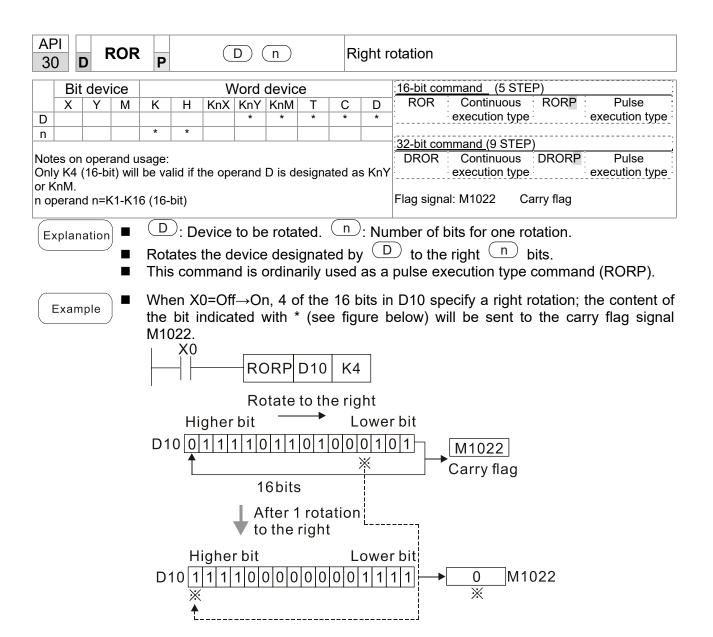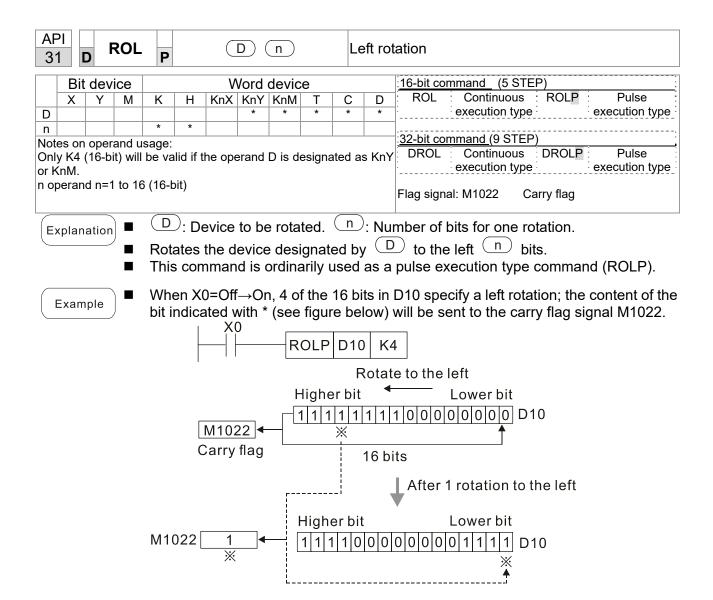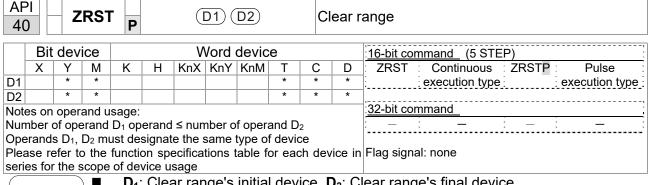
```
DIV D0 D10 K4Y0
```











- **D**<sub>1</sub>: Clear range's initial device. **D**<sub>2</sub>: Clear range's final device.
- When the number of operand  $D_1$  > number of operand  $D_2$ , only the operand designated by D<sub>2</sub> will be cleared.

Example

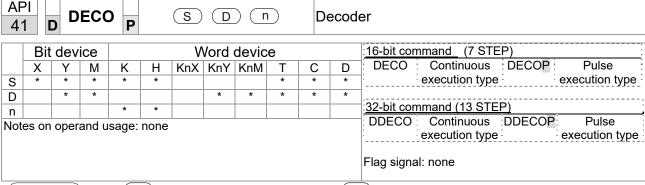
- When X0 is On, auxiliary relays M300–M399 will be cleared and changed to Off.
- When X1 is On, 16-bit counters C0–C127 will all be cleared. (Writes 0, and clears and changes contact and coil to Off).
- When X10 is On, timer T0-T127 will all be cleared. (Writes 0, and clears and changes contact and coil to Off).
- When X3 is On, the data in data registers D0–D100 will be cleared and set as 0.

```
X<sub>0</sub>
                         ZRST
                                       M300
                                                     M399
X1
┨┠
                         ZRST
                                         C<sub>0</sub>
                                                     C127
X10
                         ZRST
                                         T<sub>0</sub>
                                                     T127
X3
┨┠
                         ZRST
                                         D<sub>0</sub>
                                                     D100
```

Remark

Devices can independently use the clear command (RST), such as bit device Y, M and word device T, C, D.

```
RST
         M0
RST
         T0
RST
         Y0
```




- S: Decoding source device.

  Device that saves the decoding result.


  1 : Length of decoding bit.
- Decodes with the lower "n" bit, and saves the length of "2" bit in D.
- This command usually uses pulse execution type command (DECOP).
- When D is the bit device, n = 1-8, when D is the word device, n = 1-4.


Example 1

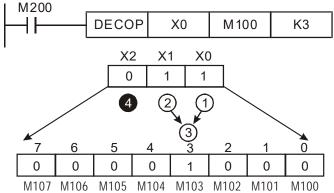- When Dis the bit device, the valid range of n is  $0 < n \le 8$ . If n = 0 or n > 8, a fault will occur.
- When n = 8, the maximum decoding will be  $2^8 = 256$  points.
- When M200 switches from Off to On, the content of X0–X2 is decoded to M100–M107.
- If S = 3, M103 (the third digit starting from M100) = On.
- When the command is executed, M200 turns to Off. The ones that are decoded and outputted act as usual.



- When D is word device, the valid range of n is  $0 < n \le 4$ . If n = 0 or n > 4, the fault
- When n = 4, the maximum decoding will be  $2^4 = 16$  points.
- When M200 switches from Off to On, the content of D10 (b2–b0) is decoded to D20 (b7–b0). The unused digits (b15–b8) of D20 become 0.
- The lower 3 digits of D10 are decoded and saved in the lower 8 digits of D20, the upper 8 digits are 0.
- When the command is executed, M200 turns to Off. The ones that are decoded and outputted act as usual.

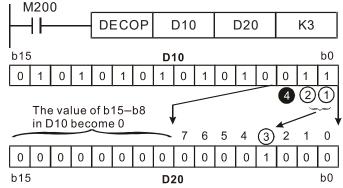

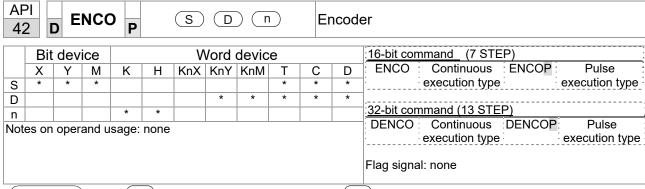


- S: Encoding source device. Device that saves the encoding result.

  1 : Length of encoding bit.
- Encodes the data of lower "2" bit length from encoding source device S, and saves the encoding result in D.
- If multiple digits of encoding source device are 1, the command will process the first digit starting from high digit.
- This command usually uses pulse execution type command (ENCOP).
- When S is the bit device, n = 1-8, when S is the word device, n = 1-4.


Example 1

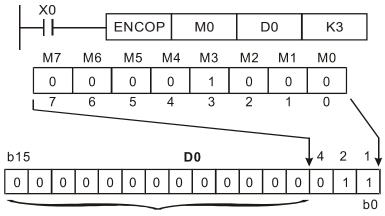
- When S is the bit device, the valid range of n is  $0 < n \le 8$ . If n = 0 or n > 8, a fault will occur.
- When n = 8, the maximum decoding will be  $2^8 = 256$  points.
- When X0 switches from Off to On, the content of 2³ digit (M0–M7) is encoded and saved in the lower 3 digits (b2–b0). The unused digits (b15–b3) in D0 become 0.
- When the command is executed, X0 turns to Off. The data in D is unchanged.




The value becomes 0

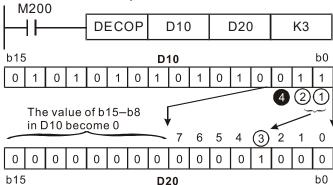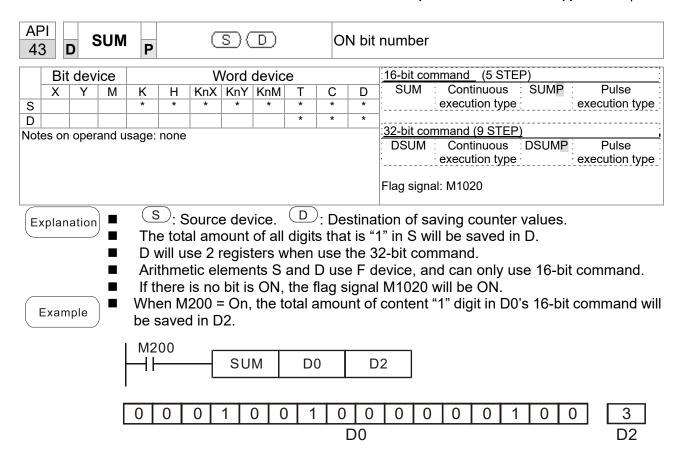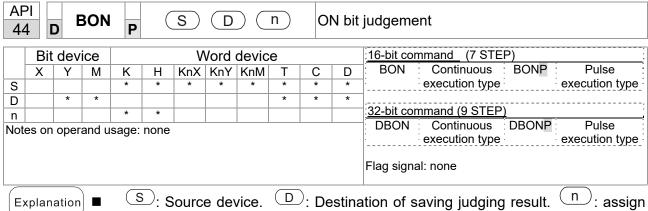- When S is word device, the valid range of n is  $0 < n \le 4$ . If n = 0 or n > 4, the fault occurs.
- When n = 4, the maximum decoding will be  $2^4 = 16$  points.
- When X0 switches from Off to On, 2³ digit data of D10 (b0–b7) is encoded and saved in the lower 3 digits (b2–b0) of D20. The unused digits (b15–b3) of D20 become 0. (b8–b15 in D10 are invalid data)
- When the command is executed, X0 turns to Off. The data in D is unchanged.










- judged digit (numbering from 0)
- The status of specific digit from source device is shown on target position.
- Arithmetic element S uses F device, and can only use the 16-bit command.
- The valid range of arithmetic element n: n = 0-15 (16-bit), n = 0-31 (32-bit).

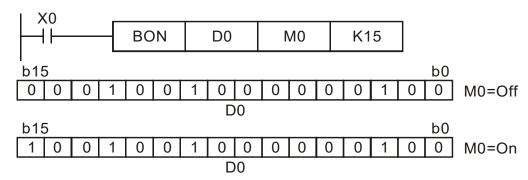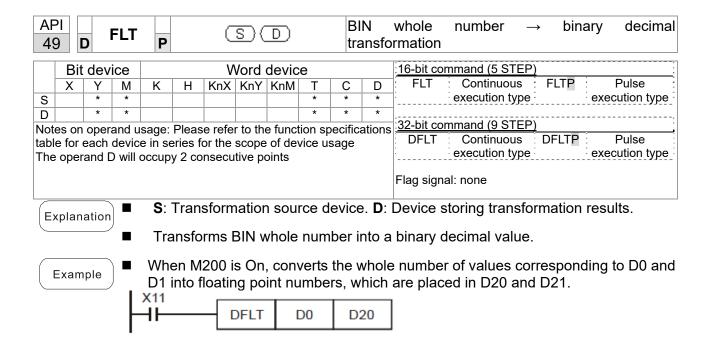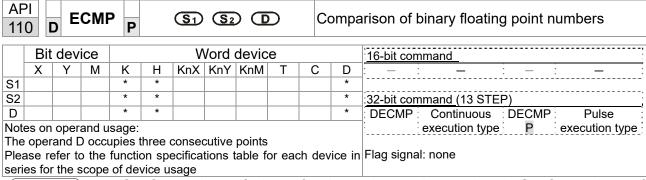- When X0 = On, if the 15<sup>th</sup> digit of D0 is "1", M0 is On. If it is "0", M0 is Off.
- When X0 turns to Off, M0 remains previous status.








- **S**<sub>1</sub>: Comparison of binary floating point numbers value 1. **S**<sub>2</sub>: Comparison of binary floating point numbers value 2. **D**: Results of comparison, occupies 3 consecutive points.
- When binary floating point number 1 is compared with comparative binary floating point number 2, the result of comparison (>, =, <) will be expressed in **D**.
- If the source operand S₁ or S₂ designates a constant K or H, the command will transform the constant to a binary floating-point number for the purpose of comparison.

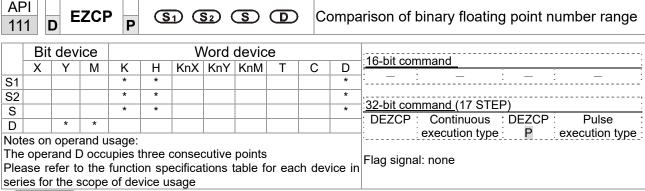
- When the designated device is M10, it will automatically occupy M10–M12.
- When X0=On, the DECMP command executes, and one of M10–M12 will be On. When X0=Off, the DECMP command will not execute, and M10–M12 will remain in the X0=Off state.
- If results in the form of ≥, ≤, or ≠ are needed, they can be obtained by series and parallel connection of M10–M12.
- Please use the RST or ZRST command to clear the result.



- **S**<sub>1</sub>: Lower limit of binary floating point number in range comparison. **S**<sub>2</sub>: Upper limit of binary floating point number in range comparison. **S**: Comparison of binary floating point numerical values. **D**: Results of comparison, occupies 3 consecutive points.
- Comparison of binary floating point numerical value **S** with binary floating point number lower limit value **S**<sub>1</sub> and binary floating point number upper limit value **S**<sub>2</sub>; the results of comparison are expressed in **D**.
- If the source operand S₁ or S₂ designates a constant K or H, the command will transform the constant to a binary floating-point number for the purpose of comparison.
- When the lower limit binary floating point number  $S_1$  is greater than the upper limit binary floating point number  $S_2$ , a command will be issued to perform comparison with the upper and lower limits using the binary floating point number lower limit value  $S_1$ .

- When the designated device is M0, it will automatically occupy M0–M2.
- When X0=On, the DEZCP command will be executed, and one of M0–M2 will be On. When X0=Off, the EZCP command will not execute, and M0–M2 will continue in the X0=Off state.
- Please use the RST or ZRST command to clear the result.

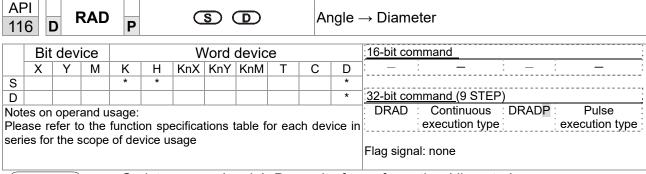
```
X0
DEZCP
D0
D10
D20
M0
M0
M1
D0
D10
D20
D2
```




- S: data source (angle). D: result of transformation (diameter).
- Uses the following formula to convert angles to radians.
- Diameter = Angle × (π/180)

Example

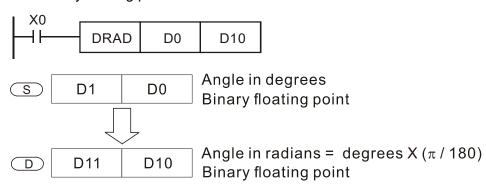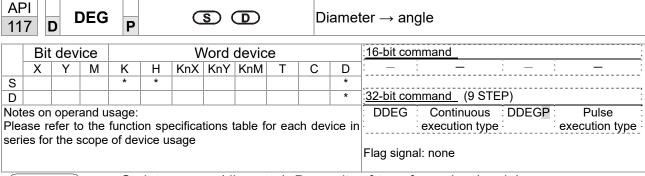When X0=On, the angle of the designated binary floating point number (D1, D0) will be converted to radians and stored in (D11, D10), with the content consisting of a binary floating point number.







- **S**: data source (diameter). **D**: results of transformation (angle).
- Uses the following formula to convert radians to an angle.
- Angle = Diameter ×  $(180/\pi)$

Example

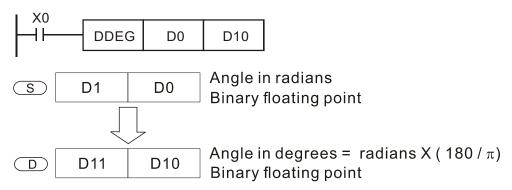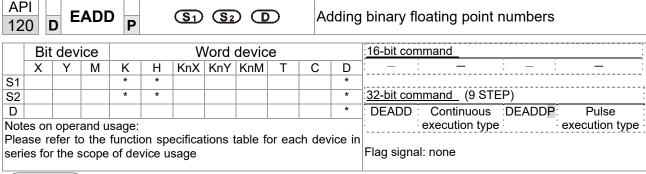When X0=On, angle of the designated binary floating point number (D1, D0) in radians will be converted to an angle and stored in (D11, D10), with the content consisting of a binary floating point number.






- S₁: addend. S₂: augend. D: sum.
- When the content of the register designated by  $S_2$  is added to the content of the register designated by  $S_1$ , and the result is stored in the register designated by D. Addition is performed entirely using binary floating-point numbers.
- If the source operand S₁ or S₂ designates a constant K or H, the command will transform that constant into a binary floating point number for use in addition.
- In the situation when S₁ and S₂ designate identical register numbers, if a "continuous execution" command is employed, when conditional contact is On, the register will perform addition once during each scan. Pulse execution type commands (DEADDP) are generally used under ordinary circumstances.

Example

When X0=On, a binary floating point number (D1, D0) will be added to a binary floating point number (D3, D2), and the results stored in (D11, D10).

```
DEADD D0 D2 D10
```

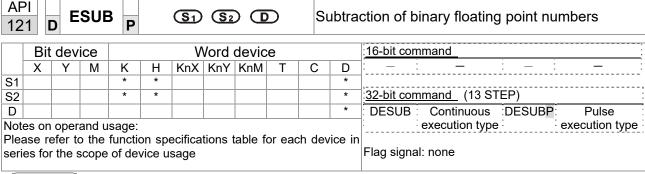■ When X2 =On, a binary floating point number (D11, D10) will be added to K1234 (which has been automatically converted to a binary floating-point number), and the results stored in (D21, D20).



- **S**₁: minuend. **S₂**: subtrahend. **D**: difference.
- When the content of the register designated by  $S_2$  is subtracted from the content of the register designated by  $S_1$ , the difference will be stored in the register designated by D; subtraction is performed entirely using binary floating-point numbers.
- If the source operand S<sub>1</sub> or S<sub>2</sub> designates a constant K or H, the command will transform that constant into a binary floating point number for use in subtraction.
- In the situation when S₁ and S₂ designate identical register numbers, if a "continuous execution" command is employed, when conditional contact is On, the register will perform addition once during each scan. Pulse execution type commands (DESUBP) are generally used under ordinary circumstances.

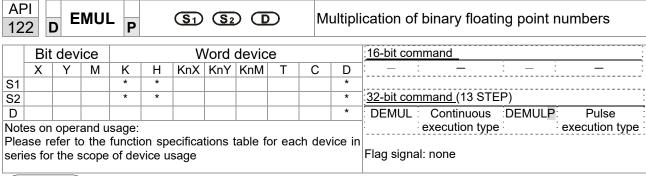
Example

When X0=On, a binary floating point number (D1, D0) will be subtracted to a binary floating point number (D3, D2), and the results stored in (D11, D10).

```
DESUB D0 D2 D10
```

■ When X2 =On, the binary floating point number (D1, D0) will be subtracted from K1234 (which has been automatically converted to a binary floating-point number), and the results stored in (D11, D10).

```
DESUB K1234 D0 D10
```




- S<sub>1</sub>: multiplicand. S<sub>2</sub>: multiplier. **D**: product.
- When the content of the register designated by S₁ is multiplied by the content of the register designated by S₂, the product will be stored in the register designated by D; multiplication is performed entirely using binary floating-point numbers.
- If the source operand S<sub>1</sub> or S<sub>2</sub> designates a constant K or H, the command will transform that constant into a binary floating point number for use in multiplication.
- In the situation when S₁ and S₂ designate identical register numbers, if a "continuous execution" command is employed, when conditional contact is On, the register will perform multiplication once during each scan. Pulse execution type commands (DEMULP) are generally used under ordinary circumstances.

Example

When X1=On, the binary floating point number (D1, D0) will be multiplied by the binary floating point number (D11, D10), and the product will be stored in the register designated by (D21, D20).

```
DEMUL D0 D10 D20
```

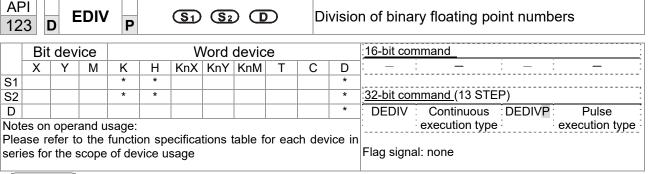■ When X2 =On, the binary floating point number (D1, D0) will be multiplied from K1234 (which has been automatically converted to a binary floating-point number), and the results stored in (D11, D10).




- S<sub>1</sub>: dividend. S<sub>2</sub>: divisor. D: quotient and remainder.
- When the content of the register designated by  $S_1$  is divided by the content of the register designated by  $S_2$ , the quotient will be stored in the register designated by D; division is performed entirely using binary floating-point numbers.
- If the source operand S₁ or S₂ designates a constant K or H, the command will transform that constant into a binary floating point number for use in division.

Example

When X1=On, the binary floating point number (D1, D0) will be divided by the binary floating point number (D11, D10), and the quotient stored in the register designated by (D21, D20).

```
DEDIV D0 D10 D20
```

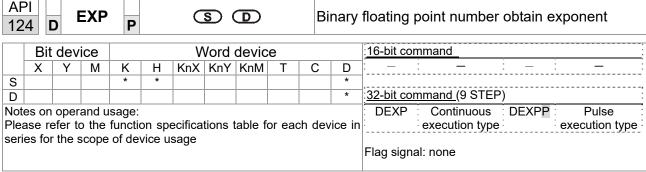■ When X2=On, the binary floating point number (D1, D0) will be divided by K1,234 (which has been automatically converted to a binary floating-point number), and the results stored in (D11, D10).




- **S**: operation source device. **D**: operation results device.
- Taking e =2.71828 as a base, **S** is the exponent in the EXP operation.
- [D+1,D]=EXP[S+1,S]
- Valid regardless of whether the content of S has a positive or negative value. The designated register D must have a 32-bit data format. This operation is performed using floating-point numbers, and S must therefore be converted to a floating point number.
- Content of operand  $D = e^{S}$ ; e=2.71828, S is the designated source data

- When M0 is On, the value of (D1, D0) will be converted to a binary floating point number, which will be stored in register (D11, D10).
- When M1 is On, the EXP operation is performed on the exponent of (D11, D10); its value is a binary floating point number stored in register (D21, D20).

```
M0 DFLT D0 D10


M1 DEXP D10 D20

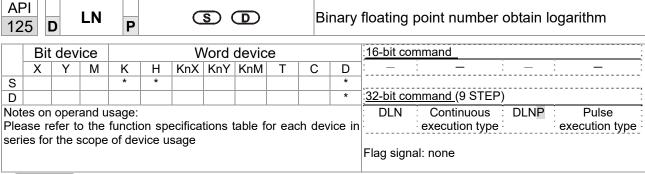END
```



- **S**: operation source device. **D**: operation results device.
- Taking e =2.71828 as a base, **S** is the exponent in the EXP operation.
- [D+1,D]=EXP[S+1,S]
- Valid regardless of whether the content of **S** has a positive or negative value. The designated register D must have a 32-bit data format. This operation is performed using floating-point numbers, and **S** must therefore be converted to a floating point number.
- Content of operand **D** =e<sup>S</sup>; e=2.71828, **S** is the designated source data

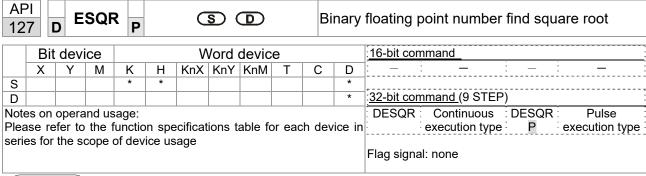- When M0 is On, the value of (D1, D0) will be converted to a binary floating point number, which will be stored in register (D11, D10).
- When M1 is On, the EXP operation is performed on the exponent of (D11, D10); its value is a binary floating point number stored in register (D21, D20).



- S: source device for which square root is desired **D**: result of finding square root.
- When the square root is taken of the content of the register designated by **S**, the result is temporarily stored in the register designated by **D**. Taking square roots is performed entirely using binary floating-point numbers.
- If the source operand **S** refers to a constant K or H, the command will transform that constant into a binary floating point number for use in the operation.

Example

When X0=On, the square root is taken of the binary floating point number (D1, D0), and the result is stored in the register designated by (D11, D10).

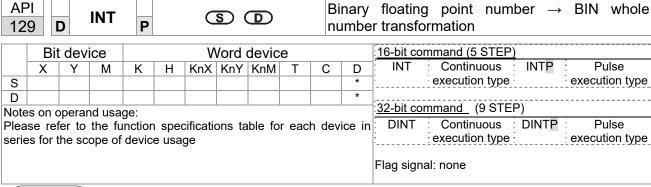
$$X0$$
 $DESQR$ 
 $D0$ 
 $D10$ 
 $\sqrt{(D1 \cdot D0)} \longrightarrow (D11 \cdot D10)$ 

Binary floating point

Binary floating point

■ When X2 =On, the square root is taken of K1,234 (which has been automatically converted to a binary floating-point number), and the results stored in (D11, D10).

```
DESQR K1234 D10
```




- **S**: the source device to be transformed. **D**: results of transformation.
- The content of the register designated by **S** is transformed from a binary floating point number format into a BIN whole number, and is temporarily stored in **D**. The BIN whole number floating point number will be discarded.
- The action of this command is the opposite of that of command API 49 (FLT).

Example


■ When X0=On, the binary floating point number (D1, D0) is transformed into a BIN whole number, and the result is stored in (D10); the BIN whole number floating point number will be discarded.
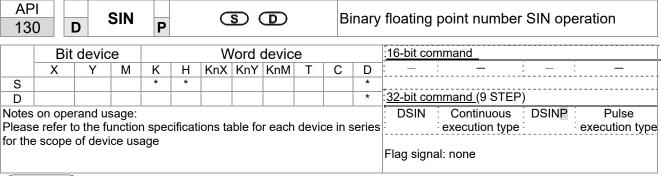
```
X0
DINT D0 D10
END
```




- **S**: the designated source value. **D**: the SIN value result.
- S is the designated source in radians.
- The value in radians (RAD) is equal to (angle  $\times \pi/180$ ).
- The SIN obtained from the source value designated by **S** is stored in **D**.

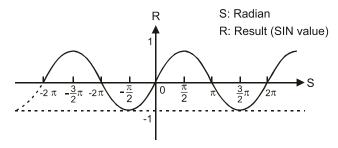
The following figure displays the relationship between the arc and SIN results:



Example

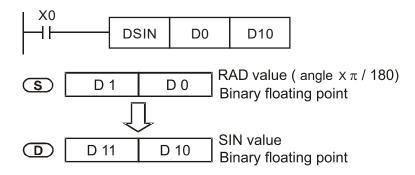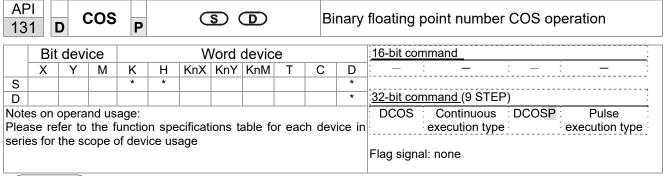
■ When X0=On, the SIN value of the designated binary floating point number (D1, D0) in radians (RAD) will be stored in (D11, D10), with the content consisting of a binary floating point number.






- S: the designated source value. D: the COS value result.
- The source designated by S can be given as radians or an angle; this is decided by flag M1018.
- When M1018=Off, the operation is in radians mode, where the radians (RAD) value is equal to (angle  $\times \pi/180$ ).
- When M1018=On, the operation is in the angle mode, where the angular range is 0°≤ angle <360°.
- When calculation results yield 0, M1020=On.
- The COS obtained from the source value designated by **S** is stored in **D**.

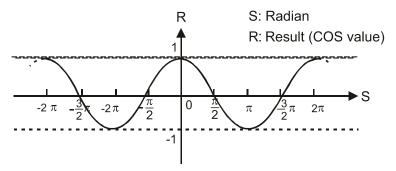
The following figure displays the relationship between the arc and SIN results:



Example

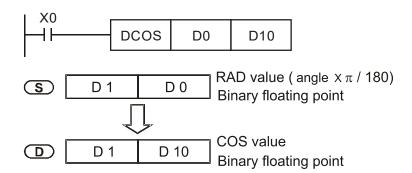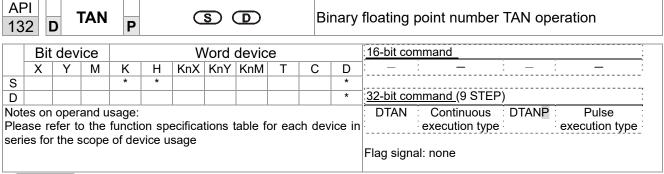
■ When X0=On, the COS value of the designated binary floating point number (D1, D0) in radians will be stored in (D11, D10), with the content consisting of a binary floating point number.






- **S**: the designated source value. **D**: the TAN value result.
- The source designated by **S** can be given as radians or an angle; this is decided by flag M1018.
- When M1018=Off, the operation is in radians mode, where the radians (RAD) value is equal to (angle  $\times \pi/180$ ).
- When M1018=On, the operation is in the angle mode, where the angular range is 0°≤ angle <360°.
- When calculation results yield 0, M1020=On.
- The TAN obtained from the source value designated by **S** is stored in **D**.

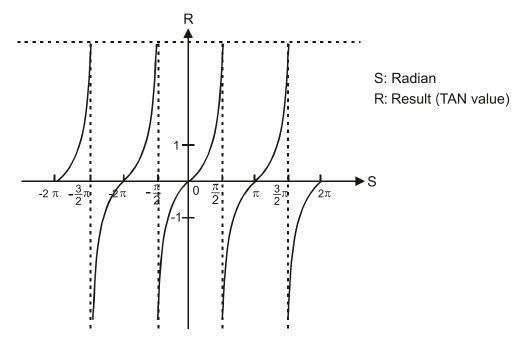
The following figure displays the relationship between the arc and TAN results:



Example

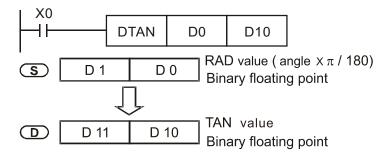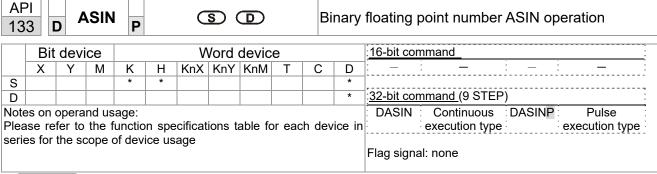
■ When X0=On, the TAN value of the designated binary floating point number (D1, D0) in radians (RAD) will be stored in (D11, D10), with the content consisting of a binary floating point number.





- **S**: the designated source (binary floating point number). **D**: the ASIN value result.
- ASIN value =sin<sup>-1</sup>

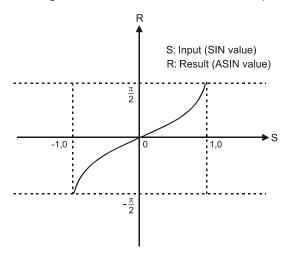The figure below shows the relationship between input data and result:




Example

■ When X0=On, the ASIN value obtained from the designated binary floating point number (D1, D0) will be stored in (D11, D10), with the content consisting of a binary floating point number.

```
DASIN D0 D10


S D1 D0 Binary floating point

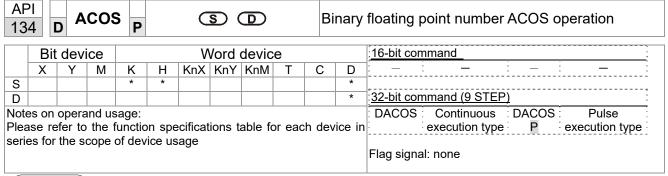ASIN value
Binary floating point
```




- **S**: the designated source (binary floating point number). **D**: the ACOS value result.
- ACOS value =cos<sup>-1</sup>

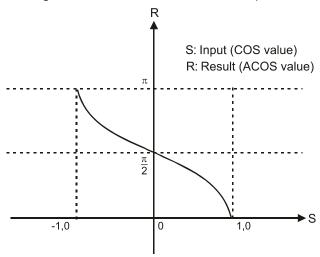
The figure below shows the relationship between input data and result:



Example

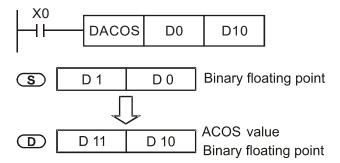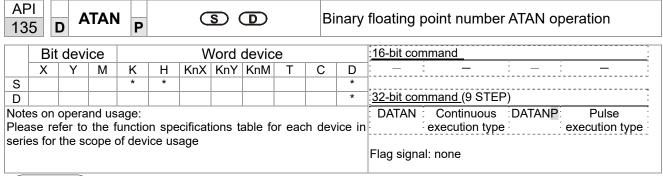
When X0=On, the ACOS value obtained from the designated binary floating point number (D1, D0) will be stored in (D11, D10), with the content consisting of a binary floating point number.





- **S**: the designated source (binary floating point number). **D**: the ATAN value result.
- ATAN value =tan<sup>-1</sup>

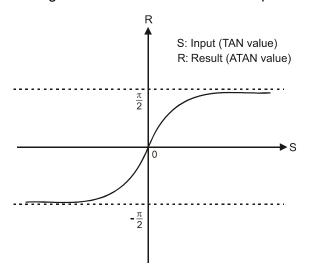The figure below shows the relationship between input data and result:




Example

■ When X0=On, the TAN value obtained from the designated binary floating point number (D1, D0) will be stored in (D11, D10), with the content consisting of a binary floating point number.

```
DATAN D0 D10

S D1 D0 Binary floating point

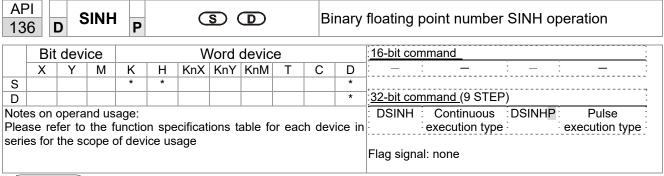ATAN value
Binary floating point
```





**S**: the designated source (binary floating point number). **D**: the SINH value result.

■ SINH value =(e<sup>s</sup>-e<sup>-s</sup>)/2

Example

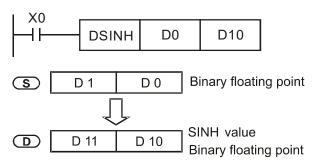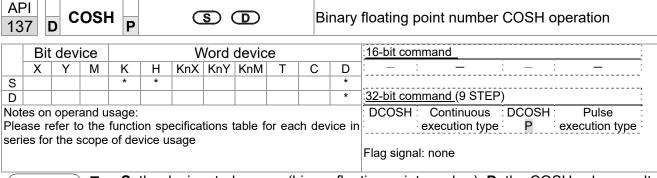When X0=On, the SINH value obtained from the designated binary floating point number (D1, D0) will be stored in (D11, D10), with the content consisting of a binary floating point number.







- **S**: the designated source (binary floating point number). **D**: the COSH value result.
- COSH value =(e<sup>s</sup>+e<sup>-s</sup>)/2

Example

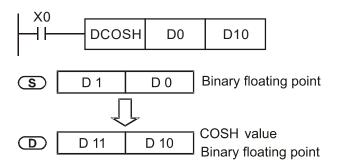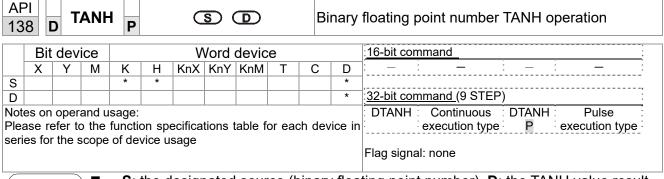When X0=On, the COSH value obtained from the designated binary floating point number (D1, D0) will be stored in (D11, D10), with the content consisting of a binary floating point number.







**S**: the designated source (binary floating point number). **D**: the TANH value result.

■ TANH value =(e<sup>s</sup>-e<sup>-s</sup>)/(e<sup>s</sup>+e<sup>-s</sup>)


Example

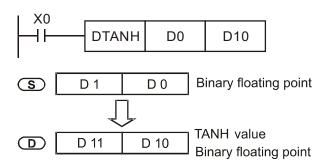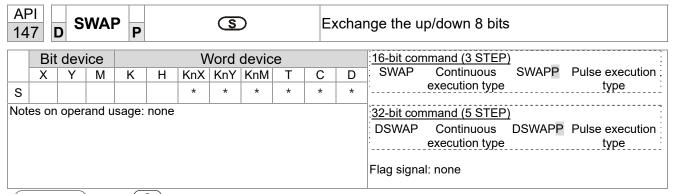■ When X0=On, the TANH value obtained from the designated binary floating point number (D1, D0) will be stored in (D11, D10), with the content consisting of a binary floating point number.





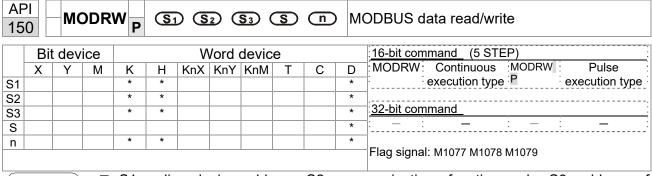- S: The device that going to exchange its up/down 8 bits.
- When using 16-bit command, the upper 8-bit and lower 8-bit exchange.
- When using 32-bit command, the contents of upper 8-bit and lower 8-bit of the 2 registers exchange.
- This command usually uses pulse execution type (SWAPP, DSWAPP)



- S1: online device address. S2: communications function code. S3: address of data to read/write. S: register for data to be read/written is stored. N: length of data to be read/written.
- COM1 must be defined as controlled by the PLC (set Pr.09-31 = -12) before using this command, and the corresponding communications speed and format must also be set (set Pr.09-01 and Pr.09-04). S2: communications function code. Currently only supports the following function code; the remaining function code cannot be executed.

Function	Description
H 02	Input read
H 03	Read word
H 06	Write single word
H 0F	Write multiple coils
H 10	Write single word

- After executing this command, M1077, M1078 and M1079 will be immediately changed to 0.
- As an example, when C2000 must control another converter and PLC, if the converter has a station number of 10 and the PLC has a station number of 20, see the following example:


Control slave device converter


	Example	MODRW command				
Seria I No.		S1	S2	S3	S4	n
		Node ID	Function code	Addres s	Register	Leng th:
1	Reads 4 sets of data comprising the converter slave device parameters Pr.01-00 to Pr.01-03, and saves the read data in D0 to D3	K10	Н3	H100	D0	K4
2	Reads 3 sets of data comprising the converter slave device addresses H2100 to H2102, and saves the read data in D5 to D7	K10	Н3	H2100	D5	K3
3	Writes 3 sets of data comprising the converter slave device parameters Pr.05-00 to Pr.05-03, and writes the values as D10 to D12	K10	H10	H500	D10	K3
4	Writes 2 sets of data comprising the converter slave device addresses H2000 to H2001, and writes the values as D15 to D16	K10	H10	H2000	D15	K2

PLC controlling slave device

PLC C	ontrolling slave device						
	Example	MODRW command					
Serial No.		S1 S2 S3 S4 n					
		Node	Functio	Addres	Registe	Longth	
		ID	n code	S	r	Length:	
	Reads 4 sets of data comprising the						
1	PLC slave device's X0 to X3 state, and	K20	H2	H400	D0	K4	
	saves the read data in bits 0 to 3 of D0						
	Reads 4 sets of data comprising the						
2	PLC slave device's Y0 to Y3 state, and	K20	H2	H500	D1	K4	
	saves the read data in bits 0 to 3 of D1						
	Reads 4 sets of data comprising the						
3	PLC slave device's M0 to M3 state, and	K20	H2	H800	D2	K4	
	saves the read data in bits 0 to 3 of D2						
	Reads 4 sets of data comprising the						
4	PLC slave device's T0 to T3 state, and	K20	H2	H600	D3	K4	
	saves the read data in bits 0 to 3 of D3						
	Reads 4 sets of data comprising the						
5	PLC slave device's C0 to C3 state, and	K20	H2	HE00	D4	K4	
	saves the read data in bits 0 to 3 of D4						
	Reads 4 sets of data comprising the						
6	PLC slave device's T0 to T3 count	K20	НЗ	H600	D10	K4	
O	value, and saves the read data of D10	N2U	пэ	ПООО	טוט	N4	
	to D13						
	Reads 4 sets of data comprising the						
7	PLC slave device's C0 to C3 count	K20	НЗ	HE00	D20	K4	
,	value, and saves the read data of D20	N2U	ПЭ	ПЕОО	D20	r\4	
	to D23						
	Reads 4 sets of data comprising the						
~ .	PLC slave device's D0 to D3 count	K20	НЗ	H1000	D30	K4	
	value, and saves the read data of D30	1120	110	111000	D30	114	
	to D33						
	Writes 4 sets of the PLC slave device's						
9	Y0 to Y3 state, and writes the values as	K20	HF	H500	D1	K4	
	bits 0 to 3 of D1						
	Writes 4 sets of the PLC slave device's	_					
10	M0 to M3 state, and writes the values	K20	HF	H800	D2	K4	
a	as bits 0 to 3 of D2						
	Writes 4 sets of the PLC slave device's						
11	T0 to T3 state, and writes the values as	K20	HF	H600	D3	K4	
t	bits 0 to 3 of D3						
	Writes 4 sets of the PLC slave device's						
12	C0 to C3 state, and writes the values	K20	HF	HE00	D4	K4	
	as bits 0 to 3 of D4						
	Writes 4 sets of the PLC slave device's						
13	T0 to T3 state, and writes the values of	K20	H10	H600	D10	K4	
	D10 to D13						
14 (	Writes 4 sets of the PLC slave device's						
	C0 to C3 state, and writes the values of	K20	H10	HE00	D20	K4	
	D20 to D23						
15	Writes 4 sets of the PLC slave device's						
	D0 to D3 state, and writes the values of	K20	H10	H1000	D30	K4	
	D30 to D33						

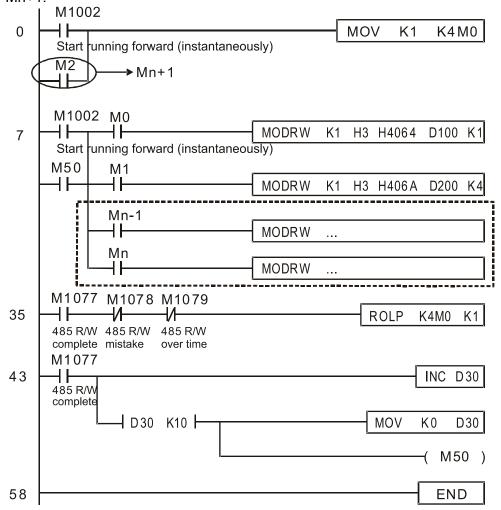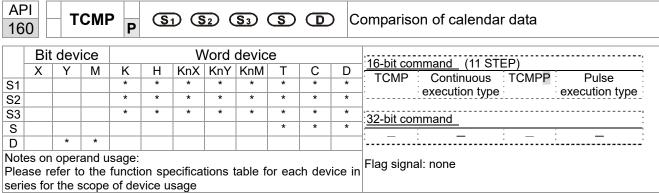- Will trigger M0 On when the PLC begins to operate, and sends instruction to execute one MODRW command.
- After receiving the slave device's response, if the command is correct, it will execute one ROL command, which will cause M1 to be On.
- After receiving the slave device's response, will trigger M50 = 1 after a delay of 10 PLC scanning cycles, and then execute one MODRW command.
- After again receiving the slave device's response, if the command is correct, it will execute one ROL command, and M2 will change to On at this time (and M2 can be defined as a repeat of M); K4M0 will change to K1, and only M0 will remain 1. Transmission can proceed in a continuous cycle. If you wish to add a command, merely add the desired command in the empty frame, and change repeat M to Mn+1.






- **S**<sub>1</sub>: Sets the hours of the comparison time, setting range is "K0–K23." **S**<sub>2</sub>: Sets the minutes of the comparison time, setting range is "K0–K59." **S**<sub>3</sub>: Sets the seconds of the comparison time, setting range is "K0–K59." **S**: current calendar time. **D**: Results of comparison.
- Compares the time in hours, minutes, and seconds set in S<sub>1</sub>-S<sub>3</sub> with the current calendar time in hours, minutes, and seconds, with the results of comparison expressed in **D**.
- **S** The hour content of the current calendar time is "K0–K23." **S** +1 comprises the minutes of the current calendar time, and consists of "K0–K59." **S** +2 comprises the seconds of the current calendar time, and consists of "K0–K59."
- The current calendar time designated by **S** is usually compared using the TCMP command after using the TRD command to read the current calendar time. If the content value of **S** exceeds the range, this is considered an operating error, the command will not execute, and M1068=On.

- When X10=On, the command will execute, and the current calendar time in D20–D22 will be compared with the preset value of 12:20:45; the results will be displayed in M10–M12. When X10 On→Off, the command will not be executed, but the On/Off status prior to M10–M12 will be maintained.
- If results in the form of ≥, ≤, or ≠ are needed, they can be obtained by series and parallel connection of M10–M12.
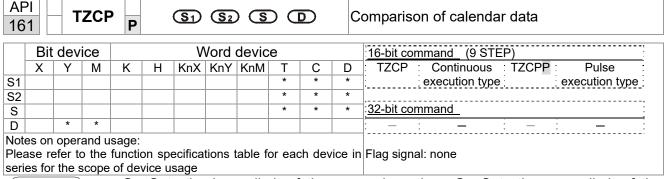
```
X10
           TCMP
                      K12
                               K20
                                        K45
                                                  D20
                                                           M10
                                         D20 (hr)
       M10
                                         D21 (min)
              ON when 12 : 20 : 45 >
                                        D22 (sec)
       M11
                                         D20 (hr)
              - ON when 12 : 20 : 45 =
                                         D21 (min)
                                         D22 (sec)
       M12
                                         D20 (hr)
               ON when 12:20:45 <
                                        D21 (min)
                                        D22 (sec)
```




- $S_1$ : Sets the lower limit of the comparison time.  $S_2$ : Sets the upper limit of the comparison time. S: current calendar time. D: Results of comparison.
- Performs range comparison by comparing the hours, minutes, and seconds of the current calendar time designated by **S** with the lower limit of the comparison time set as **S**<sub>1</sub> and the upper limit of the comparison time set as **S**<sub>2</sub>, and expresses the results of comparison in **D**.
- **S**<sub>1</sub>  $\cdot$  **S**<sub>1</sub> +1  $\cdot$  **S**<sub>1</sub> +2: Sets the hours, minutes, and seconds of the lower limit of the comparison time.
- **S**<sub>2</sub>  $\cdot$  **S**<sub>2</sub> +1  $\cdot$  **S**<sub>2</sub> +2: Sets the hours, minutes, and seconds of the upper limit of the comparison time.
- S · S +1 · S +2: The hours, minutes, and seconds of the current calendar time
- The D0 designated by the **S** listed in this program is usually obtained by comparison using the TZCP command after using the TRD command in advance to read the current calendar time. If the value of **S**<sub>1</sub>, **S**<sub>2</sub>, or **S** exceeds the range, this is considered an operating error, the command will not execute, and M1068=On.
- When the current time **S** is less than the lower limit value **S**<sub>1</sub> and **S** is less than the upper limit value **S**<sub>2</sub>, **D** will be On. When the current time **S** is greater than the lower limit value **S**<sub>1</sub> and **S** is greater than the upper limit value **S**<sub>2</sub>, **D** +2 will be On; **D** +1 will be On under other conditions.

Example

■ When X10=On, the TZCP command executes, and one of M10–M12 will be On. When X10=Off, the TZCP command will not execute, and M10–M12 will remain in the X10=Off state.

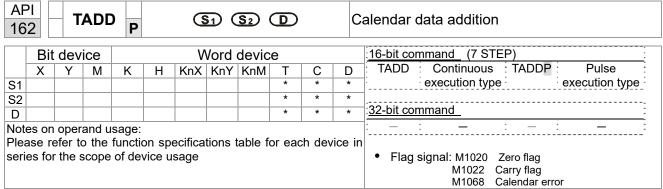
```
X10
            TZCP
                        D0
                                  D20
                                            D10
                                                      M10
       M10
                       D0 (hr)
                                       D10 (hr)
        H۲
                       D1 (min)
                                       D11 (min)
                                  >
                                       D12 (sec)
                       D2 (sec)
         ON when
       M11
                       D0 (hr)
                                       D10 (hr)
                                                         D20 (hr)
        ⊣⊦
                       D1 (min)
                                       D11 (min)
                                                         D21 (min)
                                       D12 (sec)
                       D2 (sec)
                                                         D22 (sec)
        ON when
       M12
                                       D10 (hr)
                                                         D20 (hr)
        \mathsf{H}
                                                    >
                                       D11 (min)
                                                         D21 (min)
                                       D12 (sec)
                                                         D22 (sec)
        ON when
```




- **S**<sub>1</sub>: time addend. **S**<sub>2</sub>: time augend. **D**: time sum.
- The calendar data in hours, minutes, and seconds designated by  $S_2$  is added to the calendar data in hours, minutes, and seconds designated by  $S_1$ , and the result is stored as hours, minutes, and seconds in the register designated by D.
- If the value of S₁ or S₂ exceeds the range, this is considered an operating error, the command will not execute, M1067, M1068=On, and D1067 will record the error code 0E1A(HEX).
- If the results of addition are greater than or equal to 24 hours, carry flag M1022=On, and **D** will display the results of addition minus 24 hours.
- If the results of addition are equal to 0 (0 hours, 0 minutes, 0 seconds), zero flag M1020=On.

Example

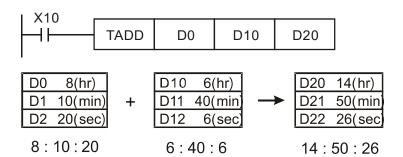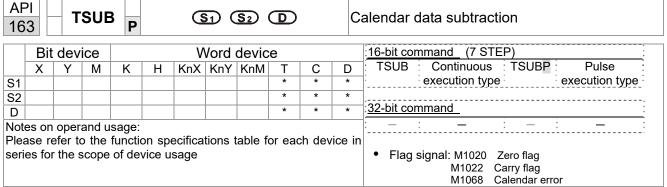■ When X10=On, the TADD command will be executed, and the calendar data in hours, minutes, and seconds designated by D0 to D2 will be added to the calendar data in hours, minutes, and seconds designated by D10 to D12, and the results are stored as a total number of hours, minutes, and seconds in the registers designated by D20 to D22.







- **S**<sub>1</sub>: time minuend. **S**<sub>2</sub>: time augend. **D**: time sum.
- Subtracts the calendar data in hours, minutes, and seconds designated by S₂ from the calendar data in hours, minutes, and seconds designated by S₁, and the result is temporarily stored as hours, minutes, and seconds in the register designated by D.
- If the value of S₁ or S₂ exceeds the range, this is considered an operating error, the command will not execute, M1067, M1068=On, and D1067 will record the error code 0E1A(HEX).
- If subtraction results in a negative number, borrow flag M1021=On, and the result of that negative number plus 24 hours will be displayed in the register designated by **D**.
- If the results of subtraction are equal to 0 (0 hours, 0 minutes, 0 seconds), zero flag M1020=On.

Example

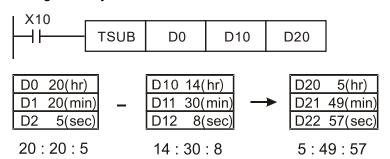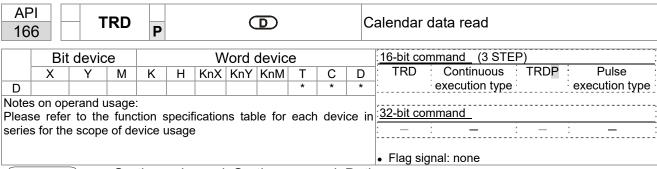When X10=On, the TADD command will be executed, and the calendar data in hours, minutes, and seconds designated by D10 to D12 will be subtracted from the calendar data in hours, minutes, and seconds designated by D0 to D2, and the results are stored as a total number of hours, minutes, and seconds in the registers designated by D20 to D22.






- S<sub>1</sub>: time minuend. S<sub>2</sub>: time augend. D: time sum.
- **D**: device used to store the current calendar time after reading.
- The EH/EH2/SV/EH3/SV2/SA/SX/SC main units have a built-in calendar clock, and the clock provides seven sets of data comprising year, week, month, day, hour, minute, and second stored in D1063 to D1069. The TRD command function allows program designers to directly read the current calendar time into the designated seven registers.
- D1063 only reads the two right digits of the Western calendar year.

- When X0=On, the current calendar time is read into the designated registers D0 to D6.
- In D1064, 1 indicates Monday, 2 indicates Tuesday, and so on, with and 7 indicating Sunday.

Special D	Item	Content		General D	Item
D1063	Year (Western)	00–99	<b>→</b>	D0	Year (Western)
D1064	Weeks	1–7	<b>→</b>	D1	Weeks
D1065	Month	1–12	<b>→</b>	D2	Month
D1066	Day	1–31	<b>→</b>	D3	Day
D1067	Hour	0–23	<b>→</b>	D4	Hour
D1068	Minute	0–59	<b>→</b>	D5	Minute
D1069	Second	0–59	<b>→</b>	D6	Second

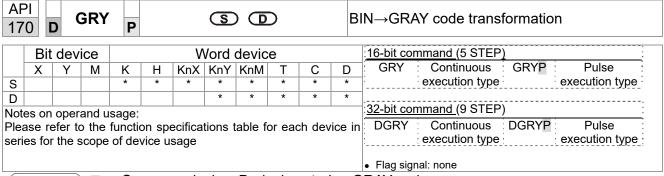


- **S**: source device. **D**: device storing GRAY code.
- Transforms the content value (BIN value) of the device designated by **S** to GRAY code, which is stored in the device designated by **D**.
- The valid range of **S** is as shown below; if this range is exceeded, it will be considered an error, and the command will not execute.


16-bit command: 0-32,767

■ 32-bit command: 0–2,147,483,647

Example

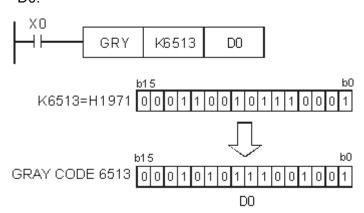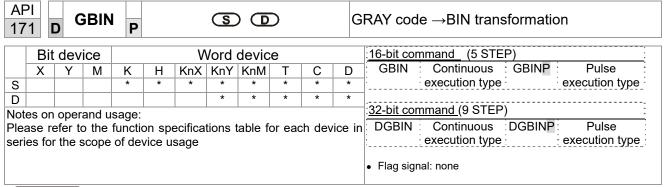When X0=On, the constant K6513 will be transformed to GRAY code and stored in D0.






- **S**: source device used to store GRAY code. **D**: device used to store BIN value after transformation.
- The GRAY code corresponding to the value of the device designated by **S** is transformed into a BIN value, which is stored in the device designated by **D**.
- This command will transform the value of the absolute position encoder connected with the PLC's input and (this encoder usually has an output value in the form of GRAY code) into a BIN value, which is stored in the designated register.
- The valid range of **S** is as shown below; if this range is exceeded, it will be considered an error, and the command will not execute.


16-bit command: 0-32,767

■ 32-bit command: 0–2,147,483,647

Example

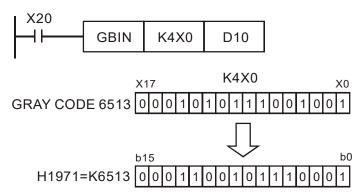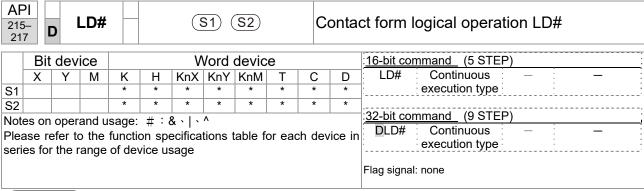When X20=On, the GRAY code of the absolute position encoder connected with input points X0 to X17 will be transformed into BIN value and stored in D10.







- S<sub>1</sub>: data source device 1. S<sub>2</sub>: data source device 2.
- This command performs comparison of the content of S₁ and S₂; when the result of comparison is not 0, this command will be activated, but this command will not be activated when the result of comparison is 0.
- The LD#This command can be used while directly connected with the busbar

API No.	16-bit commands	32-bit commands	C		ions fo ation	r	Conditi	ons fo	or inacti	vation
215	LD&	<b>D</b> LD&	S <sub>1</sub>	&	S <sub>2</sub>	<b>≠</b> 0	S <sub>1</sub>	&	S <sub>2</sub>	=0
216	LD	<b>D</b> LD	S <sub>1</sub>		S <sub>2</sub>	≠ 0	S <sub>1</sub>		S <sub>2</sub>	=0
217	LD^	<b>D</b> LD^	S <sub>1</sub>	٨	S <sub>2</sub>	≠ 0	S <sub>1</sub>	۸	S <sub>2</sub>	=0

- &: logical AND operation.
- |: logical OR operation.
- ^: logical XOR operation.

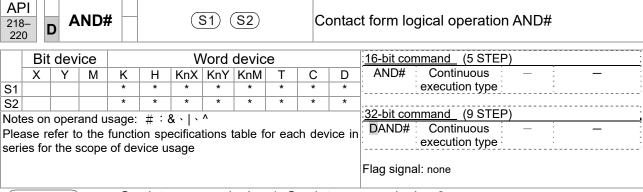- When the content of C0 and C10 is subjected to the logical AND operation, and the result is not equal to 0, Y10=On.
- When the content of D200 and D300 is subjected to the logical OR operation, and the result is not equal to 0, and X1=On, Y11=On and remains in that state.







- S₁: data source device 1. S₂: data source device 2.
- This command performs comparison of the content of S₁ and S₂; when the result of comparison is not 0, this command will be activated, but this command will not be activated when the result of comparison is 0.
- The AND# command is an operation command in series with the contact.

	API No.	16-bit commands	32-bit commands	С		ions fo	or	Conditi	ons fo	or inacti	vation
Ī	218	AND&	<b>D</b> AND&	S <sub>1</sub>	&	S <sub>2</sub>	≠ 0	S <sub>1</sub>	&	S <sub>2</sub>	=0
	219	AND	<b>D</b> AND	S <sub>1</sub>		S <sub>2</sub>	<b>≠</b> 0	S <sub>1</sub>		S <sub>2</sub>	=0
Ī	220	AND^	<b>D</b> AND^	S <sub>1</sub>	٨	S <sub>2</sub>	<b>≠</b> 0	S <sub>1</sub>	٨	S <sub>2</sub>	=0

- &: logical AND operation.
- |: logical OR operation.
- ^: logical XOR operation.

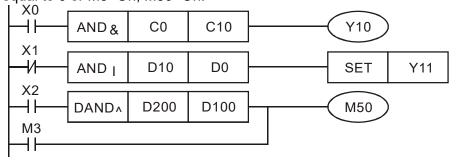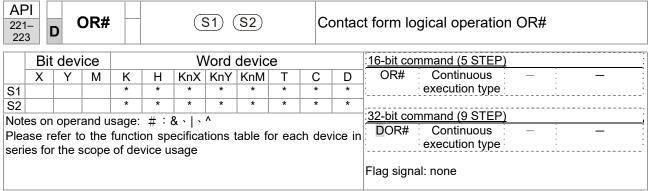- When X0=On and the content of C0 and C10 is subjected to the logical AND operation, and the result is not equal to 0, Y10=On.
- When X1=Off and D10 and D0 is subjected to the logical OR operation, and the result is not equal to 0, Y11=On and remains in that state.
- When X2 =On and the content of the 32-bit register D200 (D201) and 32-bit register D100 (D101) is subjected to the logical XOR operation, and the result is not equal to 0 or M3=On, M50=On.







- S₁: data source device 1. S₂: data source device 2.
- This command performs comparison of the content of S₁ and S₂; when the result of comparison is not 0, this command will be activated, but this command will not be activated when the result of comparison is 0.
- The OR# command is an operation command in series with the contact.

API No.	16-bit commands	32-bit commands	O		ions fo ation	or	Conditi	ons fo	or inacti	vation
221	OR&	<b>D</b> OR&	S₁	&	S <sub>2</sub>	<b>≠</b> 0	S <sub>1</sub>	&	S <sub>2</sub>	=0
222	OR	<b>D</b> OR	S <sub>1</sub>	-	S <sub>2</sub>	<b>≠</b> 0	S <sub>1</sub>		S <sub>2</sub>	=0
223	OR^	<b>D</b> OR^	S <sub>1</sub>	٨	$S_2$	<b>≠</b> 0	S <sub>1</sub>	۸	$S_2$	=0

- &: logical AND operation.
- |: logical OR operation.
- ^: logical XOR operation.

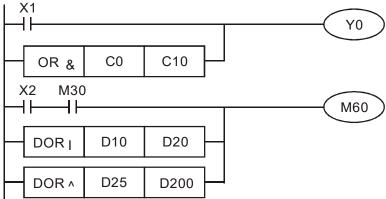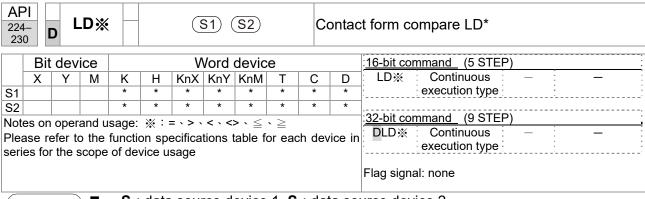- When X1=On or the content of C0 and C10 is subjected to the logical AND operation, and the result is not equal to 0, Y0=On.
- When X2 and M30 are both equal to On, or the content of 32-bit register D10 (D11) and 32-bit register D20 (D21) is subjected to the logical OR operation, and the result is not equal to 0, or the content of the 32-bit counter C235 and the 32-bit register D200 (D201) is subjected to the logical XOR operation, and the result is not equal to 0, M60=On.







- **S**<sub>1</sub>: data source device 1. **S**<sub>2</sub>: data source device 2.
- This command compares the content of S₁ and S₂. Taking API 224 (LD=) as an example, this command will be activated when the result of comparison is "equal," and will not be activated when the result is "unequal."
- The LD\* can be used while directly connected with the busbar

API No.	16-bit commands	32-bit commands	Conditions for activation	Conditions for inactivation
224	LD=	<b>D</b> LD=	$\boldsymbol{S_1} =  \boldsymbol{S_2}$	$S_1 \neq S_2$
225	LD>	<b>D</b> LD>	$S_1 > S_2$	$S_1 \leq S_2$
226	LD<	<b>D</b> LD<	$S_1 < S_2$	$S_1 \geq S_2$
228	LD<>	<b>D</b> LD<>	$S_1 \neq S_2$	$S_1 = S_2$
229	LD<=	$\mathbf{D}$ LD $<=$	$S_1 \leq S_2$	$S_1 > S_2$
230	LD>=	$\mathbf{D}$ LD>=	$\textbf{S}_1  \geqq   \textbf{S}_2$	$S_1 < S_2$

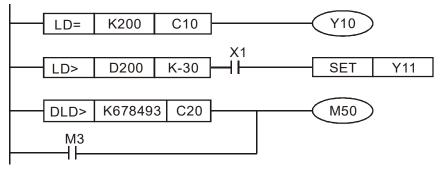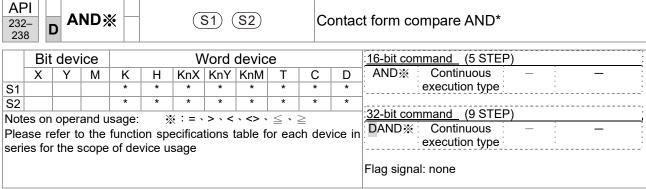- When the content of C10 is equal to K200, Y10=On.
- When the content of D200 is greater than K-30, and X1=On, Y11=On and remains in that state.







- S₁: data source device 1. S₂: data source device 2.
- This command compares the content of S₁ and S₂. Taking API 232 (AND=) as an example, when the result of comparison is equal, this command will be activated; when the result of comparison is unequal, this command will not be activated.
- The AND\* command is a comparison command in series with a contact.

API No.	16-bit commands	32-bit commands	Conditions for activation	Conditions for inactivation
232	AND=	<b>D</b> AND=	$\boldsymbol{S_1} =  \boldsymbol{S_2}$	$S_1 \neq S_2$
233	AND>	<b>D</b> AND>	$S_1 > S_2$	$\textbf{S}_{\textbf{1}} \leq \ \textbf{S}_{\textbf{2}}$
234	AND<	<b>D</b> AND<	$S_1 < S_2$	$\textbf{S_1} \geq \ \textbf{S_2}$
236	AND<>	<b>D</b> AND<>	$S_1 \neq S_2$	$S_1 = S_2$
237	AND < =	$\mathbf{D}$ AND $<=$	$S_1 \leq S_2$	$S_1 > S_2$
238	AND>=	<b>D</b> AND>=	$\textbf{S}_1 \geq \ \textbf{S}_2$	$\textbf{S}_{\textbf{1}} <  \textbf{S}_{\textbf{2}}$

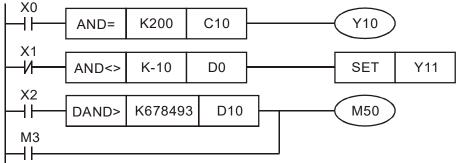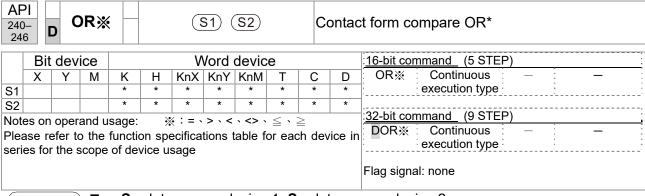- When X0=On and the current value of C10 is also equal to K200, Y10=On.
- When X1=Off and the content of register D0 is not equal to K-10, Y11=On and remains in that state.
- When X2 =On and the content of the 32-bit register D0 (D11) is less than 678,493, or M3=On, M50=On.






- S₁: data source device 1. S₂: data source device 2.
- This command compares the content of S₁ and S₂. Taking API 240 (OR=) as an example, when the result of comparison is equal, this command will be activated; when the result of comparison is unequal, this command will not be activated.
- The OR\* command is a compare command in parallel with a contact.

API No.	16-bit commands	32-bit commands	Conditions for activation	Conditions for inactivation
240	OR=	<b>D</b> OR=	$S_1 = S_2$	<b>S</b> <sub>1</sub> ≠ <b>S</b> <sub>2</sub>
241	OR>	<b>D</b> OR>	$S_1 > S_2$	$S_1 \leq S_2$
242	OR<	<b>D</b> OR<	$S_1 < S_2$	$\bm{S_1}  \geqq   \bm{S_2}$
244	OR<>	<b>D</b> OR<>	$S_1 \neq S_2$	$S_1 = S_2$
245	OR<=	<b>D</b> OR<=	$S_1 \leq S_2$	$S_1 > S_2$
246	OR>=	DOR>=	$S_1 \geq S_2$	$S_1 < S_2$

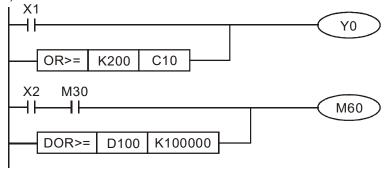- When X0=On and the current value of C10 is also equal to K200, Y10=On.
- When X1=Off and the content of register D0 is not equal to K-10, Y11=On and remains in that state.
- When X2 =On and the content of the 32-bit register D0 (D11) is less than 678,493, or M3=On, M50=On.



275 280		F	LD)	*			S1)	(S2)		F	oatin	g point number contact form compare LD*
Bit device Word device									16-bit command			
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	
S1									*	*	*	
S2									*	*	*	32-bit command (9 STEP)
				Isage: #:&\ \^							vice in	FLD※ Continuous — — — execution type
	Please refer to the function specifications table for each device in series for the scope of device usage										vice iii	Flag signal: none

- S<sub>1</sub>: data source device 1. S<sub>2</sub>: data source device 2.
- This command compares the content of S₁ and S₂. Taking "FLD=" as an example, if the result of comparison is "equal," this command will be activated; but it will not be activated when the result is "unequal."
- The FLD\* command can directly input floating point numerical values (for instance: F1.2) to the S₁, S₂ operands, or store floating-point numbers in register D for use in operations.
- This command can be used while directly connected with the busbar

API No.	32-bit commands	Conditions for activation	Conditions for inactivation
275	FLD=	$S_1 = S_2$	$S_1 \neq S_2$
276	FLD>	$S_1 > S_2$	$S_1 \leq S_2$
277	FLD<	$S_1 < S_2$	$S_1 \geq S_2$
278	FLD<>	$S_1 \neq S_2$	$S_1 = S_2$
279	FLD<=	$S_1 \leq S_2$	$S_1 > S_2$
280	FLD>=	$S_1 \geq S_2$	$S_1 < S_2$

Example

When the floating point number of register D200 (D201) is less than or equal to F1.2, and X1 activated, contact Y21 will be activated and remain in that state.

```
FLD<= D200 F1.2 X1 SET Y21
```

281 286	_	FÆ	AND	*		(	S1)	(S2)		FI	oatin	g point number contact form compare AND*
Bit device Word device								16-bit command				
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	
S1									*	*	*	,,
S2									*	*	*	<u>32-bit command</u> (9 STEP)
	otes on operand usage: # : & \   \ ^							table f	vice in	FAND% Continuous — — — execution type		
	Please refer to the function specifications table for each device in series for the scope of device usage										Flag signal: none	

- S₁: data source device 1. S₂: data source device 2.
- This command compares the content of S₁ and S₂. Taking "FAND=" as an example, if the result of comparison is "equal," this command will be activated; but it will not be activated when the result is "unequal."
- The FAND\* command can directly input floating point numerical values (for instance: F1.2) to the S₁, S₂ operands, or store floating-point numbers in register D for use in operations.
- This command can be used while directly connected with the busbar

API No.	32-bit commands	Conditions for activation	Conditions for inactivation
281	FAND=	$S_1 = S_2$	$S_1 \neq S_2$
282	FAND>	$S_1 > S_2$	$S_1 \leq S_2$
283	FAND<	$S_1 < S_2$	$S_1 \geq S_2$
284	FAND<>	S <sub>1</sub> ≠ S <sub>2</sub>	$S_1 = S_2$
285	FAND <=	$S_1 \leq S_2$	$S_1 > S_2$
286	FAND>=	$S_1 \geq S_2$	$S_1 < S_2$

Example

When X1=Off, and the floating point number in register D100 (D101) is not equal to F1.2, Y21=On and remains in that state.

```
X1 FAND<> F1.2 D0 SET Y21
```

287 292	_	F	OR)	*			S1)	(S2)		FI	oatin	g point number contact form compare OR*
Bit device Word device									:16-bit command			
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	
S1									*	*	*	,,
S2									*	*	*	:32-bit command (9 STEP)
	Notes on operand usage: # : & \   \ ^								vice in	FOR Continuous — — — execution type		
Please refer to the function specifications table for each device in series for the scope of device usage  Flag signal: none												

- S<sub>1</sub>: data source device 1. S<sub>2</sub>: data source device 2.
- This command compares the content of S₁ and S₂. Taking "FOR=" as an example, if the result of comparison is "equal," this command will be activated; but it will not be activated when the result is "unequal."
- The FOR\* command can directly input floating point numerical values (for instance: F1.2) to the S₁, S₂ operands, or store floating-point numbers in register D for use in operations.
- This command can be used while directly connected with the busbar

API No.	32-bit commands	Conditions for activation	Conditions for inactivation
287	FOR=	$S_1 = S_2$	S <sub>1</sub> ≠ S <sub>2</sub>
288	FOR>	$S_1 > S_2$	$S_1 \leq S_2$
289	FOR<	$S_1 < S_2$	$\textbf{S_1} \geq \textbf{S_2}$
290	FOR<>	S <sub>1</sub> ≠ S <sub>2</sub>	$S_1 = S_2$
291	FOR<=	$S_1 \leq S_2$	$S_1 > S_2$
292	FOR>=	$S_1 \geq S_2$	$S_1 < S_2$

Example

When X2 and M30 are both equal to "On," or the floating point number in register D100 (D101) is greater than or equal to F1.234, M60=On.

# 16-6-5 Detailed explanation of drive special applications commands

AF 13		F	RPR	P		(3	S1) (	S2)		Re	ead s	servo para	ımeter		
	Bit device Word device										16-bit command (5 STEP)				
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	RPR :	Continuous	RPRP	Pulse
S1				*	*						*	]	execution type		execution type
S2											*				
Note	es on	oper	and u	sage:	none							32-bit command			
		-		3								: – :	- :	_	- :
												Flag signal	: none		
			\ <b>_</b>	(S1	). <b>D</b>	orom	otor	oddra	200 0	of dat	o to	he read	(S2). Regist	tor who	ere data to be

Explanation

(S1): Parameter address of data to be read. (S2): Register where data to be read is stored.

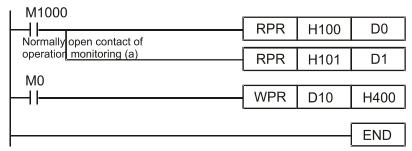
140 WPR P						(S1) (S2)				V	Write servo parameter				
	Bit device Word device									:16-bit command (5 STEP)					
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	WPR : Continuous : WPRP : Pulse			
S1				*	*						*	execution type execution type			
S2				*	*						*				
Notes	on ope	erand u	sage:	none								32-bit command_			
	•		•				<u> </u>								
							Flag signal: none								

Explanation

■ S1: Data to write to specified page. S2: Parameter address of data to be written.

Example

- When the data in the C2000 drive's parameter H01.00 is read and written to D0, data from H01.01 will be read and written to D1.
- When M0=On, the content of D10 will be written to the C2000 drive parameter 04.00 (first speed of multiple speed levels).
- When the parameter has been written successfully, M1017=On.
- The C2000's WPR command does not support writing to the 20XX address, but the RPR command supports reading of 21XX, 22XX.



Recommendation

Take care when using the WPR command. When writing parameters, because most parameters are recorded as they are written, these parameters may only be revised 109 times; a memory write error may occur if parameters are written more than 109 times.

Because the following commonly-used parameters have special processing, there are **no** restrictions on the number of times they may be written.

Pr. 00-10: Control method

Pr. 00-11: Speed mode selection

Pr. 00-12: P2P position mode

Pr. 00-13: Torque mode select

Pr. 00-27: User-defined value

#### Chapter 16 PLC Function Applications | C2000

Pr. 01-12: Acceleration time 1

Pr. 01-13: Deceleration time 1

Pr. 01-14: Acceleration time 2

Pr. 01-15: Deceleration time 2

Pr. 01-16: Acceleration time 3

Pr. 01-17: Deceleration time 3

Pr. 01-18: Acceleration time 4

Pr. 01-19: Deceleration time 4

Pr. 02-12: Select MI Conversion Time mode:

Pr. 02-18: Select MO Conversion Time mode:

Pr. 04-50-Pr. 04-69: PLC register parameter 0 - 19

Pr. 08-04: Upper limit of integral

Pr. 08-05: PID output upper limit

Pr. 10-17: Electronic gear A

Pr. 10-18: Electronic gear B

Pr. 11-34: Torque command


Pr. 11-43: P2P highest frequency

Pr. 11-44: Position control acceleration time

Pr. 11-45: Position control deceleration time

Calculation of the number of times written is based on whether the written value is modified. For instance, writing the same value 100 times at the same time counts as writing only once.

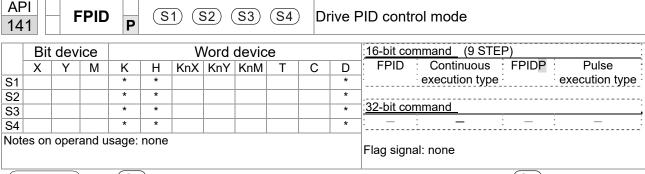When writing a PLC program, if unsure of usage of the WPR command, we recommend that you use the WPRP command.



- S1): PID reference target value input terminal select. S2): PID function proportional gain P. S3: PID function integral time I. S4: PID function differential time D.
- The FPID command can directly control the drive's feedback control of PID Pr. 08-00 PID reference target value input terminal selection, Pr. 08-01 proposal gain P, Pr. 08-02 integral time I, and Pr. 08-03 differential time D.

- When M0=On, the set PID reference target value input terminal selection is 0 (no PID function), the PID function proportional gain P is 0, the PID function integral time I is 1 (units: 0.01 sec.), and the PID function differential time D is 1 (units: 0.01 sec.).
- When M1=On, the set PID reference target value input terminal selection is 0 (no PID function), the PID function proportional gain P is 1 (units: 0.01), the PID function integral time I is 0, and the PID function differential time D is 0.
- When M2=On, the set PID reference target value input terminal selection is 1 (target frequency input is controlled from the digital keypad), the PID function proportional gain P is 1 (units: 0.01), the PID function integral time I is 0, and the PID function differential time D is 0.
- D1027: Frequency command after PID operation.

```
M0
   4 F
                                            FPID
                                                              H<sub>0</sub>
                                                                              H<sub>0</sub>
                                                                                              H1
                                                                                                              H1
  M1
                                           FPID
                                                              H<sub>0</sub>
                                                                              H1
                                                                                              H<sub>0</sub>
                                                                                                              H<sub>0</sub>
  M2
   ┨┠
                                           FPID
                                                              H1
                                                                              H1
                                                                                              H<sub>0</sub>
                                                                                                              H<sub>0</sub>
M1000
                                           MOV
                                                          D1027
   ┨┠
                                                                              D1
                                            END
```

14:		F	REC	P		<b>S</b> 1	<u>S2</u>	(S:	3)	D	rive	speed co	ntrol mode	
	Bit device Word device									:16-bit cor	nmand_ (7 STEP)			
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	FREQ	Continuous FREQP	Pulse
S1				*	*						*	T:	execution type	execution type
S2				*	*						*	T		
S3				*	*						*	:32-bit cor	<u>nmand</u>	
Note	es on	oper	and u	sage:	none							T:	: <del> </del> :	: - :
	Notes on operand usage: none												al: M1015	

- $\frac{(S1)}{S1}$ : Frequency command.  $\frac{(S2)}{S1}$ : Acceleration time.  $\frac{(S3)}{S1}$ : Deceleration time
- S2,S3: In acceleration/deceleration time settings, the number of decimal places is determined by the definitions of Pr. 01-45.

#### Example

When Pr. 01-45=0: units of 0.01 sec.

The setting of 50 for S2 (acceleration time) in the ladder diagram below implies 0.5 sec, and the S2 (deceleration time) at time of 60 implies 0.6 and

and the S3 (deceleration time) setting of 60 implies 0.6 sec

The FREQ command can control drive frequency commands, and acceleration and

deceleration time; it also uses special register control actions, such as:

M1035; Control drive PUN(On) / STOR(Off) (PUN requires Sorre On (M1040 On) to be

M1025: Control drive RUN(On) / STOP(Off) (RUN requires Servo On (M1040 On) to be effective)

M1026: Control drive operating direction FWD(Off) / REV(On)

M1040: Control Servo On / Servo Off.

M1042: Trigger quick stop (ON) / does not trigger quick stop (Off).

M1044: Pause (On) / release pause (Off)

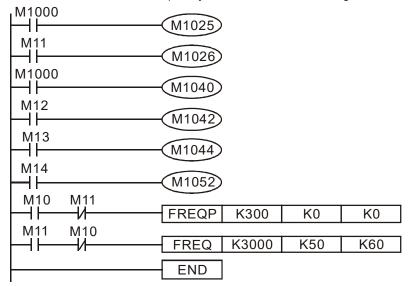
M1052: Lock frequency (On) / release lock frequency (Off)

Example

- M1025: Drive RUN(On) / STOP(Off), M1026: drive operating direction FWD(Off) / REV(On). M1015: frequency reached.
- When M10=On, sets the drive frequency command K300 (3.00Hz), with an acceleration / deceleration time of 0.

When M11=On, sets the drive frequency command K3000 (30.00Hz), with an acceleration time of 50 (0.5 sec.) and deceleration time of 60 (0.6 sec.). (When Pr. 01-45=0)

■ When M11=Off, the drive frequency command will now change to 0



 Pr. 09-33 are defined on the basis of whether reference commands have been cleared before PLC operation.

bit0: Prior to PLC scanning procedures, whether the target frequency has been cleared is 0. (This will be written to the FREQ command when the PLC is On)

bit1: Prior to PLC scanning procedures, whether the target torque has been cleared is 0. (This will be written to the TORQ command when the PLC is On)

bit2: Prior to PLC scanning procedures, whether speed limits in the torque mode have been cleared is 0. (This will be written to the TORQ command when the PLC is On)

Example: When using r to write a program

M0

FREQ K2000 K1000 K1000

END


If we force M0 to be 1, the frequency command will be 20.00Hz; but when M0 is set as 0, there will be a different situation.

Case 1: When the Pr.09-33 bit 0 is 0, and M0 is set as 0, the frequency command will remain at 20.00Hz.

Case 2: When the Pr.09-33 bit 0 is 1, and M0 is set as 0, the frequency command will change to 0.00Hz.

The reason for this is that when the Pr.09-33 bit 0 is 1 prior to PLC scanning procedures, the frequency will first revert to 0.

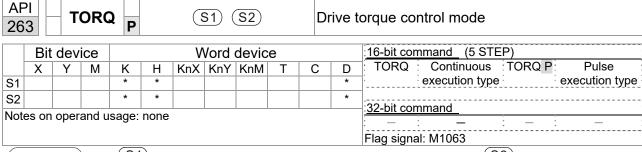When the Pr.09-33 bit 0 is 0, the frequency will not revert to 0.




- $\blacksquare$  (S1): Torque command (numbered, no more than one digit). (S2): Speed limit.
- The TORQ command can control the drive torque command and speed limits; it also uses special register control actions, such as:

M1040: Controls Servo On/Servo Off. When Servo is ON, if a TORQ command is executed, the torque will output the torque defined by the TORQ command, and the frequency restrictions will similarly be controlled by the TORQ command.

Example

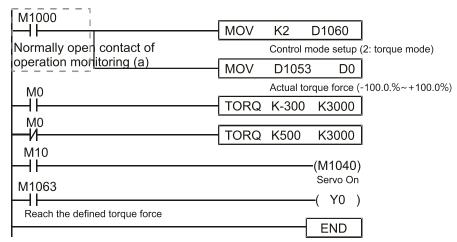- M1040: Control Servo On/Servo Off. M1063: set torque attained. D1060 is the mode controls. D1053 is the actual torque.
- When M0=Off, set the drive torque command K+500 (+50.0%), rotational speed restrictions is 3000 (30Hz).
- When M0=On, sets the drive torque command K-300 (-30.0%), rotational speed restrictions is 3000 (30Hz).
- When M10=On, drive began output torque command.
- When set torque is attained, M1063 will go On; this flag usually jumps continuously, however.




- Pr. 09-33 are defined on the basis of whether reference commands have been cleared before PLC operation.
  - bit0: Prior to PLC scanning procedures, whether the target frequency has been cleared is 0. (This will be written to the FREQ command when the PLC is On)
  - bit1: Prior to PLC scanning procedures, whether the target torque has been cleared is 0. (This will be written to the TORQ command when the PLC is On)
  - bit2: Prior to PLC scanning procedures, whether speed limits in the torque mode have been cleared is 0. (This will be written to the TORQ command when the PLC is On)



If we now force M1 to be 1, the torque command will be K+300 (+30%), and the speed limit will be 400 (40Hz). But when M1 is set as 0, there will be a different situation.

Case 1: When bit 1 and bit 2 of Pr. 09-33 are both set as 0, and M1 is set as 0, the torque command will remain at +30%, and the speed limit will be set as 40Hz.

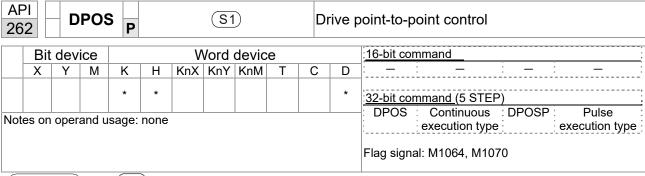
Case 2: When bit 2 of Pr. 09-33 are both 1, and M1 is set as 0, the torque command will revert 0%, and the speed limit will be set as 0Hz.




- (S1): Target (must have a number).
- The DPOS command can control the drive's position commands, and employs special register control actions, such as:

M1040: Control Servo On/Servo Off. M1055 search for origin. M1048 move to new position. If the control mode is position mode (D1060 = 1), and the converter is in the Servo ON state (M1040 = 1), if the DPOS command is executed, the drive will move to a new position in conjunction with activation of M1048 once (OFF to ON).

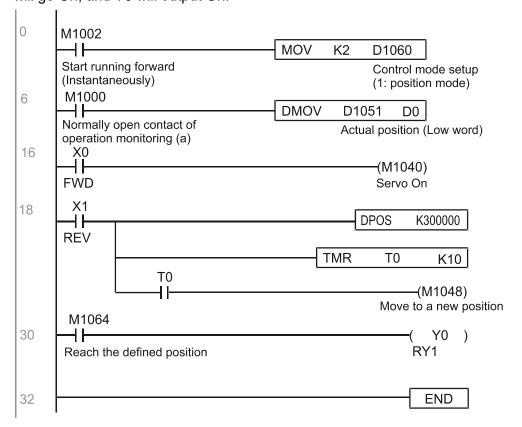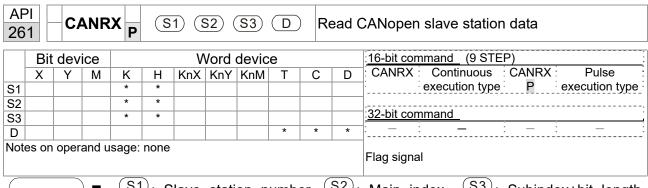- M1040: Control Servo On/Servo Off. M1064: set position attained. D1060 is the mode control. D1051(L) and D1052(H) are the actual position points.
- When X0=On, M1040 will be On (Servo On).
- When X1=On, sets DPOS position as +300000, and M1048 will change to On (move to new position) after a delay of 1 sec. Check whether the value of D1051 has changed at this time; after the set position point has been reached, M1064 will go On, and Y0 will output On.





- S1: Slave station number. S2: Main index.. S3: Subindex+bit length.

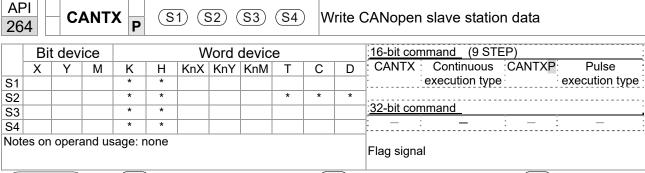
  D: Preset address.
- The CANRX command can read the index of the corresponding slave station. When it is executed, it will send the SDO message format to the slave station. M1066 and M1067 will both be 0 at that time, and M1066 will be set as 1 after reading. If the slave station gives the correct response, it will write the value to the preset register, and set M1067 as 1. If the slave station has a response error, M1067 will be set as 0, and an error message will be recorded to D1076 to D1079.

Example


M1002: When the PLC runs, the command will be triggered once and will set K4M400 = K1

Afterwards, each time M1066 is 1, it will switch to a different message.

```
M1002
        Start running forward
0
                                                       MOV
                                                               K1
                                                                      K4M400
        (Instantaneously)
        M1066
6
         \dashv \vdash
                                                       TMR
                                                               T10
                                                                          K5
        Read & write to
                           T10
        CANopen
                                                       ROLP
                                                               K4M400
                                                                           K1
        completed
        M400
17
         \dashv \vdash
                                      CANRXP
                                                 K1
                                                       H6041
                                                                 H10
                                                                         D120
        M401
27
                                      CANRXP
                                                 K2
         ┨┠
                                                       H6041
                                                                 H10
                                                                         D121
        M402
37
         ⊣⊦
                                      CANTXP
                                                 K1
                                                       D120
                                                                H6040
                                                                          H10
        M403
47
         4 F
                                      CANTXP
                                                 K2
                                                       D120
                                                                H6040
                                                                          H10
        M404
                                                           CANFLS
57
         ℲͰ
                                                                       D2025
                                                          Speed diagram of
                                                          sub-station 1 (H)
        M405
61
         ┨┠
                                                           CANFLS
                                                                       D2125
                                                           Speed diagram of
                                                          sub-station 1 (H)
                                                                        END
65
```



- S1: Slave station number. S2: Address to be written. S3: Main index. S4: Subindex+bit length.
- The CANTX command can write a value to the index of the corresponding slave station. When it is executed, it will send the SDO message format to the slave station. M1066 and M1067 will both be 0 at that time, and M1066 will be set as 1 after reading. If the slave station gives the correct response, it will write the value to the preset register, and set M1067 as 1. If the slave station has a response error, M1067 will be set as 0, and an error message will be recorded to D1076 to D1079.

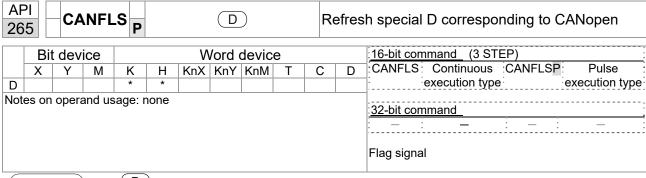


- D: Special D to be refreshed.
- The CANFLS command can refresh special D commands. When is a read only attribute, executing this command will send a message equivalent to that of CANRX to the slave station, and the number of the slave station will be transmitted back and refreshed to this special D. When there is a read/write attribute, executing this command will send a message equivalent to that of CANTX to the slave station, and the value of this special D will be written to the corresponding slave station.
- When M1066 and M1067 are both 0, and M1066 is set as 1 after reading, if the slave station gives a correct response, the value will be written to the designated register, and M1067 will be set as 1. If the slave station's response contains an error, then M1067 will be set as 0, and an error message will be recorded to D1076–D1079.

AF 32		IC	ОМЕ	₹ P	C	<u>S1</u> )(	<u>S2</u> )(	terna	al communications read			
Bit device Word device									16-bit command (9 STEP)			
	Х	Υ	М	K	Н	KnX	KnY	KnM	Т	С	D	ICOMR : Continuous ICOMRP: Pulse :
S1				*	*						*	execution type execution type
S2				*	*						*	,,
S3				*	*						*	32-bit command (17 STEP)
D				*	*						*	:DICOMR: Continuous :DICOMRP: Pulse :
	Notes on operand usage: none											Execution type execution type Flag signal: M1077 M1078 M1079

Explanation

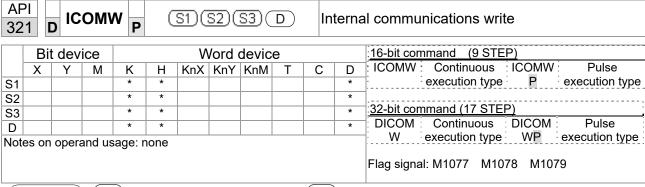
- S1: Selection of slave device. S2: Device selection (0: converter, 1: internal PLC). S3: Read address. D: Saving target.
- The ICOMR command can obtain the slave station's converter and the internal PLC's register value.




- S1: Selection of slave device. S2: Device selection (0: converter, 1: internal PLC). S3: Read address. D: Saving target.
- The ICOMW command write a value to the slave station's converter and the internal PLC's register.

Example

#### Please refer to the following example:

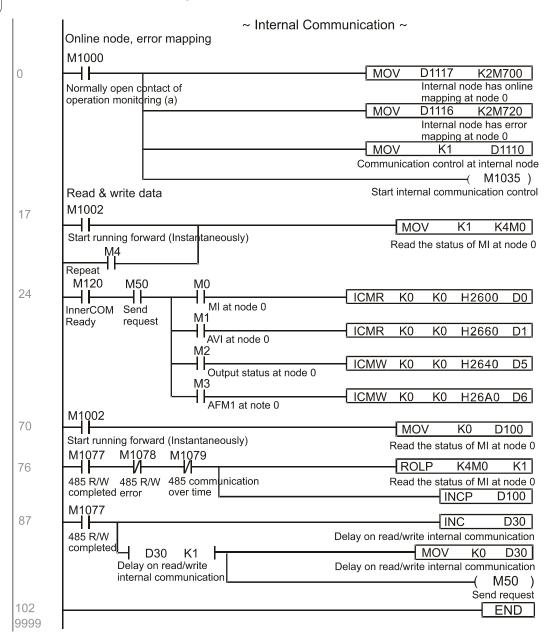


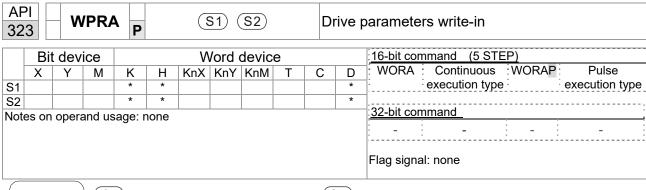

S1: Data that is going to write in S2: Parameter address of the write-in data

Example

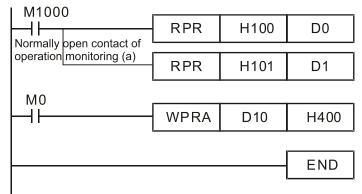- Read the data of C2000 drive's parameter H01.00 and write into D0, read data of H01.01 and write into D1.
- When M0 is ON, write the content of D10 into C2000 drive's Pr.04-00 (1<sup>st</sup> step speed frequency).
- When parameter writes-in successfully, M1017 is ON.
- The WPR command does not support the write-in of 20XX address, but the RPR command supports the read-out of 21XX and 22XX.



Recommendation

When WPRA executes, the data is only written into the RAM area, and will get back to previous record when the power is off.

# 16-7 Error display and handling

Code	ID	Descript	Recommended handling approach		
PLrA	47	RTC time check	Turn power on and off when resetting the keypad time		
PLrt	49	Incorrect RTC time	Turn power on and off after making sure that the keypad is securely connected		
PLod	50	Data writing memory error	Check whether the program has an error and download the program again		
PLSv	51	Data write memory error during program execution	Restart power and download the program again		
PLdA	52	Program transmission error	Try uploading again; if the error persists, sent to the manufacturer for service		
PLFn	53	Command error while downloading program	Check whether the program has an error and download the program again		
PLor	54	Program exceeds memory capacity or no program	Restart power and download the program again		
PLFF	55		Check whether the program has an error and download the program again		
PLSn	56	Check code error	Check whether the program has an error and download the program again		
PLEd	57	Program has no END stop command	Check whether the program has an error and download the program again		
PLCr	58		Check whether the program has an error and download the program again		
PLdF	59	Download program error	Check whether the program has an error and download again		
PLSF	60	PLC scan time excessively long	Check whether the program code has a writing error and download again		

# 16-8 CANopen Master control applications

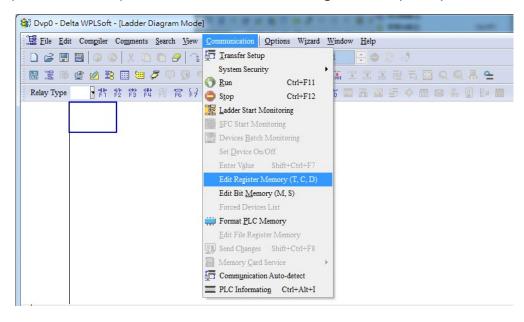
Control of a simple multi-axis application is required in certain situations. If the device supports the CANopen protocol, a C2000 can serve as the master in implementing simple control (position, speed, homing, and torque control). The setting method comprises the following seven steps:

## Step 1: Activating CANopen Master functions


- 1. Pr. 09-45=1 (initiates Master functions); restart power after completing setting, the status bar on the KPC-CC01 digital keypad will display "CAN Master".
- Pr. 00-02=6 reset PLC (please note that this action will reset the program and PLC registers to the default values)
- 3. Turn power off and on again.
- Use the KPC-CC01 digital keypad to set the PLC control mode as "PLC Stop" (if a newly-introduced drive is used, the blank internal PLC program will cause a PLFF warning code to be issued).

## Step 2: Master memory settings

- After connecting the 485 communications cable, use WPL Soft to set the PLC status as Stop (if the PLC mode has been switched to the "PLC Stop" mode, the PLC status should already be Stop)
- 2. Set the address and corresponding station number of the slave station to be controlled. For instance, if it is wished to control two slave stations (a maximum of 8 stations can be controlled simultaneously), and the station numbers are 21 and 22, it is only necessary to set D2000 and D2100 as 20 and 21, and then set D2200, D2300, D2400, D2500, D2600, and D2700 as 0. The setting method involves use of the PLC's WPL editing software WPL as follows:
  - Open WPL and implement communications > register edit (T C D) function



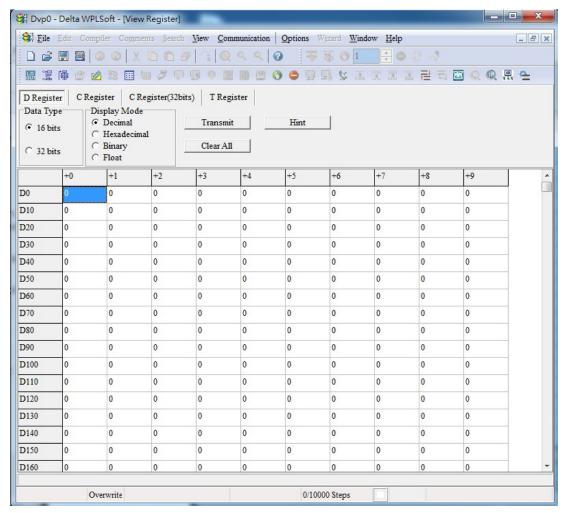
■ After leaving the PLC register window, the register setting screen will appear, as shown below:



If there is a new PLC program and no settings have been made yet, you can read default data from the converter, and merely edit it to suit the current application.

If settings have already been made, however, the special D in the CANopen area will display the saved status (the CANopen D area is located at D1090 to D1099 and D2000 to D2799). Assuming it is a new program, we will first read the default data from the converter; check the communications format if there is no communications link (the default PLC station number is 2, 9600, 7N2, ASCII). Perform the following steps:

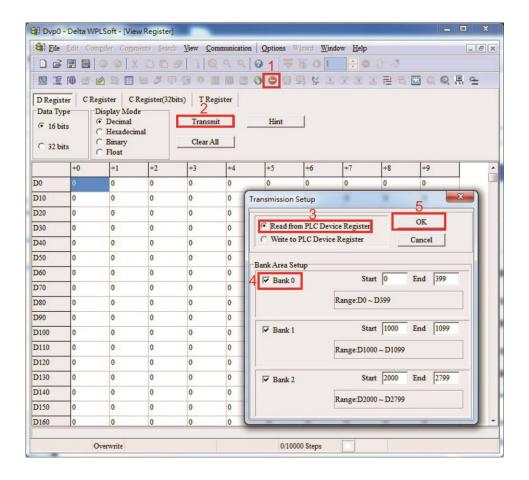- 1. Switch the PLC to Stop status
- 2. Press the transmit button
- 3. Click on read memory after exiting the window
- 4. Ignore D0-D399
- 5. Click on the confirm button.



After reading the data, it is necessary to perform some special D settings. Before proceeding, we will first introduce the special D implications and setting range.

The CANopen Master's special D range is currently D1070 to D1099 and D2000 to D2799; this range is divided into 3 blocks:

- The first block is used to display CANopen's current status, and has a range of D1070–D1089
- The second block is used for CANopen's basic settings, and has a range of D1090-D1099
- -The third block is the slave station mapping and control area, and has a range of D2000-D2799.

These areas are therefore introduced as follows:

The first contains the current CANopen status display:

When the master initializes a slave station, we can find out from D1070 whether configuration of the slave device has been completed; we can find out whether an error occurred in the configuration process from D1071 and whether the configuration is inappropriate from D1074.

After entering normal control, we can find out whether the slave device is offline from D1073. In addition, we can check the slave device's read/write information using the CANRX, CANTX, and CANFLS commands; error information can be obtained from D1076 to D1079 if there has been a read/write failure.

Special D	Description of Function	R/W
	Channel opened by CANopen initialization (bit0=Machine code0)	R
	Error channel occurring in CANopen initialization process (bit0=Machine code0)	R
D1072	Reserved	-

Special D	Description of Function	R/W					
D1073	CANopen break channel (bit0=Machine code0)	R					
D1074	1: Slave station setting error						
	2: Synchronizing cycle setting error (too small)						
D1075	Reserved	-					
D1076	SDO error message (main index value)	R					
D1077	SDO error message (secondary index value)	R					
D1078	SDO error message (error code L)	R					
D1079	SDO error message (error code H)	R					

The second area is for basic CANopen settings: (the PLC must have **Stopped** when this area is used to make settings)

We must set the information exchange time for the master and slave station,

Special D	Description of Function	Default:	R/W
D1090	Synchronizing cycle setting	4	RW

Use D1090 to perform settings; setting time relationships include:

Sync time ≥ 
$$\frac{1M}{Rate} * \frac{N}{4}$$


#### N: TXPDO + RXPDO

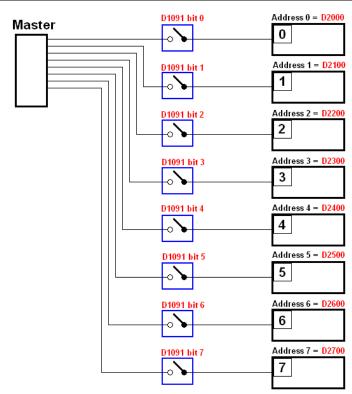For instance, when communications speed is 500K, TXPDO + RXPDO have 8 sets, and synchronizing time will require more than 4 ms

We must also define how many slave stations will be opened. D1091 is the channel for defining station opening, and D2000+100\*n is the station number defining this channel. See the detailed explanation below.

Slave station number **n**=0–7

Special D	Description of Function	R/W
	Sets slave station On or Off (bit 0-bit 7 correspond to slave stations number 0-7)	RW
D2000+100* <b>n</b>	Slave station number	RW



If slave devices have a slow start-up, the master can delay for a short time before performing slave station configuration; this time delay can be set via D1092.

Special D	Description of Function	Default	R/W
D1092	Delay before start of initialization	0	RW

With regard to slave device initialization, a delay time can be set to judge whether failure has occurred. If the communications speed is relatively slow, the delay time can be adjusted to judge whether initialization has been completed, which will ensure that there is time to perform slave device initialization.

Special D	Description of Function	Default	R/W
Himuu	Initialization completion delay time Setting range: 1 to 60000 sec.	15 sec.	RW

After communication is successful, the system must detect whether there is a break in communications with the slave station. D1093 is used to set detection time, and D1094 sets the number of consecutive errors that will trigger a break error.

Special D	Description of Function	Default	R/W
D1093	Break time detection	1000ms	RW
D1094	Break number detection	3	RW

The packet type transmitted by PDO is set before establishing normal communications and generally does not require adjustment.

Special D	Description of Function	Default	R/W
D1097	Corresponding real-time transmission type (PDO) Setting range: 1–240	1	RW
	Corresponding real-time receiving type (PDO) Setting range: 1–240	1	RW

The third block is the slave station mapping and control area.

CANopen provides a PDO method to perform mapping of the master and slave station memory, and enables the master to directly access read/write data in a certain memory area. The master will automatically perform data exchange with the corresponding slave device, and the read/write values can be seen directly from the special D area after real-time exchange (M1034 = 1 time) has been established. The C2000 currently supports real-time mapping of four PDOs, and there are two types of PDO RXPDO (reads slave device information) and TXPDO (writes to slave device). In addition, in order to facilitate control, the C2000 cannot perform mapping of commonly-used registers; the following is an overview of the current PDO mapping situation:

	TXPDO												
PDO4 (	PDO4 (Torque)		osition)	PDO2 (Ren	note I/O)	PDO1 (Speed)							
Description	Special D	Description	Special D	Description	Special D	Description	Special D						
Controller word	D2008+100*n	Controller word	D2008+100*n	Slave device DO	D2027+100*n	Controller word	D2008+100*n						
Target torque	D2017+100*n	Target position	D2020+100*n D2021+100*n		D2031+100*n	Target speed	D2012+100*n						
Control method	D2010+100*n	Control method	D2010+100*n	Slave device AO2	D2032+100*n								
				Slave device AO3	D2033+100*n								

	RXPDO											
PDO4 (	Torque)	PDO3 (P	osition)	PDO2 (Ren	note I/O)	PDO1 (Speed)						
Description	Special D	Description	Special D	Description	Special D	Description	Special D					
Mode word	D2009+100*n	Mode word	D2009+100*n	Slave device DI	D2026+100*n	Mode word	D2009+100*n					
Actual torque	D2018+100*n	Actual position	D2022+100*n D2023+100*n	Slave device Al1	D2028+100*n	Actual frequency	D2013+100*n					
Actual mode	D2011+100*n	Actual mode	D2011+100*n	Slave device Al2	D2029+100*n							
				Slave device Al3	D2030+100*n							

Because usage requires only simple to open the corresponding PDO, where TXPDO employs D2034+100\*n settings and RXPDO employs D2067+100\*n settings.

These two special D areas are defined as follows:

		PDO4	PDO3			PDO2		PDO1	
Default definition	Torque		Position			Remote I/O	Speed		
bit	15 14–12 11 10–8 7 6–4		3	2–0					
Definition	En	Length	En	Length	En	En Length		Length	

En: indicates whether PDO is used

Length: indicates mapping of several variables

In a simple example, if we want to control a C2000 slave device and make it to operate in speed mode, we only have to make the following settings:

#### D2034+100\*n =000Ah

				TX	PD	0			
Length:	P	DO4	PDO3			PDO2		P	DO1
	Description	Special D	Description	Special D		Description	Special D	Description	Special D
1	Controller Word	D2008+100*n	Controller Word	D2008+100*n		Slave device DO	D2027+100*n	Controller Word	D2008+100*n
2	Target torque	D2017+100*n	Target	D2020+100*n D2021+100*n		Slave device AO1	D2031+100*n	Target speed	D2012+100*n
3	Control method	D2010+100*n	Control method	D2010+100*n		Slave device AO2	D2032+100*n		
4						Slave device AO3	D2033+100*n		

	PI	DO4		PDO3		PDO2	PDO1		
Definition	To	rque	Р	osition	Re	mote I/O	S	peed	
bit	15	14–12	11	10–8	7 6–4		3	2–0	
Definition	0	0	0	0	0 0		1	2	

#### D2067+100\*n =000Ah

		TX PDO											
Length:	P	DO4		PDO3			PDO2			P	DO1		
	Description	Special D		Description	Special D		Description	Special D		Description	Special D		
1	Controller Word	D2009+100*n		Controller Word	D2009+100*n		Slave device DI	D2026+100*n		Controller Word	D2009+100*n		
2	Actual torque	D2018+100*n		Actual position	D2022+100*n D2023+100*n		Slave device Al1	D2028+100*n		Actual frequency	D2013+100*n		
3	Actual mode	D2011+100*n		Actual mode	D2011+100*n		Slave device Al2	D2029+100*n					
4							Slave device Al3	D2030+100*n					

	PI	DO4		PDO3		PDO2	PDO1			
Definition	To	rque	Р	osition	ion Remote I/O		Remote I/O		Speed	
bit	15	14–12	11	10–8	7	6–4	3	2–0		
Definition	0	0	0 0		0 0		1	2		

Switch the PLC to Run after completing settings. Now wait for successful initialization of CANopen (M1059 = 1 and M1061 = 0), and then initiate CANopen memory mapping (M1034 = 1). The control word and frequency command will now automatically refresh to the corresponding slave device (D2008+n\*100 and D2012+n\*100), and the slave device's status word and currently

frequency will also be automatically sent back to the master station (D2009+n\*100 and D2013+n\*100). This also illustrates how the master can handle these tasks through read/write operations in the special D area.

Furthermore, it should be noted that the remote I/O of PDO2 can obtain the slave device's current DI and AI status, and can also control the slave device's DO and AO status. Nevertheless, after introducing a fully automatic mapping special D, the C2000 CANopen master also provides additional information refreshes. For instance, while in speed mode, acceleration/deceleration settings may have been refreshed. The special D therefore also stores some seldom-used real-time information, and these commands can be refreshed using the CANFLS command. The following is the C2000's current CANopen master data conversion area, which has a range of D2001+100\*n–D2033+100\*n, as shown below:

- 1. The range of n is 0–7
- 2. ●Indicates PDOTX, ▲Indicates PDORX; unmarked special D can be refreshed using the CANFLS command

Special D	Description of Eurotian	Default		PDO [	Default		R/W
Special D	Description of Function	Delault	1	2	3	4	K/VV
D2000+100*n	Station number n of slave station Setting range: 0–127 0: No CANopen function	0					RW
D2002+100*n	Manufacturer code of slave station number n (L)	0					R
D2003+100*n	Manufacturer code of slave station number n (H)	0					R
D2004+100*n	Manufacturer's product code of slave station number n (L)	0					R
D2005+100*n	Manufacturer's product code of slave station number n (H)	0					R

#### **Basic definitions**

Special D	Description of Function	Default		PDO [	Default		R/W
Special D	Description of Function	Delault	1	2	3	4	IK/VV
D2006+100*n	Communications break handling method of slave station number n	0					RW
D2007+100*n	Error code of slave station number n error	0					R
D2008+100*n	Control word of slave station number n	0	•		•	•	RW
D2009+100*n	Status word of slave station number n	0	<b>A</b>		<b>A</b>	<b>A</b>	R
D2010+100*n	Control mode of slave station number n	2					RW
D2011+100*n	Actual mode of slave station number in	2					R

# **Velocity Control**

Special D	Description of Function	Default		PDO [	Default		R/W
Special D	Description of Function	Delault	1	2	3	4	FX/ V V
D2001+100*n	Torque restriction on slave station number n	0					RW
D2012+100*n	Target speed of slave station number n (rpm)	0	•				RW
D2013+100*n	Actual speed of slave station number n (rpm)	0	<b>A</b>				R
D2014+100*n	Error speed of slave station number n (rpm)	0					R
D2015+100*n	Acceleration time of slave station number n (ms)	1000					RW
D2016+100*n	Deceleration time of slave station number n (ms)	1000					RW

# Torque control

Special D	Description of Function	Default	PDO Default				R/W
			1	2	3	4	17/ / /
D2017+100*n	Target torque of slave station number n(-100.0% – +100.0%)	0				•	RW
D2018+100*n	Actual torque of slave station number n(XX.X%)	0				<b>A</b>	R
D2019+100*n	Actual current of slave station number n(XX.XA)	0					R

#### Position control

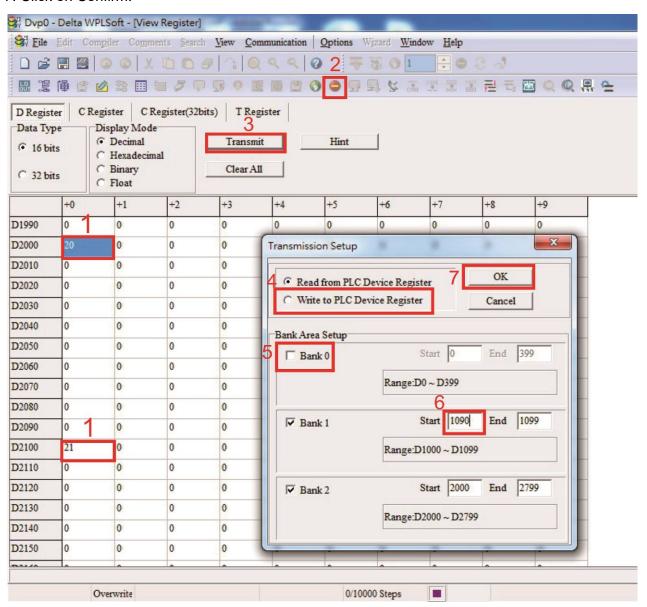
Special D	Description of Function	Default:	PDO Default:				R/W
			1	2	3	4	FX/ V V
D2020+100*n	Target of slave station number n (L)	0					RW
D2021+100*n	Target of slave station number n (H)	0			•		RW
D2022+100*n	Actual position of slave station number n (L)	0					R
D2023+100*n	Actual position of slave station number n (H)	0					R
D2024+100*n	Speed chart of slave station number n (L)	10000					RW
D2025+100*n	Speed chart of slave station number n (H)	0					RW

# Remote I/O

Special D	Description of Function	Default:		D/M/			
			1	2	3	4	R/W
D2026+100*n	MI status of slave station number n	0		<b>A</b>			R
D2027+100*n	MO setting of slave station number n	0		•			RW
D2028+100*n	Al1 status of slave station number n	0		•			R
D2029+100*n	Al2 status of slave station number n	0		•			R
D2030+100*n	Al3 status of slave station number n	0		•			R
D2031+100*n	AO1 setting of slave station number n	0		•			RW
D2032+100*n	AO2 setting of slave station number n	0		•			RW
D2033+100*n	AO3 setting of slave station number n	0		•			RW

After gaining an understanding of special D definitions, we return to setting steps. After entering the values corresponding to D1090 to D1099, D2000+100\*n, D2034+100\*n and D2067+100\*n, we can begin to perform downloading, which is performed in accordance with the following steps:

- 1. D2000 and D2100 are set as 20 and 21, and D2200, D2300, D2400, D2500, D2600, and D2700 are set as 0; if a setting of 0 causes problems, D1091 can be set as 3, and slave stations 2 to 7 can be closed.
- 2. Switch PLC to Stop status.
- 3. Press the transmit button.
- 4. Click on write memory after exiting the window.
- 5. Ignore D0-D399.
- 6. Change the second range to D1090-D1099.
- 7. Click on Confirm.



Another method can be used to set D1091: Determine which of slave stations 0 to 7 will not be needed, and set the corresponding bits to 0. For instance, if it is not necessary to control slave stations 2, 6 and 7, merely set D1091 = 003B, and the setting method is the same as described above: Use WPL to initiate communications > use register edit (T C D) function to perform settings.

# Step 3: Set the master's communications station number and communications speed

- ☑ When setting the master's station number (Pr. 09-46, default is set as 100), make sure not to use the same number as a slave station.
- Set the CANopen communications speed (Pr. 09-37); regardless of whether the drive is defined as a master or slave station, the communications speed is set via this parameter.

# Step 4: Write program code

Real-time access: Can directly read/write to or from the corresponding D area.

Non real-time access:

**Read command**: Use the CANRX command for reading. M1066 will be 1 when reading is completed; M1067 will be 1 if reading is successful, and M1067 will be 0 if an error has occurred.

**Write command**: Use the CANTX command for writing. M1066 will be 1 when writing is completed; M1067 will be 1 if writing is successful, and M1067 will be 0 if an error has occurred.

**Refresh command:** Use CANFLS command to refresh (if there are RW attributes, the master will write to the slave station; if there are RO attributes, the slave station will return the read values to the master); M1066 will be 1 if refresh has been completed; M1067 will be 1 if refresh is successful, and M1067 will be 0 if an error has occurred.

## NOTE

When using CANRX, CANTX or CANFLS, internal implementation commands will wait until M1066 is completed before executing the next CANRX, CANTX or CANFLS.

Afterwards, download program to the drive (Please note that the PLC's default communications format is ASCII 7N2 9600, and the station number is 2. The WPL must therefore be modified, and the WPL setting pathway is **settings** > **communications settings**)

# Step 5: Set the slave stations' station numbers, communications speed, control source, and command source

Delta's C2000 and EC series devices currently support the CANopen communications interface drive, and the corresponding slave station numbers and communications speed parameters are as follows:

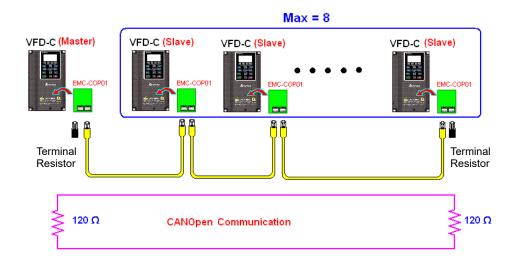
	Corresponding device parameters		Value	Definition	
	C2000	E-C			
Slave station	09-36	09-20	0	Disable CANopen hardware interface	
address	09-30	09-20	1–127	CANopen Communication address	
			0	1Mbps	
			1	500Kbps	
Communication	00.27	09-21	2	250Kbps	
speed	09-37	09-21	3	125Kbps	
				4	100Kbps
			5	50Kbps	
Control source	00-21	-	3		
Control source	-	02-01	5		
Fraguenov course	00-20	-	6		
Frequency source	-	02-00	5		
Torque course	11-33	-	3		
Torque source	-	-	-		
Position source	11-40		3		
FUSITION SOURCE	-	-	-		

Delta's A2 Servo currently supports the CANopen communications interface, and the corresponding slave station numbers and communications speed parameters are as follows:

	Corresponding device parameters A2	Value	Definition
Slave station address	03-00	1–127	CANopen Communication address
	03-01 bit 8-11 XRXX	R= 0	125Kbps
Communication		R= 1	250Kbps
Communication speed		R= 2	500Kbps
speed		R= 3	750Kbps
		R= 4	1Mbps
Control/command source	01-01	В	

# Step 6: Connect hardware wiring

When performing wiring, note the head and tail terminal resistance; connection methods are as follows:



# Step 7: Initiate control

After a program has been written and downloaded, switch the PLC mode to Run. Merely turn power to master and slave stations off and then on again.

Refer to CANMasterTest 1 vs. 2 drive.dvp

## Example

C2000 drive one-to-two control

# Step 1: Activating CANopen Master functions

- ☑ Pr. 09-45=1 (initiates Master functions); restart power after completing setting, the status bar on the KPC-CC01 digital keypad will display "CAN Master".
- ☑ Pr. 00-02=6 reset PLC (please note that this action will reset the program and PLC registers to the default values)
- ☑ Turn power off and on again.
- ☑ Use the KPC-CC01 digital keypad to set the PLC control mode as "PLC Stop" (if a newly-introduced drive is used, the blank internal PLC program will cause a PLFF warning code to be issued).

## Step 2: Master memory correspondences

- ☑ Enable WPL
- ☑ Use keypad set PLC mode as Stop (PLC 2)
- ☑ WPL read D1070 to D1099, D2000 to D2799
- ☑ Set D2000=10, D2100=11
- ☑ Set D2100, 2200, 2300, 2400, 2500, 2600, 2700=0
- ☑ Download D2000 to D2799 settings

## Step 3: Set the master's communications station number and communications speed

- ☑ When setting the master's station number (Pr. 09-46, default is set as 100), make sure not to use the same number as a slave station.
- ☑ Set the CANopen communications speed as 1M (Pr. 09-37=0); regardless of whether
  the drive is defined as a master or slave station, the communications speed is set via
  this parameter.

## Step 4: Write program code

Real-time access: Can directly read/write to or from the corresponding D area.

Non real-time access:

- **Read command**: Use the CANRX command for reading. M1066 will be 1 when reading is complete; M1067 will be 1 if reading is successful, and M1067 will be 0 if an error has occurred.
- **Write command**: Use the CANTX command for writing. M1066 will be 1 when writing is complete; M1067 will be 1 if writing is successful, and M1067 will be 0 if an error has occurred.
- **Refresh command:** Use CANFLS command to refresh (if there are RW attributes, the master will write to the slave station; if there are RO attributes, the slave station will return the read values to the master); M1066 will be 1 if refresh has been completed; M1067 will be 1 if refresh is successful, and M1067 will be 0 if an error has occurred.

## NOTE

When using CANRX, CANTX or CANFLS, internal implementation commands will wait until M1066 is completed before executing the next CANRX, CANTX or CANFLS.

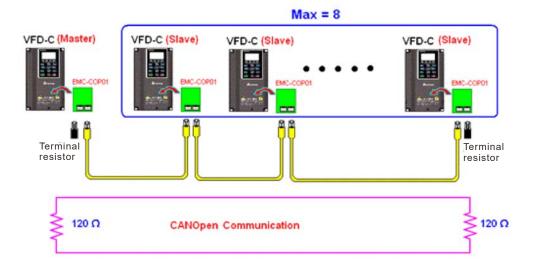
Afterwards, download program to the drive (Please note that the PLC's default communications format is ASCII 7N2 9600, and the station number is 2. The WPL must therefore be modified, and the WPL setting pathway is **settings** > **communications settings**)

## Step 5: Set the slave stations' station numbers and communications speed

Slave station no. 1: 09-37 = 0(Speed 1M) 09-36=10(Node ID 10 ) Slave station no. 2: 09-37 = 0(Speed 1M) 09-36=10(Node ID 11 )

# Step 6: Connect hardware wiring

When performing wiring, note the head and tail terminal resistance; connection methods are as follows:



# Step 7: Initiate control

After a program has been written and downloaded, switch the PLC mode to Run. Merely turn power to master and slave stations off and then on again.

Refer to CANMasterTest 1 vs. 2 driver.dvp

# 16-9 Explanation of various PLC mode controls (speed, torque, homing, and position)

The torque mode and position mode are based on FOC vector control and speed mode also supports FOC vector control. Control therefore cannot be performed successfully unless finishing motor parameter auto tuning ahead of time for the torque mode and position mode, and the speed mode based on FOC.

In addition, motors are classified as two types: IM and PM. For IM motors, the auto tuning of the motor parameter will be enough. For PM motors, after completing motor parameter auto tuning, the auto tuning of motor origin angle of deviation should be completed as well. Please refer to Chapter 12-1 Pr. 05-00 for detailed explanation.

If a PM motor belongs to Delta's ECMA series, motor parameters can be directly input from data in the servo motor catalog, and parameter study will not be needed.

Control methods and settings are explained as follows:

## Speed control:

Register table for speed mode:

## Control special M

Special M	Description of Function	Attributes
M1025	Drive frequency = set frequency (ON) / drive frequency =0 (OFF)	RW
M1026	Drive operating direction FWD(OFF) / REV(ON)	RW
M1040	Hardware power (Servo On)	RW
M1042	Quick stop	RW
M1044	Pause (Halt)	RW
M1052	Lock frequency (lock, frequency locked at the current operating frequency)	RW

## Status special M

Special M	Description of Function	Attributes
M1015	Frequency attained (when used together with M1025)	RO
M1056	Servo On Ready	RO
M1058	On Quick Stopping	RO

## Control special D

Special D	Description of Function	Attributes
D1060	Mode setting (speed mode is 0)	RW

## Status special D

Special D	Description of Function	Attributes
D1037	Converter output frequency (0.00–600.00)	RO
D1050	Actual operating mode (speed mode is 0)	RO

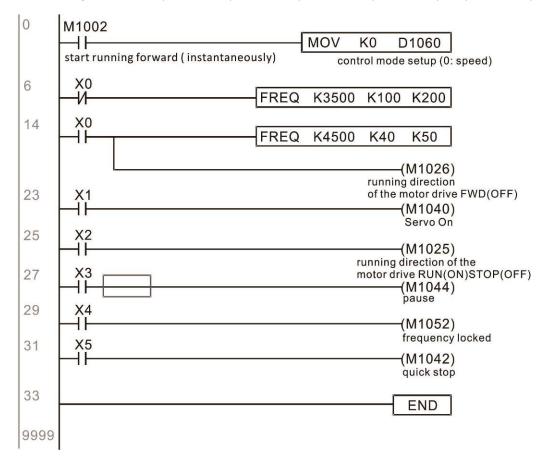
Speed mode control commands:

**FREQ(P)** S1 S2 S3

Target speed The first acceleration time setting The first deceleration time setting Example of speed mode control:

Before performing speed control, if the FOC (magnetic field orientation) control method is used, setting of electromechanical parameters must first be completed.

- 1. Setting D1060 = 0 will shift the converter to the speed mode (default).
- 2. Use the FREQ command to control frequency, acceleration time, and deceleration time.
- 3. Set M1040 = 1, the drive will now be excited, but the frequency will be 0.
- 4. Set M1025 = 1, the drive frequency command will now jump to the frequency designated by FREQ, and acceleration/deceleration will be controlled on the basis of the acceleration time and deceleration time specified by FREQ.
- 5. M1052 can be used to lock the current operating frequency.
- 6. M1044 can be used to temporarily pause operation, and the deceleration method will comply with deceleration settings.
- 7. M1042 can be used to perform quick stop, and deceleration will be as quick as possible without giving rise to an error. (There may still be a jump error if the load is too large.)
- 8. Control user rights: M1040(Servo ON) > M1042(Quick Stop) > M1044(Halt) > M1052(LOCK)



## Torque control:

Register table for torque mode:

## Control special M

Special M	Description of Function	Attributes
M1040	Servo On	RW

## Status special M

Special M	Description of Function	Attributes
M1056	Servo On Ready	RO
M1063	Torque attained	RO

## Control special D

Special D	Description of Function	Attributes
D1060	Operating mode setting (torque mode is 2)	RW

## Status special D

Special D	Description of Function	Attributes
D1050	Actual operating mode (speed mode is 0)	RO
D1053	Actual torque	RO

Torque mode control commands:

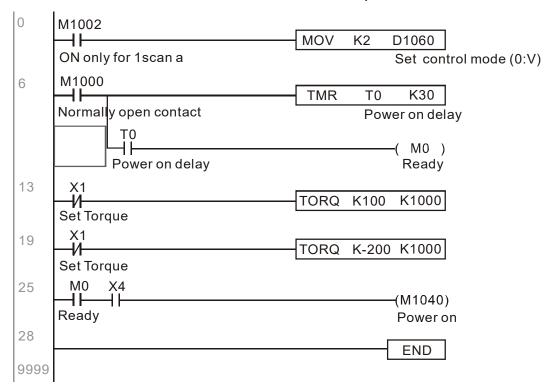
**TORQ(P)** S1 S2

Target torque (with numbers) Frequency restrictions

Example of torque mode control:

The setting of electromechanical parameters involved in torque control must be completed before implementing torque control.

- 1. Set D1060 = 2 to change the converted to the torque mode.
- 2. Use the TORQ command to implement torque control and speed limits.
- 3. Set M1040 = 1; the drive will now be excited, and immediately jump to the target torque or speed limit. D1053 can be used to find out the current torque.



## Homing control / position control:

Register table in homing mode / position mode:

# Control special M

Special M	Description of Function	Attributes
M1040	Servo On	RW
M1048	Move to new position, must use control mode as position mode (D1060 = 1) and M1040 = 1	RW
M1050	Absolute position / relative position (0: relative / 1: absolute)	RW
	Search for origin (home start), must use control mode as position mode (D1060 = 3) and M1040 = 1	RW

## Status special M

Special M	Description of Function	Attributes
M1064	Target reached	RO
M1070	Return home complete	RO
M1071	Homing error	RO

## Control special D

Ī	Special D	Description of Function	Attributes
ſ	D1060	Operating mode setting (position mode is 1, homing mode is 3)	RW

# Status special D

Special D	Description of Function						
D1050	Actual operating mode (speed mode is 0)	RO					
D1051	Actual position (Low word)	RO					
D1052	Actual position (High word)	RO					

D1051 and D1052 must be combined to give the actual location, and it has a serial number.

Position mode control commands:

**DPOS(P)** S

Target (with numbers)

## Example of homing mode / position mode control:

First complete setting of electromechanical parameters connected with position before implementing homing control or position control.

- Set Pr. 00-40 to select the homing method and the corresponding limit sensors and origin. (Setting the MI function gives a reverse rotation limit of 44, a forward rotation limit of 45, and an origin proximity of 46. Because the C2000 currently only supports a Z-phase origin, the encoder card must provide Z-phase.)
- 2. Set D1060 = 3 to change the converter to the homing mode.
- 3. Set M1040 = 1

In the VF/SVC/VFPG mode, will enter the STANDBY mode (Pr. 01-34 can be used to access the STANDBY mode's action options).

In the FOC+PG mode, zero speed holding will occur

- 4. Set M1055 = 1, and the drive will now start to search for the origin.
- 5. When homing is complete, M1070 will change to ON. If you now set D1060 = 1, the control mode will switch to position mode (please note that M1040 will not change to off; this mechanical origin move).

- 6. The DPOS command can now be used to designate the drive's target location. M1050 or Pr. 00-12 can be used to set a change in absolute or relative position.
- 7. Implement M1048 Pulse ON once (must be more than 1 ms in duration), and the converter will begin to move toward the target (M1040 must be 1 to be effective). The current position can be obtained from D1051 and D1052.


Part 1: The initialization mode is defined as the "homing" mode from the beginning (set D1060 = 3). X2 is used to implement converter excitation.

```
Initial condition
0
     M1002
                                         MOV
                                                K3
                                                      D1060
      ON only for 1scan a
                                                      Set control mode (0:V)
                                                SET
                                                       M100
                                                        Home mode
                                                RST
                                                       M101
                                                        P2P mode
10
                                                      (M1040)
      Servo on req
                                                      Power on
```

Part 2: Homing; Use X3 to trigger homing action; will automatically switch to position mode after completion.

```
Home mode
      M100 X3
12
                                                              (M1055)
      Home Home
                                                                Home
      mode
             req
                     M1070
                      \mathsf{H}\mathsf{F}
                                                        RST
                                                               M100
                     Home
                     finish
                                                        RST
                                                               M100
```

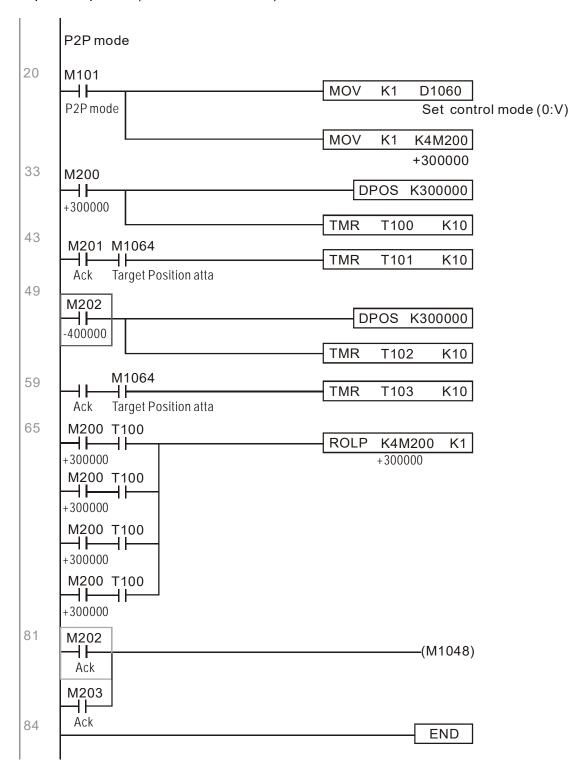Part 3: Point-to-point movement; switch to position mode (set D1060 = 1), and move back and forth between position points. (+300000 - -300000)



If homing is not needed in an application, the first and second parts can be skipped. However, the M1040 condition from Part 1 must be included, and the writing method in Part 1 involve the use of X2 to achieve direct access. In addition, when M101 is used at the beginning of Part 3 to set the control mode, it can be rewritten as M1002, which will put the PLC immediately into the position mode when it starts running.

# 16-10 Internal communications main node control

The protocol has been developed in order to facilitate the use of RS-485 instead of CANopen in certain application situations. The RS-485 protocol offers similar real-time characteristics as CANopen; this protocol can only be used on the C2000 and CT2000 devices. The maximum number of slave devices is 8.

Internal communications have a master-slave structure. The initiation method is very simple:

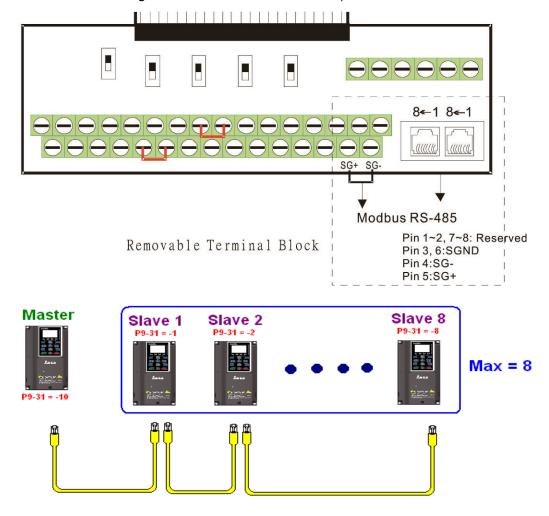
#### Slave device:

Set Pr. 09-31 = -1 to -8 in order to access 8 nodes, and set Pr. 00-20 = 1 to define the control source as RS-485 and access the reference sources that must be controlled, namely speed command (Pr. 00-21 = 2), torque command (Pr. 11-33 = 1), and position command (Pr. 11-40=2). This will complete slave device settings. (PLC functions do not need to be activated)

## System

Setting the master is even simpler; it is only necessary to set Pr. 09-31 = -10, and enable the PLC.

Hardware wiring: The master and slave stations are connected via the RS-485 serial port. The C2000 provides two types of RS-485 serial port interfaces, see the figure below: (please refer to Chapter 06 "Control Terminals" concerning detailed terminal connections)



Master programming: In a program, D1110 can be used to define a slave station to be controlled (1–8, if set as 0, can jump between 8 stations). Afterwards, M1035 is set as 1, and the memory positions of the master and slave stations will correspond. At this time, it is only necessary to send commands to the correlation slave station address to control that station. The following is a register table connected with internal communications:

# Control special M

Special M	Description of Function	Attributes		
M1035	nitiates internal communications control			

## Control special D

Special D	Description of Function	Attributes
	Internal node communications number 1–8 (set the station number of the slave station to be controlled)	RW

_			Des	scription of F	unction			
Special D	Definition	bit	User rights		Location mode	Torque mode	Homing mode	Attributes
		0	4	Command functions	ı	1	Homing Origin	
		1	4	Reverse rotation requirements	Immediate change	-	-	
		2	4	-	-	-	-	
		3	3	Temporary pause	Temporary pause	-	-	
	Intowed words NI southed	4	4	Frequency locking	1	-	Temporary pause	
D1120 + 10*N	Internal node N control command	5	4	JOG	-	-	-	RW
		6	2	Quick Stop	Quick Stop	Quick Stop	Quick Stop	
		7	1	Servo ON	Servo ON	Servo ON	Servo ON	
		11–8	4	Speed interval switching	Speed interval switching	-	-	
		13–12	4	Deceleration time change	-	-	-	
		14	4	Enable Bit 13–8	Enable Bit 13–8	-	-	
		15	4	Clear error code	Clear error code	Clear error code	Clear error code	
D1121 + 10*N	Internal node N control mode			0	1	2	3	RW
	Internal node N reference command L			Speed command (no number)	Position command (with numbers)	Torque command (with numbers)	-	RW
D1123 + 10*N	Internal node N reference command H			-		Speed limit	-	RW

**<sup>※</sup>** N = 0−7

## Status special D

Special D	Description of Function	Attributes
D1115	Internal node synchronizing cycle (ms)	RO
1 13111h	Internal node error (bit0 = slave device 1, bit1 = slave device 2,bit7 = slave device 8)	RO
1 11111/	Internal node online correspondence (bit0 = slave device 1, bit1 = slave device 2,bit7 = slave device 8)	RO

Special D	Description of Function									
Special D	bit	Speed mode	Location mode	Torque mode	Homing mode	-Attributes				
	0	Frequency command	Position command	Torque command	Zero command					
	٥	arrival	attained	attained	completed					
	1	Clockwise	Clockwise	Clockwise	Clockwise					
		Counterclockwise:	Counterclockwise:	Counterclockwise:	Counterclockwise:					
D1126 + 10*N	2	Warning	Warning	Warning	Warning	RO				
	3	Error	Error	Error	Error					
	5	JOG								
	6	Quick Stop	Quick Stop	Quick Stop	Quick Stop					
	7	Servo ON	Servo ON	Servo ON	Servo ON					
D1127 + 10*N		Actual frequency	Actual position (with numbers)	Actual torque (with numbers)	-	RO				
D1128 + 10*N		-	(with numbers)	-	-					

 $<sup>\</sup>times N = 0 - 7$ 

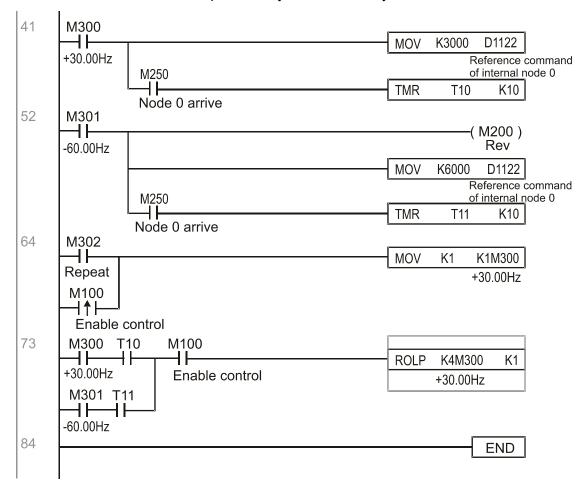
Example: Assume it is desired to control slave station 1 operation at frequencies of 30.00Hz and 60.00 Hz, status, and online node correspondences:

```
M1000
0
         4 F
                                                          MOV
                                                                 D1117
                                                                           K1M700
                                                              Internal node Node 0 online
       Normally open contact of
                                                              online mapping
       operation monitoring (a)
                                                          MOV
                                                                 D1126
                                                                           K4M250
                                                               Status of
                                                                            Node 0 arrive
                                                               internal node 0
                                                          MOV
                                                                K4M200
                                                                             D1120
                                                                           Control command of
                                                               Node 0 ack
                                                                           internal node 0
                                                                           (M1035)
                                                                          Ènable internal
                                                                          communication
                                                                          control
```

When it is judged that slave station 1 is online, delay 3 sec. and begin control

```
M700
17
        4 F
                                                           MOVP
                                                                   K0
                                                                         D1121
       Node 0 online
                                                                       Control mode of
                                                                       internal node 0
                                                           TMR
                                                                           K30
                                                                   Enable Control Delay
                    T0
                                                                       (M100)
                   Enable Control Delay
                                                                       Enable Control
                                                                       (M215)
                                                                        Reset
                   Enable Control Delay
33
       M100
        ┨┠
                                                           MOVP
                                                                   K0
                                                                         D1121
       Enable Control
                                                                       Control mode of
                                                                       internal node 0
                                                                       (M207)
                                                                       Node 0 Servo On
                                                                       (M200)
                                                                        Node 0 Ack
```

It is required slave station 1 maintains forward rotation at 30.00Hz for 1 sec., and maintains reverse rotation at 60.00 Hz for 1 sec., and repeat this cycle continuously.



# 16-11 Count function using MI8

# 16-11-1 High-speed count function

The C2000's MI8 supports one-way pulse counting, and the maximum speed is 100K. The starting method is very simple, and only requires setting M1038 to begin counting. The 32 bit count value is stored on D1054 and D1055 in non-numerical form. M1039 can reset the count value to 0.

```
()
       M1000
                                                                  D1054
                                                                              D0
                                                        MOV
       Normally open contact of
                                            Current count value of MI8 (L word)
       operation monitoring (a)
                                                        MOV
                                                                  D1055
                                                                              D1
                                            Current count value of MI8 (H word)
11
        M<sub>0</sub>
        4 F
                                                                         -(M1038)
                                                              MI8 start counting
        M1
13
                                                                        -(M1039)
                                                         Reset MI8 Count Value
15
                                                                           END
```

When the PLC program defines MI8 for use as a high-speed counter, and also for use in PLC procedures, it must be written to M1038 or M1039, and the original MI8 functions will be disabled.

# 16-11-2 Frequency calculation function

Apart from high-speed counting, the C2000's MI8 can also convert a received pulse to frequency. The following figure shows that there is no conflict between frequency conversion and count calculations, which can be performed simultaneously.


PLC speed calculation formula

D1057 Speed

D1058 Interval between calculations

D1059 Decimal places

Assuming that there are 5 input pulses each second, (see figure below) we set D1058=1000ms=1.0 sec. as the calculation interval. This enables five pulses to be sent to the converter each second.



Time interval between calculations

Assuming that each 5 pulses correspond to 1Hz, we set D1057=5.

Assuming that we wish to display numbers to two decimal places, we set D1059=2, which is also 1.00Hz. The numerical value displayed at D1056 is 100. For simplicity, the D1056 conversion formula can be expressed as in the following table:

D1056= 
$$\frac{\text{Pulses per second}}{\text{D1057}} \times \frac{1000}{\text{D1058}} \times 10^{\text{D1059}}$$

# 16-12 Modbus Remote IO Control Applications (use MODRW)

The C2000's internal PLC supports 485 read/write functions, which can be realized using the MODRW command. However, the 485 serial port must be defined as available for the PLC's 485 use before writing a program, and the Pr. 09-31 must be set as -12. After completing settings, the standard functions defined by 485 can be used to implement read/write commands at other stations. Communications speed is defined by parameter 09-01, the communications format is defined by Pr. 09-04, and the PLC's current station number is defined by Pr. 09-35. The C2000 currently supports the functions read coil (0x01), read input (0x02), read register (0x03), write to single register (0x06), write to several coils (0x0F), and write to several registers (0x10). Explanations and the usage of these functions are provided as follows:


	MODE	RW com	nmand				
S1	S2	S3	S4	S5	General	Slave device is Delta's PLC	Slave device is Delta's
Node ID	Command	Address	Return: D area	Length	meaning	meaning	converter meaning
К3	H01	H500	D0	K18	Read coil (bit)	Read 18 bits of data corresponding to slave station 3 PLC Y0 to Y21. This data is stored by bit 0 to 15 of the this station's D0 and bit 0 to bit 3 of D1.	Does not support this function
К3	H02	H400	D10	K10	Read input (bit)	Read 10 bits of data corresponding to slave station 3 PLC X0 to X11. This data is stored by bit 0 to 9 of this station's D10.	Does not support this function
КЗ	H03	H600	D20	K3	Read register (word)	Read 3 words of data corresponding to slave station 3 PLC T0 to T2. This data is stored by D20 to D22.	Read 3 words of data corresponding to slave station 3 converter parameters 06-00 to 06-02. This data is stored by D20 to D22
К3	H06	H610	D30	XX	Write to single register (word)	Write slave station 3 PLC's T16 to this station's D30 value	Write slave station 3 converter 06 to 16 parameter to this station's D30 value
К3	H0F	H509	D40		Write to multiple coils (Bit)	Write slave station 3 PLC's Y11 to Y22 to bit 0 to 9 of D40.	Does not support this function
К3	H10	H602	D50	K4	Write to multiple registers (word)	Write slave station 3 PLC's 12 to 15 to	Write slave station 3 converter 06-02 to 06-05 parameters to this station's D50 to D53

XX indicates doesn't matter

After implementing MODRW, the status will be displayed in M1077 (485 read/write complete), M1078 (485 read/write error), and M1079 (485 read/write time out). M1077 is defined so as to immediately revert to 0 after the MODRW command has been implemented. However, any of three situations—a report of no error, a data error report, or time out with no report—will cause the status of M1077 to change to On.


Example program: Testing of various functions

At the start, will cause the transmitted time sequence to switch to the first data unit.




When the reported message indicates no error, it will switch to the next transmitted command

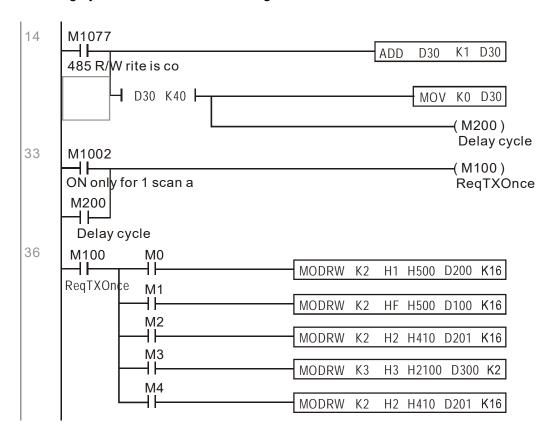If time out occurs or an error is reported, the M1077 will change to On. At this time, after a delay of 30 scanning cycles, it will re-issue the original command once



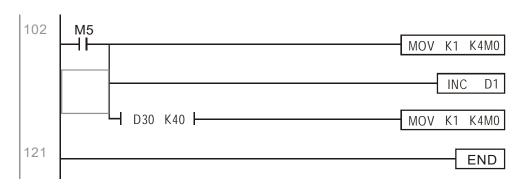It will repeat after sending all commands



Practical applications:

Actual use to control the RTU-485 module.

Step 1: Set the communications format. Assume that the communications format is 115200, 8,N,2, RTU

C2000: The default PLC station number is set as 2 (09-35)


Pr. 09-31=-12 (COM1 is controlled by the PLC ), Pr. 09-01=115.2 (The communications speed is 115200 )

Pr. 09-04=13 (The format is 8,N,2, RTU)

RTU-485: The station number = 8 (give example)

ID7	ID6	ID5	ID4	ID3	ID2	1טון	וטטו
0	0	0	0	1	0	0	0

PA3	PA2	PA1	PA0	DR2	DR1	DR0	A/R
1	0	0	0	1	1	1	0

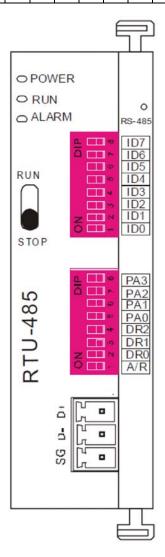

Communication station #: ID0~ ID7 are defined as  $2^0$ ,  $2^1$ ,  $2^2$ ... $2^6$ ,  $2^7$ 

## Communication protocol

PA3	PA2	PA1	PAO	A/R	Communication *Protocol
OFF	OFF	OFF	OFF	ON	7,E,1 · ASCII
OFF	OFF	OFF	ON	ON	7,0,1 · ASCII
OFF	OFF	ON	OFF	ON	7,E,2 + ASCII
OFF	OFF	ON	ON	ON	7,0,2 · ASCII
OFF	ON	OFF	OFF	ON	7,N,2 · ASCII
OFF	ON	OFF	ON	ON	8,E,1 · ASCII
OFF	ON	ON	OFF	ON	8,O,1 · ASCII
OFF	ON	ON	ON	ON	8,N,1 · ASCII
ON	OFF	OFF	OFF	ON	8,N,2 · ASCII
OFF	ON	OFF	ON	OFF	8,E,1 · RTU
OFF	ON	ON	OFF	OFF	8,O,1 · RTU
OFF	ON	ON	ON	OFF	8,N,1 · RTU
ON	OFF	OFF	OFF	OFF	8.N.2 · RTU

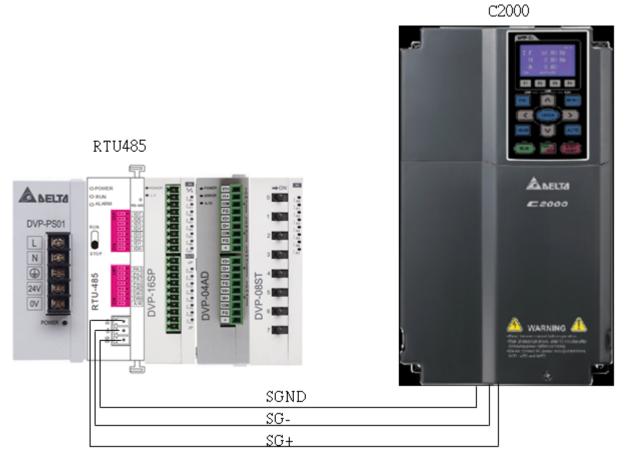
DR2	DR1	DR0	Communication Speed
OFF	OFF	OFF	1,200 bps
OFF	OFF	ON	2,400 bps
OFF	ON	OFF	4,800 bps
OFF	ON	ON	9,600 bps
ON	OFF	OFF	19,200 bps
ON	OFF	ON	38,400 bps
ON	ON	OFF	57,600 bps
ON	ON	ON	115,200 bps

Step 2: Install control equipment. We sequentially connect a DVP16-SP (8 IN 8 OUT), DVP-04AD (4 channels AD), DVP02DA (2 channels DA), and DVP-08ST (8 switches) to the RTU-485.


The following corresponding locations can be obtained from the RTU-485's configuration definitions:


Module	Terminals	485 Address
DVP16-SP	X0-X7	0400H–0407H
DVF10-3F	Y0-Y7	0500H-0507H
DVP-04AD	AD0–AD3	1600H-1603H
DVP02DA	DA0-DA1	1640H-1641H
DVP-08ST	Switch 0-7	0408H-040FH

Step 3: Physical configuration



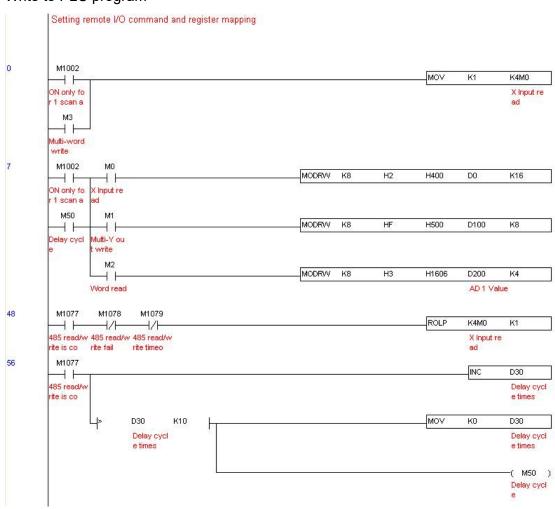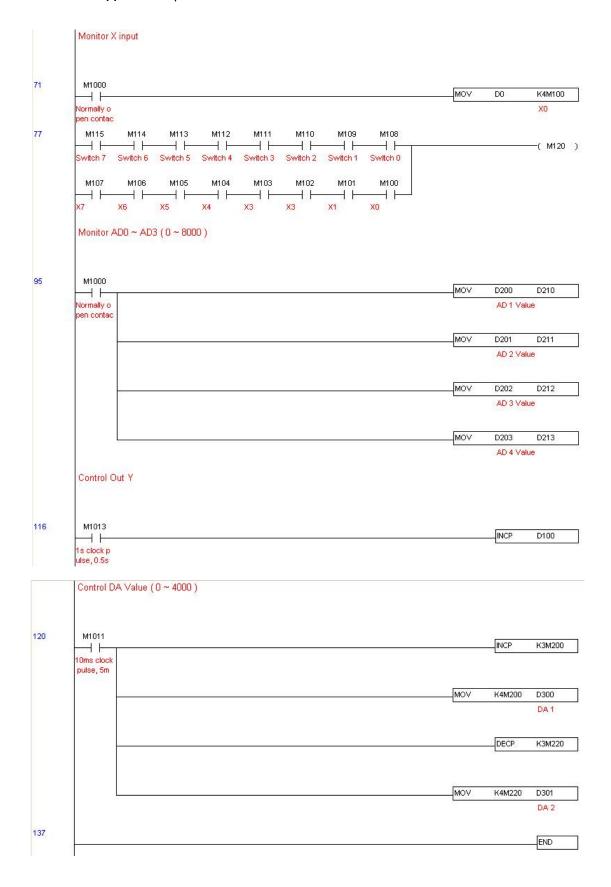
Step 4: Write to PLC program







# Step 5: Actual testing situation:

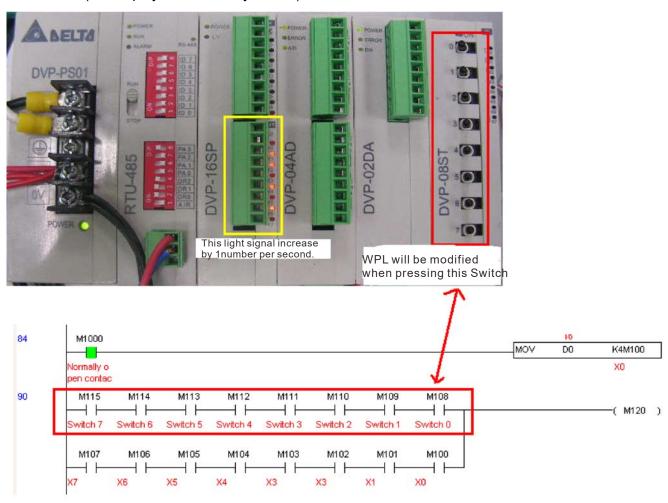I/O testing: When the switch is activated, it can be discovered that the display corresponds to M115–M108. Furthermore, it can be seen that one output point light is added every 1 sec. (the display uses a binary format)



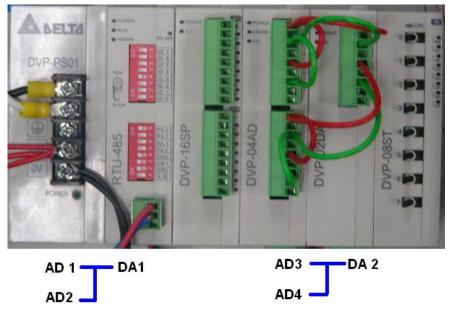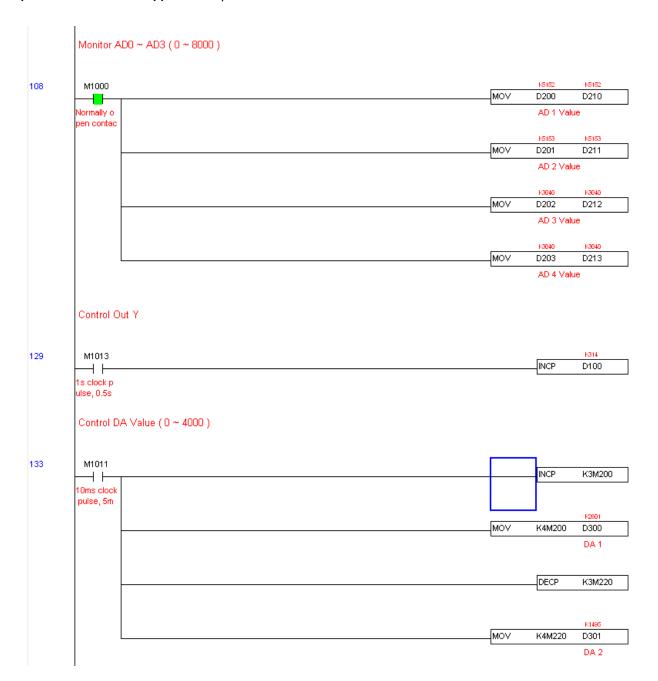AD DA testing: It can be discovered that D200 and D201 are roughly twice the D300, and continue to increase progressively. For their part, the D202 and D203 are roughly twice the D301, and continue to decrease progressively.





# 16-13 Calendar functions

The C2000's internal PLC includes calendar functions, but these may only be used when a keypad (KPC-CC01) is connected, otherwise the function cannot be used. Currently-supported commands include TCMP (comparison of calendar data), TZCP (calendar data range comparison), TADD (calendar data addition), TSUB (calendar data subtraction), and TRD (calendar reading). Please refer to the explanation of relevant commands and functions for the usage of these commands.

In real applications, the internal PLC can judge whether calendar function have been activated; if they have been activated, calendar warning codes may be displayed in some situations. The basis for whether a calendar function has been activated is whether the program has written the calendar time (D1063 to D1069) in connection with the foregoing calendar commands or programs.

The calendar's time display is currently assigned to D1063 to D1069, and is defined as follows:

Special D	Item	Content	Attributes
D1063	Year (Western)	20xx (2000–2099)	RO
D1064	Weeks	1–7	RO
D1065	Month	1–12	RO
D1066	Day	1–31	RO
D1067	Hour	0–23	RO
D1068	Minute	0–59	RO
D1069	Second	0–59	RO

Calendar-related special M items are defined as follows:

Special D	Item	Attributes
M1068	Calendar time error	RO
M1076	Calendar time error or refresh time out	RO
M1036	Ignore calendar warning	RW

<sup>\*</sup>When a program writes to the commands TCMP, TZCP, TADD, or TSUB, if it is discovered that a value exceeds the reasonable range, M1026 will be 1.

Calendar trigger warning code is defined as follows:

Warning	Description	Reset approach	Whether it affects PLC operation
PLra	Calendar time correction	Requires power restart	Will not have any effect
PLrt	Calendar time refresh time out	Requires power restart	Will not have any effect

<sup>\*</sup>When the PLC's calendar functions are operating, if the keypad is replaced with another keypad, it will jump to PLra.

<sup>\*</sup>When the keypad display is PLra (RTC correction warning) or PLrt (RTC time out warning), M1076 will be ON.

<sup>\*</sup>When M1036 is 1, the PLC will ignore the calendar warning.

<sup>\*</sup>When it is discovered at startup that the keypad has not been powered for more than 7 days, or the time is wrong, PLra will be triggered.


<sup>\*</sup>When it is discovered that the C2000 has no keypad in 10 sec. after startup, PLrt will be triggered.

\*If the keypad is suddenly pulled out while the calendar is operating normally, and is not reconnected for more than 1 minute, PLrt will be triggered.


## Practical applications:

We will perform a demo of simple applications.

We first correct the keypad time. After pressing Menu on the keypad, select the 9th time setting option. After selection, set the current time.



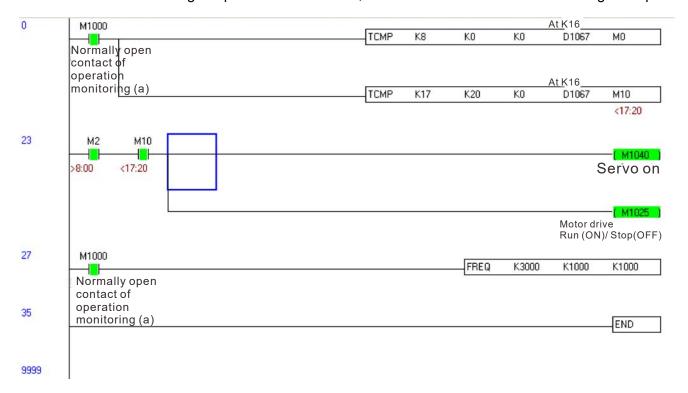We set converter on during the period of 8:00-17:20, which allows us to write the following example



# Chapter 17 Safe Torque Off Function

- 17-1 The Drive Safety Function Failure Rate
- 17-2 Safe Torque Off Terminal Function Description
- 17-3 Wiring Diagram
- 17-4 Parameter
- 17-5 Operating Sequence Description
- 17-6 New Error Code for STO Function

# 17-1 The Drive Safety Function Failure Rate

Item	Definition	Standard	Performance
SFF	Safe Failure Fraction	IEC61508	Channel 1: 80.08% Channel 2: 68.91%
HFT (Type A subsystem)	Hardware Fault Tolerance	IEC61508	1
SIL	Safaty Intagrity Laval	IEC61508	SIL 2
SIL	Safety Integrity Level	IEC62061	SILCL 2
PFH	Average frequency of dangerous failure [h-1]	IEC61508	9.56×10 <sup>-10</sup>
PFD <sub>av</sub>	Probability of Dangerous Failure on Demand	IEC61508	4.18×10 <sup>-6</sup>
Category	Category	ISO13849-1	Category 3
PL	Performance level	ISO13849-1	d
MTTF <sub>d</sub>	Mean time to dangerous failure	ISO13849-1	High
DC Diagnostic coverage		ISO13849-1	Low

# 17-2 Safety Torque Off Terminal Function Description

The Safe Torque Off function (STO) is to cut off the power supply to motor through the hardware, thereby the motor couldn't produce torque.

The STO function controls the motor current driving signal through two hardware circuits respectively, and thus cut off the inverter power module output in order to achieve the status of safety stop.

Operation principle Description as following table 1:


Table 1: Terminal operation description

Signal	Channel	Photo-coupler status			
STO signal	STO1-SCM1	ON (High)	ON (High)	OFF (Low)	OFF (Low)
STO signal	STO2-SCM2	ON (High)	OFF (Low)	ON (Low)	OFF (Low)
Driver Output status		Ready	STL2 mode (Torque output off)	STL1 mode (Torque output off)	STO mode (Torque output off)


- STO means Safe Torque Off
- STL1-STL3 means Safe Torque Off hardware abnormal.
- STL3 means STO1–SCM1 and STO2–SCM2 internal circuit detected abnormal.
- STO1–SCM1 ON (High): means STO1–SCM1has connection to a +24V<sub>DC</sub> power supply.
- STO2–SCM2 ON (High): means STO2–SCM2 has connection to a +24V<sub>DC</sub> power supply.
- STO1–SCM1 OFF (Low): means STO1–SCM1hasn't connection to a +24V<sub>DC</sub> power supply.
- STO2-SCM2 OFF (Low): means STO2-SCM2hasn't connection to a +24V<sub>DC</sub> power supply.

# 17-3 Wiring Diagram

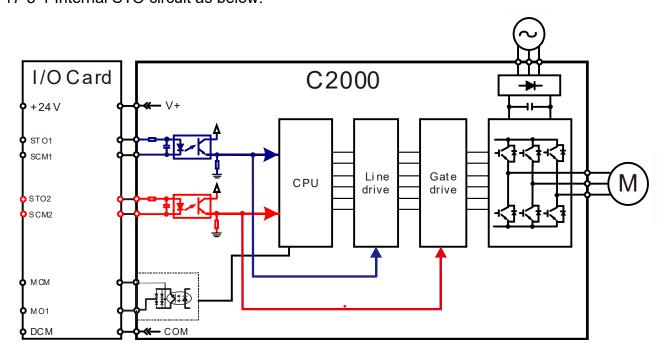17-3-1 Internal STO circuit as below:




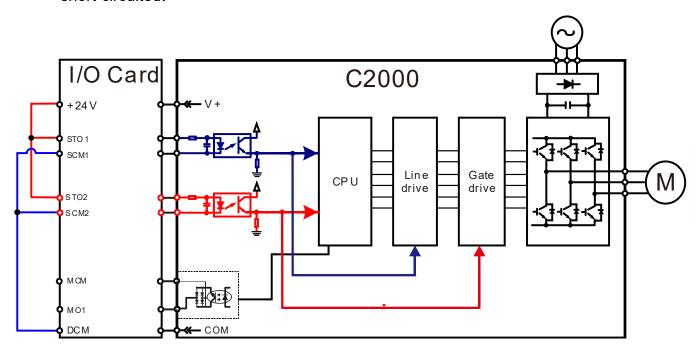17-3-2 In the figure below, the factory setting for +24V-STO1-STO2 and SCM1-SCM2-DCM is short-circuited:



# 17-3-3 The control loop wiring diagram:

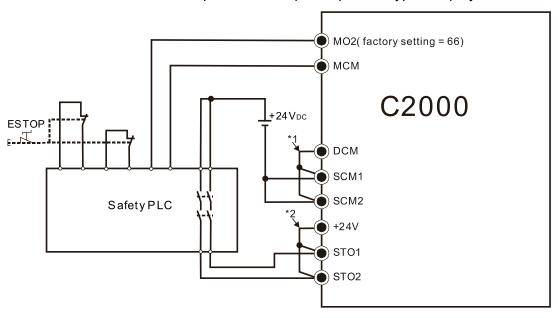- 1. Remove the shot-circuit of +24V-STO1-STO2 and DCM-SCM1-SCM2.
- 2. The wiring as below diagram. The ESTOP switch must at Close status in normal situation and drive will be able to Run.
- 3. STO mode, switch ESTOP open. Drive output stop and keypad display STO.



## NOTE

- \*1: Factory short-circuit of DCM-SCM1-SCM2. Remove the short-circuit to use the Safety function.
- \*2: Factory short-circuit of +24V-STO1-STO2. Remove the short-circuit to use the Safety function.

## 17-4 Parameters

# **※ 35-44** STO Alarm Latch

Default: 0

Settings 0 : STO Alarm Latch 1 : STO Alarm no Latch

Pr. 06-44=0 STO Alarm Latch: after the reason of STO Alarm is cleared, a Reset command is needed to clear the STO Alarm.

Pr. 06-44=1 STO Alarm no Latch: after the reason of STO Alarm is cleared, the STO Alarm will be cleared automatically.

The STL1-STL3 error are all "Alarm latch" mode (in STL1-STL3 mode, the Pr. 06-44 function is no effective).

Multi-function Output 1 (Relay1)

Default:11

Multi-function Output 2 (Relay2)

Default:1

Multi-function Output 3 (MO1)

Default:0

Multi-function Output 4 (MO2)

Default:66

Settings 66: SO N.O. output 68: SO N.C. output

Settings	Functions	Descriptions
66	SO Logic A output	Safety Output Normal Open
68	SO Logic B output	Safety Output Normal Close

C2000 factory setting Pr. 02-17 (MO2) = 66 (N.O.) and Multi-function Output setting item adds 2 new function: 66 and 68.

		Safety Output status		
	Drive status	N.O.	N.C.	
L		(MO=66)	(MO=68)	
	Normal run	Open	Close	
	STO	Close	Open	
	STL1-STL3	Close	Open	

Content of Multi-function Display


Default: 3

Settings 45: Hardware version

# 17-5 Operating Sequence Description

## 17-5-1 Normal operation status

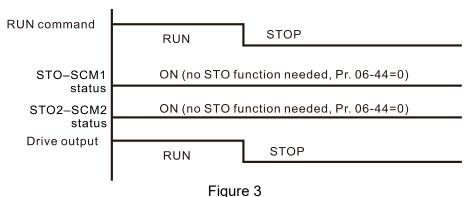As shown in Figure 3: When the STO1–SCM1 and STO2–SCM2=ON (no STO function is needed), the drive will execute "Operating" or "Output Stop" according to RUN/STOP command.



17-5-2-1 STO, Pr. 06-44=0, Pr. 02-35=0

As shown in Figure 4: When both of STO1–SCM1 and STO2–SCM2 channel has turned off during operating, the STO function enabling and the drive will stop output regardless of Run command is ON or OFF status.


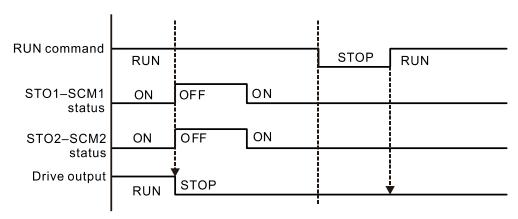



Figure 4

## 17-5-2-2 STO, Pr. 06-44=0, Pr. 02-35=1

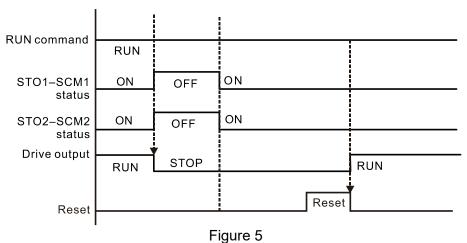As shown in Figure 5: As same as the figure 4. Because the Pr. 02-35=1, after the Reset command, if the operating command still exists, then the drive will immediately execute the run command again.



# 17-5-3 STO, Pr. 06-44=1

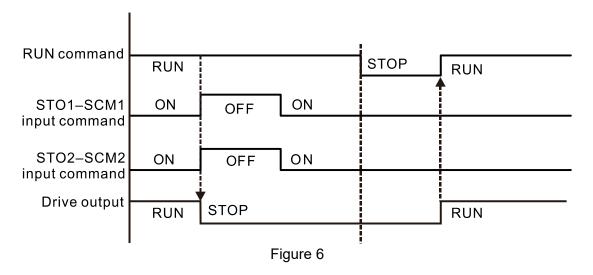

# 17-5-4 STL1


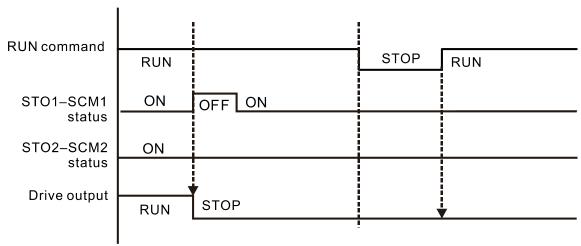


Figure 7

# 17-5-4 STL2

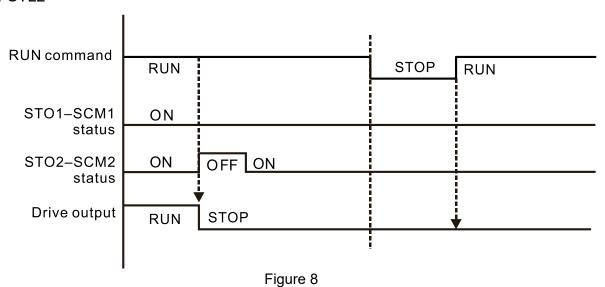

# 17-6 New Error Code for STO Function

Present Fault Record

Second Most Recent Fault Record

Third Most Recent Fault Record

Fourth Most Recent Fault Record

Fifth Most Recent Fault Record

Sixth Most Recent Fault Record

Settings 72: Channel 1 (STO1–SCM1)internal hardware error

76: STO (Safe Torque Off)

77: Channel 2 (STO2–SCM2) internal hardware error 78: Channel 1 and Channel 2 internal hardware error

Error code	Name	Description
76	STO	Safe Torque Off function active
72	STL1 (STO1-SCM1)	STO1–SCM1 internal hardware detect error
77	STL2 (STO2-SCM2)	STO2–SCM2 internal hardware detect error
78	STL3	STO1–SCM1 and STO2–SCM2 internal hardware detect error

## The Old/New control board and Old/New I/O card:

C2000	v1.12 firmware	v1.20 firmware
v1.12 control board + old I/O card (no STO function)	OK	OK
v1.12 control board + new I/O card (with STO function)	Error	Error
v1.20 control board + old I/O card (no STO function)	Error	Error
v1.20 control board + new I/O card (with STO function)	Error	OK

# Appendix A. Revision History

New information	
Description	Related part
Combine the content of C2000 690V models to this manual.	Whole manual
Service link label introduction.	Chapter 1
Carton version upacking steps of frame D models.	Chpater 3
The descriptions of short-circuit rated current (SCCR), built-in DC reactor	
model list, requirements on insulation level of Curve B motor, capacitor filter,	Ob auton 7
dimension of flange mounting for frame D models, dimension and model	Chapter 7
names of magnetic ring, and description of power termina kit.	
The descriptions of new extension cards, EMC-A22A (I/O relay), CMC-EC01	
(Communication, EtherCAT), and CMC-PN01 (Communication, PROFINET).	Chapter 8
Delta standard filedbus cable list.	
Efficiency curve, and derating curve of voltage / current.	Chpater 9
A note to describe how to use VFDSoft when OS is Win10, and a process of	Chapter 10
Start Wizard.	Chapter 10
Add desciptions of the following parameters:	
Parameter group 01: 01-49	
<ul><li>Parameter group 02: 02-71, 02-74, 02-75</li></ul>	
<ul><li>Parameter group 04: 04-70-04-99</li></ul>	
<ul><li>Parameter group 06: 06-51, 06-62, 06-86</li></ul>	Chapter 11,
<ul><li>Parameter group 07: 07-38, 07-62, 07-63</li></ul>	Section 12-1
<ul><li>Parameter group 08: 08-26-08-28</li></ul>	Section 12-1
Parameter group 10: 10-46	
Parameter group 11: 11-46	
Parameter group 13	
Parameter group 14	
The descriptions of the adjustment and application for AC drive	Section 12-2
New functions of special relay (special M): M1090, M1091, M1092, M1100,	Chpater 16
$M1101,\ M1168,\ M1260,\ M1262,\ M1270,\ M1271;\ new\ functions\ of\ special$	
register (special D): D1200-D1207, D1209, D1215, D1220-D1227, D1229,	
D1235.	
New chapter to describe safety torque off function.	Chapter 17

Updated information	
Description	Related part
Nameplate information, and the decription of RFI jumper.	Chapter 1
The decriptions of using the lifting hook and the figure.	Chpater 3
The wiring diagrams of all frame sizes, and the wiring of SINK (NPN) /	Chpater 4
SOURCE (PNP) mode.	·
The wiring diagrams of mair circuit terminals for all frame sizes, the	Chpater 5
descriptions of the main circuit termials.	01
The specifications of the control terminals and the wiring precautions.	Chpater 6
EMC filter model list, the specifications and the assembly of DC reactor, the	01 1 7
model list and the descriptions of zero-phase reactor, the torque value, the	Chapter 7
figures, applicable models and assembly/disassembly of fan.	
The figures of extension cards, the figures to assembly / disassembly, the	
figure to illustrate the positon of the terminating resistor and the extension	Chapter 8
cards.	
The cable length of PG card, the description of EMC-BPS01, and delete the	Chapter 8
description of CANopen cable and breakout box.	0
The general specifications, the descriptons of environmental characteristics.	Chpater 9
Describe the functions which are listed on the MENU. Delete information of	Chapter 10
KPC-CE01.	
Update desciptions of the following parameters:	
• Parameter group 00: 00-00, 00-04, 00-06, 00-11, 00-13, 00-17, 00-20,	
00-24, 00-25, 00-40	
• Parameter group 01: 01-02–01-08, 01-11, 01-12–01-23, 01-24–01-27,	
01-36-01-42, 01-43	
• Parameter group 02: 02-00, 02-01-02-08, 02-13, 02-14, 02-26-02-31,	
02-34, 02-38-02-41, 02-42-02-46, 02-49, 02-50-02-53, 02-58, 02-70	
• Parameter group 03: 03-00, 03-02, 03-03-05, 03-09, 03-10, 03-19	
03-20, 03-23, 03-30, 03-51–03-74	
● Parameter group 05: 05-00-05-09, 05-13-05-15 05-17-05-21,	Chapter 11,
05-28-05-30, 05-34, 05-35, 05-38, 05-43. Delete 05-26, 05-27	Section 12-1
• Parameter group 06: 06-02–06-04, 06-14, 06-16–06-22, 06-28, 06-29,	
06-30, 06-39, 06-46, 06-52, 06-55	
• Parameter group 07: 07-00, 07-07, 07-08, 07-12-07-14, 07-19, 07-23	
• Parameter group 08: 08-00–08-02, 08-16, 08-20, 08-23	
• Parameter group 09: 09-04, 09-11-09-26, 09-31, 09-33, 09-39, 09-40,	
09-60, 09-75, 09-84, 09-88, 09-89	
• Parameter group 10: 10-02, 10-16, 10-19 10-24, 10-27, 10-30, 10-32,	
10-34, 10-35–10-37, 10-41, 10-49, 10-51, 10-52. Delete 10-22	
• Parameter group 11: 11-00, 11-01, 11-11, 11-12, 11-17-11-20, 11-31,	
11-32, 11-39, 11-40	

# Appendix A. Revision History | C2000

Updated information	
Description	Related part
The descriptions of the adjustment and application for AC drive.	Section 12-2
The descriptions of the warning codes	Chpater 13
The descriptions of the fault codes	Chpater 14
The descriptions of the bit setting for 2060H, 2020H. And the descriptions of	Chpater 15
speed mode, torque mode, PDO type no. 0.	
The function description of D1051, D1052, and D1111, D1112.	Chpater 16
The installation of WPLSoft	Chpater 16



# **Industrial Automation Headquarters**

#### Delta Electronics, Inc.

Taoyuan Technology Center No.18, Xinglong Rd., Taoyuan District, Taoyuan City 33068, Taiwan

TEL: 886-3-362-6301 / FAX: 886-3-371-6301

#### Asia

## Delta Electronics (Shanghai) Co., Ltd.

No.182 Minyu Rd., Pudong Shanghai, P.R.C.

Post code : 201209

TEL: 86-21-6872-3988 / FAX: 86-21-6872-3996

Customer Service: 400-820-9595

#### Delta Electronics (Japan), Inc.

Tokyo Office

Industrial Automation Sales Department 2-1-14 Shibadaimon, Minato-ku

Tokyo, Japan 105-0012

TEL: 81-3-5733-1155 / FAX: 81-3-5733-1255

### Delta Electronics (Korea), Inc.

Seoul Office

1511, 219, Gasan Digital 1-Ro., Geumcheon-gu,

Seoul, 08501 South Korea

TEL: 82-2-515-5305 / FAX: 82-2-515-5302

#### Delta Energy Systems (Singapore) Pte Ltd.

4 Kaki Bukit Avenue 1, #05-04, Singapore 417939

TEL: 65-6747-5155 / FAX: 65-6744-9228

#### Delta Electronics (India) Pvt. Ltd.

Plot No.43, Sector 35, HSIIDC Gurgaon,

PIN 122001, Haryana, India

TEL: 91-124-4874900 / FAX: 91-124-4874945

## Delta Electronics (Thailand) PCL.

909 Soi 9, Moo 4, Bangpoo Industrial Estate (E.P.Z),

Pattana 1 Rd., T.Phraksa, A.Muang, Samutprakarn 10280, Thailand

TEL: 66-2709-2800 / FAX: 662-709-2827

### Delta Energy Systems (Australia) Pty Ltd.

Unit 20-21/45 Normanby Rd., Notting Hill Vic 3168, Australia

TEL: 61-3-9543-3720

# **Americas**

# Delta Electronics (Americas) Ltd.

Raleigh Office

P.O. Box 12173, 5101 Davis Drive,

Research Triangle Park, NC 27709, U.S.A.

TEL: 1-919-767-3813 / FAX: 1-919-767-3969

## Delta Greentech (Brasil) S/A

São Paulo Office

Rua Itapeva, 26 – 3° Andar - Bela Vista CEP: 01332-000 – São Paulo – SP - Brasil TEL: 55-11-3530-8642 / 55-11-3530-8640

#### Delta Electronics International Mexico S.A. de C.V.

Mexico Office

Vía Dr. Gustavo Baz No. 2160, Colonia La Loma,

54060 Tlalnepantla Estado de Mexico TEL: 52-55-2628-3015 #3050/3052

#### **EMEA**

#### Headquarters: Delta Electronics (Netherlands) B.V.

Sales: Sales.IA.EMEA@deltaww.com
Marketing: Maketing.IA.EMEA@deltaww.com
Technical Support: iatechnicalsupport@deltaww.com
Customer Support: Customer-Support@deltaww.com

Service: Service.IA.emea@deltaww.com

TEL: +31(0)40 800 3800

#### BENELUX: Delta Electronics (Netherlands) B.V.

De Witbogt 20,5652 AG Eindhoven, The Netherlands

Mail: Sales.IA.Benelux@deltaww.com

TEL: +31(0)40 800 3800

### DACH: Delta Electronics (Netherlands) B.V.

Coesterweg 45, D-59494 Soest, Germany Mail: Sales.IA.DACH@deltaww.com

TEL: +49(0)2921 987 0

#### France: Delta Electronics (France) S.A.

ZI du bois Challand 2,15 rue des Pyrénées,

Lisses, 91090 Evry Cedex, France Mail: Sales.IA.FR@deltaww.com TEL: +33(0)1 69 77 82 60

### Iberia: Delta Electronics Solutions (Spain) S.L.U

Ctra. De Villaverde a Vallecas, 265 1º Dcha Ed. Hormigueras – P.I. de Vallecas 28031 Madrid

TEL: +34(0)91 223 74 20

C/Llull, 321-329 (Edifici CINC) | 22@Barcrelona, 08019 Barcelona

Mail: Sales.IA.Iberia@deltaww.com

TEL: +34 93 303 00 60

# Italy: Delta Electronics (Italy) S.r.l.

Ufficio di Milano Via Senigallia 18/2 20161 Milano (MI)

Piazza Grazioli 18 00186 Roma Italy Mail: Sales.IA.Italy@deltaww.com

TEL: +39 02 64672538

#### Russia: Delta Energy System LLC

Vereyskaya Plaza II, office 112 Vereyskaya str.

17 121357 Moscow Russia Mail: Sales.IA.RU@deltaww.com TEL: +7 495 644 3240

#### Turkey: Delta Greentech Elektronik San. Ltd. Sti. (Turkey)

Şerifali Mah. Hendem Cad. Kule Sok. No:16-A

34775 Ümraniye – İstanbul

Mail: Sales.IA.Turkey@deltaww.com

TEL: + 90 216 499 9910

TEL: +971(0)4 2690148

## GCC: Delta Energy Systems AG (Dubai BR)

P.O. Box 185668, Gate 7, 3rd Floor, Hamarain Centre

Dubai, United Arab Emirates Mail: Sales.IA.MEA@deltaww.com

### Egypt + North Africa: Delta Electronics

511 Cairo Business Plaza, North 90 street,

New Cairo, Cairo, Egypt

Mail: Sales.IA.MEA@deltaww.com